

Operator's Manual

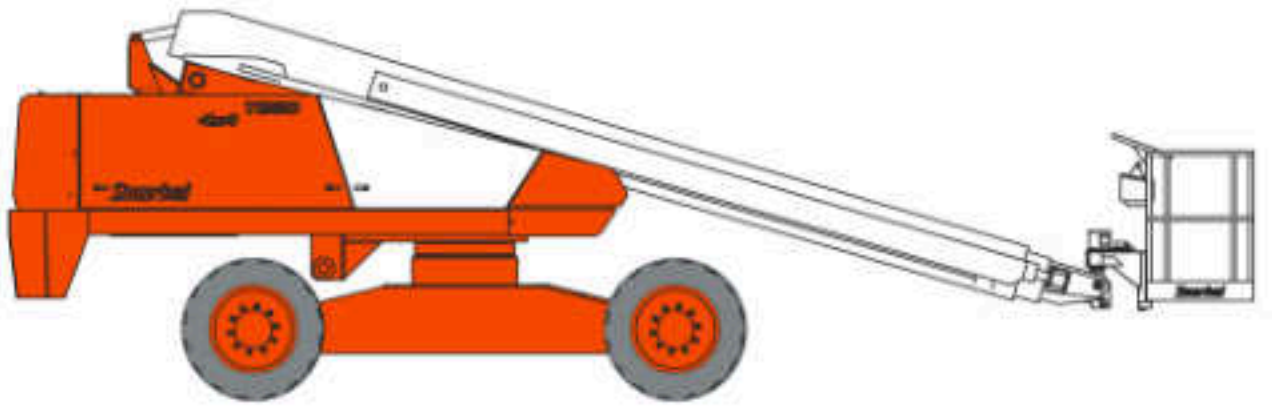

TB80

Fixed Axle

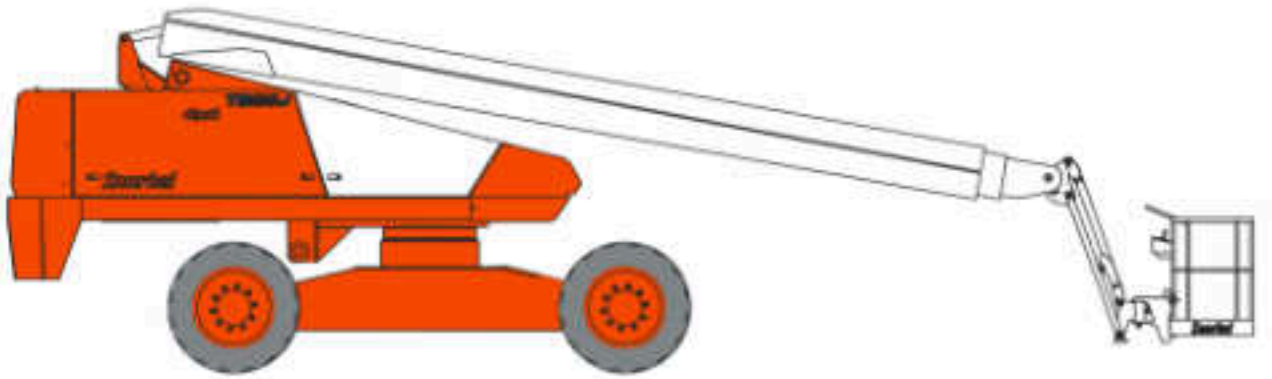

TB85J

Fixed Axle

Part Number 0112823EE
September, 2006

CE

Snorkel INTERNATIONAL

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >

Table of Contents

Chapter 1 – Introduction

Aerial Platform Features 1
Options 1
Operator's Manual 1
Safety Alerts 1
Operation 2
Maintenance 2
Owner and User Responsibilities 2
Additional Information 2

Chapter 2 – Specifications

Component Identification – TB80 3
Component Identification – TB85J 4
Working Envelope – TB80 5
Working Envelope – TB85J 6
General Specifications – TB80 7
General Specifications – TB85J 8
Engine Specifications 9
Engine Oil Viscosity 9

Chapter 3 – Safety

Electrocution Hazards 11
Minimum Safe Approach Distance 11
Prestart Inspection 12
Work Place Inspection and Practices 12
Operation 12
Tip-Over and Falling Hazards 12
Electrical System 13
Hydraulic System 13
Engine and Fuel Handling Precautions 13
Placards and Decals 14

Chapter 4 – Safety Devices

Emergency Stop Controls 15
Emergency Power System 15
Emergency Lowering Knob 15
Ground Operation Switch 16
Platform Foot Switch 16
Guardrails 16
Lanyard Anchors 16
Tilt Alarm 16
Platform Overload Sensing System 16
Engine Protection Systems 17
- High Engine Temperature Alarm 17
- Low Oil Pressure Alarm 17

Horn 17
Drive Motion Alarm 18
Flashing Light 18
Driving Lights 18
Platform Work Lights 18

Chapter 5 – Gauges and Displays

Hour Meter 19
Engine Temperature Gauge 19
Ammeter 19
Engine Air Filter Gauge 19
Fuel 19
Engine Oil 20
Hydraulic Fluid Filter Gauge 20
Fluid Level and Temperature Gauge 20

Chapter 6 – Controls

Battery Disconnect Switch 21
Lower Controls 21
- Start Switch 21
- Emergency Stop Button 22
- Controls Selector Switch 22
- Ground Operation Switch 22
- Rotation Switch 22
- Boom Elevation Switch 22
- Boom Extension Switch 22
- Boom Speed Knob 22
- Jib Articulation Switch – TB85J Only 22
- Platform Level Switch 22
- Platform Rotate Switch 22
- Engine/Emergency Power Switch 22
- Engine Speed Switch 22
- Fuel Switch 22
- Manifold Air Inlet Heater – Deutz Only 22
- Hydraulic System Warm-up Switch 23

Circuit Breaker Reset Buttons 23
Upper Controls 23
- Start Switch 24
- Emergency Stop Button 24
- Drive/Boom Selector Switch 24
- Boom Joystick 24
- Drive Joystick 24
- Drive Range Switch 24
- Steer Mode Switch 25
- Jib Articulation Switch – TB85J Only 25
- Platform Level Switch 25
- Platform Rotate Switch 25
- Boom Extend/Retract Joystick 25
- Engine/Emergency Power Switch 25
- Throttle Switch 25
- Horn Button 25
- Platform Foot Switch 26
- Machine/Generator Switch 26

Dual Fuel 26
Driving and Platform Work Lights 26

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >

Chapter 7 – Prestart Inspection

Operator's Manual 27
Engine 27
Oil Level 27
Coolant 27
Radiator 27
Fuel Tank 28
Fuel Line 28
Air Filter 28
Charging System 28
Cold Weather Start Kit 29
Electrical System 29
Battery Fluid Level 29
Battery Terminals 29
Cables and Wiring Harness 29
Hydraulic System 29
Fluid Level 29
Fluid Filter 30
Hoses, Tubes, and Fittings 30
Tires and Wheels 30
Lower Control Station 30
Operating Controls 31
Emergency Stop 31
Emergency Power 31
Emergency Lowering 31
Level Sensor 31
Flashing Light 32
Sandblast Protection Kit 32
Structures 32
Weldments 32
Slide Pads 32
Wire Ropes 33
Fasteners 33
Upper Control Station 33
Guardrail System 33
Lanyard Anchors 34
Operating Controls 34
Emergency Stop 34
Emergency Power 34
Horn 34
Electrical Power Outlet 35
Drive Motion Alarm 35
Driving and Work Lights 35
Platform Control Cover 35
Placards and Decals 35
Prestart Inspection Checklist 41

Chapter 8 – Operation

Cold Weather Start-Up 43
Engine Cold Weather Start Kit 43
Cummins — Block Heater 43
Cummins — Ether Injection 43
Deutz — Manifold Preheater 44
GM — Radiator Hose In-Line 44
Hydraulic System Cold Weather Warm-Up 44
Hydraulic System Warm-up Switch 44
Manually Warming The Hydraulic System 44
Preparing for Operation 44
Lower Controls 44
Upper Controls 45
Boom Operation 46
Driving and Steering 46
Drive Speeds 47
Motion Warning Alarm 47
Platform Overload Sensing System 47
AC Generator 48
Dual Fuel 48
Air Line 49
Driving Lights 49
Platform Work Lights 49

Chapter 9 – Stowing and Transporting

Stowing 51
Tucked Stow – TB85J 51
Transporting 51
Driving 52
Winching 52
Hoisting 53
Securing for Transport 53

Chapter 10 – Emergency Operation

Emergency Power System 55
Lower Controls 55
Upper Controls 55
Emergency Lowering 56

Chapter 11 – Troubleshooting

Troubleshooting Chart 57

Appendix A – Glossary

Limited Warranty

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >

Engine Specifications

Engine	Displacement	Fuel Grade	Coolant	Operating Temperature	Oil Capacity	Oil Grade
Cummins B3.3 Diesel	3.26 liter (199 cu. in.)	**Diesel** ASTM No. 2D fuel with a minimum Cetane number of 40.[1] For operating temperatures below 0°C (32°F) use winterized No. 2D.	50% water 50% Antifreeze[2]	60°C to 100°C 140°F to 212°F	7.5 liter (2 gal) total 1.5 liter (1.6 qt) Low to High	SAE 15W-40[3] API: CH4/SG
Deutz F4L-2011F	3.11 liter (190 cu. in.)	**Diesel** • DIN 51 601 (February 1986).[1] • BS 2869: A1 and A2 (with A2 refer to Deutz manual about sulfur content)[1] • ASTM D 975-88: 1-D and 2-D • CEN EN 590 or DIN EN 590 • NATO Code F-54 and F-75 • For operating temperatures below 32°F (0°C) use winter grade diesel.	Air	78°C to 95°C 172°F to 203°F	6.0 liter (1.59 US gal)	API: CD or higher[3]
GM 2.4	2.4 liter (150 cu. in.)	**Gasoline** • Unleaded 87 octane **LPG** • HD-5	50% Water 50% Antifreeze	80°C to 84°C 176°F to 183°F	With filter: 4.5 liter (1.12 US gal) Without filter: 4.25 liter (1.18 US gal)	ILSAC GF-4[4]

Note 1: Refer to the engine manufacturers manual for specific fuel recommendations and specifications.


Note 2: Ethylene glycol or Propylene glycol may be used. Refer to the Cummins® Operation and Maintenance Manual B3.3 Series Engines for specific coolant recommendations and specifications.

Note 3: Refer to the engine manufacturers manual for specific lubricating oil recommendations and specifications.

Note 4: API Starburst symbol on GF-4 oils reads "API Service SM."

Engine Oil Viscosity

Cummins B3.3

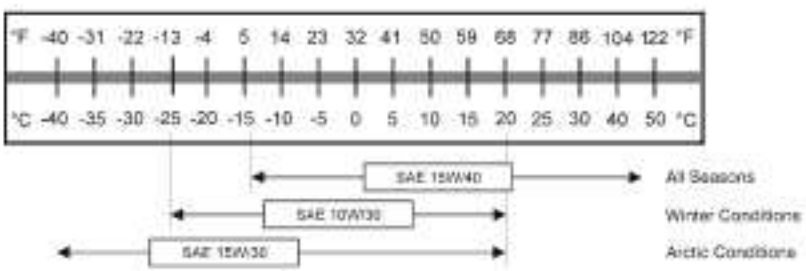

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >

Chapter 5 – Gauges and Displays

The aerial platform is equipped with several gauges to monitor the condition of the machine before and during operation.

Hour Meter

The hour meter is located on the wiring box on the left side of the lower controls (refer to Figure 5.1). It measures the accumulated engine operating time.



Figure 5.1 – Wiring Box

Engine Temperature Gauge

The temperature gauge is located on the lower control panel (refer to Figure 5.2).

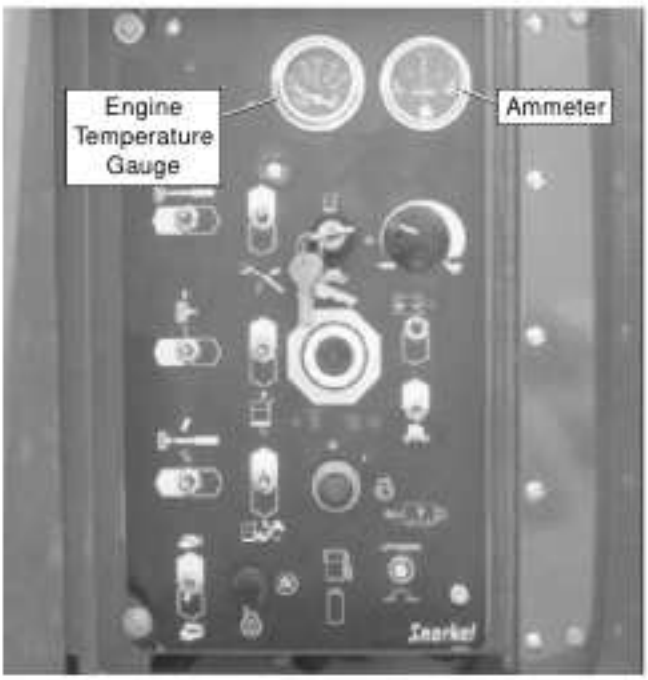


Figure 5.2 – Lower Controls

On liquid cooled engines it shows the temperature of the water and antifreeze mixture in the engine block. The gauge on air cooled engines shows the temperature of the engine oil as the oil leaves the filter.

Ammeter

The ammeter is located on the lower control panel (refer to Figure 5.2). The ammeter displays the level of current flow from the alternator to the batteries.

After the engine has been running for a few minutes under normal operating conditions, the ammeter gauge indicator should read "0."

Engine Air Filter Gauge

The air filter gauge (refer to Figure 5.3) is located above the lower control panel. The gauge measures the air pressure between the intake manifold and the air filter.



Figure 5.3 – Air Filter Gauge

The yellow indicator disk inside the sight glass stays at its highest level when the engine is turned off.

When the yellow indicator disk reaches the red area, it's time to change the filter element. After changing the filter, press the reset button to reset the indicator disk to the bottom of the sight glass.

Fuel

The fuel tank is translucent. The amount of fuel in the tank can be gauged by raising the door on the right rear of the machine (refer to Figure 5.4) and looking at the tank.

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >

Operating Controls
Use the following procedure to operate the machine from the lower controls.

1. Turn the battery disconnect switch on.
2. At the lower controls, pull the emergency stop button outward. Place the key in the controls selector switch and turn the switch to the lower control position.
3. Press the start button until the engine starts, then release.
4. Let the engine warm to operating temperature.
5. Hold the ground operation switch upward.

⚠Danger

Pinch points may exist between moving components. Death or serious injury can result from becoming trapped between components, buildings, structures, or other obstacles. Make sure all personnel stand clear of the aerial platform while performing the prestart inspection.

6. Test the operation of each function in both directions.

Note
When checking the turntable rotation function in the clockwise direction, the turntable will rotate toward you.

Emergency Stop
Push the emergency stop button inward to turn off the engine. The lower control functions should not operate with the emergency stop in this position.

Emergency Power
Place the battery disconnect switch, the emergency stop switch, and the master switch in the on position.

Hold the engine/emergency power switch down and the ground operation switch upward to operate the aerial platform from the lower controls using the emergency power system.

Emergency Lowering

The main boom can be lowered in an emergency using the emergency lowering knob. The emergency lowering knob is at the base of the main boom lift cylinder.

Use the following procedure to test the emergency lowering system.

1. Use the lower controls to raise the main boom.
2. Turn the engine off.

⚠Danger

Pinch points may exist between moving components. Death or serious injury can result from becoming trapped between components. Stand clear of moving components while test operating the machine.

3. Slowly turn the knob (refer to Figure 7.13) counterclockwise to open the bleed down valve. The boom should slowly lower by gravity.

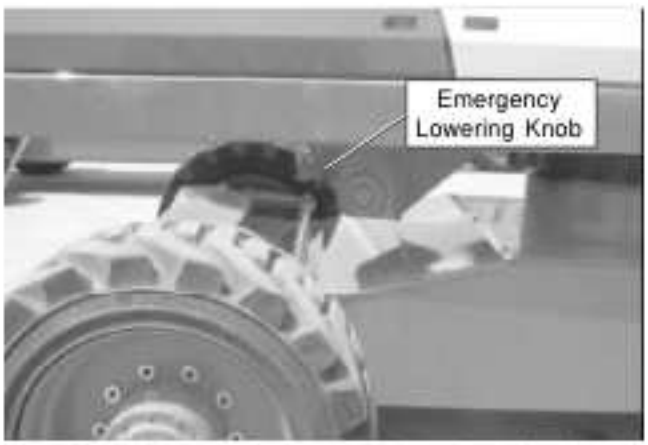


Figure 7.13 – Emergency Lowering Knob

⚠Warning

The potential for an accident increases when safety devices do not function properly. Death or serious injury can result from such accidents. Fully close the emergency lowering knob before operating the aerial platform.


4. Turn the knob clockwise to close the cylinder bleed down valve.

Level Sensor

Use the following procedure to test the level sensor.

1. Position the aerial platform on a smooth, flat, level surface.
2. Remove all persons and materials from the platform.
3. Start the engine and raise the main boom just above horizontal.
4. Open the rear door on the left side of the machine to access the level sensor (refer to Figure 7.14).

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >

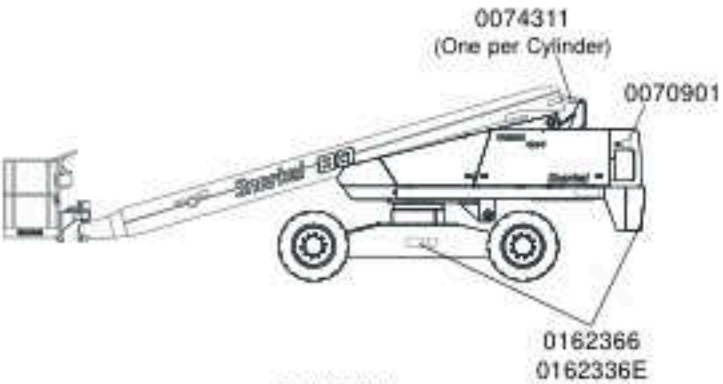


Right Side



0074311




0070901

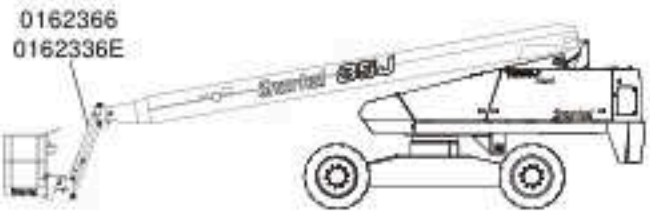

TB85J Right Side



0162366



0162336E

MidWestTech | Snorkel TB80, TB85J (Fixed Axle) Telescopic Boom Lift Operator's Manual |... Order the manual at mid-west-tech.com >