Maintenance and Repair Parts Manual

Snorkelift

UNO 33D/G

engine powered
diesel - gasoline
LPG fuel

ATTENTION:

Always give the serial number and model number of your "Snorkelift" when ordering parts.

This information is found on the serial number placard.

Be sure to order all parts by their part number, and if possible, specify routing of shipment.

All correspondence relative to this unit, such as field reports, discrepancy reports, requests for service information, etc., should be directed to:

Snorkel
PO BOX 1160
ST. JOSEPH, MO 64502-1160

Attention: Service Department.

P/N 0152872
January, 1998

Snorkel

P.O. BOX 1160
ST. JOSEPH, MO
64502-1160, USA

MidWestTech | Snorkel UNO33D, UNO33G Articulating Boom Lift Maintenance and Repair... Order the manual at mid-west-tech.com >

Maintenance Information

Manual Organization 5
Maintenance 5
Repair parts and illustrations 5
Hydraulics 5
Electrical 5
Options 5
Parts index - Page locator 5
Parts drawings 6
General specifications 7
OSHA, ANSI and CSA Standards 7
Maintenance schedules 8
Daily maintenance (operator's inspection) 8
90 day or 150 hour maintenance (trained service technician) 9
Yearly or 500 hour maintenance (trained service technician) 9
Lubrication information 10
Lubrication illustration 10
Lubricants 10
Pressure gun application 10
Rotation bearing 10
Rotation gear teeth and pinion 10
Tie rods 10
Swing drive 10
Power wheel 11
Hydraulic oil reservoir 11
Engines 11
Door hinges and latches 11
Platform rotation gear box 11
Return Filter 11
Suction strainer 12
Pump drive shaft Kubota units only 12
Batteries 12
Preventive inspection maintenance 90 day or 150 hour checklist 13
Torque chart 15

Section 1. - Repair Parts

Chassis and Turntable Mounting 1-2
Swing drive installation 1-4
Steering Installation 1-6
Steer Yoke Installation 1-8
Drive Installation 1-10
Drive Installation illustration 1-11
Power Wheel 1-12
Booms Installation 1-14
Turret Hose and Wire Installation 1-16
Upper Boom and Hose Carrier Assembly 1-18
Upper Boom and Hose Carrier Assembly illustration 1-19
Boom Assembly, Upper illustration 1-20
Boom Assembly, Upper 1-21
Hose Carrier Assembly 1-22
Hose Carrier Assembly illustration 1-23
Extend Cylinder Assembly illustration 1-24
Extend Cylinder Assembly 1-25
Cylinder Assembly, Lift 1-26
Cylinder Assembly, Master Level 1-27
Cylinder Assembly, Slave Level 1-28
Platform Installation 1-29
Platform Installation illustration 1-31
Platform Rotation Gear Box, Morse 1-32
Platform Rotation Gear Box, Safeguard 1-34
Counterweight and Cowling Installation 1-36
Chassis Cowling Installation, Kohler 1-38
Chassis Cowling Installation, Kubota 1-40
Fuel Tank Installation 1-42
Hydraulic Oil Reservoir Installation 1-43
Engine Installation, Kohler 1-44
Engine Installation, Kohler illustration 1-45
Engine Assembly, Kohler illustration 1-46
Engine Assembly, Kohler 1-47
Engine Installation, Kubota Gas 1-48
Engine Installation, Kubota Gas illustration 1-49
Engine Assembly, Kubota Gas illustration 1-50
Engine Assembly, Kubota Gas 1-51
Throttle and Choke Installation, Kubota Gas 1-53
Air Cleaner Installation, Kubota Gas 1-54

MidWestTech | Snorkel UNO33D, UNO33G Articulating Boom Lift Maintenance and Re... Order the manual at mid-west-tech.com >

Table of Contents

Engine Installation, Kubota Diesel 1-56
Engine Installation, Kubota Diesel illustration 1-57
Engine Assembly, Kubota Diesel illustration 1-58
Engine Assembly, Kubota Diesel 1-59
Tire and Wheel Installation 1-61
Placards and Decals Installation 1-62

Section 2. - Hydraulics


Hydraulic Schematic illustration 2-3
Hydraulic Equipment, Booms illustration 2-4
Hydraulic Equipment, Booms 2-5
Chassis Hydraulic Equipment, Kohler 2-7
Chassis Hydraulic Equipment, Kohler illustration 2-9
Chassis Hydraulic Hoses, Kohler illustration 2-10
Chassis Hydraulic Hoses, Kohler 2-11
Chassis Hydraulic Equipment, Kubota 2-12
Chassis Hydraulic Equipment, Kubota illustration 2-13
Chassis Hydraulic Hoses, Kubota illustration 2-14
Chassis Hydraulic Hoses, Kubota 2-15
Hydraulic Equipment, Turntable 2-16
Hydraulic Equipment, Turntable illustration 2-17
Package Valve Assembly, Rexroth 2-18
Package Valve Assembly, Rexroth illustration 2-19
Package Valve Assembly, Vickers illustration 2-20
Package Valve Assembly, Vickers 2-21
Control Valve Package, Rexroth 2-22
Control Valve Package, Vickers 2-24
Control Valve, Drive 2-26
Cylinder Assembly, Boom Lift 2-27
Cylinder Assembly, Extension 2-28
Cylinder Assembly, Master Level 2-29
Cylinder Assembly, Slave Level 2-30
Cylinder Assembly, Steering 2-31
Dual Counterbalance Valve 2-32
Flow Divider/Combiner 2-33
Pressure Switch 2-34
Solenoid Valve, Sense Line Dump & Drive Shift 2-35


MidWestTech | Snorkel UNO33D, UNO33G Articulating Boom Lift Maintenance and Re... Order the manual at mid-west-tech.com >


Section 3. - Electrical

Wiring Code and Function 3-3
Wiring Schematic, Kohler Gas illustration 3-5
Wiring Schematic, Kubota Diesel illustration 3-6
Wiring Schematic, Kubota Gas illustration 3-7
Chassis Electrical, Kohler Gas 3-8
Chassis Electrical, Kohler Gas illustration 3-9
Chassis Electrical, Kubota Diesel illustration 3-10
Chassis Electrical, Kubota Diesel 3-11
Chassis Electrical, Kubota Gas 3-12
Chassis Electrical, Kubota Gas illustration 3-13
Turntable Electrical illustration 3-14
Turntable Electrical 3-15
Wiring Box Assembly, Kohler Gas 3-16
Wiring Box Assembly, Kohler Gas illustration 3-17
Wiring Box Assembly, Kubota Diesel illustration 3-18
Wiring Box Assembly, Kubota Diesel 3-19
Wiring Box Assembly, Kubota Gas 3-21
Wiring Box Assembly, Kubota Gas illustration 3-23
Wiring Box Panel Assembly, Gas illustration 3-24
Wiring Box Panel Assembly, Gas 3-25
Wiring Box Panel Assembly, Diesel 3-26
Wiring Box Panel Assembly, Diesel illustration 3-27
Platform Control Box Assembly, Kohler illustration 3-28
Platform Control Box Assembly, Kohler 3-29
Platform Control Box Assembly, Kubota 3-30
Platform Control Box Assembly, Kubota illustration 3-31
Solenoid Switch Assembly, Kubota Diesel 3-32
Relay Panel Assembly 3-34
Boom Switch Assembly 3-35
Engine Gauge Panel, Kohler Gas 3-36
Engine Gauge Panel, Kubota Diesel 3-38
Engine Gauge Panel, Kubota Gas 3-40
Foot Switch Assembly, Kohler 3-42
Foot Switch Assembly, Kubota 3-43
Controller Assembly, Drive 3-44
Electric Fuel Pump Assembly 3-46
Power to Platform, 110 Volt DC 3-47


MidWestTech | Snorkel UNO33D, UNO33G Articulating Boom Lift Maintenance and Re... Order the manual at mid-west-tech.com >

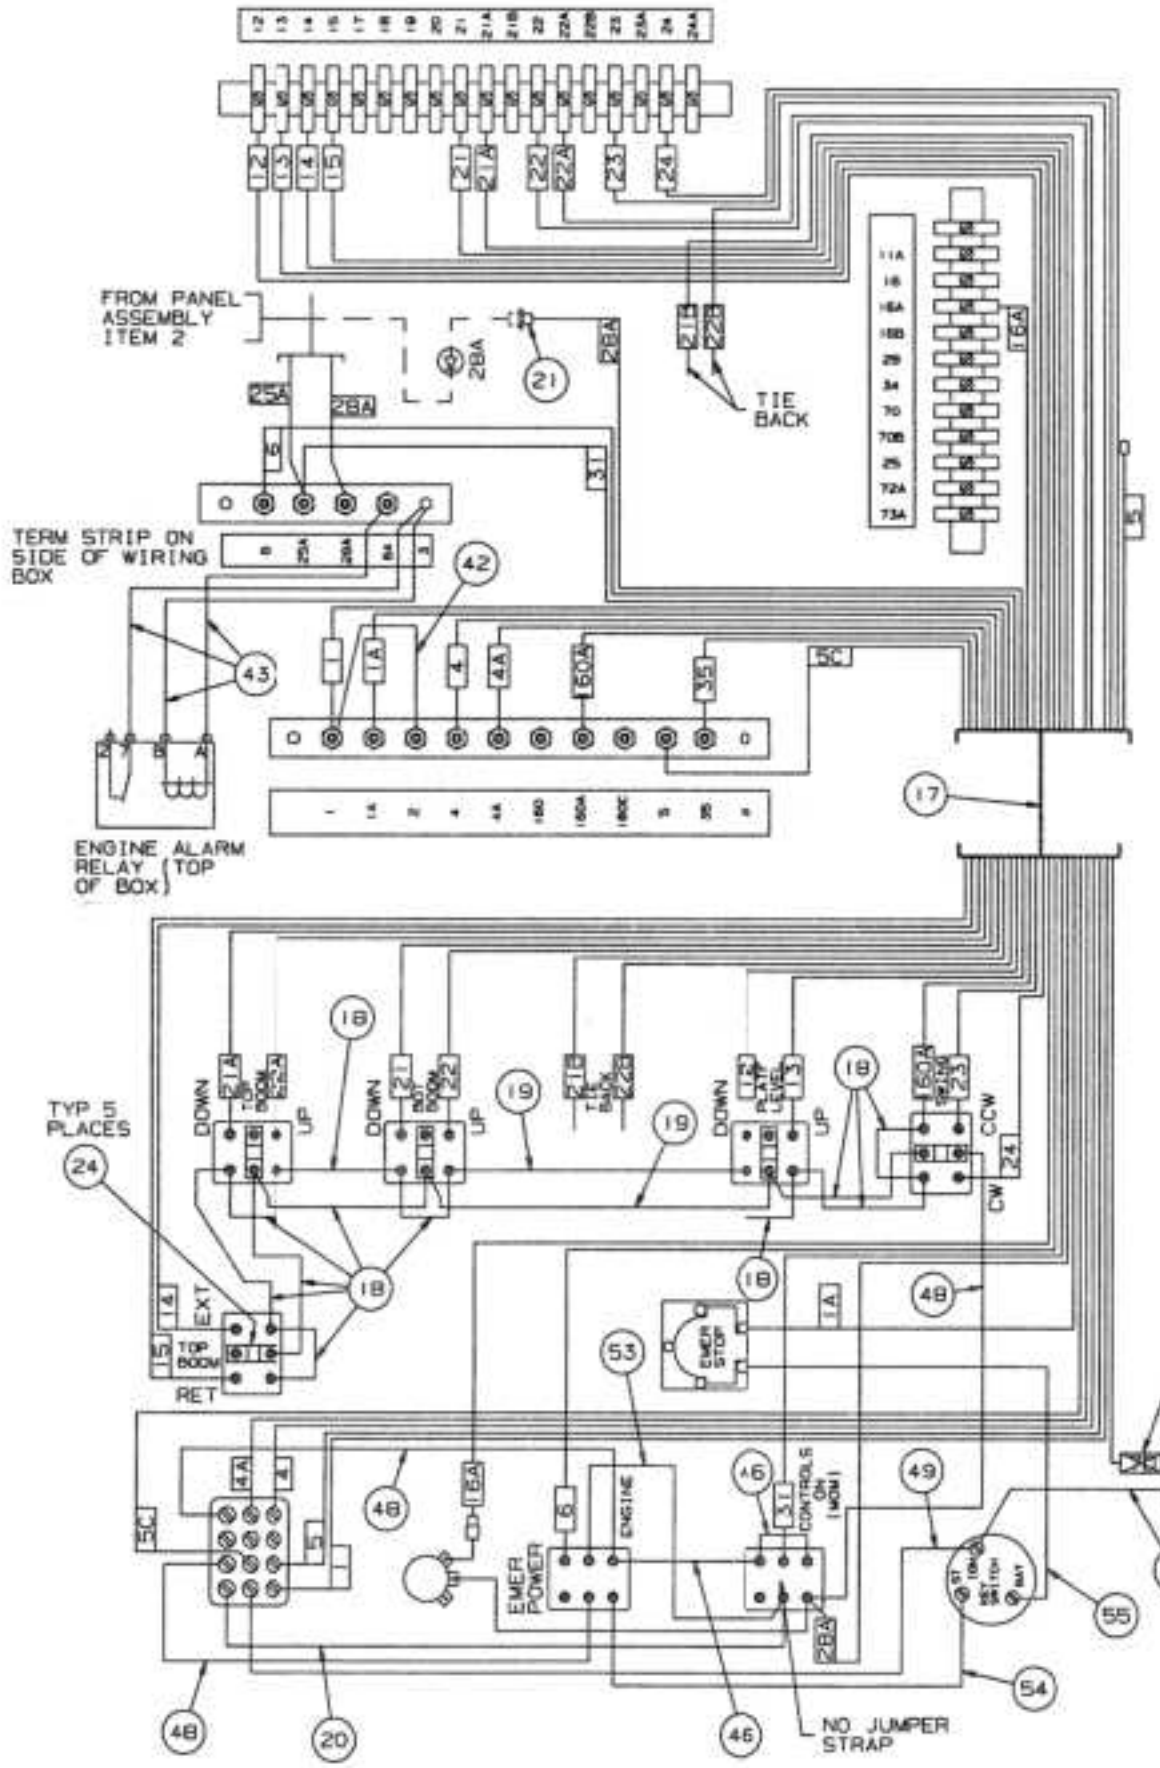


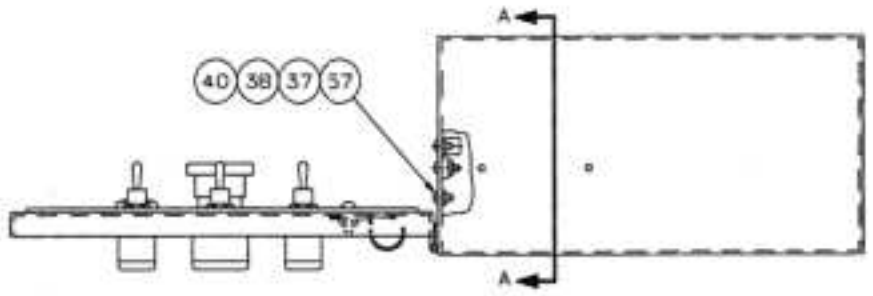

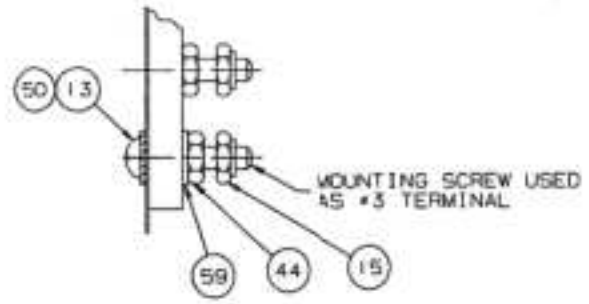


VIEW B-B
SIDE VIEW

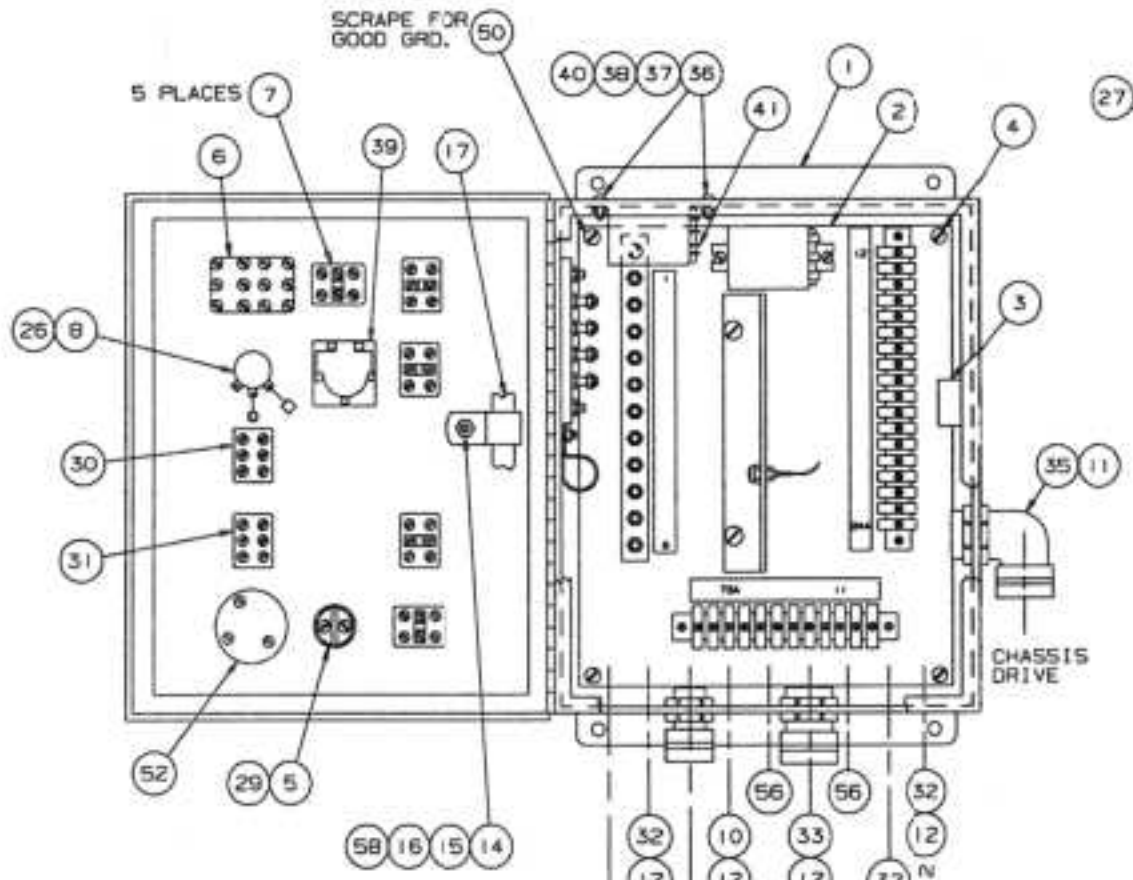

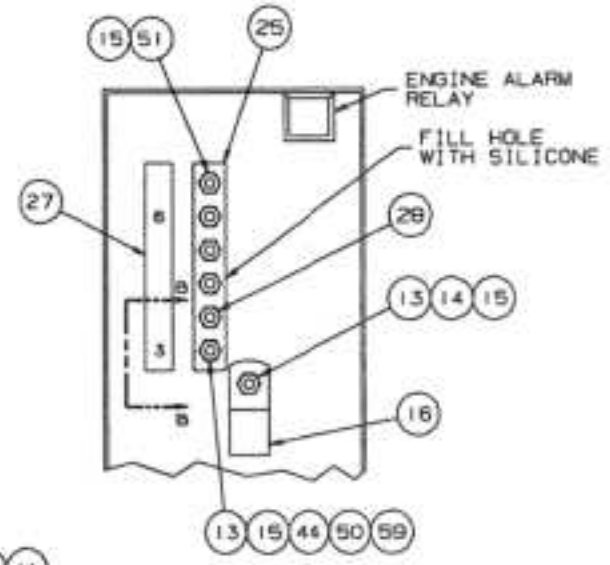

VIEW A-A

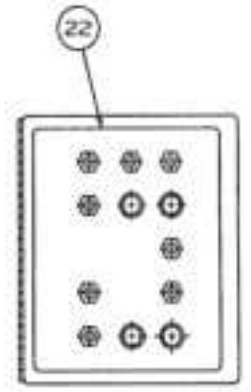

WIRING BOX
FRONT VIEW

DWG. 0151991

TITLE WIRING BOX ASSEMBLY
KUBOTA GAS
SNORKELIFT UNO 33D/33G

Snorkel

MidWestTech | Snorkel UNO33D, UNO33G Articulating Boom Lift Maintenance and Repair Parts Manual | Publication 0152872
Order the manual at mid-west-tech.com >