Maintenance and Repair Parts Manual

Snorkel

UNO 41E

battery powered

ATTENTION:

Always give the unit serial and model number when ordering parts.

This information is found on the serial number placard.

Be sure to order all parts by their part number, and if possible, specify routing of shipment.

All correspondence relative to this unit, such as field reports, discrepancy reports, requests for service information, etc., should be directed to:

OmniQuip Snorkel INTERNATIONAL

P.O. Box 1160
St. Joseph, MO 64502-1160

Attention: Service Department

P/N 0152873
November, 1997

MidWestTech | Snorkel UNO41E Articulating Boom Lift Maintenance and Repair Parts Manu... Order the manual at mid-west-tech.com >

Maintenance Information

Manual Organization 1
- Maintenance 1
- Repair parts and illustrations 1
- Hydraulics 1
- Electrical 1
- Options 1
- Parts index - Page locator 1

Parts drawings 2
General specifications 3
- OSHA, ANSI and CSA Standards 3

Maintenance schedules 4
- Daily maintenance (operator's inspection) 4
- 90 day or 150 hour maintenance (trained service technician) 5
- Yearly or 500 hour maintenance (trained service technician) 5

Lubrication information 6
- Lubrication illustration 6
- Lubrication 6
- Pressure gun application 6
- Rotation bearing 6
- Rotation gear teeth and pinion 6
- Swing drive 6
- Tie rods 6
- Drive gear reducer 7
- Drive axle 7
- Hydraulic oil reservoir 7
- Return Filter 7
- Door hinges and latches 7
- Platform rotation gear box 7
- Batteries 7

Battery care and maintenance 8
Battery charger 9
- General charging cautions 9

Preventive inspection maintenance 90 day or 150 hour checklist 10
Torque chart 12

Section 1. - Repair Parts

Chassis and Turntable Mounting 1-2
Swing Drive Installation 1-4
Steering Installation 1-6
Steer Yoke Installation 1-8
Drive Train Installation 1-10
Drive Train Installation illustration 1-11
Gear Reducer and DC Traction Motor 1-13
Booms Installation 1-14
Upper Boom and Hose Carrier Assembly 1-16
Upper Boom and Hose Carrier Assembly illustration 1-17
Boom Assembly, Upper illustration 1-18
Boom Assembly, Upper 1-19
Hose Carrier Assembly 1-20
Hose Carrier Assembly illustration 1-21
Extend Cylinder Assembly illustration 1-22
Extend Cylinder Assembly 1-23
Cylinder Assembly, Lower Boom Lift 1-24
Cylinder Assembly, Master Level 1-25
Cylinder Assembly, Middle Boom Lift 1-26
Cylinder Assembly, Slave Level 1-27
Cylinder Assembly, Upper Boom Lift 1-28
Platform Installation 1-29
Platform Installation illustration 1-31
Platform Rotation Gear Box, Morse 1-32
Platform Rotation Gear Box, Safeguard 1-34
Cowling Installation 1-36
Placards and Decals Installation 1-38
Foot Brake Installation 1-40
Tire and Wheel Installation 1-41

MidWestTech | Snorkel UNO41E Articulating Boom Lift Maintenance and Repair Parts... Order the manual at mid-west-tech.com >

Table of Contents

Section 2. - Hydraulics

Hydraulic Schematic illustration 2-3
Hydraulic Equipment, Turntable illustration 2-4
Hydraulic Equipment, Turntable 2-5
Hydraulic Hose Installation, Turntable 2-6
Hydraulic Hose Installation, Turntable illustration 2-7
Hydraulic Equipment, Booms illustration 2-8
Hydraulic Equipment, Booms 2-9
Package Valve Assembly, Rexroth 2-10
Package Valve Assembly, Rexroth illustration 2-11
Package Valve Assembly, Vickers illustration 2-12
Package Valve Assembly, Vickers 2-13
Control Valve Package, Rexroth 2-14
Control Valve Package, Vickers 2-16
Add-on Valve Section, Rexroth 2-18
Add-on Valve Section, Vickers 2-19
Hydraulic Power Unit 2-20
Swing drive, Gear Products manufacture 2-22
Hydraulic Hand Pump 2-24

Section 3. - Electrical


Wiring Code and Function 3-2
Wiring Schematic Circuit Code 3-3
Electrical Wiring Schematic illustration 3-5
Electrical Components Installation illustration 3-6
Electrical Components Installation 3-7
Battery Box Assembly, Left Hand 3-8
Battery Box Assembly, Left Hand illustration 3-9
Battery Box Assembly, Right Hand illustration 3-10
Battery Box Assembly, Right Hand 3-11
Drive Control Box Assembly 3-13
Drive Control Box Assembly illustration - sheet 1 3-15
Drive Control Box Assembly illustration - sheet 2 3-16
Wiring Box Assembly 3-18
Wiring Box Assembly illustration 3-19
Wiring Box Panel Assembly illustration 3-20
Wiring Box Panel Assembly 3-21
Platform Control Box Assembly 3-22
Platform Control Box Assembly illustration 3-23
Foot Switch Assembly 3-24
Boom Switch Assembly 3-25
Remote Brake Release Assembly 3-26
Power To Platform, 110 Volt DC 3-27
Controller Assembly, Drive 3-28


Section 4. - Options

Air Line to Platform 4-2
Air Line To Platform Installation illustration 4-3
Warning Light Installation illustration 4-4
Warning Light Installation 4-5
Battery Condition Indicator 4-6
Drive Motion Alarm 4-7
Keyed Platform/Ground Selector Switch 4-8
Operator Horn 4-9
Self Closing Platform Gate 4-10
Tool Tray 4-11


MidWestTech | Snorkel UNO41E Articulating Boom Lift Maintenance and Repair Parts... Order the manual at mid-west-tech.com >

NOTES:
1. POSITION LIFT CYLINDER HOSES, ITEMS 25, AND 50 SO THAT 30" OF HOSE PROJECTS PAST CLAMP, ITEM 4.
2. INSTALL ORIFICE ON PACKAGE VALVE.

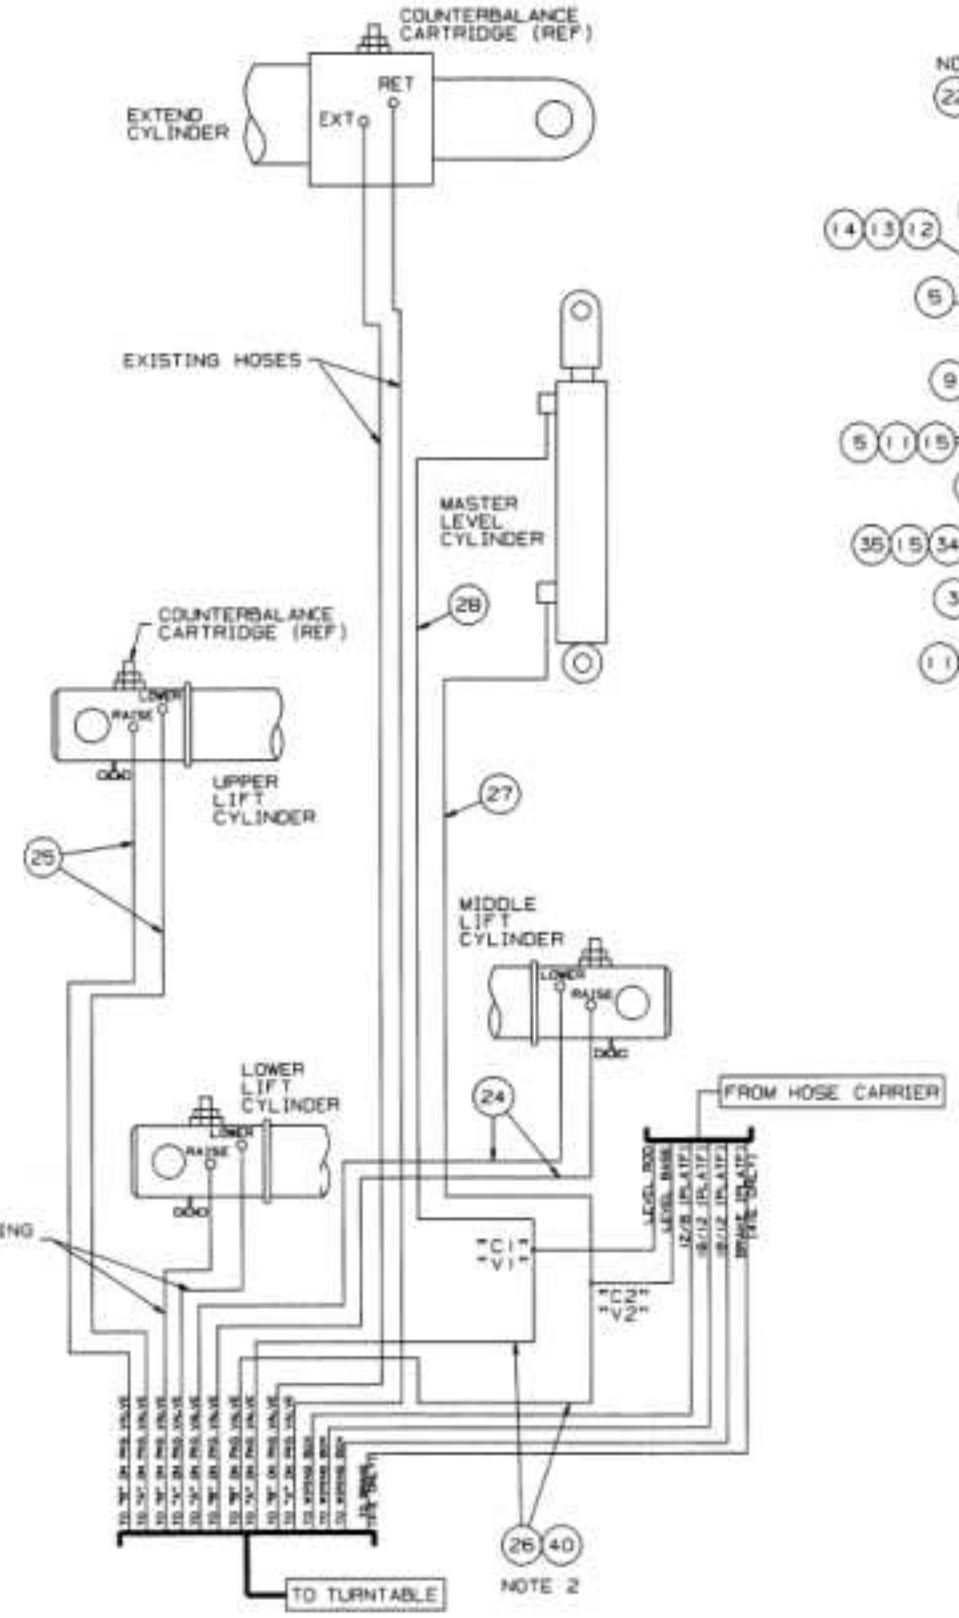


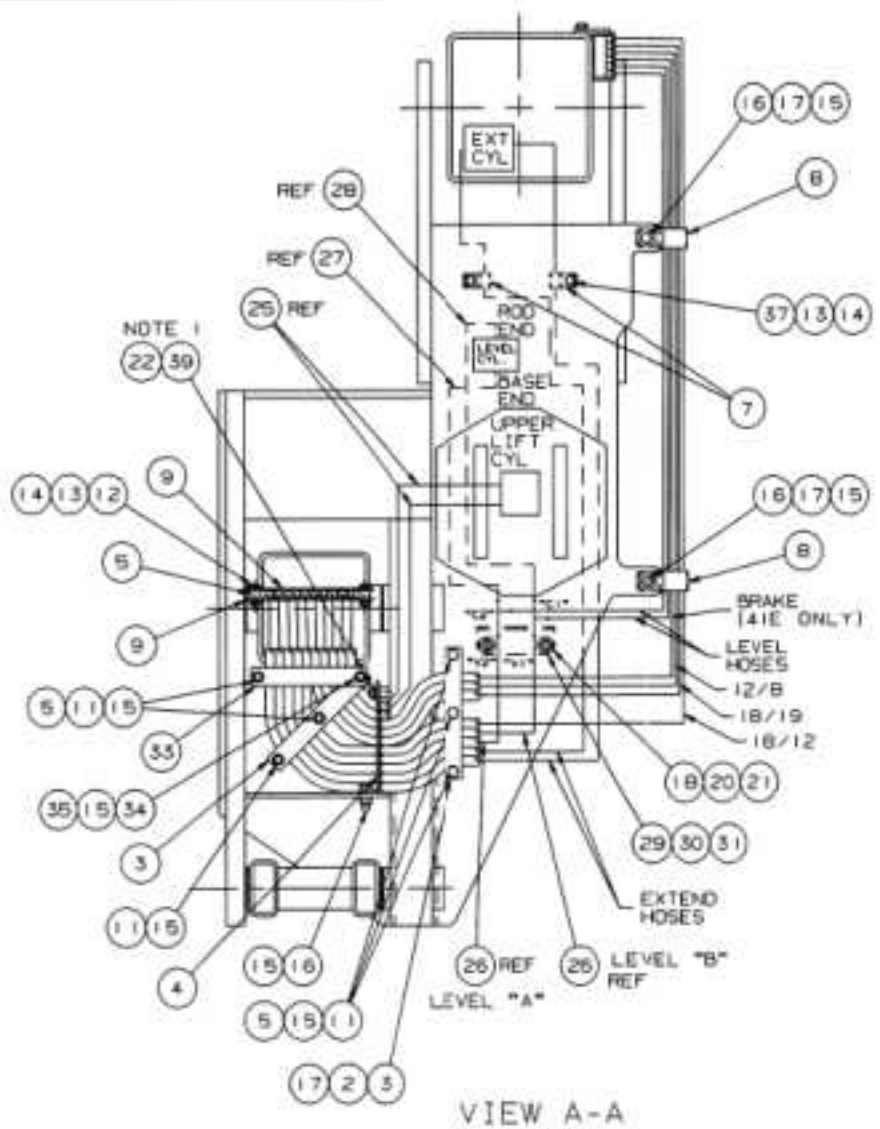


VIEW A-A

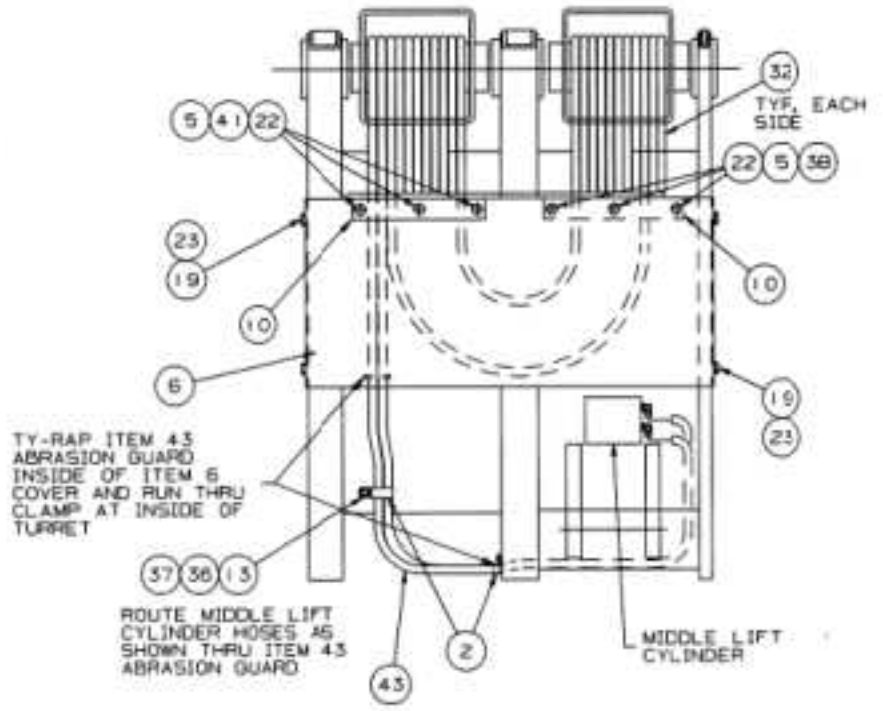

VIEW C-C

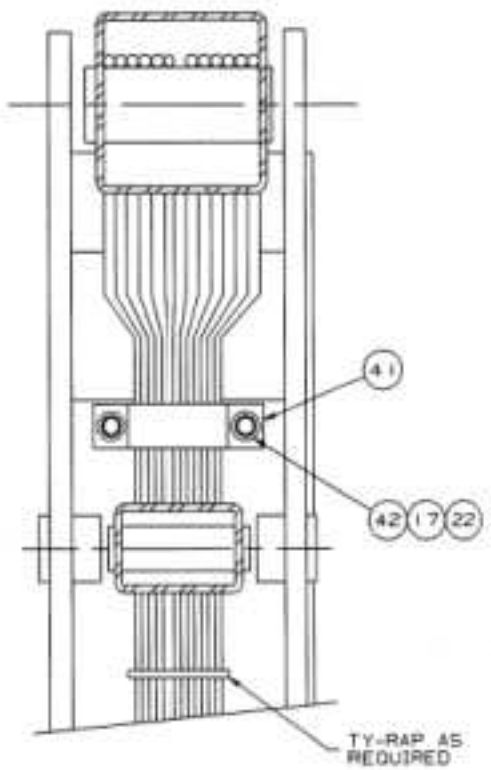

VIEW B-B

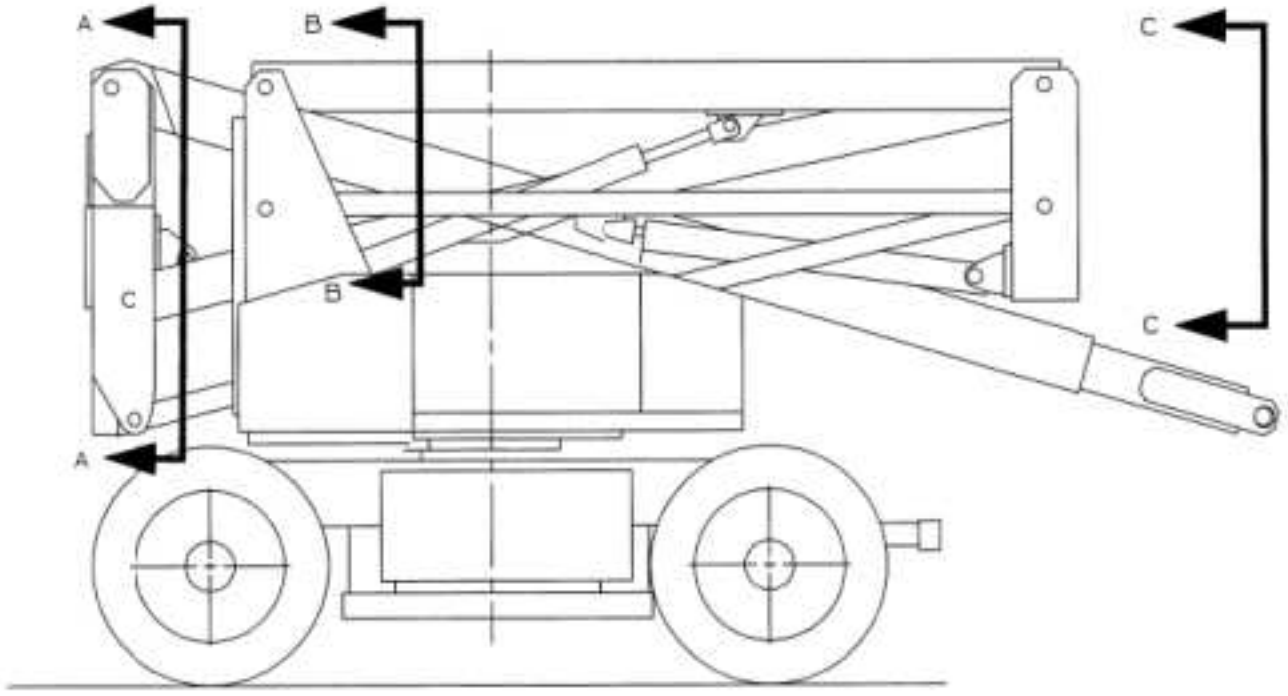

Snorkel	TITLE HYDRAULIC EQUIPMENT BOOMS SNORKELIFT UNO 41E	DWG. 0151020
Page 2 - 8		

Order the manual at mid-west-tech.com >
MidWestTech | Snorkel UNO41E Articulating Boom Lift Maintenance and Repair Parts Manual | Publication 0152873