
OPERATION, MAINTENANCE AND REPAIR PARTS MANUAL

Snorkelift.

"UNO" SERIES

MODEL UNO-41G

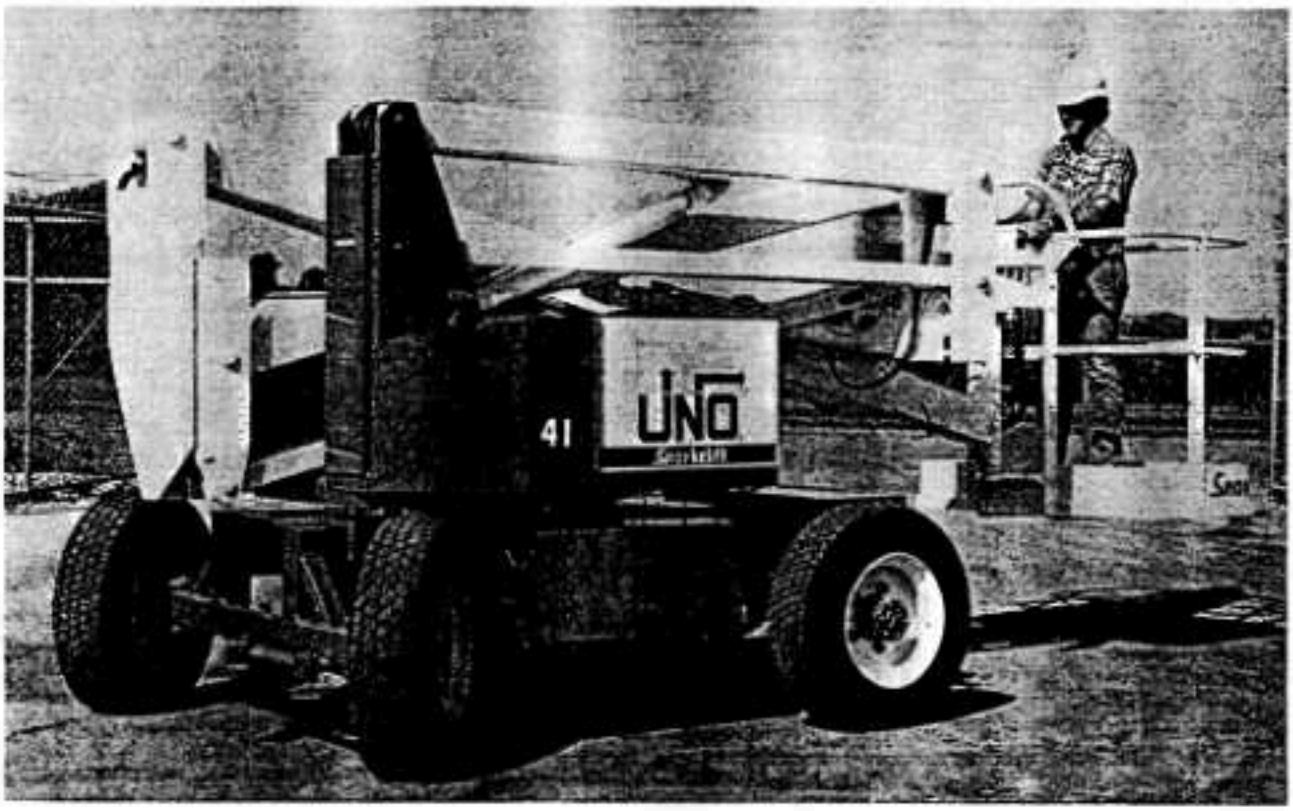

Snorkel ECONOMY

A FIGGIE INTERNATIONAL COMPANY

ST. JOSEPH, MISSOURI

Publication no. RPM-001-UNO-41G
July 1988

MidWestTech | Snorkel UNO-41G Articulating Boom Lift Operation, Maintenance and Repair... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

INTRODUCTION I
MANUFACTURER'S WARRANTY III
GENERAL DESCRIPTION IV

SECTION I - OPERATOR'S SECTION ..... 1 - 1
Operating Characteristics and Limitations ..... 1 - 2
Platform Capacity ..... 1 - 2
Drive ..... 1 - 2
Steering ..... 1 - 3
Boom Operating Times ..... 1 - 4
Turntable Swing ..... 1 - 3
Platform Rotation ..... 1 - 3

Controls & Functions ..... 1 - 4
Ground Control Station ..... 1 - 4
Engine Gauge Panel ..... 1 - 5
Platform Control Station ..... 1 - 6

Operator's Inspection ..... 1 - 9

Operating Procedures ..... 1 - 11
Operation ..... 1 - 11
Transporting Work Platform ..... 1 - 15
Emergency Operation ..... 1 - 17

General Safety Cautions ..... 1 - 19
Driving Unit ..... 1 - 19
General Operating Precautions ..... 1 - 19
General Engine Operating Precautions ..... 1 - 21
General Operator Safety Precautions ..... 1 - 21
Electrical Hazard ..... 1 - 22

SECTION II - MAINTENANCE ..... 2 - 1
Preventive Inspection Maintenance ..... 2 - 2
Field Inspection Check List ..... 2 - 2
Chassis ..... 2 - 2
Turntable ..... 2 - 2
Floating Turrets ..... 2 - 3
Booms ..... 2 - 3
Operators Platform ..... 2 - 3
Platform Leveling ..... 2 - 3
Platform Rotator ..... 2 - 4
Hose Carrier ..... 2 - 4
Hydraulic Oil Reservoir ..... 2 - 4
Engine ..... 2 - 4
Battery ..... 2 - 4

MidWestTech | Snorkel UNO-41G Articulating Boom Lift Operation, Maintenance and R... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS (Continued)

SECTION II - MAINTENANCE: (CONTINUED)


Preventive Mechanical Maintenance ..... 2 - 5
General Lubrication Instructions ..... 2 - 5
Pressure Gun Application ..... 2 - 5
Rotation Bearing ..... 2 - 5
Rotation Gear Teeth & Pinion ..... 2 - 6
Gear Reduction Unit - (Swing Drive) ..... 2 - 6
Gear Reduction Unit - (Wheel Drive) ..... 2 - 6
Hydraulic Oil Reservoir ..... 2 - 6
Minor Hinge or Bearing Points ..... 2 - 7
Platform Rotation and Pylon Assembly ..... 2 - 7
Lubrication Chart ..... 2 - 8
Engine ..... 2 - 9
Batteries ..... 2 - 9
Hydraulic System Components ..... 2 - 9
Hydraulic Oil Reservoir ..... 2 - 9
Filters ..... 2 - 10
Hydraulic Pump ..... 2 - 11
Cylinders Overhaul ..... 2 - 11
Holding Valves ..... 2 - 12
Bleed Down Valves ..... 2 - 12
Platform Level System ..... 2 - 12
Hydraulic Hose/Electrical Cable Carrier ..... 2 - 13
Platform Drive Controller ..... 2 - 13

SECTION III - REPAIR PARTS ..... 3 - 1
Illustrations Index ..... 3 - 4


SECTION IV - APPENDIX (MANUFACTURER'S DATA) ..... 4 - 1
Torque Chart ..... 4 - 1


Note: All communications concerning this equipment will be handled with greater efficiency and speed if the serial number, model number and date of purchase or delivery are given.


MidWestTech | Snorkel UNO-41G Articulating Boom Lift Operation, Maintenance and R... Order the manual at mid-west-tech.com >

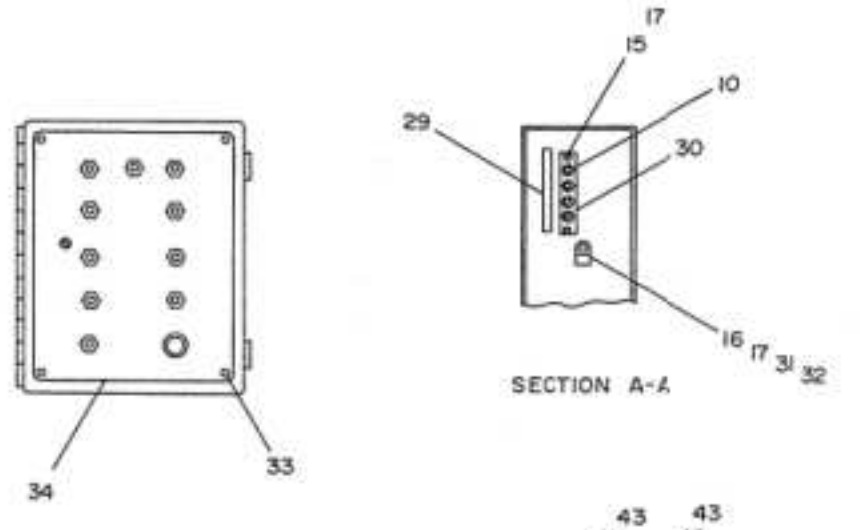

SECTION A-A

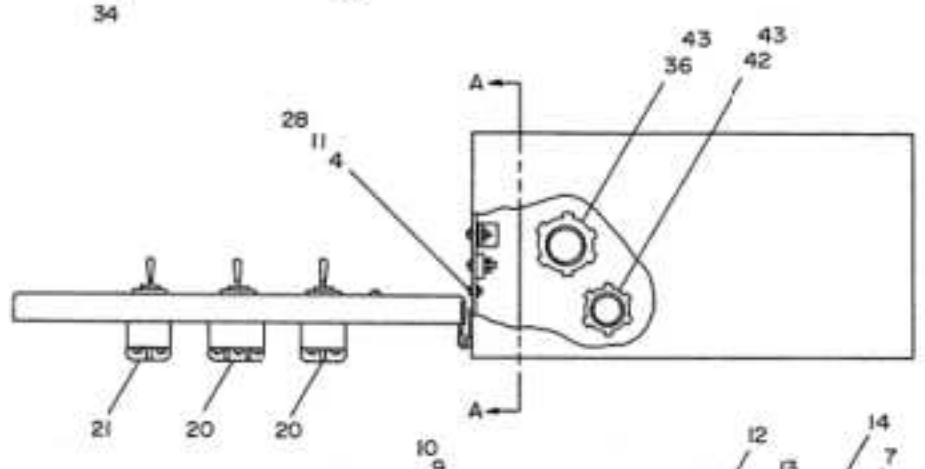

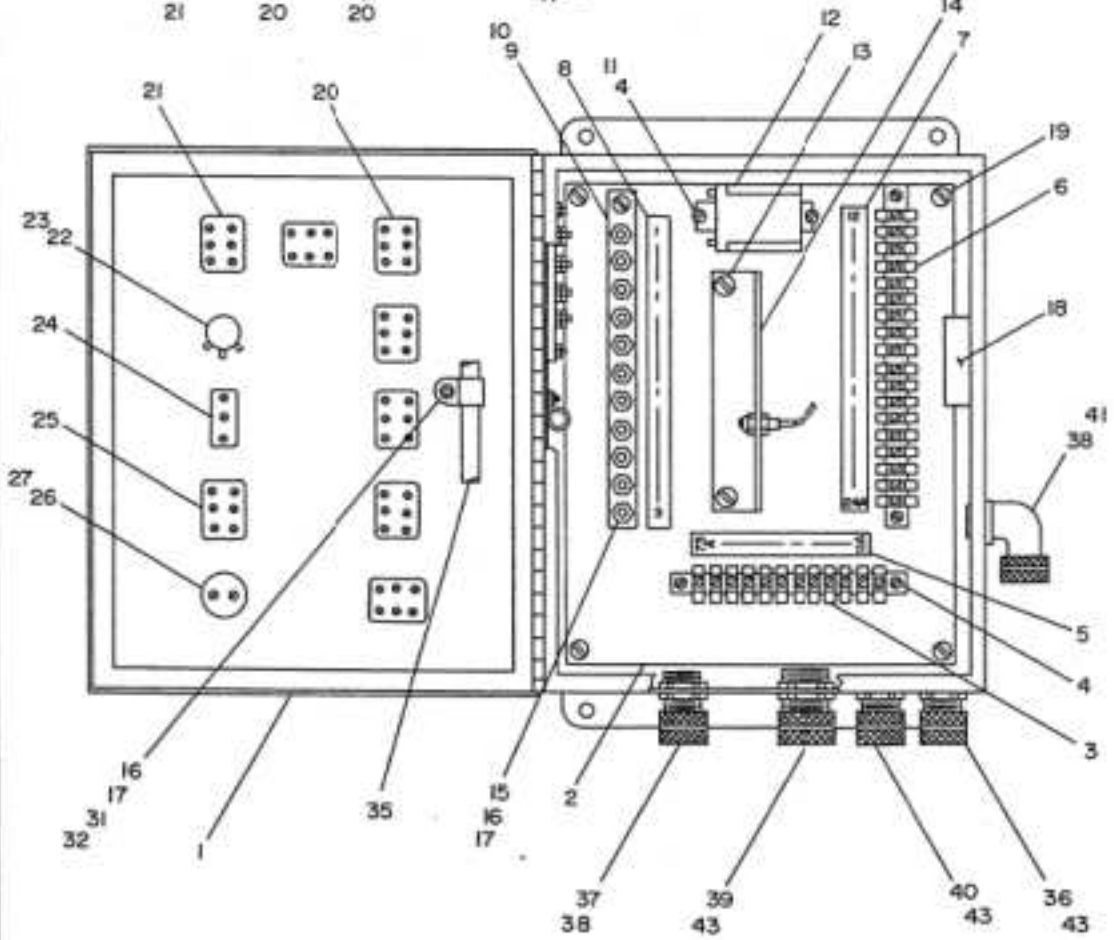

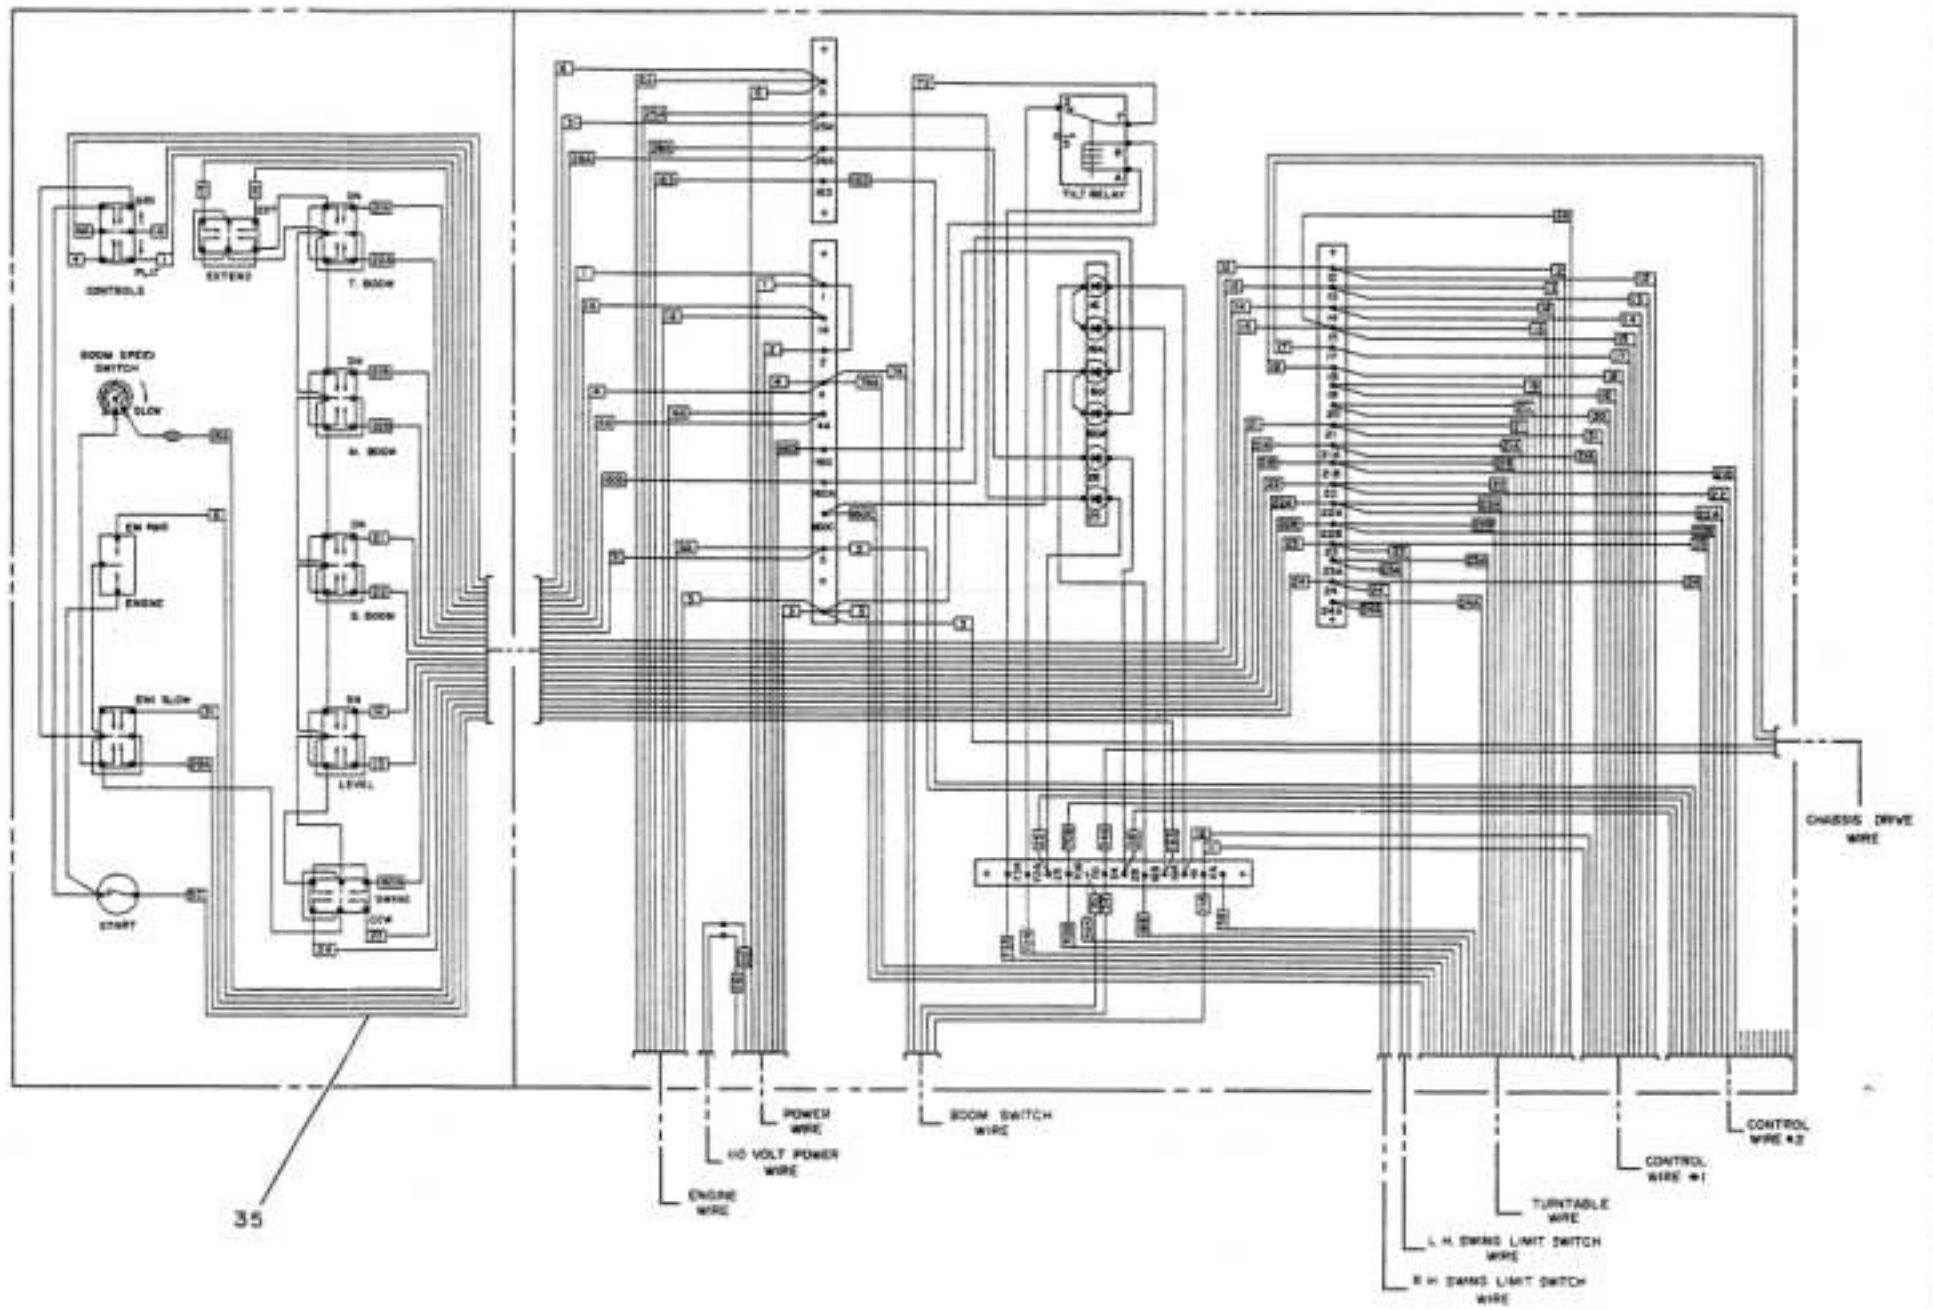

TITLE	SIZE	DRAWING NO.
WIRING BOX ASSEMBLY SNORKELIFT UNO-41G	B	015-0884

Order the manual at mid-west-tech.com >
MidWestTech | Snorkel UNO-41G Articulating Boom Lift Operation, Maintenance and Repair Parts Manual | Publication 0153298