REPAIR PARTS MANUAL

Snorkelift.

"UNO" SERIES

41D/41G (4x4)

NOTES:

Always give the serial number and model number of your "Snorkelift" when ordering parts.

This information is found on the nameplate which is mounted at the Ground Controls Station.

Be sure to order all parts by their part number, and if possible specify routing of shipment.

All correspondence relative to this unit, such as field reports, discrepancy reports, requests for service information, etc., should be directed to:

Snorkel-Economy
A Figgie International Company
P O BOX 4065
ST JOSEPH MO 64504-4065

Attention Service Manager

Snorkel ECONOMY
A FIGGIE INTERNATIONAL COMPANY
ST. JOSEPH, MISSOURI

Publication no. RPM-001-UNO41D/41G (4x4)
December 1989

MidWestTech | Snorkel 41D, 41G (4x4) Articulating Boom Lift Repair Parts Manual | Public... Order the manual at mid-west-tech.com >

REPAIR PARTS - SECTION 1
INDEX


Bottom Boom Installation ..... Page 1 - 3
Chassis Cowling Installation ..... Page 1 - 53
Chassis/Turntable Mounting ..... Page 1 - 25
Drive Installation, Rear ..... Page 1 - 27
Drive Motor, Front ..... Page 1 - 41
Drive Motor, Rear ..... Page 1 - 31
Drive Motor Brake ..... Page 1 - 33
Engine Installation, Kubota Diesel ..... Page 1 - 59
Engine Installation, Toyota Gas ..... Page 1 - 67
Extension Cylinder Assembly ..... Page 1 - 15
Fuel Tank Installation ..... Page 1 - 43
Hose Carrier Installation ..... Page 1 - 17
Hydraulic Oil Reservoir Installation ..... Page 1 - 45
Intake/Exhaust Installation, Kubota Diesel ..... Page 1 - 63
Intake/Exhaust Installation, Toyota Gas ..... Page 1 - 71
Lower Floating Turret Installation ..... Page 1 - 5
Manual Rotation Gear Box ..... Page 1 - 23
Middle Boom Installation ..... Page 1 - 7
Placards Installation ..... Page 1 - 55
Platform Installation ..... Page 1 - 19
Platform Rotator Assembly ..... Page 1 - 21
Power Wheel, Front ..... Page 1 - 39
Power Wheel, Rear ..... Page 1 - 29
Steering Installation ..... Page 1 - 35
Steer Yoke and Wheel Installation ..... Page 1 - 37
Swing Drive, Gear Products Manufacture ..... Page 1 - 49
Swing Drive, Hub City Manufacture ..... Page 1 - 51
Throttle and Choke Installation, Toyota Gas ..... Page 1 - 69
Throttle and Run Installation, Kubota Diesel ..... Page 1 - 61
Top Boom Assembly, Base Boom ..... Page 1 - 11
Top Boom Assembly, Tip Boom ..... Page 1 - 13
Turntable Cowling/Swing Drive Installation ..... Page 1 - 47
Upper Floating Turret Installation ..... Page 1 - 9

MidWestTech | Snorkel 41D, 41G (4x4) Articulating Boom Lift Repair Parts Manual | P... Order the manual at mid-west-tech.com >

BOTTOM BOOM INSTALLATION

ITEM	PART NO	DESCRIPTION	REQD
1.	C-015-0824	BOTTOM BOOM WELDMENT	1
2.	C-015-0822	BOTTOM FOLLOWER BAR WELDMENT	1
3.	D-015-1414	LIFT CYLINDER, BOTTOM BOOM	1
	B-015-1102	REPLACEMENT HYDRAULIC TUBE	
	A-601-0292	REPLACEMENT CARTRIDGE NEEDLE VALVE	
	A-601-0293	REPLACEMENT CARTRIDGE HOLDING VALVE	
4.	A-015-0182	PIN, LIFT CYLINDER ROD END	1
5.	A-015-0685	PIN, LIFT CYLINDER TO TURNTABLE	1
6.	A-015-0689	PIN, FOLLOWER BAR TO TURNTABLE	1
7.	A-015-0687	PIN, BOTTOM BOOM TO TURNTABLE	1
8.	A-007-0033	PIN LOCK	4
9.		WASHER 5/16 MEDIUM LOCK	8
10.	A-007-0473	CAPSCREW 5/16-18 DRILLED HD	8
11.		.040 DIA SS SAFETY LOCKWIRE	AR
12.	250-2032	BEARING, GARMAX #GM2024-32	4
13.	A-015-0123	SPACER	2
14.	250-0026	BEARING, GARMAX #GM2024-16	1
15.	250-0016	BEARING, GARMAX #GM2428-32	4
16.	A-015-0126	SPACER	2

MidWestTech | Snorkel 41D, 41G (4x4) Articulating Boom Lift Repair Parts Manual | P... Order the manual at mid-west-tech.com >

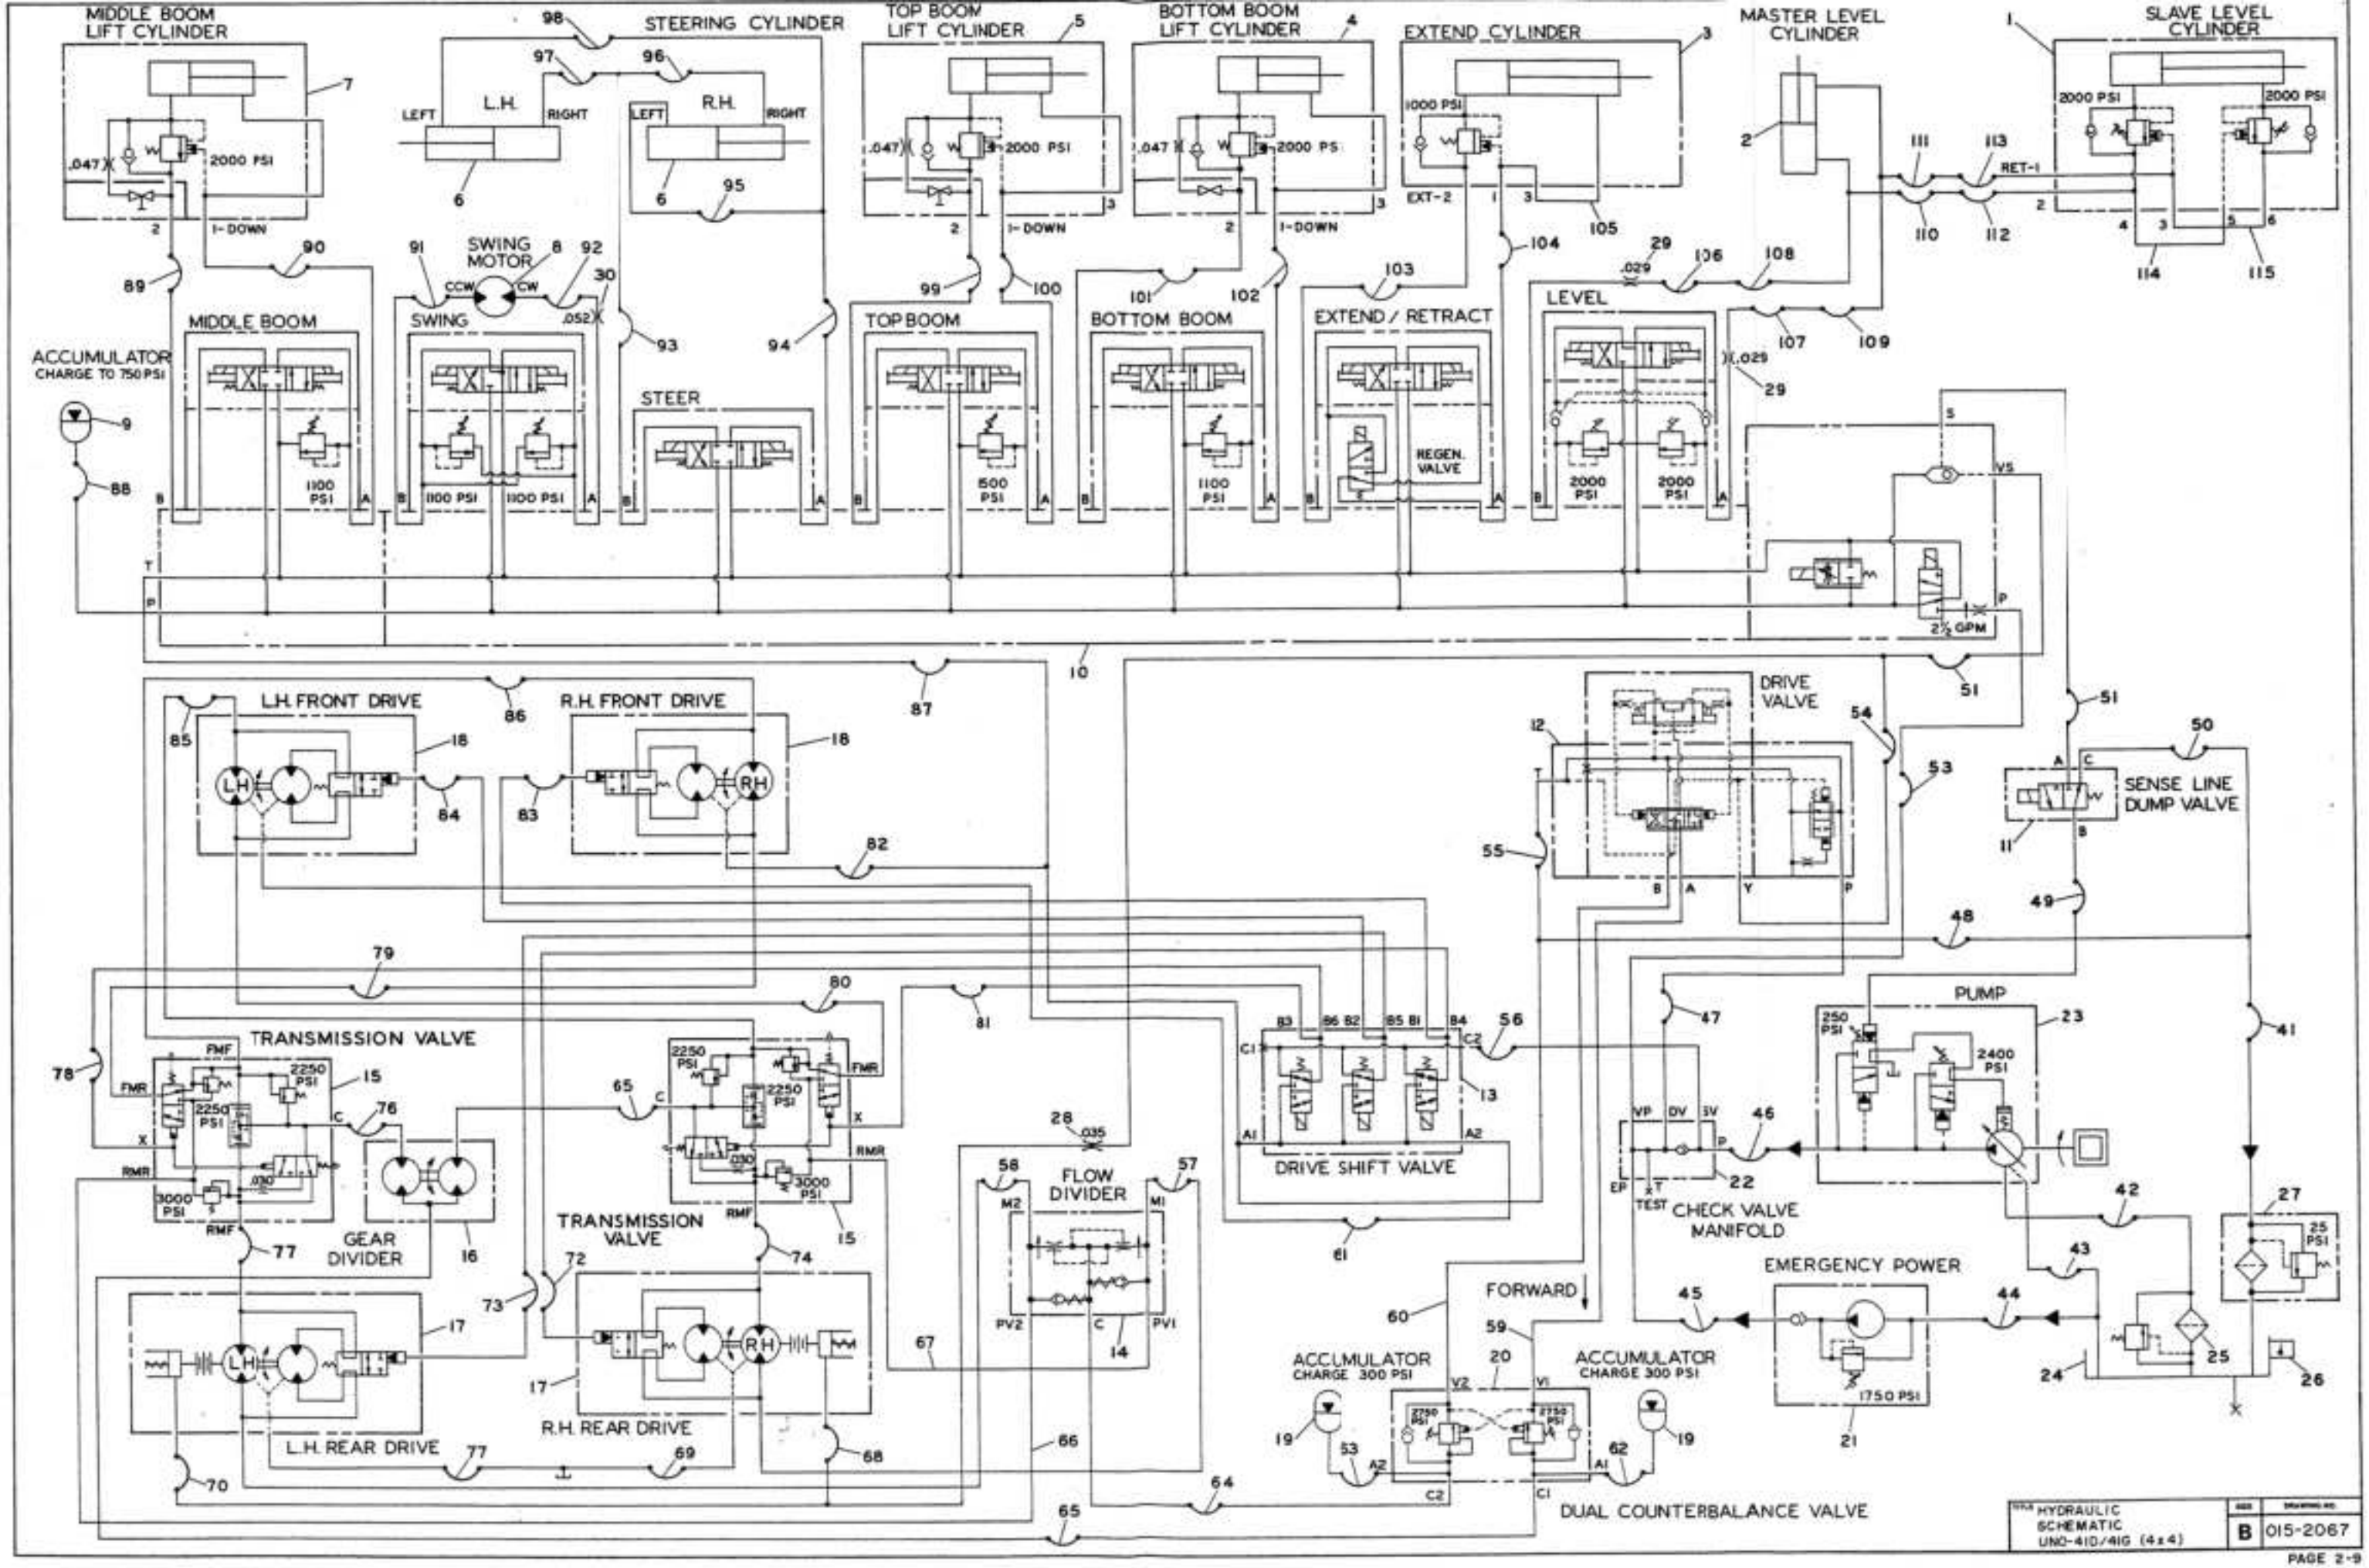

Order the manual at mid-west-tech.com >
MidWestTech | Snorkel 41D, 41G (4x4) Articulating Boom Lift Repair Parts Manual | Publication 0153303