# REPAIR PARTS MANUAL

Snorkelift.

## UNO-41D/41G (4x4) SERIES

### NOTES:

Always give the serial number and model number of your "Snorkelift" when ordering parts.

This information is found on the nameplate which is mounted at the Ground Controls Station.

Be sure to order all parts by their part number, and if possible specify routing of shipment.

All correspondence relative to this unit, such as field reports, discrepancy reports, requests for service information, etc., should be directed to:

Snorkel-Economy
A Figgie International Company
P O BOX 4065
ST JOSEPH MO 64504-0065

Attention Service Manager

Snorkel ECONOMY
A FIGGIE INTERNATIONAL COMPANY
ST. JOSEPH, MISSOURI

Publication no. RPM-002-UNO-41D/41G (4x4)
October 1991

MidWestTech | Snorkel UNO-41D, UNO-41G (4x4) Articulating Boom Lift Repair Parts Manu... Order the manual at mid-west-tech.com >

# REPAIR PARTS - SECTION 1
# INDEX


Bottom Boom Installation . . . . . Page 1 - 5
Chassis Cowling Installation . . . . . Page 1 - 53
Chassis/Turntable Mounting . . . . . Page 1 - 3
Drive Installation, Rear . . . . . Page 1 - 35
Drive Motor, Front . . . . . Page 1 - 33
Drive Motor, Rear . . . . . Page 1 - 39
Drive Motor Brake . . . . . Page 1 - 41
Engine Installation, Kubota Diesel . . . . . Page 1 - 61
Engine Installation, Toyota Gas . . . . . Page 1 - 62
Extension Cylinder Assembly . . . . . Page 1 - 17
Fuel Tank Installation . . . . . Page 1 - 43
Hose Carrier Assembly . . . . . Page 1 - 19
Hydraulic Oil Reservoir Installation . . . . . Page 1 - 45
Intake/Exhaust Installation, Kubota Diesel . . . . . Page 1 - 69
Intake/Exhaust Installation, Toyota Gas . . . . . Page 1 - 73
Lower Floating Turret Installation . . . . . Page 1 - 7
Middle Boom Installation . . . . . Page 1 - 9
Placards Installation, Kubota . . . . . Page 1 - 55
Placards Installation, Toyota . . . . . Page 1 - 57
Platform Installation . . . . . Page 1 - 21
Platform Rotator Assembly . . . . . Page 1 - 23
Platform Rotation Gear Box . . . . . Page 1 - 25
Power Wheel, Front . . . . . Page 1 - 31
Power Wheel, Rear . . . . . Page 1 - 37
Steer Yoke & Wheel Installation . . . . . Page 1 - 29
Steering Installation . . . . . Page 1 - 27
Swing Drive, Gear Products Manufacture . . . . . Page 1 - 49
Swing Drive, Hub City Manufacture . . . . . Page 1 - 51
Throttle and Choke Installation, Toyota Gas . . . . . Page 1 - 71
Throttle and Run Installation, Kubota Diesel . . . . . Page 1 - 67
Top Boom Assembly, Base Boom . . . . . Page 1 - 13
Top Boom Assembly, Tip Boom . . . . . Page 1 - 15
Turntable Cowling/Swing Drive Installation . . . . . Page 1 - 47
Upper Floating Turret Installation . . . . . Page 1 - 11



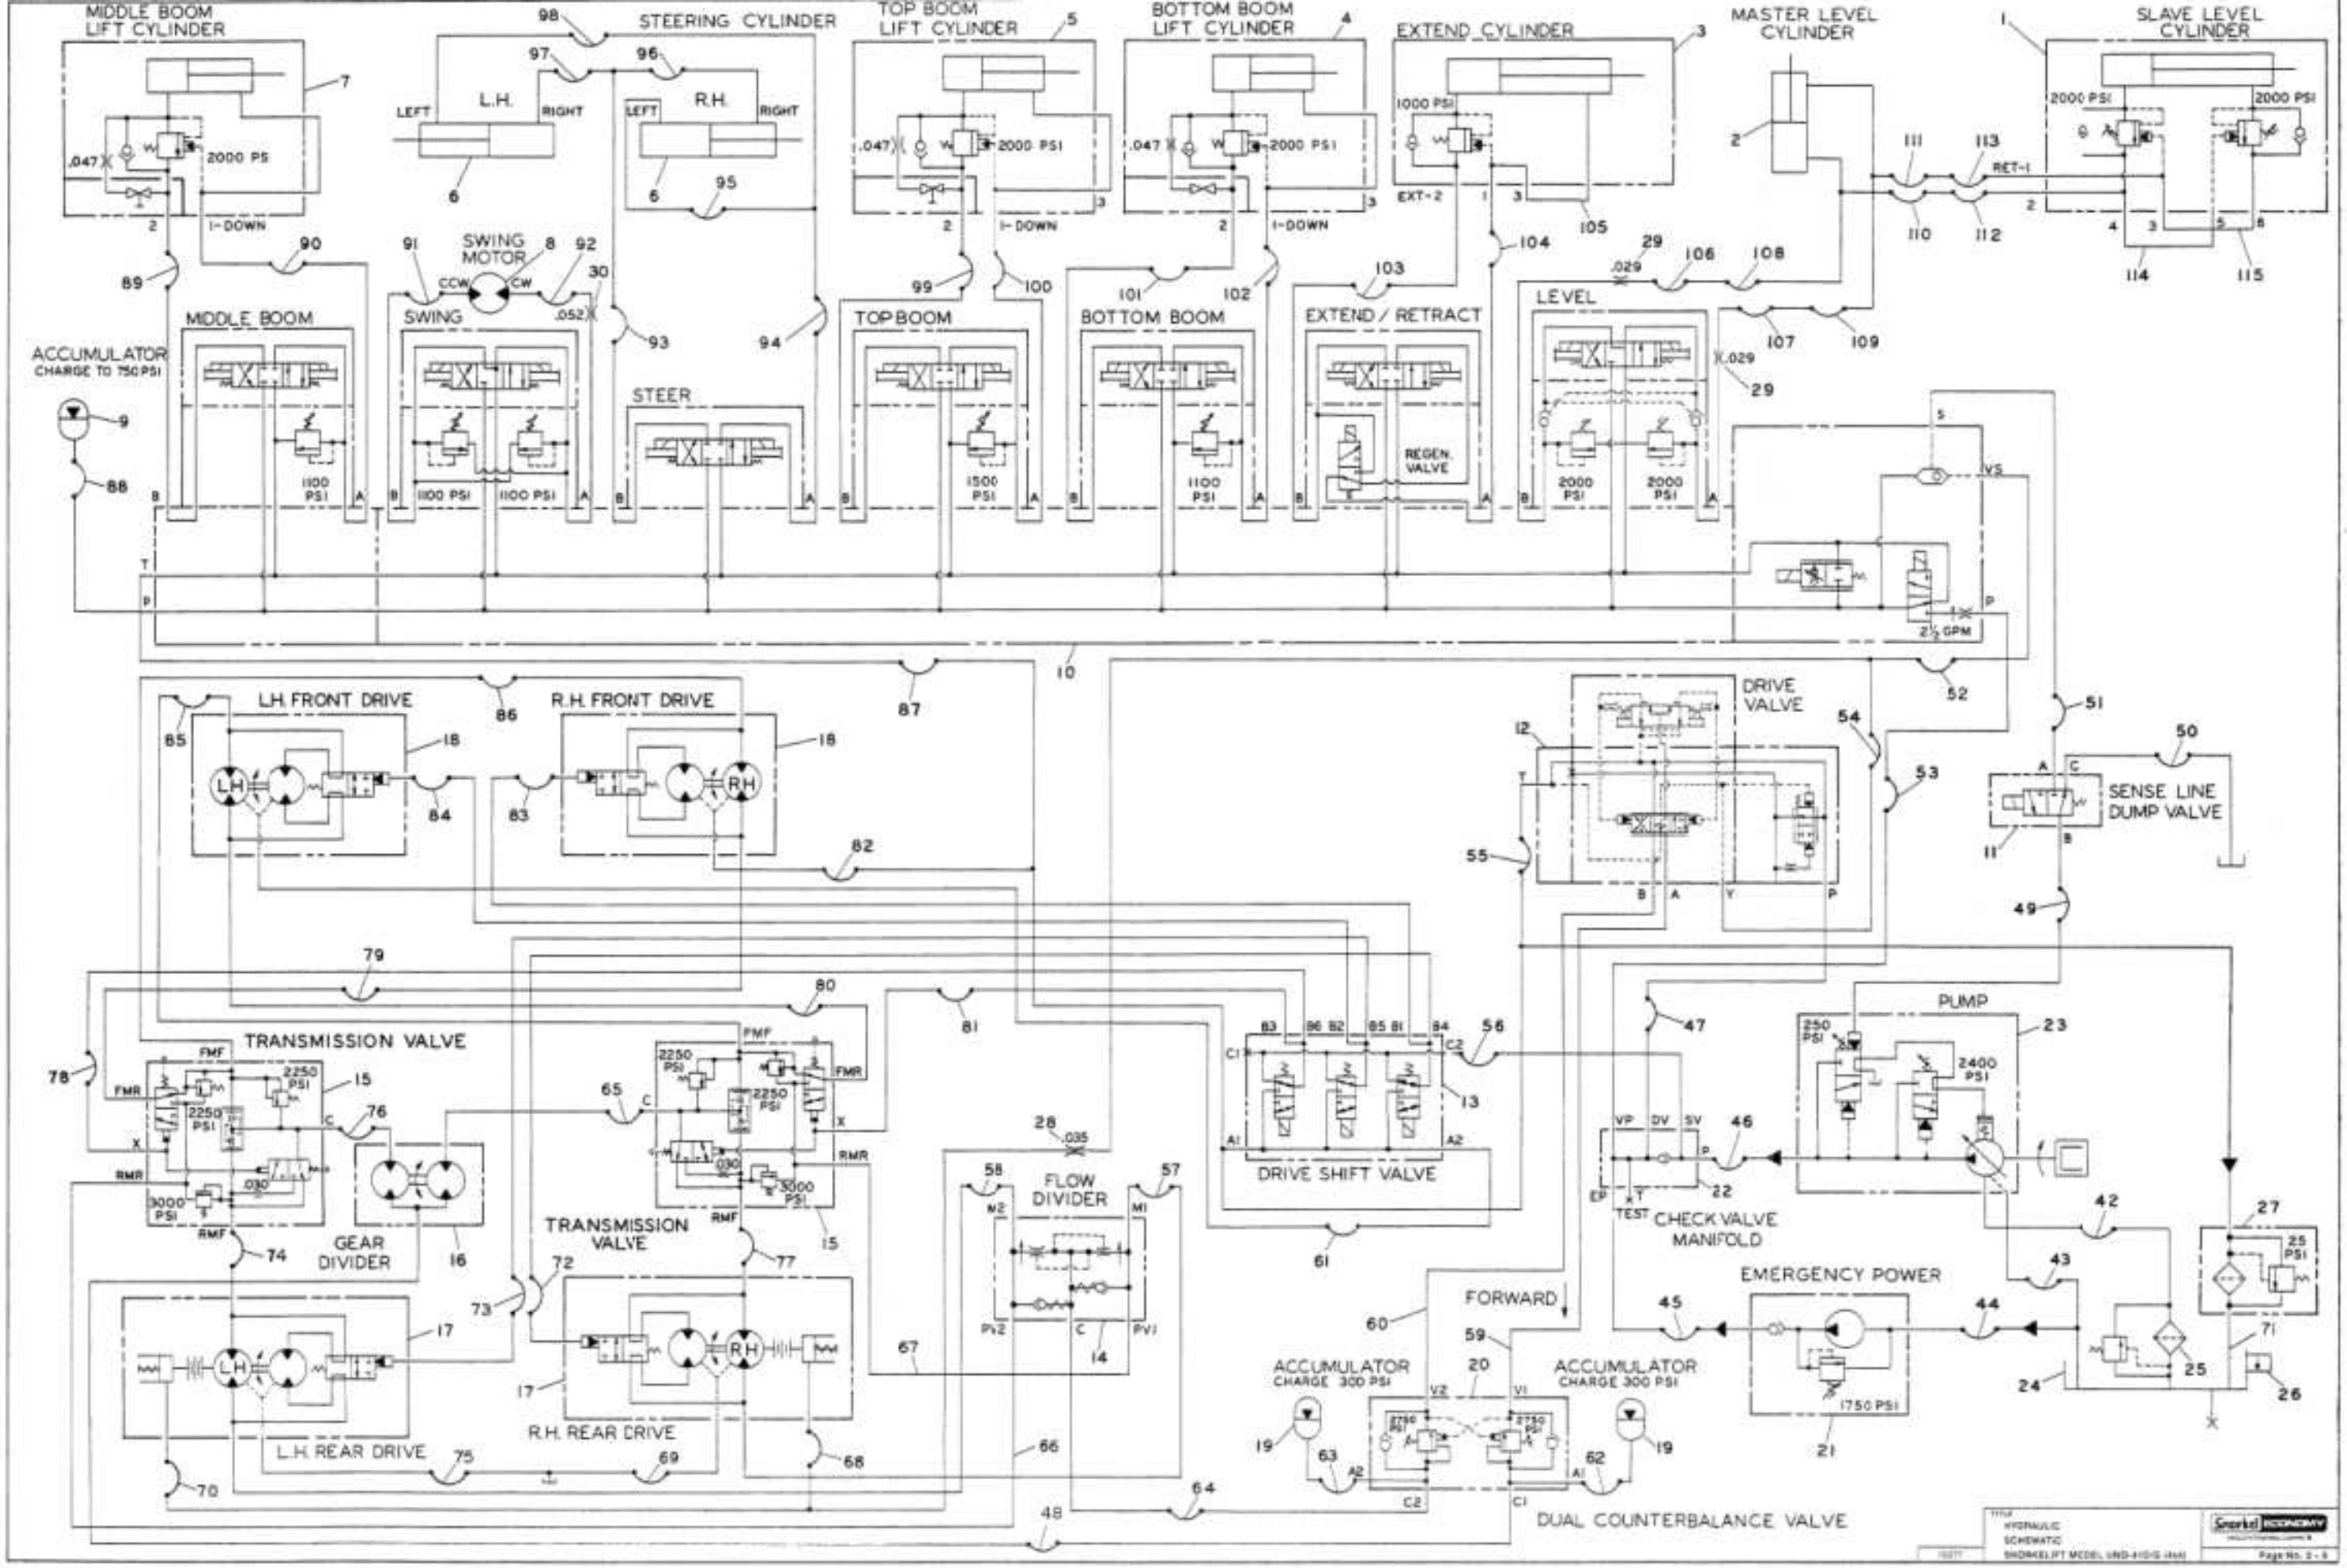

MidWestTech | Snorkel UNO-41D, UNO-41G (4x4) Articulating Boom Lift Repair Parts... Order the manual at mid-west-tech.com >

# CHASSIS/TURNTABLE MOUNTING

| ITEM | PART NO | DESCRIPTION | REQ |
|---|---|---|---|
| 1. | D-015-1644 | CHASSIS WELDMENT | 1 |
| 2. | D-015-1666 | TURNTABLE WELDMENT | 1 |
| 3. | C-015-0059 | ROTATION BEARING GEAR | 1 |
| 4. | A-556-0201 | CAPSCREW 5/8-11 SELF LOCKING | 18 |
| 5. | | WASHER 5/8 FLAT ASTM-F436 | 41 |
| 6. | A-556-0051 | CAPSCREW 5/8-11 SELF LOCKING | 23 |
| 7. | A-557-0001 | GREASE FITTING, BALKAMP #4-700 | 1 |
| 8. | 503-7102 | BULKHEAD CONNECTOR | 1 |
| 9. | 507-4401 | BULKHEAD LOCK NUT | 1 |
| 10. | A-007-0769 | LUBRICATION HOSE | 1 |
| 11. | 503-8702 | ELBOW, MALE 45° | 1 |
| 12. | A-007-3492 | DECAL, GREASING INSTRUCTIONS | 1 |



MidWestTech | Snorkel UNO-41D, UNO-41G (4x4) Articulating Boom Lift Repair Parts... Order the manual at mid-west-tech.com >




MidWestTech | Snorkel UNO-41D, UNO-41G (4x4) Articulating Boom Lift Repair Parts Manual | Publication 0153304
Order the manual at mid-west-tech.com >