snorkel

A46JRT



SERVICE & MAINTENANCE MANUAL

Part Number 0261631-000
October 2023

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |...

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 1 General Information

Component Identification 8
Chassis Component Location 9
Serial Number Locations 10
Working Envelope 11
- Single Capacity 11
- Dual Capacity 12

Wire Code and Function Chart 13
Abbreviations List 14
Operator's Manual Procedures 14

Section 2 Specifications

General Specifications 16
- Single Capacity 16
- Dual Capacity 17

Engine Specifications 18
- Kubota V1505 Diesel 18
- Kubota WG1605 Dual Fuel 18

Hydrostatic Pump Specifications 19
Drive Motor Specifications 20
Swing Drive Specifications 21
Fastener Torque Chart 22
- Standard System 22
- Metric System 23

Section 3 Hydraulic Components

Chassis Hydraulic Component Location 26
Hydrostatic Drive Pump 27
- Right View 27
- Left View 28

2 Section Function Pump 29
Brake Release Valve 30
Steer Cylinder 31
Turntable and Booms Hydraulic Component Location 32
Turntable Component Location 33
Swing Drive 34
Function Manifold 37
Riser and Main Boom Lift Cylinder 38
Master Level Cylinder 39
Extend Cylinder 40
Jib Boom Cylinder 41
Slave Level Cylinder 42

Section 4 Electrical Components

Chassis Electrical Component Location 44
Engine Relay Panel 45
- Kubota V1505 Diesel 45
- Kubota WG1605 Dual Fuel 46

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

Turntable and Booms Electrical Component Location 47
Lower Control Box 48
Single Capacity Outside View 48
Dual Capacity Outside View 49
Single and Dual Capacity Inside View 50
Valve Current Control Module 51
Display 52
GP400 Controller 53
Terminal Board Module 56
Platform Electrical Components 57
Upper Control Box 58
Single Capacity Outside View 58
Single Capacity Inside View 59
Dual Capacity Outside View 60
Dual Capacity Inside View 61
GP440 Controller 62
Foot Switch 64
Harnesses 65
Hydrostatic Pump Harness 65
V1505 Kubota Diesel Engine Harness 66
WG1605 Kubota Dual Fuel Engine Harness 67
Hydraulic Control Harness 68
Function Manifold Wiring Harness 69
Lower Control Box Internal Harness 70
Lower Control Box to Upper Control Box Harness 75
Boom Extend Switch Harness 76
Boom Extend Switch Wiring 77
Boom Down Switch Harness 78
Boom Down Limit Switch Wiring 79
Upper Controls Internal Harness 80
Joystick Harness CE 84
Joystick Harness ANSI 85

Section 5 Engine Components

V1505 Kubota Diesel Engine 88
Component Identification 88
Right View 89
Left View 90
WG1605 Kubota Dual Fuel Engine 91
Component Identification 91
Right View 92
Left View 93
Throttle Solenoid 94
Bell Housing 95

Section 6 Drive System Components

Drive Motor Hengli 98
Power Wheel 99

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

Section 7 Booms

Booms 102
Riser Boom 103
Main Boom 104
Jib Boom 106

Section 8 Platform

Platform 108
Snorkel Guard 109
Rotator 110

Section 9 Options


Tow Kit 112
2K Belt Driven Generator 113
Lights 114
Bumpguard 116

Section 10 Procedures & Adjustments

Recommended Tools 120
Torque Hubs 121
Check Articulating Axle Lock Cylinder Operation 122
Tow Bar Adjustment 123
Throttle Adjustment - V1505 Kubota Diesel Engine 124
Check and Adjust Speed Sensor 125
    Serial Number A46JRT-04-181100995 and After 125
Horsepower Limiter ECU V1505 126
    Serial Number A46JRT-04-181100994 and Before 126
Low Pressure Relief Valve Adjustment 128
Neutral Adjustment Screw 129
GP400 130
    Module Navigation 130
    Fault and Flash Codes 132
        Help Messages With Flash Codes 132
        Help Messages Without Flash Codes 134
MVP-132 Engine Monitor – WG1605 Kubota Engine 135
    Front Display Navigation 135
    Setting Engine Throttle Kubota WG1605 136
    Back Connector Pin Outs 137
    Engine Codes 138
Check and Adjust Boom Down Switch 144
Check and Adjust Extend Switch 144
Check Inputs to GP400 Board for Switches 144
Boom Pressure Settings 145
Booms Disassembly / Extend Cylinder Removal 146
Cylinder Removal 147
    Riser Boom 147
    Main Boom 148
    Jib Boom 149

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

2 SECTION FUNCTION PUMP

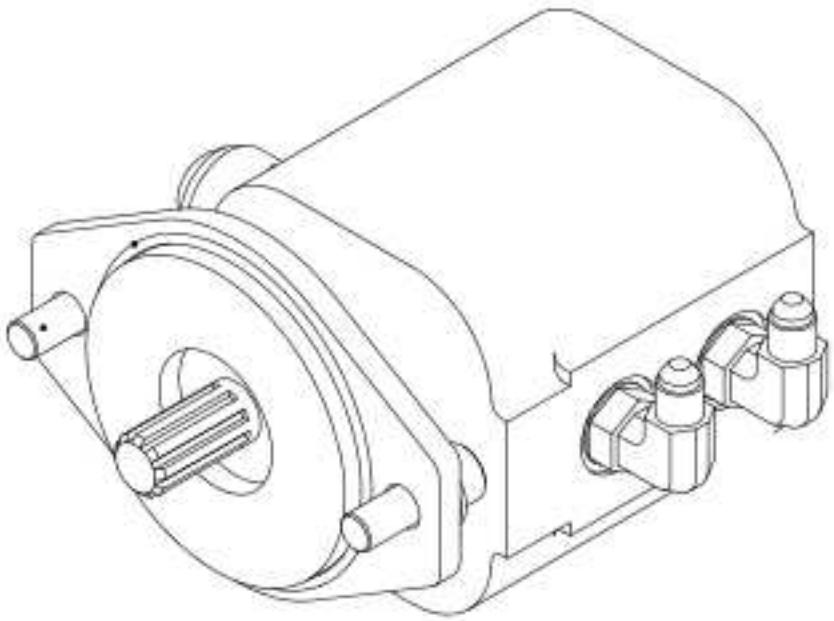

Pump feeds all functions except drive.

Specifications

Rated Pressure: 3,045.79 psi (21 MPa)

Rated Speed: 2,000-3,600 rpm

Directional Rotation: Clockwise


Displacement

Front Section: Max 2.5 gpm (9.43 lpm) at 2,250 rpm

Back Section: Max 2.0 gpm (7.5 lpm) at 2,250 rpm

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

2K BELT DRIVEN GENERATOR

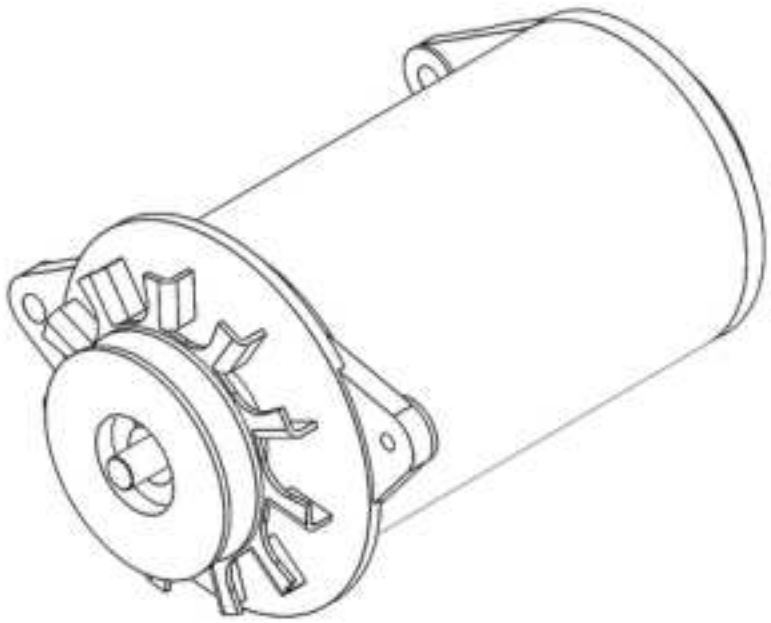

Troubleshooting


Problem	Possible Cause	Remedy
No Voltage Output	Brushes Worn	Replace Brushes
	Power Switch Defective	Replace Switch
	Defective Receptacle	Replace Receptacle
Unstable Voltage	Loose Connection	Check Connections
	Loose Belt	Check Belt Tension
Noisy Generator	Defective Bearing	Replace Bearing
	Broken Fan	Replace Fan
	Belt Worn	Replace Belt
	Broken Mount or Bolt	Inspect or Replace
Will Not Hold Load	Load exceeds Rating	Reduce Load
	Loose Or Worn Belt	Tighten or Replace

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

ELECTRICAL SCHEMATIC

V1505 KUBOTA Diesel Engine


Added Telematics Option

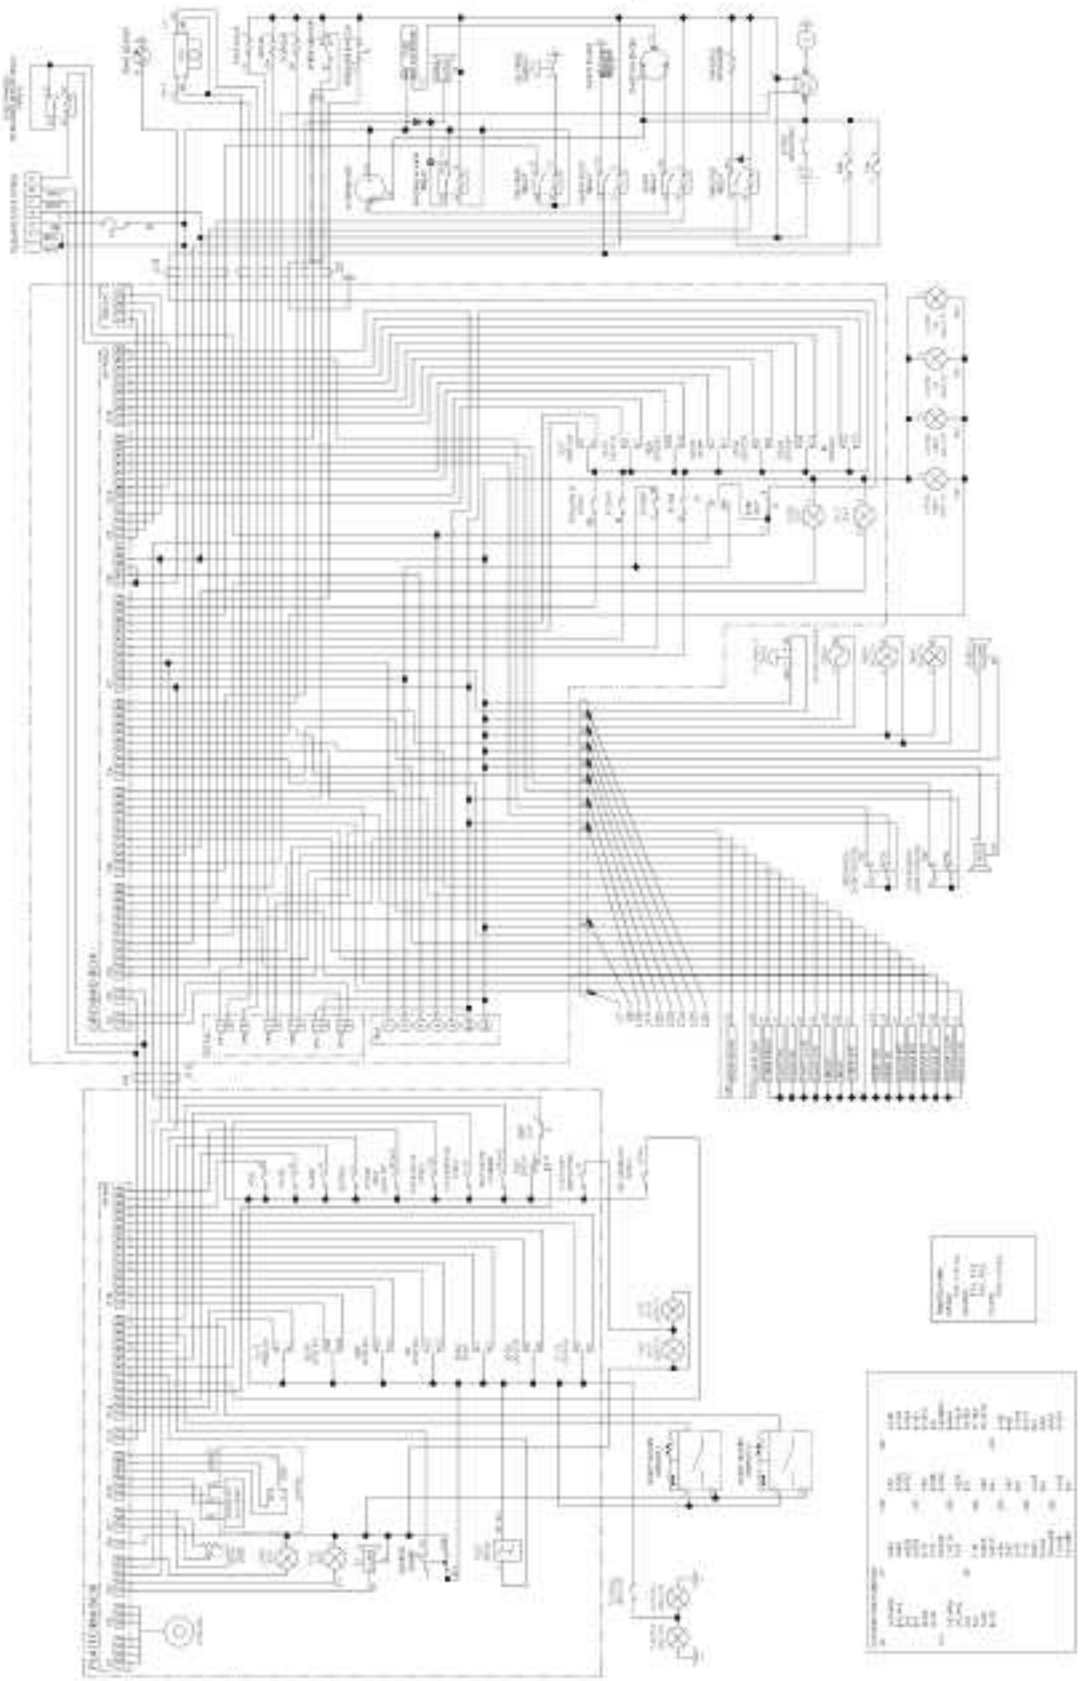

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

HARNESSES


Lower Control Box Internal Harness

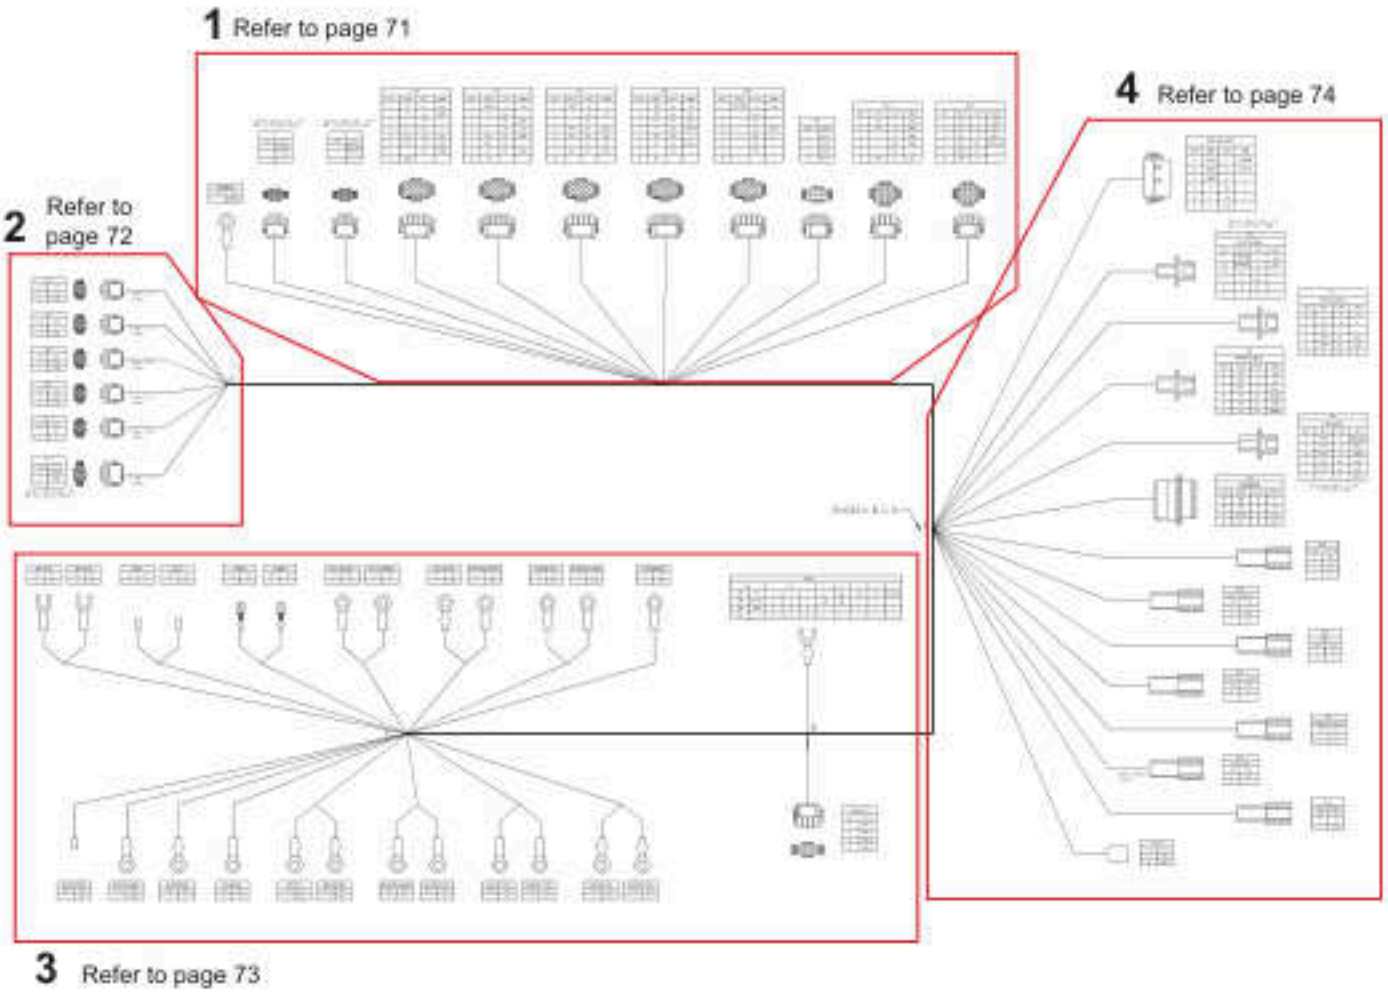


MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

HARNESSES

Upper Controls Internal Harness

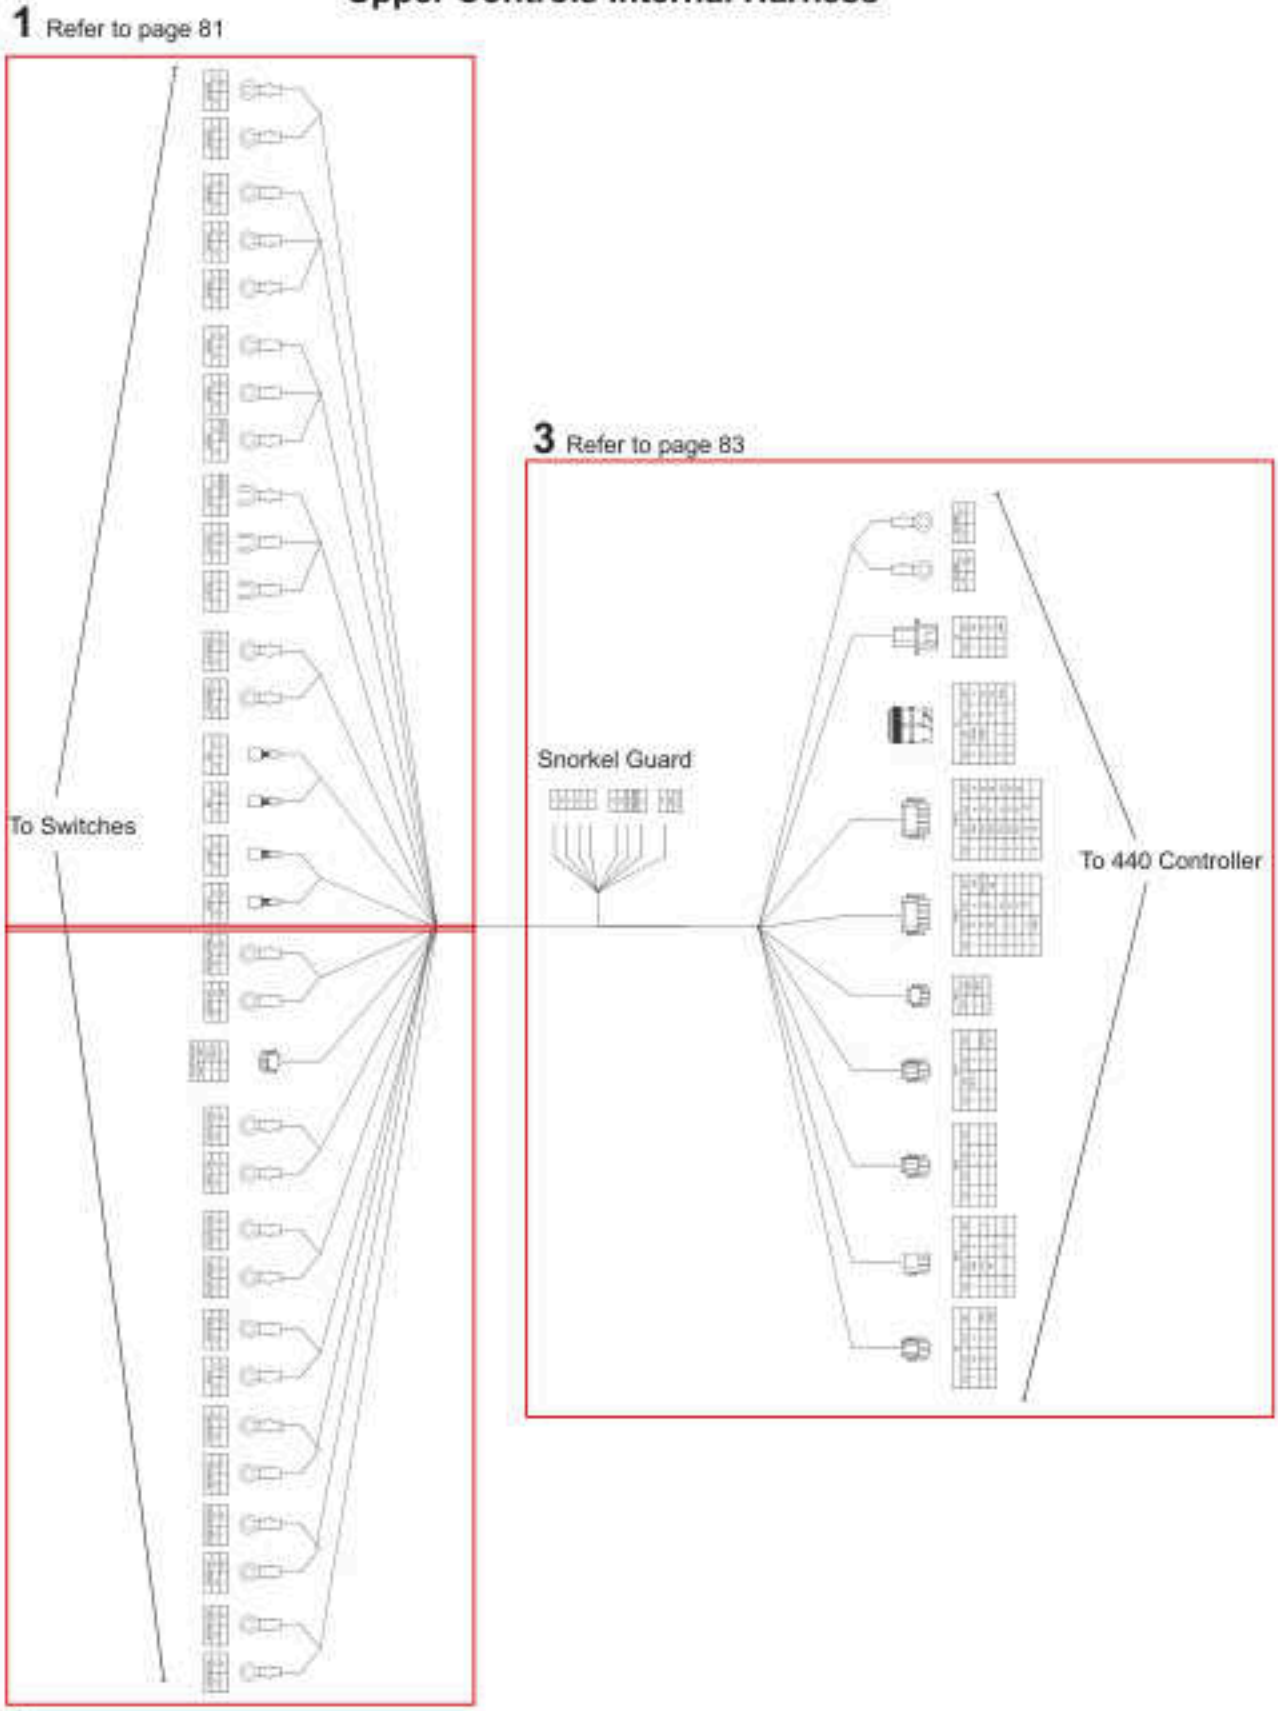

MidWestTech | Snorkel A46JRT Articulating Boom Lift Service and Maintenance Manual |... Order the manual at mid-west-tech.com >

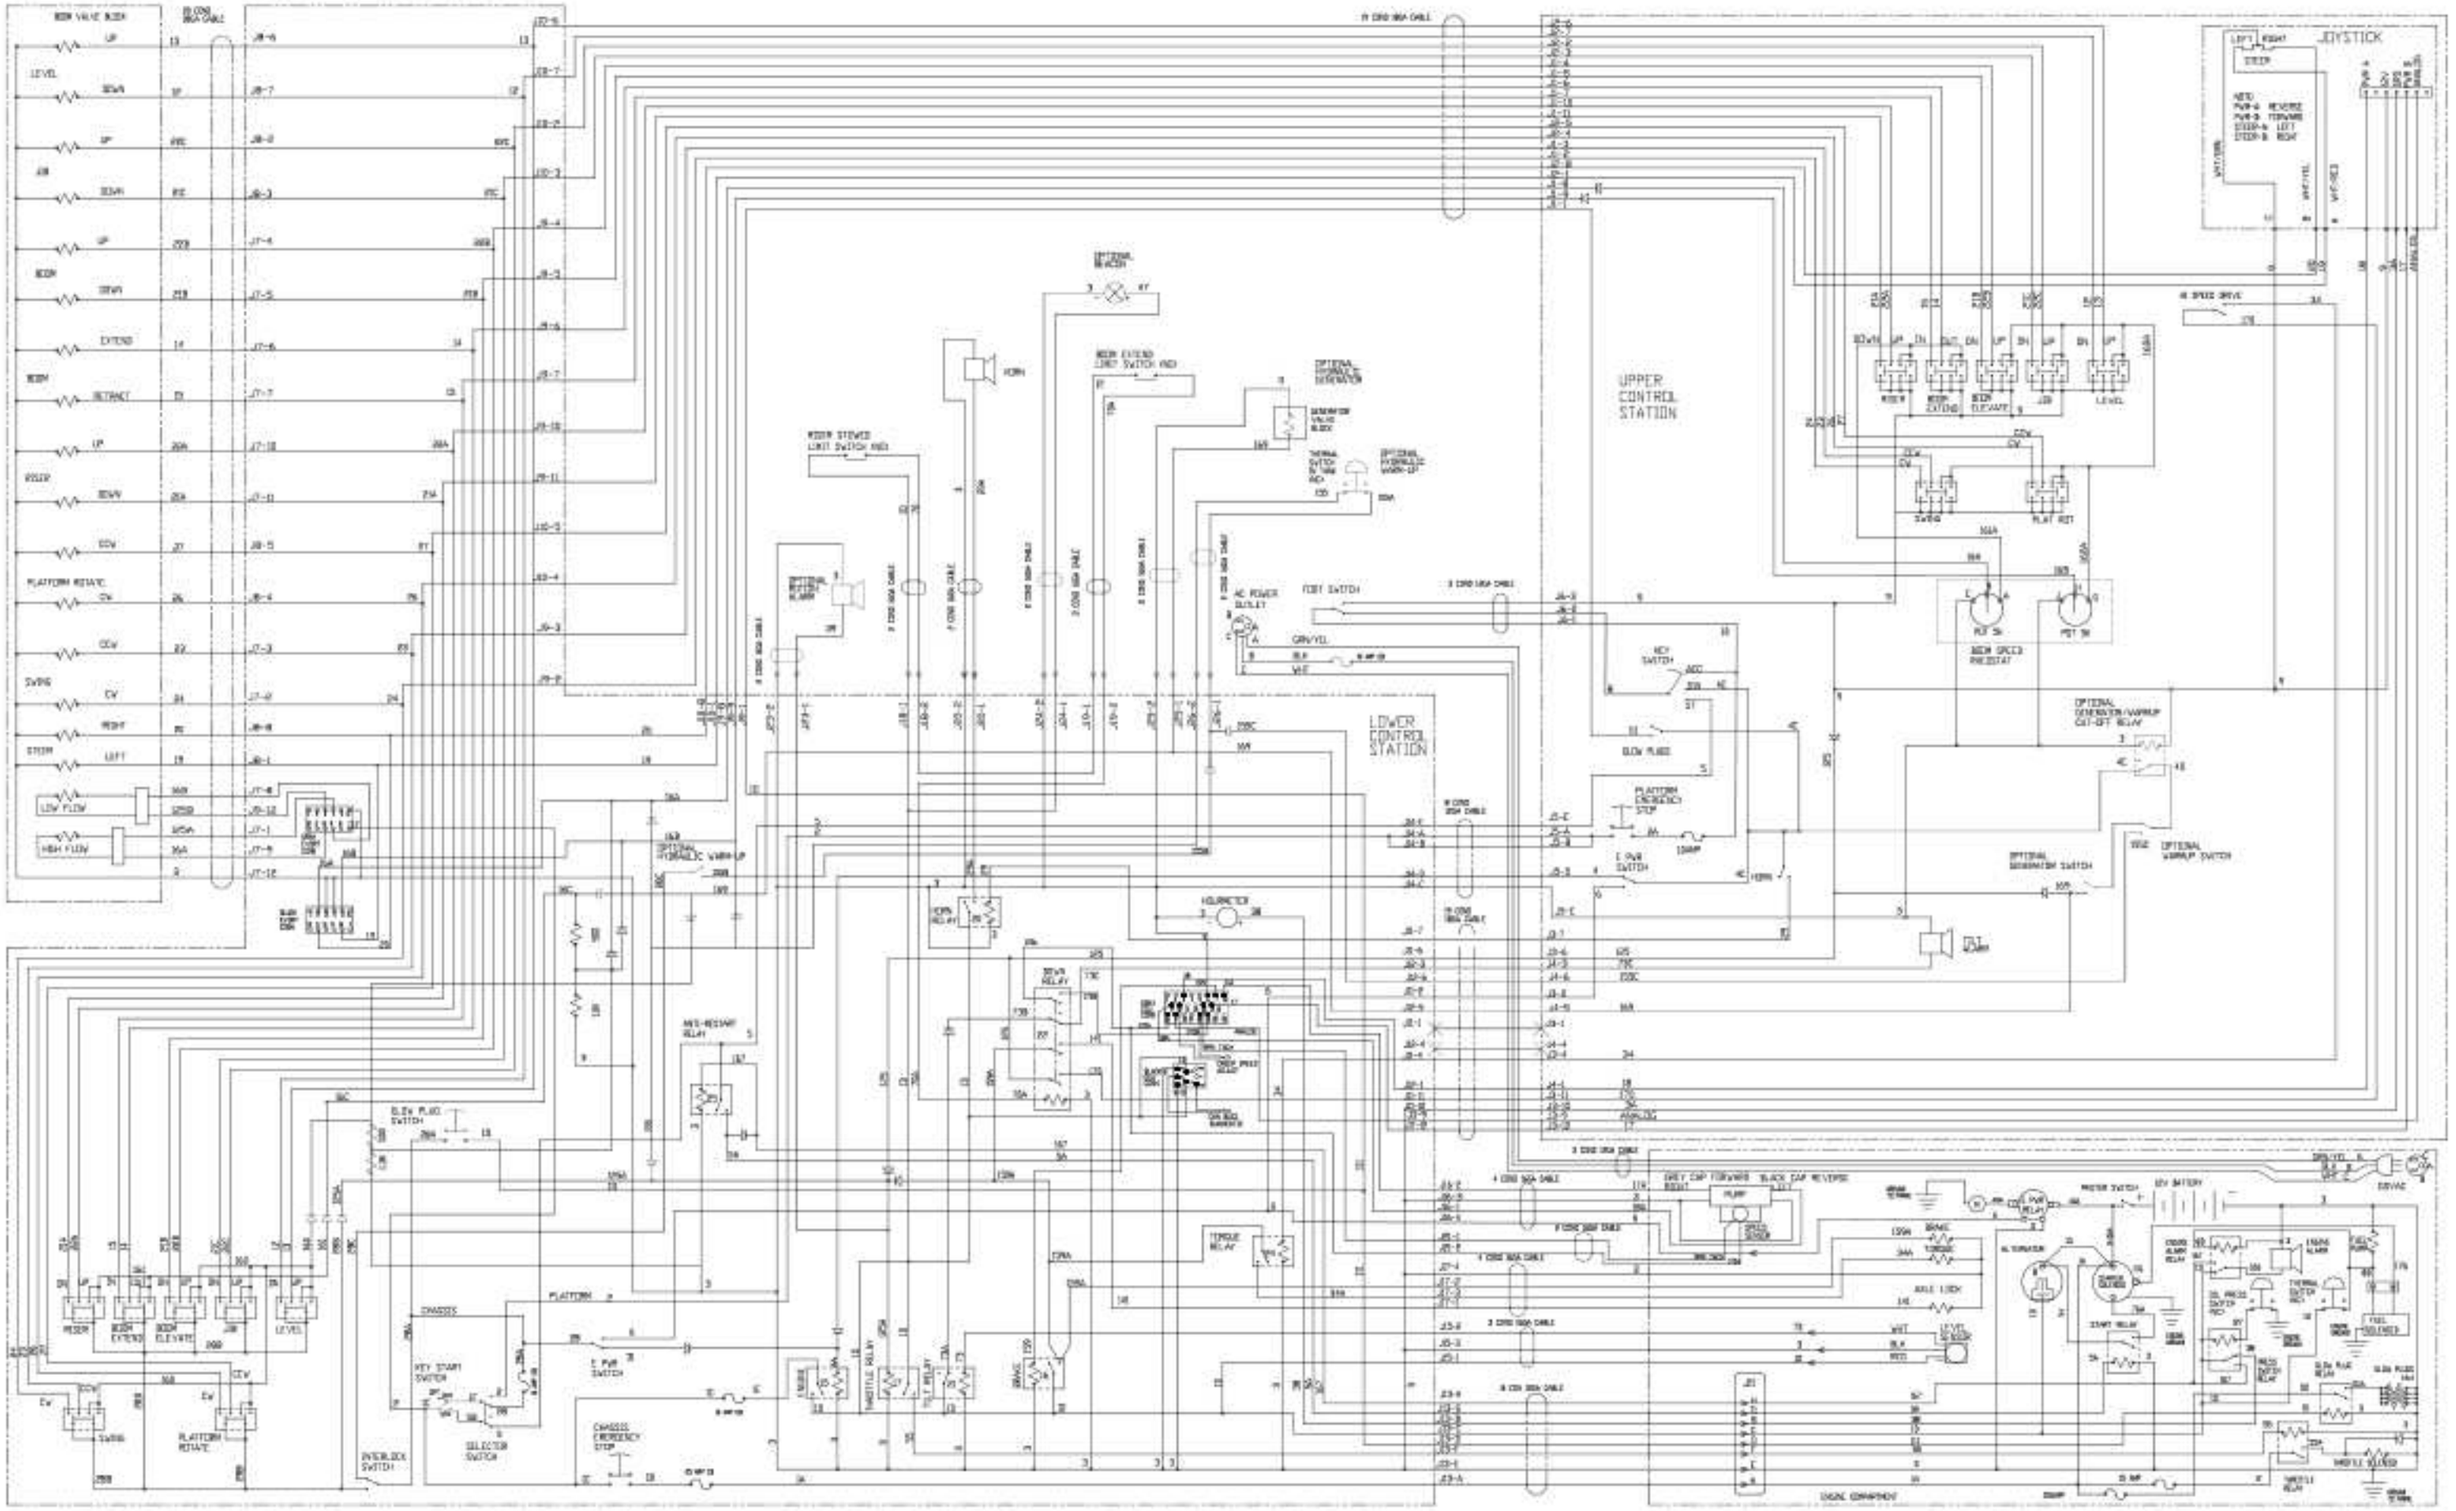

Order the manual at mid-west-tech.com >