Troubleshooting Guide

TB42

diesel - gasoline - LPG

TB50

diesel - gasoline - LPG

Snorkel

P/N 074446
Sept. 1998

OmniQuip Snorkel INTERNATIONAL

P.O. Box 1160
St. Joseph, MO 64502-1160
Phone: (816) 364-0317
Fax: (816) 390-9379
www.snorkelusa.com

MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

SYMPTOM	PAGE NUMBER

Section One - Engine Diagnostics

Engine starter fails to operate (No Electrical)	9
Starter disengages before engine starts	10
Engine cranks over but will not start	10
Engine starts then shuts down after 30 seconds	11
Engine will not accelerate	11
Engine over accelerates	12
Engine will not start from platform control	12
Engine starts while cranking, then dies when key switch is released	13

Section Two - Hydraulic Diagnostics

Hydraulic system functions on emergency power only	39
Hydraulic pump stays on stroke	39
Hydraulic oil overheats while idling	39
Hydraulic oil overheats during operation	40
Hydraulic functions are sluggish	40
Hydraulic pump will not build pressure	40
Hydraulic pump will not build enough pressure	41
Flow from hydraulic pump is too low	41
Flow from hydraulic pump is too high (kills engine)	41

Section Three - Steering System Diagnostics

Machine will not steer	55

MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

SYMPTOM **PAGE NUMBER**

Section Four - Drive System Diagnostics

Drive system is not operational with controller in either direction 63

No forward drive (Reverse OK) 64

No reverse drive (Forward Ok) 64

Drive high range not operating 65

Machine drives at full speed with platform raised and/or extended 65

Brakes will not release 65

Only one wheel turns (2 wheel drive) 66

One wheel turns faster than other (2 wheel drive) 66

Section Five - Emergency Power System Diagnostics

Emergency pump motor non-operational 87

No functions when on emergency power 87

Section Six - Swing System Diagnostics

Swings only in one direction 95

No response from swing when platform controls are activated 95

No response from swing when ground controls are activated 96

Swings erratically in either direction 96

Swings faster one way than other 96

Swing brake will not hold 97

Swings too slow 97

Section Seven - Platform Rotation System Diagnostics

Platform rotate does not operate 113

Platform rotates too fast 113

Platform rotates too slow 113

Platform rotates itself 113

MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

SYMPTOM **PAGE NUMBER**

Section Eight - Platform Leveling System Diagnostics

Platform will not maintain level as boom raises or lowers 121

Platform will not maintain level with machine off 121

Platform bleeds down 121

Platform level will not work from ground control 121

Platform level will not work from platform control 122

Platform level up function is inoperative 122

Platform level down function is inoperative 122

Section Nine - Boom Elevation System Diagnostics

Boom raises but will not stay elevated 135

Boom will not raise from platform control 135

Boom will not raise from ground control 135

Boom raises slow from platform 135

Section Ten - Telescope System Diagnostics

Boom will not retract from ground control (Platform Control Ok) 143

Boom will not retract from platform control (Ground Control Ok) 143

Boom will not extend from ground control (Platform Control Ok) 143

Boom will not extend from platform control (Ground Control Ok) 144

Boom drifts in 144


Section Eleven - Fuel System Diagnostics

Engine will not start on gasoline, but will start on L.P. 157


Engine will not start on L.P., but will start on gasoline 157

MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

Hydraulic functions are sluggish

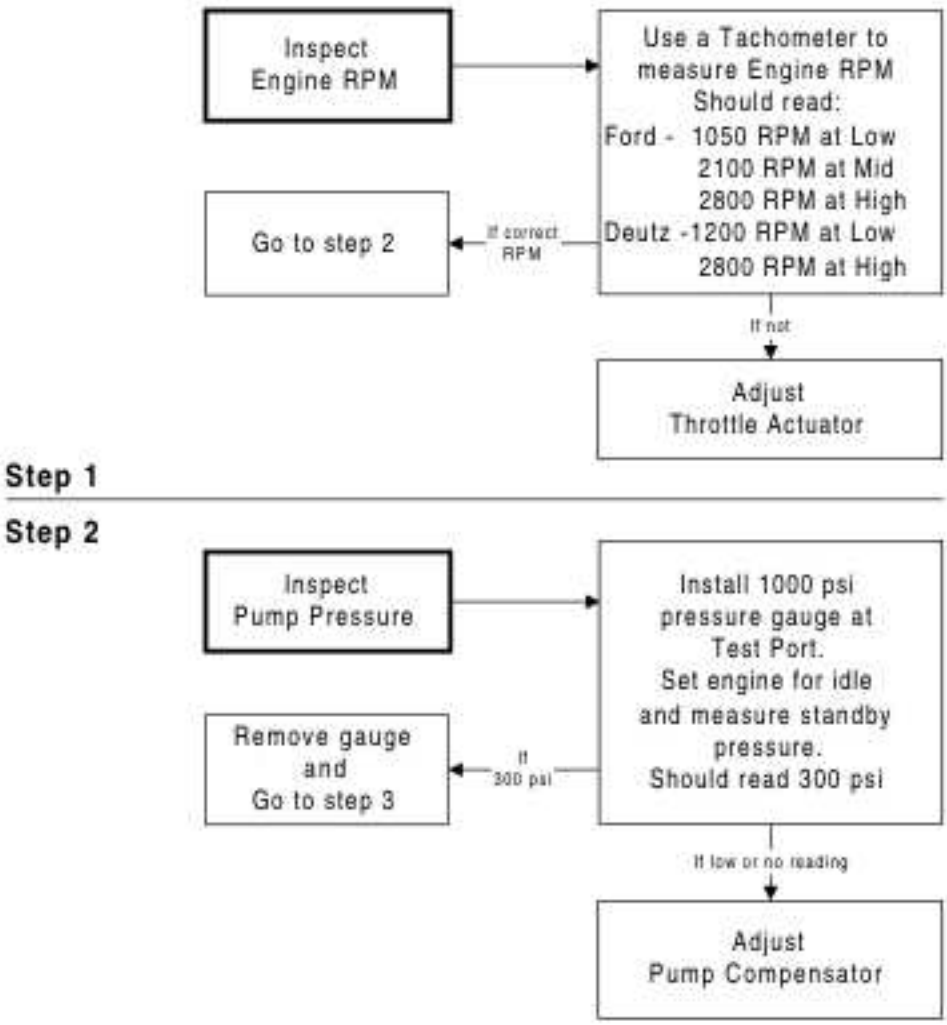


MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

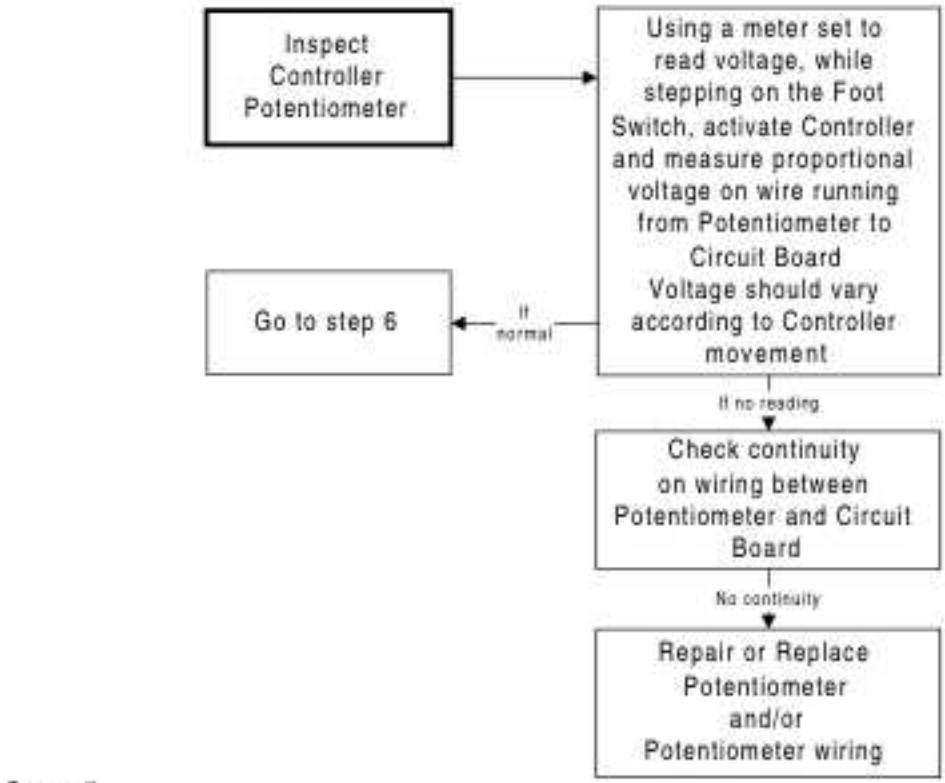


Step 5

Step 6

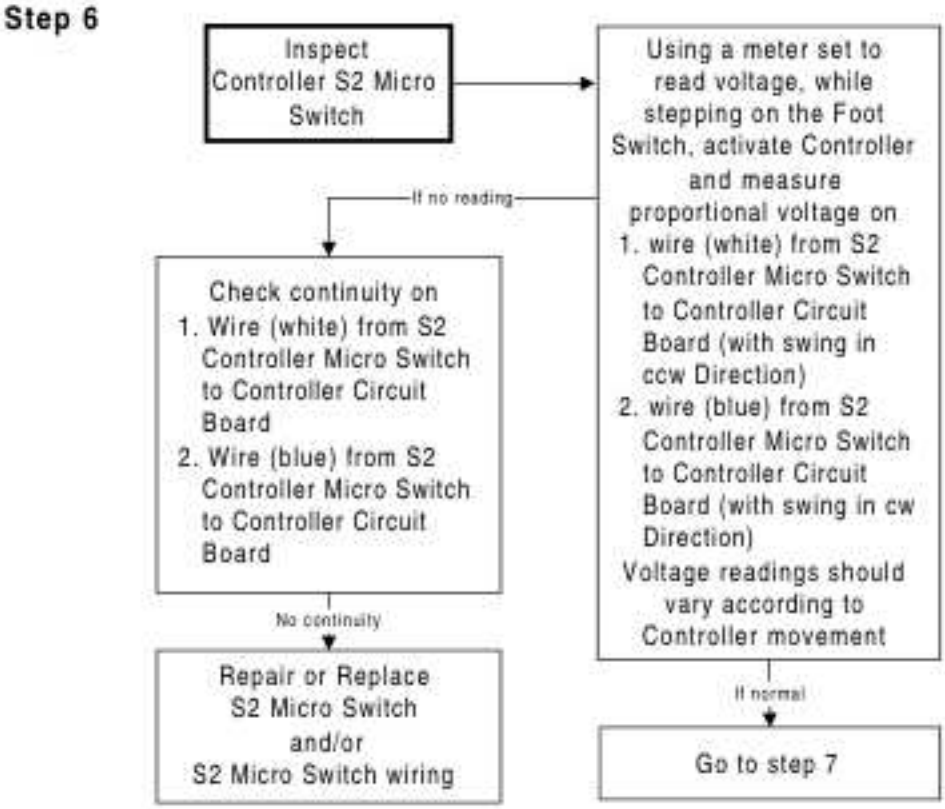


MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

AC Generator has low voltage

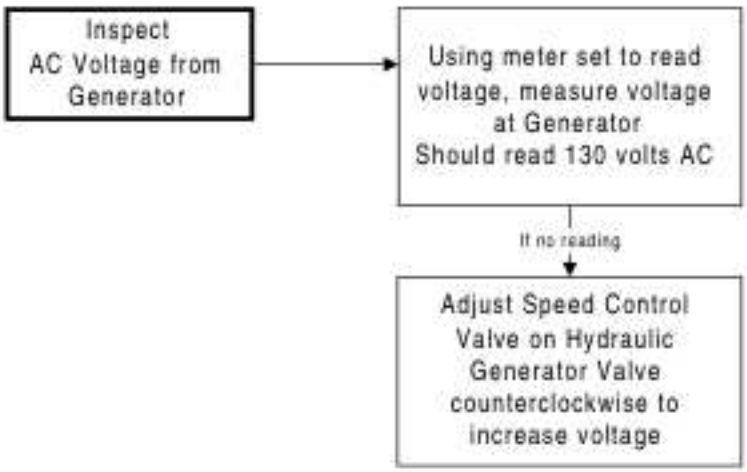

Step 1

MidWestTech | Snorkel TB42, TB50 Telescopic Boom Lift Troubleshooting Guide | Publicati... Order the manual at mid-west-tech.com >

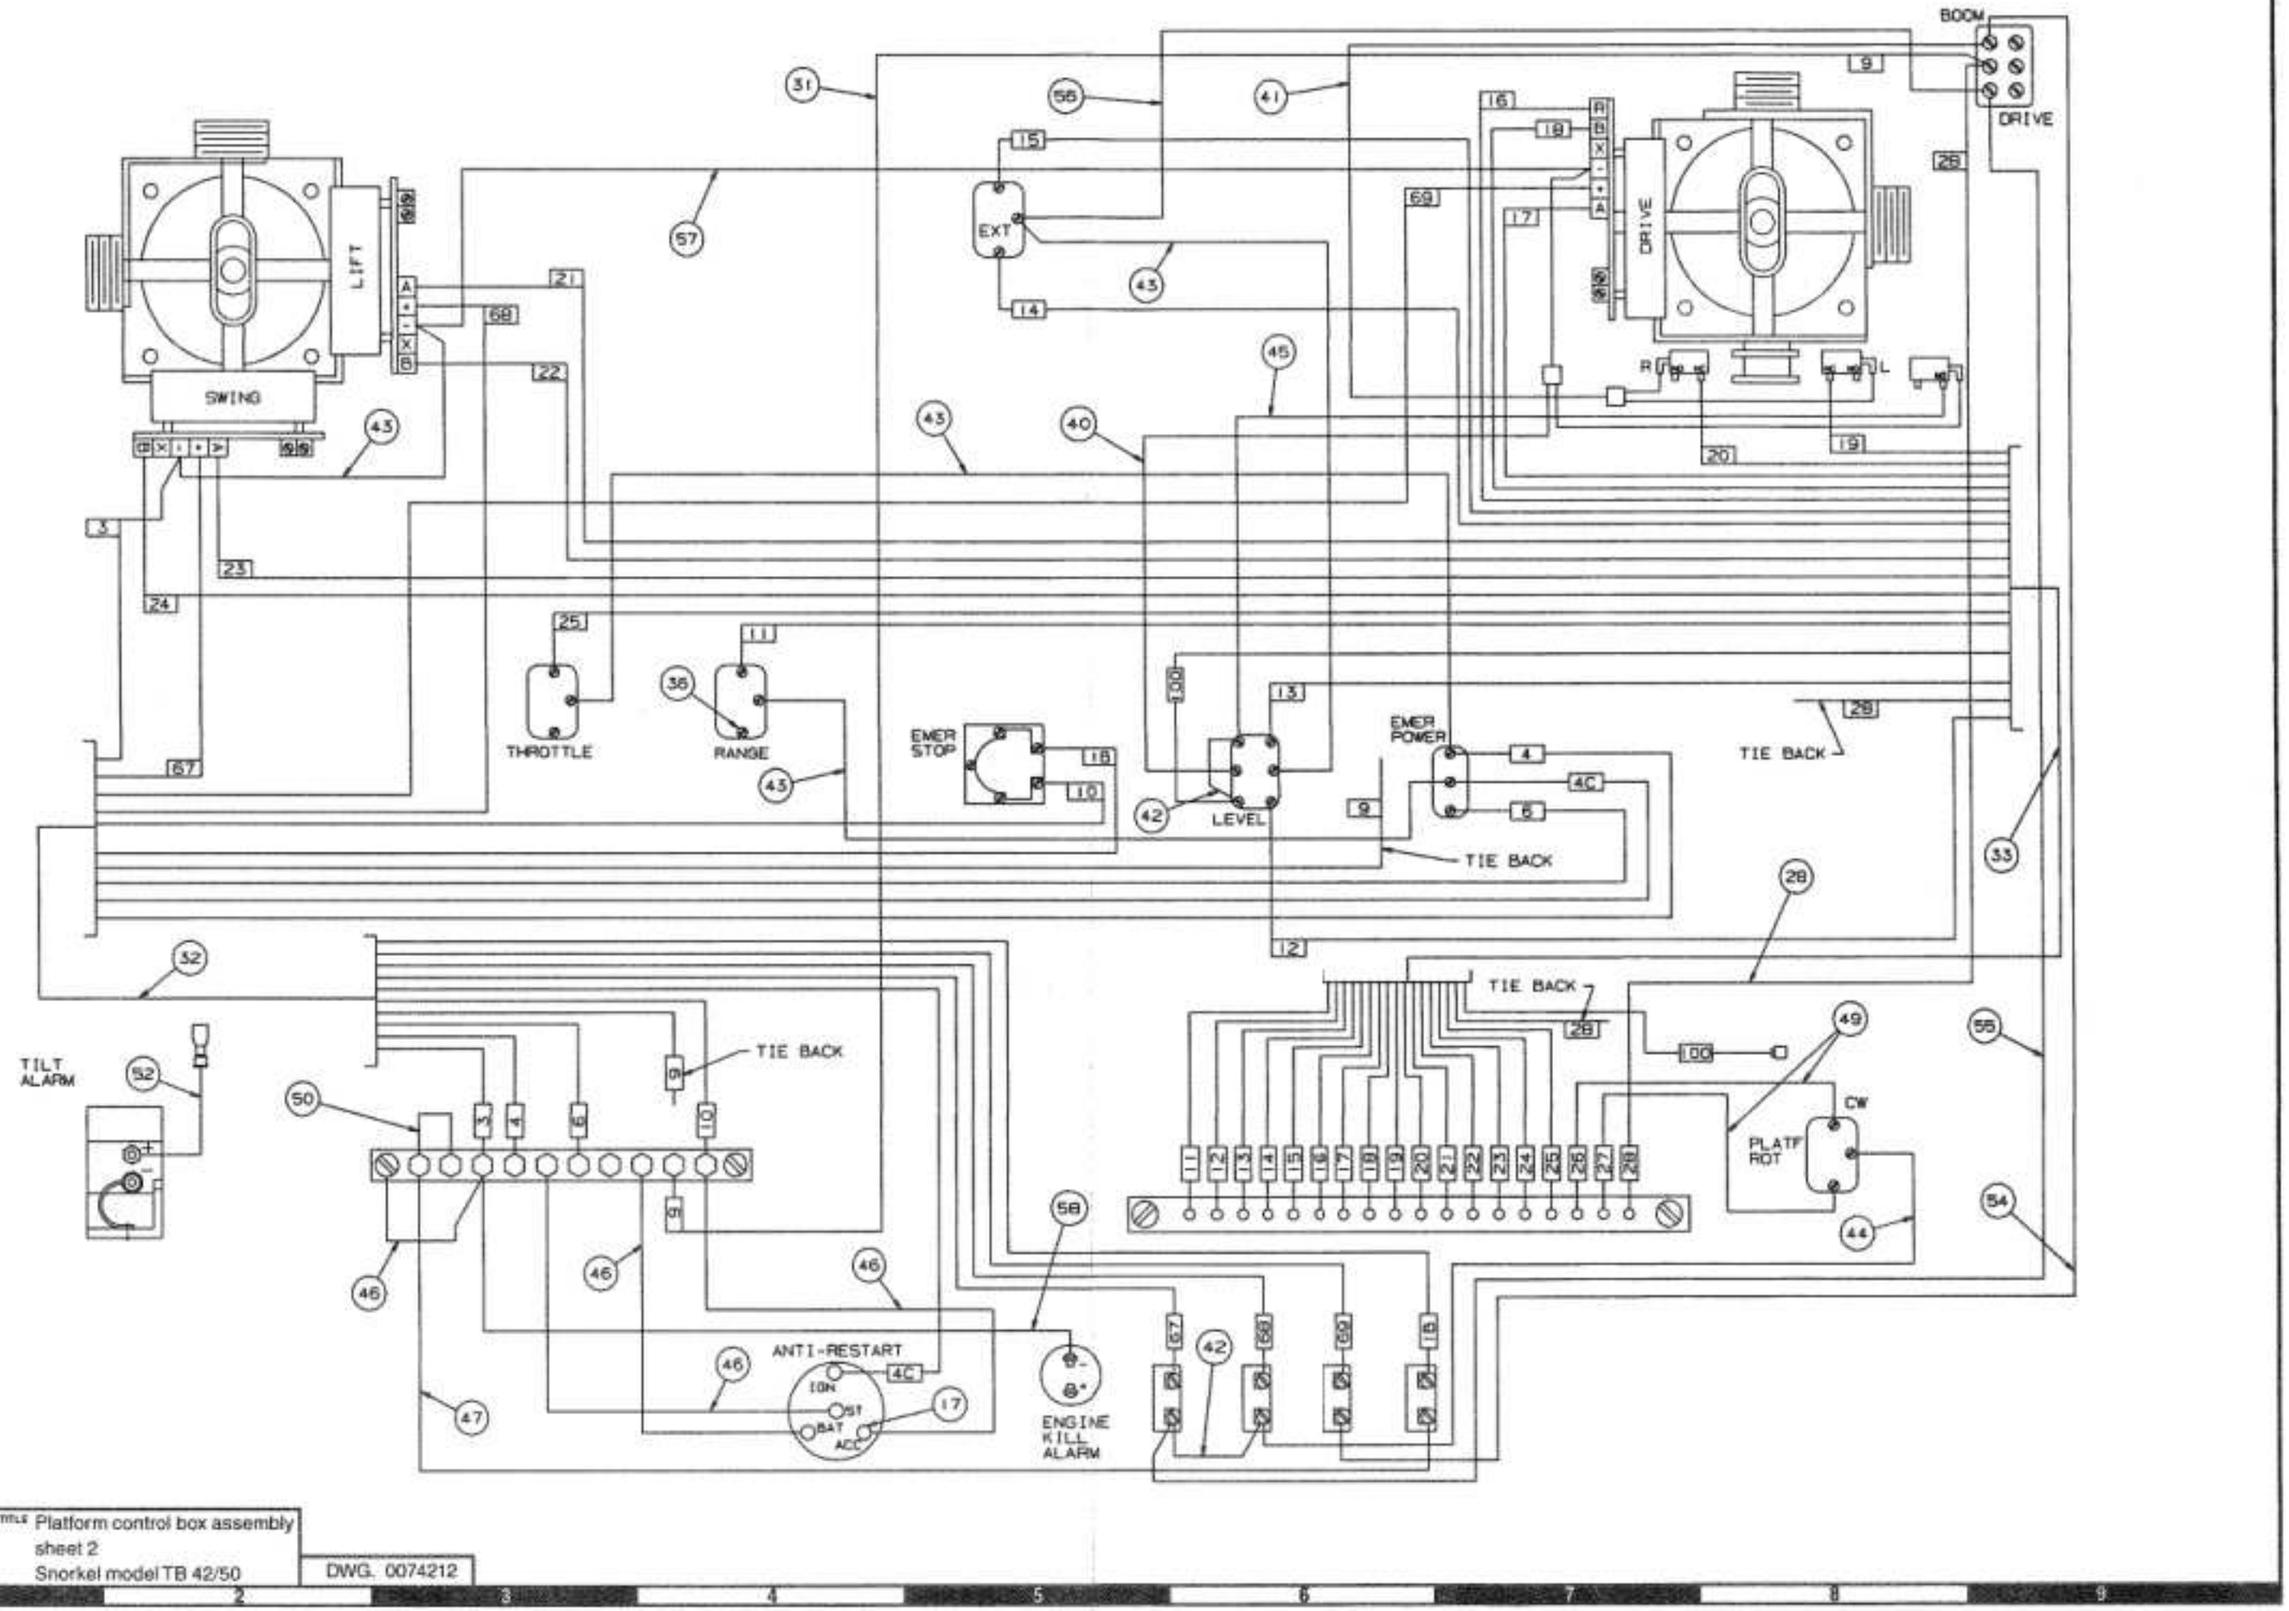

Snorkel

Page - 26

Platform control box assembly
sheet 2
Snorkel model TB 42/50

DWG. 0074212

Order the manual at mid-west-tech.com >