
USER MANUAL

CRAWLER EXCAVATOR

NEUSON 2702 RD - 3602 RD FORCE

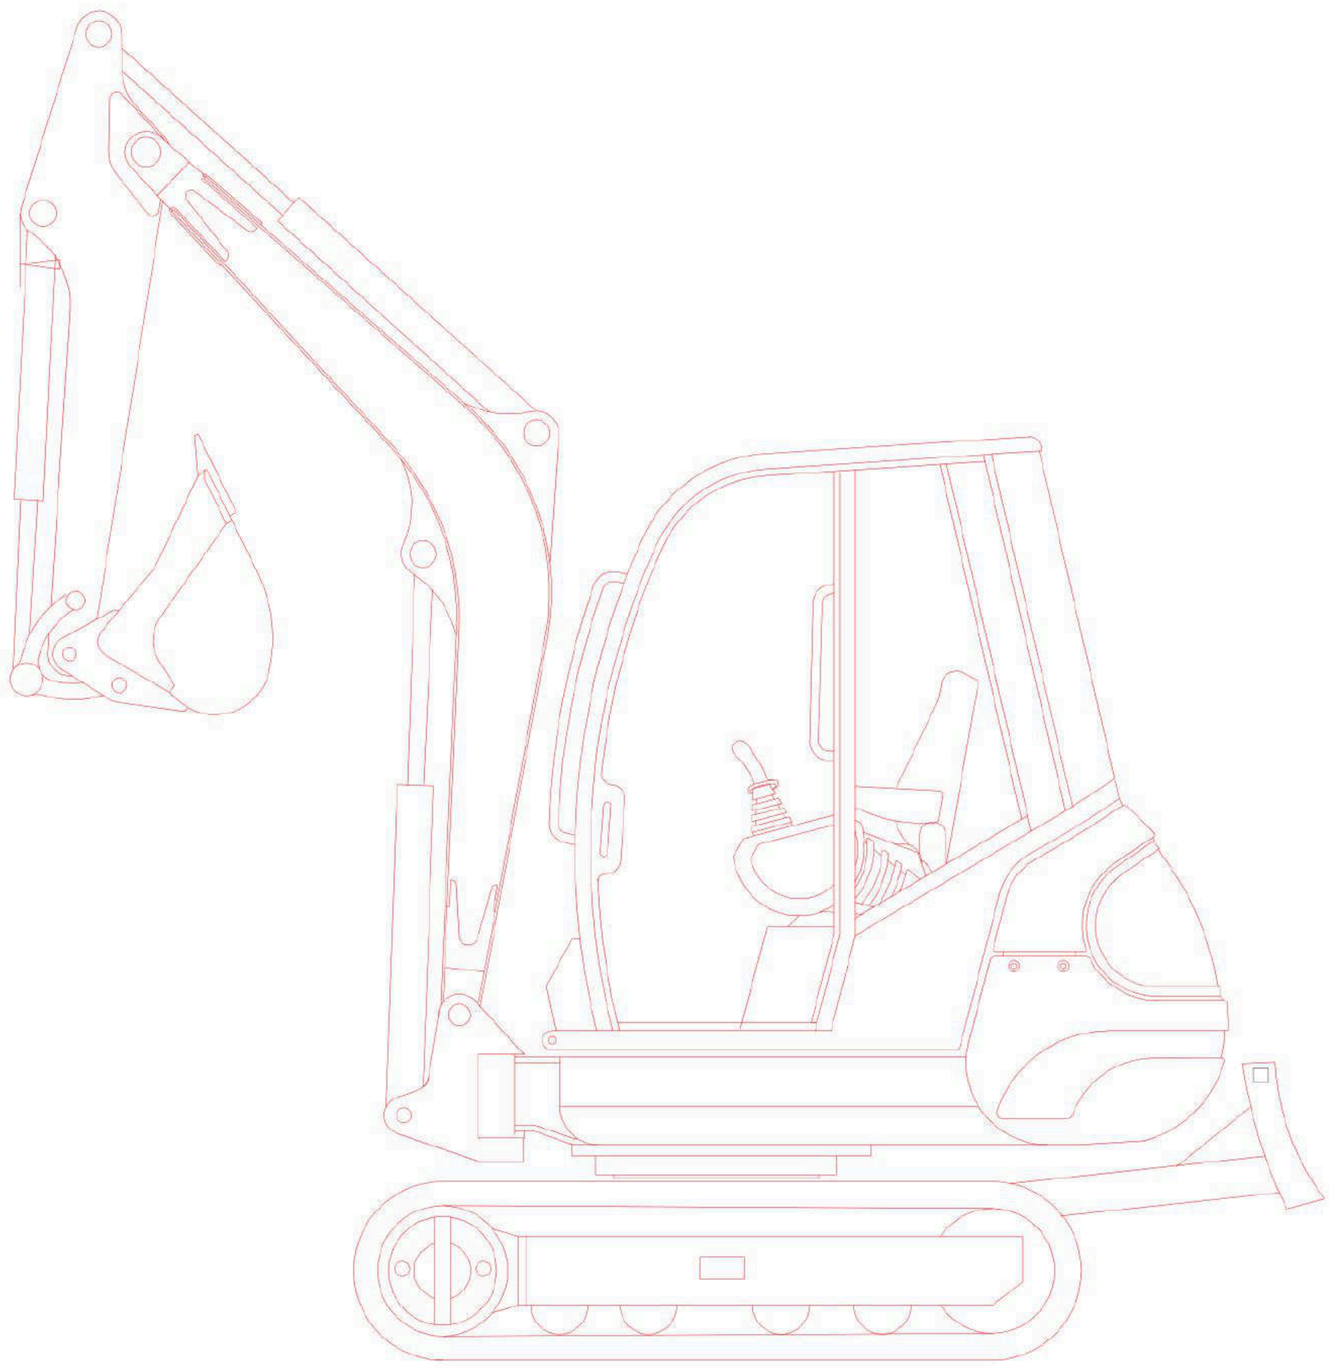

A neuson COMPANY

neuson®

Baumaschinen GmbH

Ausgabe: April 2000
9707631 V1.0

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator's Manual | Publication 1000081352

Order the manual at mid-west-tech.com >

Table of Contents

1 Guarantee and warranty 2
1.1 Guarantee 2
1.1.1 Guarantee period 2
1.1.2 What is covered 2
1.1.3 Exclusion of liability for defects 3
1.2 Warranty conditions 3
1.2.1 What is covered 4
1.2.2 Warranty period 4
1.2.3 Exclusion of warranty 4
1.3 Identification Plate 8
1.4 Instructions for Ordering Spare Parts 8
2 Safety 9
2.1 Safety rules 10
3 Specifications 14
3.1 Technical Data Crawler Excavator 2702 RD 14
3.1.1 Principal Data 14
3.1.2 Driving and swiveling specifications 14
3.1.3 Engine 14
3.1.4 Hydraulic system 15
3.1.5 Dozer blade 15
3.1.6 Bucket (Standard) 15
3.2 Noise emissions Crawler Excavator 2702 RD 15
3.3 Technical Data Crawler Excavator 2902 RD 16
3.3.1 Principal Data 16
3.3.2 Driving and swiveling specifications 16
3.3.3 Engine 16
3.3.4 Hydraulic system 17
3.3.5 Dozer blade 17
3.3.6 Bucket (Standard) 17
3.4 Noise emissions Crawler Excavator 2902 RD 17
3.5 Technical Data Crawler Excavator 3402 RD 18
3.5.1 Principal Data 18
3.5.2 Driving and swiveling specifications 18
3.5.3 Engine 18
3.5.4 Hydraulic system 19
3.5.5 Dozer blade 19
3.5.6 Bucket (Standard) 19
3.6 Noise emissions Crawler Excavator 3402 RD 19
3.7 Technical Data Crawler Excavator 3602 RD 20
3.7.1 Principal Data 20
3.7.2 Driving and swiveling specifications 20
3.7.3 Engine 20
3.7.4 Hydraulic system 21
3.7.5 Dozer blade 21
3.7.6 Bucket (Standard) 21

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

3.8 Noise emissions Crawler Excavator 3602 RD 21
3.9 Vibration levels 21
3.10 Stickers 22
3.11 Primary Dimensions Crawler Excavator 2702 RD 23
3.12 Primary Dimensions Crawler Excavator 2902 RD 24
3.13 Primary Dimensions Crawler Excavator 3402 RD 25
3.14 Primary Dimensions Crawler Excavator 3602 RD 26
4 Component Designations 27
4.1 Cab equipment and controls 28
4.1.1 Work light 29
4.1.2 Accelerator 29
4.1.3 Driver's Seat 29
4.1.4 Heater, Heating and Air Vents 30
4.1.5 Windshield Wipers 30
4.2 Hydraulic system 30
4.2.1 Release of residual pressure 30
4.2.2 Hydraulic oil level 30
4.2.3 Hydraulic connections for additional attachments 31
5 Safety Equipment 31
5.1 Brakes and swivel lock mechanism 31
5.2 Seat 32
5.3 Securing the cab when tilted forwards 32
6 Instrument Panel Functions 33
6.1 Fuse box 34
6.1.1 Order of fuses 34
7 Swinging and swiveling the excavator equipment 35
7.1 Left control lever 35
7.2 Right control lever 35
7.3 Excavator arm movements 36
7.4 Dozer blade 36
7.5 Tilting the superstructure 36
7.6 Changing attachments 37
8 Quick change mechanism 38
9 Towing equipment 39
10 Lifting the Crawler Excavator 39
11 Excavating options 40
11.1 Digging 40
11.2 Excavator arm swing angle 40
11.3 Bulldozing 41
11.4 Lifting 41
11.5 Cab protection 41
11.6 Stability 42
12Transport instructions 43
12.1 After loading 43


MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

13 Things to check before starting the excavator 44
13.1 Visual inspection 44
13.2 Check motor oil 44
13.3 Check hydraulic oil level 44
13.4 Check coolant level 45
13.5 Refuelling 45
13.6 Check safety equipment 45
14 Starting the excavator 46
14.1 Jump starts (with jumper cables) 47
15 Driving the crawler excavator 49
15.1 Driving 49
15.1.1 Travel on dangerous ground and on slopes 49
15.2 Turning 49
15.3 Traveling speeds 50
16 Shutting down 50
17 Care and Maintenance 51
17.1 General 51
17.2 Maintenance Schedule 53
18 Daily maintenance 56
18.1 General visual inspection and leak check 56
18.2 Engine 56
18.2.1 Check motor oil 56
18.2.2 Check coolant level 56
18.2.3 Check fuel filter with water separator 56
18.2.4 Clean air filter 57
18.2.5 Refuelling 57
18.3 Hydraulics 57
18.3.1 Check hydraulic oil level 57
18.4 Undercarriage and attachments 57
18.4.1 Tracks 57
18.4.2 Check attachments (bucket, grab, etc.) 57
18.5 Lubrication points 58
19 Weekly maintenance 59
19.1 Engine 59
19.1.1 Check engine mounting 59
19.1.2 Check fan belt tension 59
19.1.3 Check fuel filter with water separator 59
19.1.4 Clean radiator 59
19.2 Hydraulics 59
19.2.1 Hydraulic pump 59
19.2.2 Clean hydraulic cooler 59
19.3 Undercarriage 60
19.3.1 Check track tension 60
19.4 Traveling and swiveling drives 61
19.5 Turntable 61
19.5.1 Bearing system 61

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

4.1 Cab equipment and controls


1 Hammer pedal with cover
2 Pilot control valve
3 Left drive lever with foot pedal
4 Switch for overdrive (fast gear)
5 Seat spring tension adjustment
6 Right drive lever with foot pedal
7 Footrest
8 Seat back adjustment
9 Heating vents
10 Lever to fold back right armrest
11 Lever to tilt superstructure (2902 RD, 3602 RD)
12 Right control lever--boom and bucket cylinder, horn
13 Oil tank
14 Main hydraulic valve
15 Dozer blade lever
16 Opening for filling hydraulic oil
17 Instrument panel
18 Hydraulic-oil level indicator
19 Return filter
20 Armrest
21 Accelerator
22 Ignition
23 Windshield washer fluid container
24 Battery
25 Seat adjustment
26 Right control lever--swiveling/swinging arm and bucket stick
27 Tank supports
28 Engine cover

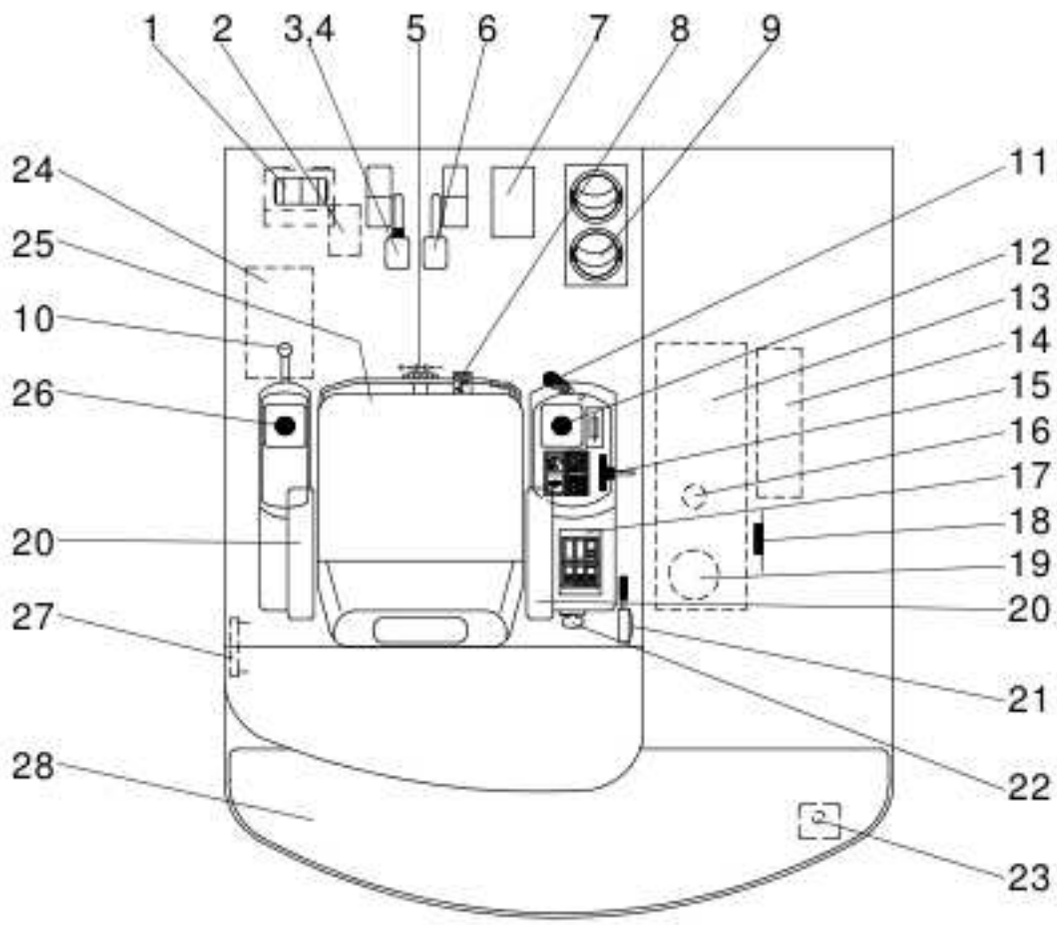

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

9 Towing equipment

To tow the excavator use the towing equipment provided.
Only use the towing bracket for towing.
Secure the shackle with the locking pin.

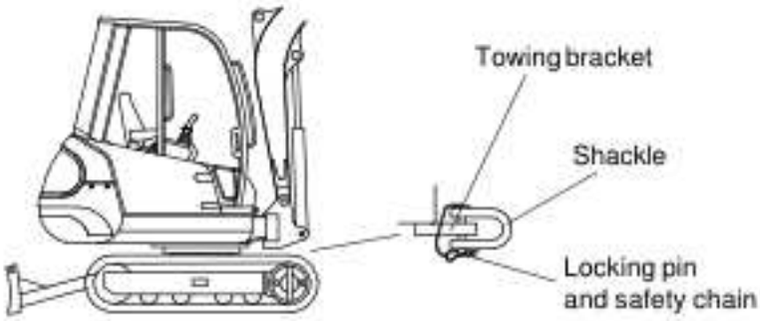

Max. towing capacity of towing bracket: 1.5 x the weight of the excavator

10 Lifting the Crawler Excavator


Raise arm and dozer blade.

Fasten rope, chains etc. to the boom and to the dozer blade on the left and the right (3-point suspension).

The fastening points are indicated with stickers.

Ensure that the ropes/chains etc. cannot come undone.

Minimum force required per lift = weight of excavator

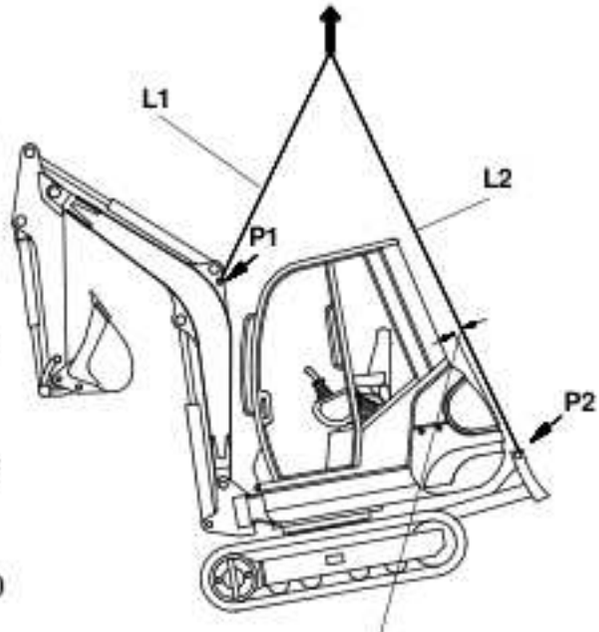

ACHTUNG
Auf ausreichenden Abstand zum Bagger achten, um Beschädigungen zu vermeiden.

Lifting equipment 2702 RD and 2902 RD
L1 = about 2.24 m (88 in)
L2 (2X)= about 3.67 m (144.4 in)
Lifting equipment 3402 RD and 3602 RD
L1 = about 2.27 m (89.4 in)
L2 (2X)= about 4.00 m (157.5 in)

P1 ... Fastening point boom
P2 ... Fastening points left and right side of dozer blade

ATTENTION:
To prevent damage, ensure there is enough distance between the ropes/chains and the excavator.

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

22 Maintenance every 500 operating hours

NOTE: In addition to normal weekly maintenance and maintenance every 50 and 250 operating hours, the following maintenance should be carried out every 500 operating hours, see maintenance schedule 17.2.

22.1 Engine

See engine operating instructions for maintenance instructions.

22.1.1 Change air filter

Open cap, unscrew filter, replace filter. Clean dust trap.

22.1.2 Check valves

See engine operating instructions for the correct valve settings.

22.1.3 Check coolant system and hoses

22.1.4 Check electrical connections

22.1.5 Check glow plug

22.1.6 Check thermostat

22.2 Hydraulics

ATTENTION: Always release residual pressure before working on the hydraulic system!

22.2.1 Check primary valves

Adjust settings if necessary.

22.2.2 Change hydraulic oil and filter (return filter)

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

1.3 Identification Plate

This identification plate is attached to the front of the chassis.



1.4 Instructions for ordering spare parts

Use only original NEUSON spare parts!
The complete part number, designation, and number of parts required must be indicated on each order.
Indicate the type of machine and works number (see identification plate) on each order.

NOTE: The ordering party is responsible for delivery errors resulting from incomplete information.
Prepare telephone orders carefully.
The order should include complete, correct, and clearly legible information on the address, postal code, shipping method, and final destination to prevent unnecessary inquiries and delivery errors.

You can contact us at:


NEUSON Baumaschinen Ges.m.b.H.
Haidfeldstr. 52
A - 4060 Linz-Leonding
Tel: 0732/90590
Customer service: ext. 901, ext. 914
Fax: 0732/90590 ext. 900

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >

Lifting Capacity NEUSON 2702 RD Force

A.... Reach, swing line centerune to the hole of the stick
B.... load hook height abone/below ground
X.... Arm and track are paralell; the dozer blade supports the excavator
Y.... Arm and track are at an right angle; the dozer blade do not support the excavator
*.... these loads are limited by the hydraulic capacity

Figures (lifting capacity) are showed in kg and lb (av)
The ratings do not exceed 87% of hydraulic lifting capacity and 75% of tipping load

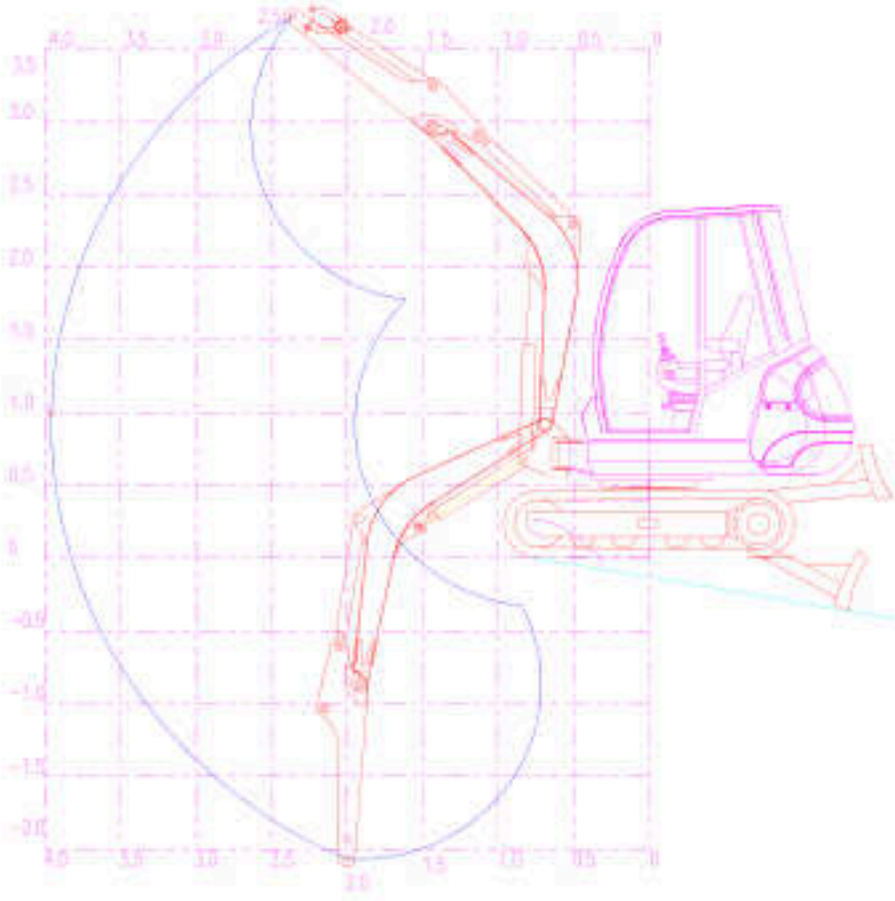

MidWestTech | Wacker Neuson 2702 RD, 3602 RD Force Crawler Excavator Operator'... Order the manual at mid-west-tech.com >