
OPERATING INSTRUCTIONS

CRAWLER EXCAVATOR
5001 RD

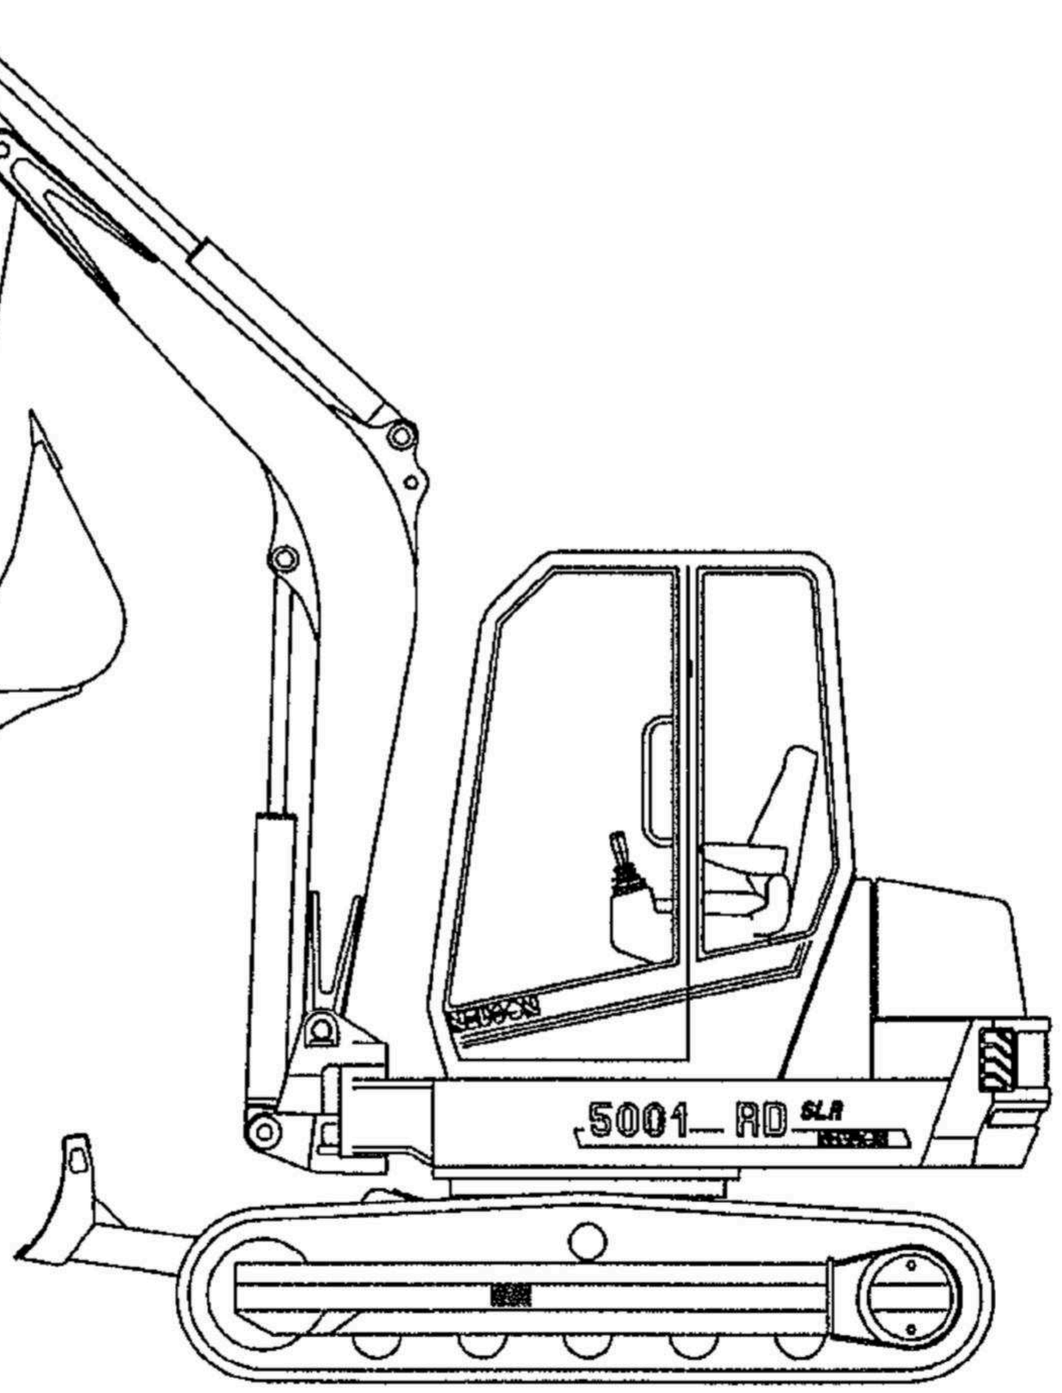

neuson

Version: May 1997

MidWestTech | Wacker Neuson 5001 RD Crawler Excavator Operator's Manual | Publication 1000081371

Order the manual at mid-west-tech.com >

Contents

1 Guarantee and warranty 2

1.1 Guarantee 2

1.1.1 Guarantee period 2
1.1.2 Guarantee responsibility 2
1.1.3 Exclusion of liability for defects 3

1.2 Warranty conditions 3

1.2.1 Warranty responsibility 4
1.2.2 Warranty period 4
1.2.3 Exclusion of warranty 4

1.3 Nameplate 8

1.4 Notes on ordering spare parts 8

2 Safety 9

2.1 Safety rules 10

3 Description 14

3.1 Technical data 14

3.1.1 Principal data 14
3.1.2 Travelling gear and slewing gear 14
3.1.3 Engine 14
3.1.4 Hydraulic system 15
3.1.5 Dozer blade 15
3.1.6 Bucket (standard) 15

3.2 Noise emission 15

3.3 Fire extinguisher 15

3.4 Stickers 15

3.4.1 Position of stickers 16

3.5 Main dimensions 17

4 Unit designations 18

4.1 Operating equipment 19

MidWestTech | Wacker Neuson 5001 RD Crawler Excavator Operator's Manual | Publi... Order the manual at mid-west-tech.com >

4.1.1 Working lights 20
4.1.2 Throttle 20
4.1.3 Driver's seat 20
4.1.4 Heating, heating and ventilation slots 21
4.1.5 Windscreen wiper 21

4.2 Hydraulic system 21

4.2.1 Emergency operation for working equipment 21
4.2.2 Eliminating residual pressure 21
4.2.3 Hydraulic oil level 21
4.2.4 Hydraulic connections for additional equipment 22

5 Safety devices 22

5.1 Parking brake and blocking devices 22

5.2 Seat 23

6 Control panel functions 24

6.1 Fuse box 25

6.1.1 Allocation of fuses in fuse box 25

7 Excavating equipment swivel mechanisms 26

7.1 Left-hand control lever 26

7.2 Right-hand control lever 26

7.3 Excavator arm movements 27

7.4 Dozer blade 27

8 Quick-change device (optional) 28

9 Crawler excavator towing equipment 29

10 Lifting the crawler excavator 29

11 Earthmoving 30

11.1 Digging 30

11.2 Excavator arm slewing angle 30

MidWestTech | Wacker Neuson 5001 RD Crawler Excavator Operator's Manual | Publi... Order the manual at mid-west-tech.com >

11.3 Grading 31

11.4 Lifting-gear operation 31

11.5 Stability 32

12 Instructions for transport 33

12.1 After loading 33

13 Checks before starting up 34

13.1 Visual check 34

13.2 Check engine oil level 34

13.3 Check hydraulic oil level 34

13.4 Check coolant level 35

13.5 Fill fuel 35

13.6 Check safety devices 35

14 Starting up the machine 36

14.1 Assisted starting (starting with jumper cable) 37

15 Driving the crawler excavator 39

15.1 Travel 39

15.1.1 Travel on dangerous ground and on slopes 39

15.2 Turning 39

15.3 Travel speed 40

16 After operation 40

17 Care and servicing 41

17.1 General 41

17.2 Servicing plan 43

18 Daily servicing 46

18.1 General visual and leakage check 46

18.2 Engine 46

MidWestTech | Wacker Neuson 5001 RD Crawler Excavator Operator's Manual | Publi... Order the manual at mid-west-tech.com >