Operator's Manual

Track dumpers

TD 15 / TD 18



Machine models	**TD15/TD18**
Edition	**2.0**
Language	**EN**
Article number	**1000139695**

WACKER NEUSON

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Publication 1000139695
Order the manual at mid-west-tech.com >

Table of contents

Introduction
Important information on this Operator's Manual ... 1-1
Machine overview ... 1-2
Brief description ... 1-3
Regulations ... 1-3
EC Declaration of Conformity version TD 15 ... 1-4
EC Declaration of Conformity version TD 18 ... 1-5
Type labels and component numbers ... 1-6
Other signs and symbols ... 1-7

Safety instructions
Identification of warnings and dangers ... 2-1
Warranty ... 2-1
Designated use and exemption from liability ... 2-2
General conduct and safety instructions ... 2-3
Organisational measures ... 2-3
Selection and qualification of staff, basic responsibilities ... 2-4
Safety instructions regarding operation ... 2-5
Normal operation ... 2-5
Applications with lifting gear ... 2-6
Trailers and attachments ... 2-6
Transport ... 2-7
Safety instructions for maintenance ... 2-8
Warning of special hazards ... 2-10
Electrical energy ... 2-10
Gas, dust, steam, smoke ... 2-10
Hydraulics ... 2-10
Noise ... 2-10
Oil, grease and other chemical substances ... 2-10
Battery ... 2-11
Tracks ... 2-11

Operation
Control stand overview ... 3-2
Instrument panel overview ... 3-3
Putting into operation ... 3-4
Safety instructions ... 3-4
Putting the machine into operation for the first time ... 3-4
Running-in period ... 3-4
Check lists ... 3-5
Start-up checklist ... 3-5
Operation checklist ... 3-6
Parking checklist ... 3-6
Driving the dumper ... 3-7
Preheating start switch: overview ... 3-7
Throttle lever: overview ... 3-7
Telltales and warning lights: overview ... 3-8
... 3-9
Before starting the engine ... 3-10
Starting the engine: general ... 3-10
Procedure ... 3-10
When the engine has started ... 3-11
Engine warm-up ... 3-11
Special instructions for driving on public roads ... 3-12
Moving off ... 3-13

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Public...
Order the manual at mid-west-tech.com >

Drive levers 3-13
Hydraulic brake 3-14
Mechanical brake 3-14
Driving on slopes 3-15
Specific safety instructions 3-15
Driving on slopes 3-16
Parking the machine 3-18
Parking the machine on slopes 3-18
Seat adjustment 3-19
Weight adjustment 3-19
Horizontal adjustment 3-19
Backrest adjustment 3-19
Seat belt 3-20
Engine cover 3-21
ROPS bar (option) 3-22
Opening the side board locks 3-23
Dumping out to the front or the sides 3-24
Retrieving the track dumper 3-26
Crane handling the machine 3-26
Loading and transporting the machine 3-27
Tying down the machine 3-28
Working with the machine 3-29
General safety instructions 3-29
Control levers: overview 3-30
TD 15/18 3-way dumper 3-30
TD 15 HK (high-tip skip, option) 3-30
TD 18 DK (swivel skip, option) 3-31
Transporting with a full skip 3-31
Dumping out the skip 3-32
Loading the machine 3-33

Troubleshooting
Engine trouble 4-1

Maintenance
Introduction 5-1
Maintenance strut 5-2
Fuel system 5-4
Specific safety instructions 5-4
Refuelling 5-4
Stationary fuel pumps 5-5
Diesel fuel specification 5-5
Bleeding the fuel system 5-6
Fuel prefilter with water separator 5-7
Engine lubrication system 5-8
Checking the oil level 5-8
Filling up engine oil 5-9
Engine and hydraulics cooling system 5-10
Specific safety instructions 5-10
Checking/filling up coolant 5-11
Air filter 5-13
Replacing the filter 5-14
V-belt 5-15
Checking V-belt tension 5-15
Retightening the V-belt 5-16
Hydraulic system 5-17
Specific safety instructions 5-17
Checking the hydraulic oil level 5-18

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Public... Order the manual at mid-west-tech.com >

Filling up hydraulic oil 5-19
Checking hydraulic pressure lines 5-21
Tracks 5-22
Checking track tension 5-22
Increasing track tension 5-22
Decreasing track tension 5-23
Travelling drive 5-24
Checking the oil level and filling up oil 5-24
Draining oil 5-24
Electrical system 5-25
Specific safety instructions 5-25
Service and maintenance work at regular intervals 5-25
Instructions concerning specific components 5-26
Alternator 5-26
Battery 5-27
General maintenance work 5-28
Cleaning 5-28
General instructions for all areas of the machine 5-28
Exterior of the machine 5-29
Engine compartment 5-29
Screw connections and attachments 5-29
Pivots and hinges 5-29
Fluids and lubricants 5-30
Maintenance plan (overview) 5-32
Lubrication plan TD 15/18 5-35
Description of symbols in lubrication plan 5-35
Lubrication plan TD 15 HK (high-tip skip, option) 5-36
Lubrication plan TD 15 DK (swivel skip, option) 5-37

Specifications

Engine 6-1
Hydraulic system 6-1
Undercarriage 6-1
Work hydraulics 6-2
Skip 6-2
Noise levels 6-2
Vibration 6-2
Dimensions model TD 15 6-3
Dimensions TD 15 HK (high-tip skip, option) 6-4
Dimensions model TD 18 6-5
Dimensions TD 18 DK (swivel skip, option) 6-6

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Public... Order the manual at mid-west-tech.com >

3.7 Control levers: overview

Notice!

The speed with which the work attachments are moved corresponds to that of the control levers.

Danger!

Unintentional operation of the control levers when driving on public roads –

Danger of accidents!

TD 15/18 3-way dumper

Danger!

Bear in mind the side that has been selected for dumping the skip, since unintentionally dumping out the skip can cause

Severe injuries!

☞ *Check the position of the pins before dumping out the skip.*

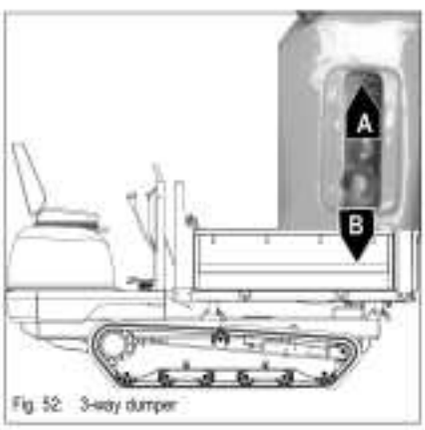


Fig. 52: 3-way dumper

Position	Lever	Function
• A	☞ *Forwards*	➥ Skip dumps out
• B	☞ *Backwards*	➥ Skip dumps in

- The skip can be dumped in and out continuously, as far as it will go, by means of the control levers.
- The side board opens and closes automatically as you dump the skip in and out.

TD 15 HK (high-tip skip, option)

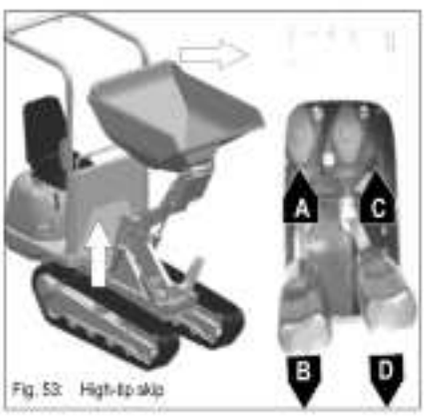


Fig. 53: High-tip skip

Position	Lever	Function
• A	☞ *Forwards*	➥ Skip dumps out
• B	☞ *To the right*	➥ Skip dumps in
• C	☞ *Forwards*	➥ Skip is raised
• D	☞ *Backwards*	➥ Skip is lowered

- The skip can be raised and dumped in and out continuously, as far as it will go, by means of the control levers.

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Public... Order the manual at mid-west-tech.com >

5.13 Maintenance plan (overview)

Work description

For service and maintenance work on the attachment, please refer to the operation and maintenance manual of the attachment manufacturer as well.

Maintenance plan/service hours (s/h)	Maintenance work (once a day)	Once a month or after 50 s/h	Every 3 monthes or after 200 s/h	Every 6 monthes or after 400 s/h	Every 1000 s/h once a year	Customer	Authorised workshop
Fluid and filter changes ( ):							
Carry out the following oil and filter changes (check oil levels after test run):							
• Engine oil[1]		●	●				●
• Clean the engine oil filter		●		●			●
• Replace the fuel filter element				●			●
• Check/clean the air filter element		●				●	
• Replace the air filter insert				●			●
• Hydraulic oil filter insert[2]		●			●		●
• Hydraulic oil			●		●		●
• Hydraulic oil tank breather			●		●		●
• Coolant					●		●
Inspection work ( ):							
Check the following material. Refill if necessary:							
• Check the fuel level, fill up fuel	●					●	
• Engine oil	●					●	
• Hydraulic oil	●					●	
• Coolant	●					●	
Check hydraulic oil radiator for contamination, clean if necessary	●					●	
Check cooling systems and hoses for leaks and pressure (visual check)	●					●	
Air filter (damage)	●					●	
• Clean			●				●
Clean the fuel filter			●			●	
Fuel injection nozzle (check injection)					●		●

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Public... Order the manual at mid-west-tech.com >

6.8 Dimensions model TD 15

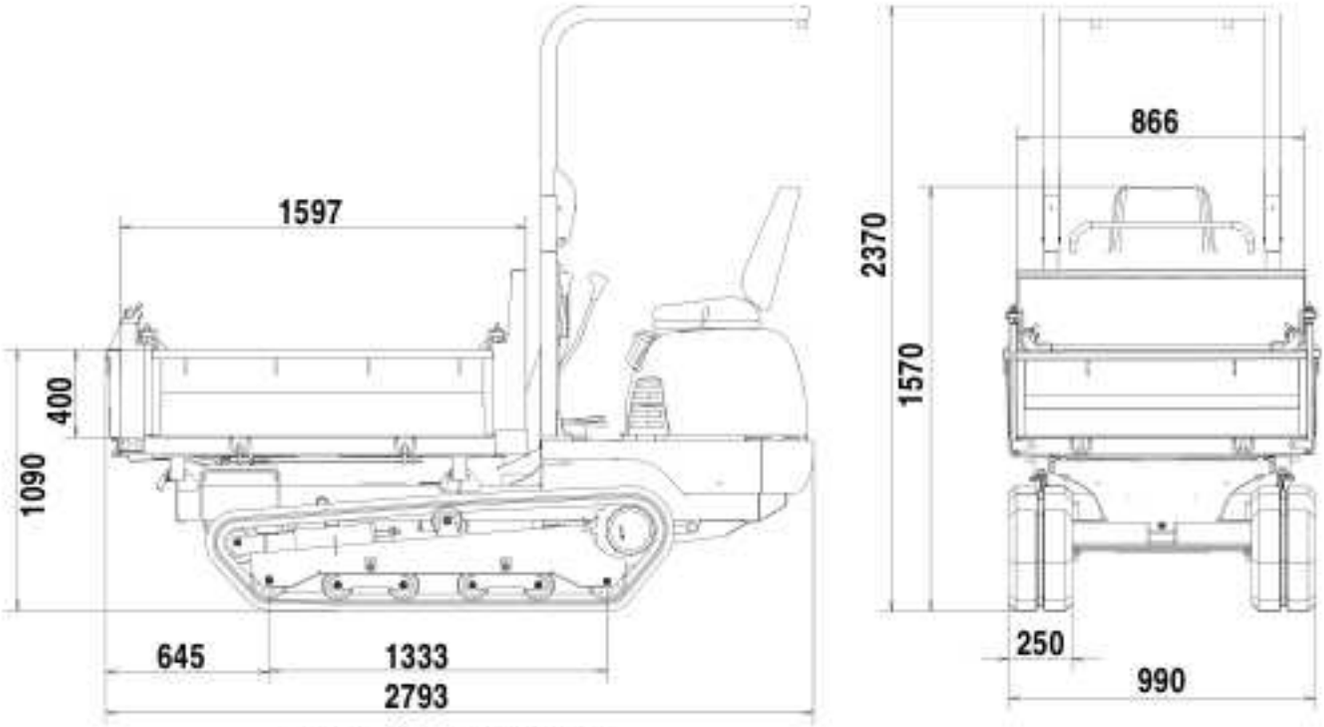


Fig. 82: Machine dimensions (model TD 15)

Main data	Model TD 15
Payload	1500 kg
Dead weight incl. skip	1250 kg
Length	2793 mm
Width	990 mm
Height	1570 mm
Height with ROPS rollbar	2370 mm
Track width	250 mm
Skip height	1090 mm
Skip length	1597 mm
Skip width	866 mm
Skip depth	400 mm

MidWestTech | Wacker Neuson TD15, TD18 Track Dumper Operator's Manual | Public...
Order the manual at mid-west-tech.com >