Operator's Manual

Dumpers

5001/6001



Machine model	**5001/6001**
Edition	**2.0**
Order no.	**1000190334**
Language	**EN**

WACKER NEUSON

Order the manual at mid-west-tech.com >

Table of contents

Introduction

Important information on the Operator's Manual ... 1-1
Brief description ... 1-2
Operator qualifications ... 1-2
EC Declaration of Conformity for 5001 dumper ... 1-3
EC Declaration of Conformity for 6001 dumper ... 1-4
EC Declaration of Conformity for 6001 Power dumper ... 1-5
Type labels and component numbers ... 1-6
5001/6001 swivel skip ... 1-8
Front skip 6001 ... 1-9
Labels ... 1-10

Safety instructions

Identification of warnings and dangers ... 2-1
Warranty ... 2-1
Designated use ... 2-2
General conduct and safety instructions ... 2-3
- Organisational measures ... 2-3
- Selection and qualification of staff, basic responsibilities ... 2-4

Safety instructions regarding operation ... 2-5
- Normal operation ... 2-5
- Trailer operation ... 2-7

Safety instructions for maintenance ... 2-8
Warning of special hazards ... 2-10
- Electrical energy ... 2-10
- Gas, dust, steam, smoke ... 2-10
- Hydraulics ... 2-11
- Noise ... 2-11
- Oil, grease and other chemical substances ... 2-11
- Battery ... 2-11
- Tyres ... 2-11

Operation

Description of components ... 3-2
Control stand ... 3-4
Instrument panel ... 3-6
Putting into operation ... 3-8
- Safety instructions ... 3-8
- Putting the machine into operation for the first time ... 3-8
- Running-in period ... 3-8
- Check lists ... 3-9
- Start-up checklist ... 3-9
- Operation checklist ... 3-10
- Parking checklist ... 3-10
- Telltales and warning lights: overview ... 3-11

Driving the dumper ... 3-13
- Preheating start switch ... 3-13
- Before starting the engine ... 3-13
- Starting the engine: general ... 3-13
- Procedure ... 3-14
- When the engine has started ... 3-14
- Engine warm-up ... 3-14
- Jump-starting the engine (supply battery) ... 3-14
- Special instructions for driving on public roads ... 3-16
- Moving off ... 3-16
- Drive operation ... 3-16

MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1...

Order the manual at mid-west-tech.com >

Accelerator pedal ... 3-17
Hydraulic brake ... 3-17
Parking brake ... 3-17
Hazard warning system ... 3-18
Low/high speed ... 3-18
Driving on slopes ... 3-19
Specific safety instructions ... 3-19
Driving on slopes with a loaded skip ... 3-20
Driving on slopes with an empty skip ... 3-20
Driving across slopes ... 3-20
Parking the machine ... 3-21
Loading the machine ... 3-22
Seat adjustment ... 3-23
Weight adjustment ... 3-23
Horizontal adjustment ... 3-23
Backrest adjustment ... 3-23
Seat belt ... 3-24
Light system ... 3-25
Road travel lights ... 3-25
Multifunctional lever ... 3-26
Interior light (cab option) ... 3-26
Rotating beacon (option) ... 3-26
Working light (cab option) ... 3-27
Cab heating and ventilation ... 3-27
Air conditioning (option) ... 3-28
Washer system ... 3-28
Tank for washer system ... 3-29
Doors ... 3-30
Door arresters ... 3-30
Working with the machine ... 3-31
General safety instructions ... 3-31
Front skip operation ... 3-32
Swivel skip operation ... 3-33
Rollbar ... 3-34
Towing ... 3-35
Opening the high-pressure circuit ... 3-35
Centre pivot strut ... 3-36
Locking the control lever (5001) ... 3-36
Locking the control lever (6001) ... 3-37
Crane handling the machine ... 3-38
Loading and transporting the machine ... 3-39
Tying down the machine ... 3-40
Battery master switch (5001) ... 3-40
Battery master switch (6001) ... 3-41
Engine cover (machines without cab) ... 3-42

Troubleshooting

Engine trouble ... 4-1

Maintenance

Introduction ... 5-1
Maintenance strut 5001 ... 5-2
Maintenance strut 6001 (front skip) ... 5-3
Maintenance strut 6001 (swivel skip) ... 5-4
Fuel system ... 5-5
Specific safety instructions ... 5-5
Refuelling ... 5-5
Stationary fuel pumps ... 5-6

MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1...

Order the manual at mid-west-tech.com >

Diesel fuel specification 5-6
Bleeding the fuel system 5-6
Fuel prefilter with water separator 5-7
Engine lubrication system 5-8
Checking the oil level 5-8
Filling up engine oil 5-9
Engine cooling system 5-10
Checking/filling up coolant 5-10
Checking/filling up coolant 5-11
Axle mounting 5001 5-13
Front axle 5-13
Rear axle 5-13
Axle mounting 6001 5-14
Front axle 5-14
Rear axle 5-14
Air filter 5-15
Replacing the filter 5-16
V-belts 5-17
Checking V-belt tension 5-17
Retightening the V-belts 5-18
Hydraulic system 5-19
Specific safety instructions 5-19
Checking the hydraulic oil level 5-19
Filling up hydraulic oil 5-21
Changing hydraulic oil 5-21
Fouling indicator for hydraulic oil filter 5-22
Replacing the hydraulic oil filter element 5-22
Important information for the use of biodegradable oil 5-23
Checking hydraulic pressure lines 5-24
Tyres 5-25
Inspection work 5-25
Wheel change 5-26
Axles 5-27
Checking the oil level and filling up oil 5-27
Draining oil 5-27
Electrical system 5-28
Specific safety instructions 5-28
Service and maintenance work at regular intervals 5-28
Instructions concerning specific components 5-29
Alternator 5-29
Battery 5-30
General maintenance work 5-31
Cleaning 5-31
General instructions for all areas of the machine 5-31
Exterior of the machine 5-32
Engine compartment 5-32
Screw connections and attachments 5-32
Pivots and hinges 5-32
Fluids and lubricants 5-33
Maintenance plan (overview) 5-36
Lubrication plan 5001 5-39
Lubrication plan 6001 5-40

MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1...

Order the manual at mid-west-tech.com >

3.26 Locking the control lever (6001)

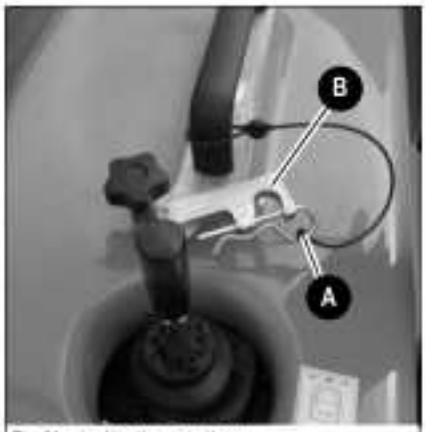


Fig. 64: Locking the control lever

Caution!

Lock the control lever for the skip during road travel!

☞ *Lock the control lever for the skip while driving the machine.*

Lock as follows:

☞ *Remove split pin **A** from lock **B**.*

☞ *Fold lock **B** to the front.*

☞ *Insert split pin **A** in lock **B**.*

Unlock in the reverse order!

MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1... Order the manual at mid-west-tech.com >

5.19 Lubrication plan 5001

Grease all lubrication points daily! Use ENERGREASE L21M.
Fold down the red maintenance strut before you carry out maintenance work with the skip dumped out – *see chapter 5.2* ***Maintenance strut 5001*** on page 5-2. Lubricate all points daily with FINA Energrease L21M or Mobilgrease CM-P.



MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1... Order the manual at mid-west-tech.com >

6.17 Dimensions model 6001 Power


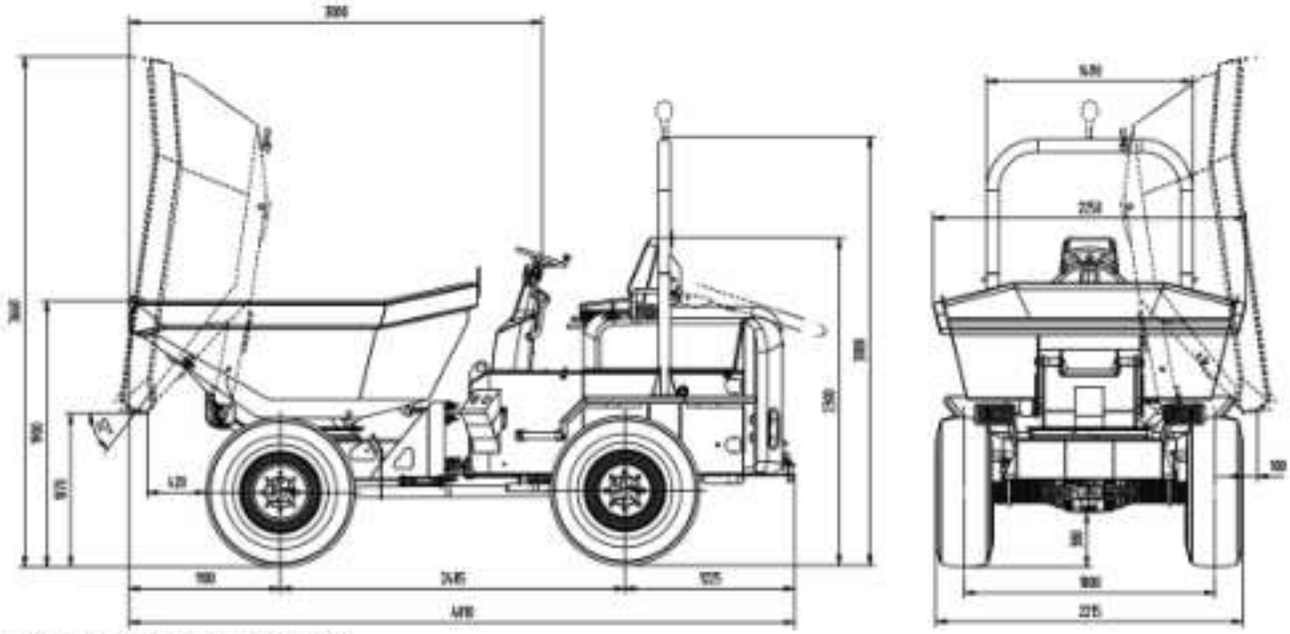


Fig. 108: Machine dimensions (model 6001 Power)


Main data	Model 6001 Power
Dead weight	4450 kg (9811 lbs.)
Overall height	3080 mm (10'1")
Overall height with dumped-out skip	3660 mm (12')
Overall height without rollbar	2300 mm (7'7")
Overall width	2215 mm (7'3")
Ground clearance	380 mm (15")
Wheelbase	2485 mm (8'2")
Outside turning radius	5500 mm (18' 1")
Hill climbing ability	50 % theoretically
Safe authorised inclination	25 % in all drive positions

MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1... Order the manual at mid-west-tech.com >

3.1 Description of components

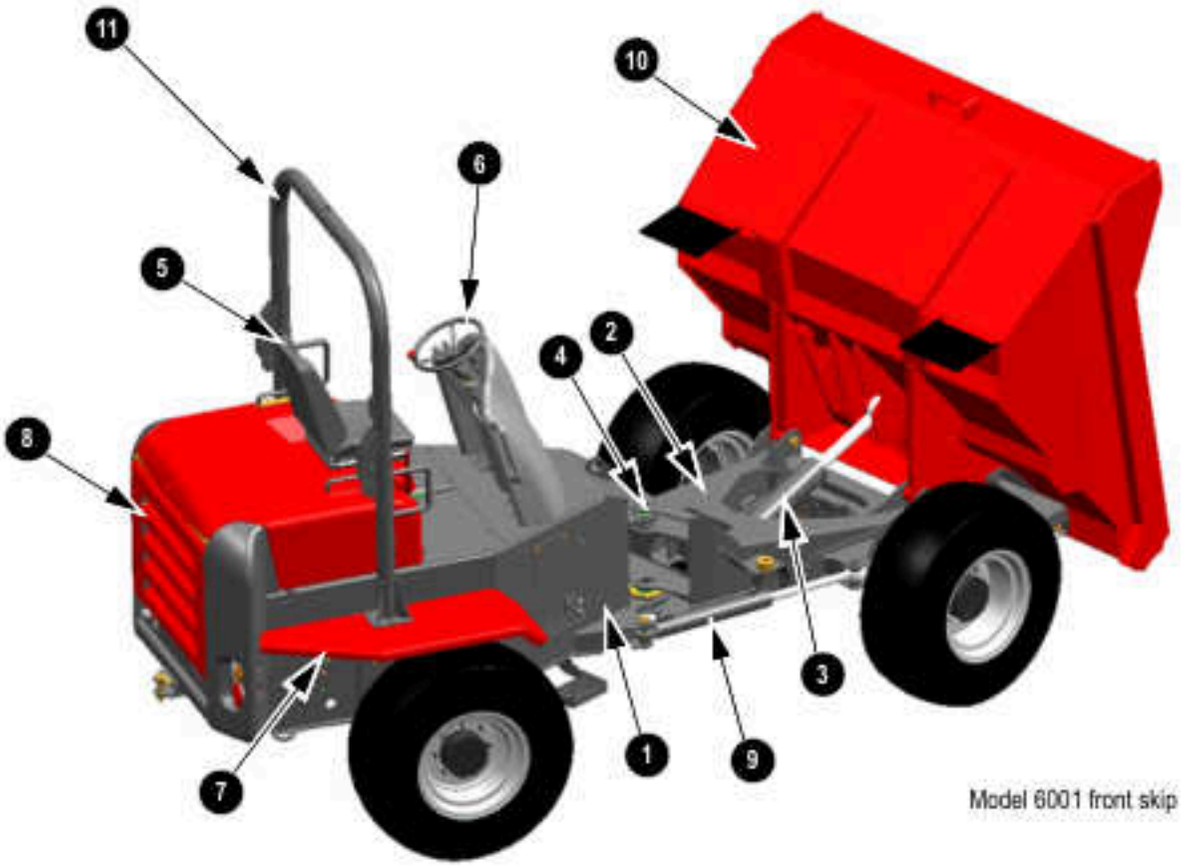

Model 6001 front skip

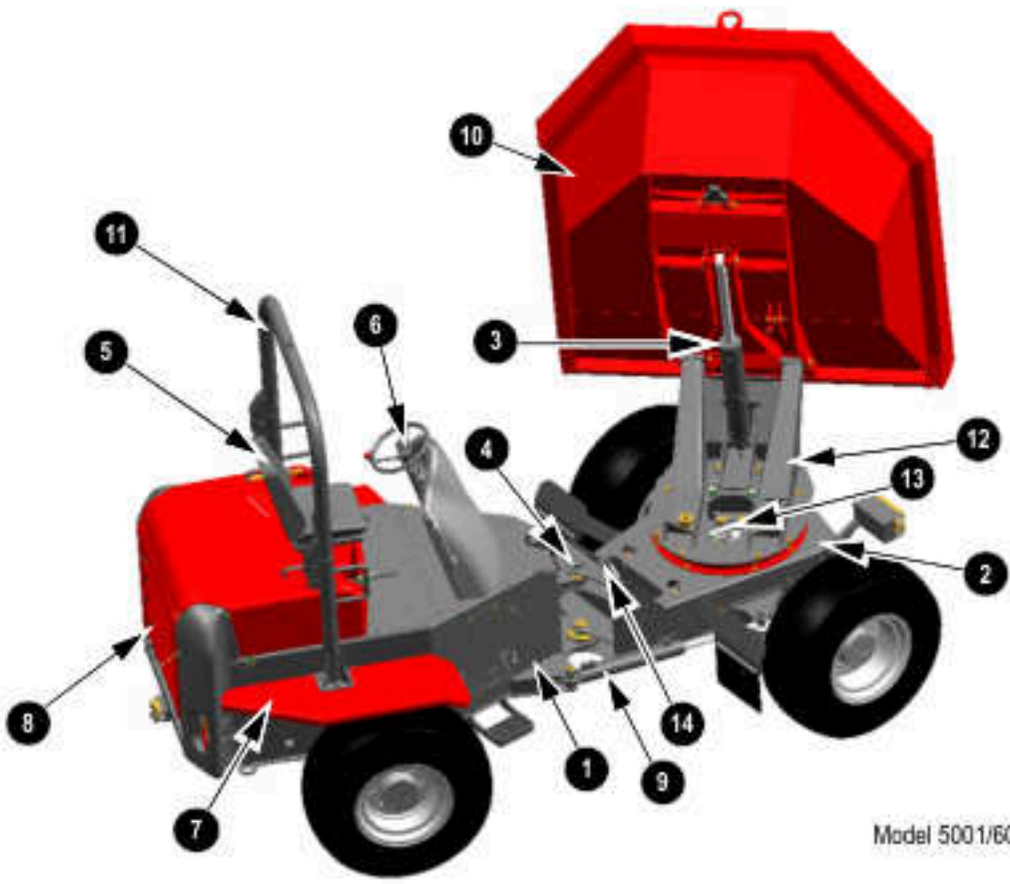

Model 5001/6001 swivel skip

MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1... Order the manual at mid-west-tech.com >

5.20 Lubrication plan 6001

Grease all lubrication points daily! Use ENERGREASE L21M.
Fold down the red maintenance strut before you carry out maintenance work with the skip dumped out – *see chapter 5.2* ***Maintenance strut 5001*** on page 5-2. Lubricate all points daily with FINA Energrease L21M or Mobilgrease CM-P.

Front skip



Swivel skip



MidWestTech | Wacker Neuson 5001, 6001 Dumper Operator's Manual | Publication 1...
Order the manual at mid-west-tech.com >