TEREX

Parts Manual

Serial Number Range

AL5000

(from SN AL507-100 to
AL512-516)

Part No. 116443

Rev C25

November 2018

MidWestTech | Terex AL5000 Light Tower Parts Manual | Publication 116443

Order the manual at mid-west-tech.com >

Table of Contents

This manual is updated frequently. If you have a printed manual, you can keep it up to date by downloading new figures from the Genie website at www.genielift.com. For the most up-to-date parts information, visit the Parts Lookup System on the Genie website at www.genielift.com.

How to Read Your Serial Number....3
Parts Stocking List....7
How to Order Parts....8
Service Parts Fax Order Form....9

Electronic Version

Click on any page number to view the figure.

100 Decals
101.1 Decals with Words, Roadside....10
102.1 Decals with Words, Curbside....12

200 Chassis Components
201.1 Chassis Components....14
202.1 Fuel Tank and Hoses, Models Without Spill Containment....16
203.1 Fuel Tanks and Hoses, Models With Spill Containment....18
204.1 Axles and Brakes....20
205.1 Hitches....22
206.1 Ballast Assembly....24
207.1 Cabinet, View 1....26
208.1 Cabinet, View 2....28
209.1 Cabinet, View 3, 20kW Option....30

300 Engines and Generators
301.1 Kubota D1105-E3BG, View 1....32
302.1 Kubota D1105-E3BG, View 2....34
303.1 Kubota D1105-E3BG, View 3....36
304.1 Kubota D1105-E3BG, View 4....38
305.1 Kubota V1505 T41, View 1....40
306.1 Kubota V1505 T41, View 2....42
307.1 Isuzu 4LE2-522, View 1 (to SN AL511-229)....44
307.2 Isuzu 4LE2,1800R, View 1 (from SN AL511-230)....46
308.1 Isuzu 4LE2-522, View 2 (to SN AL511-229)....48
308.2 Isuzu 4LE2,1800R, View 2 (from SN AL511-230)....50
309.1 Isuzu 4LE2,1800R, Radiator Assembly, from SN AL511-230....52
310.1 Generator, Leroy Somer 8 Kw....54
311.1 Generator, Marathon 8 Kw....56
312.1 Generator, Newage 12 Kw and 20 Kw....58
313.1 Generator, Marathon 12 Kw and 20 Kw....60

400 Electrical Components
401.1 Control Box Assembly, View 1....62
402.1 Control Box Assembly, View 2, Standard Box....64
403.1 Control Box Assembly, View 2, External Power Access....66
404.1 Control Box Assembly, View 2, Roda Deaco....68
405.1 Electrical Wiring and Power Cables....70

500 Mast Components
501.1 Mast Assembly and Winch Cable Routing....72
502.1 Tower Base Assembly....74
503.1 Winch....76
504.1 Round Tube Assembly, 6 Inch....78
505.1 Mast Assembly, 4-inch....80
506.1 Mast Assembly, 2-inch and 3-inch....82
507.1 Mast Crossarm....84
508.1 Light Assembly, Round....86


600 Accessories
601.1 Chassis Options....88
602.1 Engine Options....90
603.1 Outrigger Options....92
604.1 Electric Winch....94

Indices
Part Number Index....96
Part Description Index....99


Cross References

MidWestTech | Terex AL5000 Light Tower Parts Manual | Publication 116443 Order the manual at mid-west-tech.com >


506.1 Mast Assembly, 2-inch and 3-inch

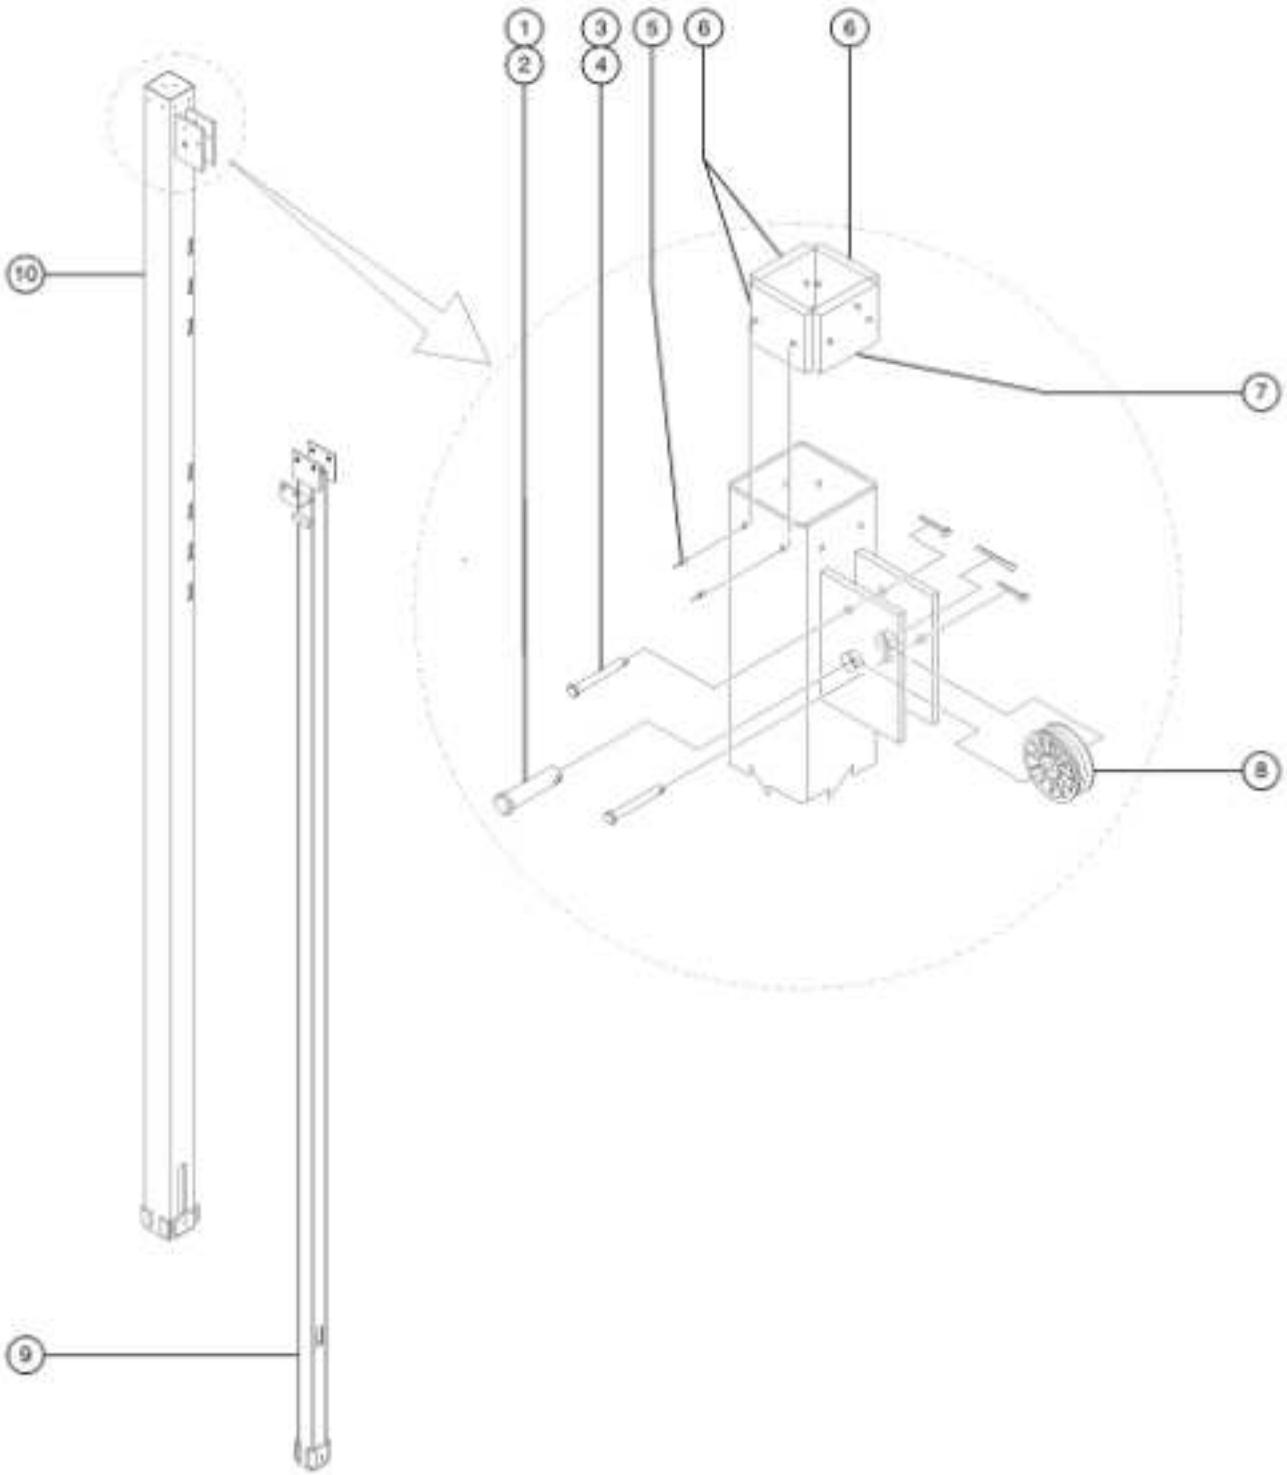

MidWestTech | Terex AL5000 Light Tower Parts Manual | Publication 116443 Order the manual at mid-west-tech.com >

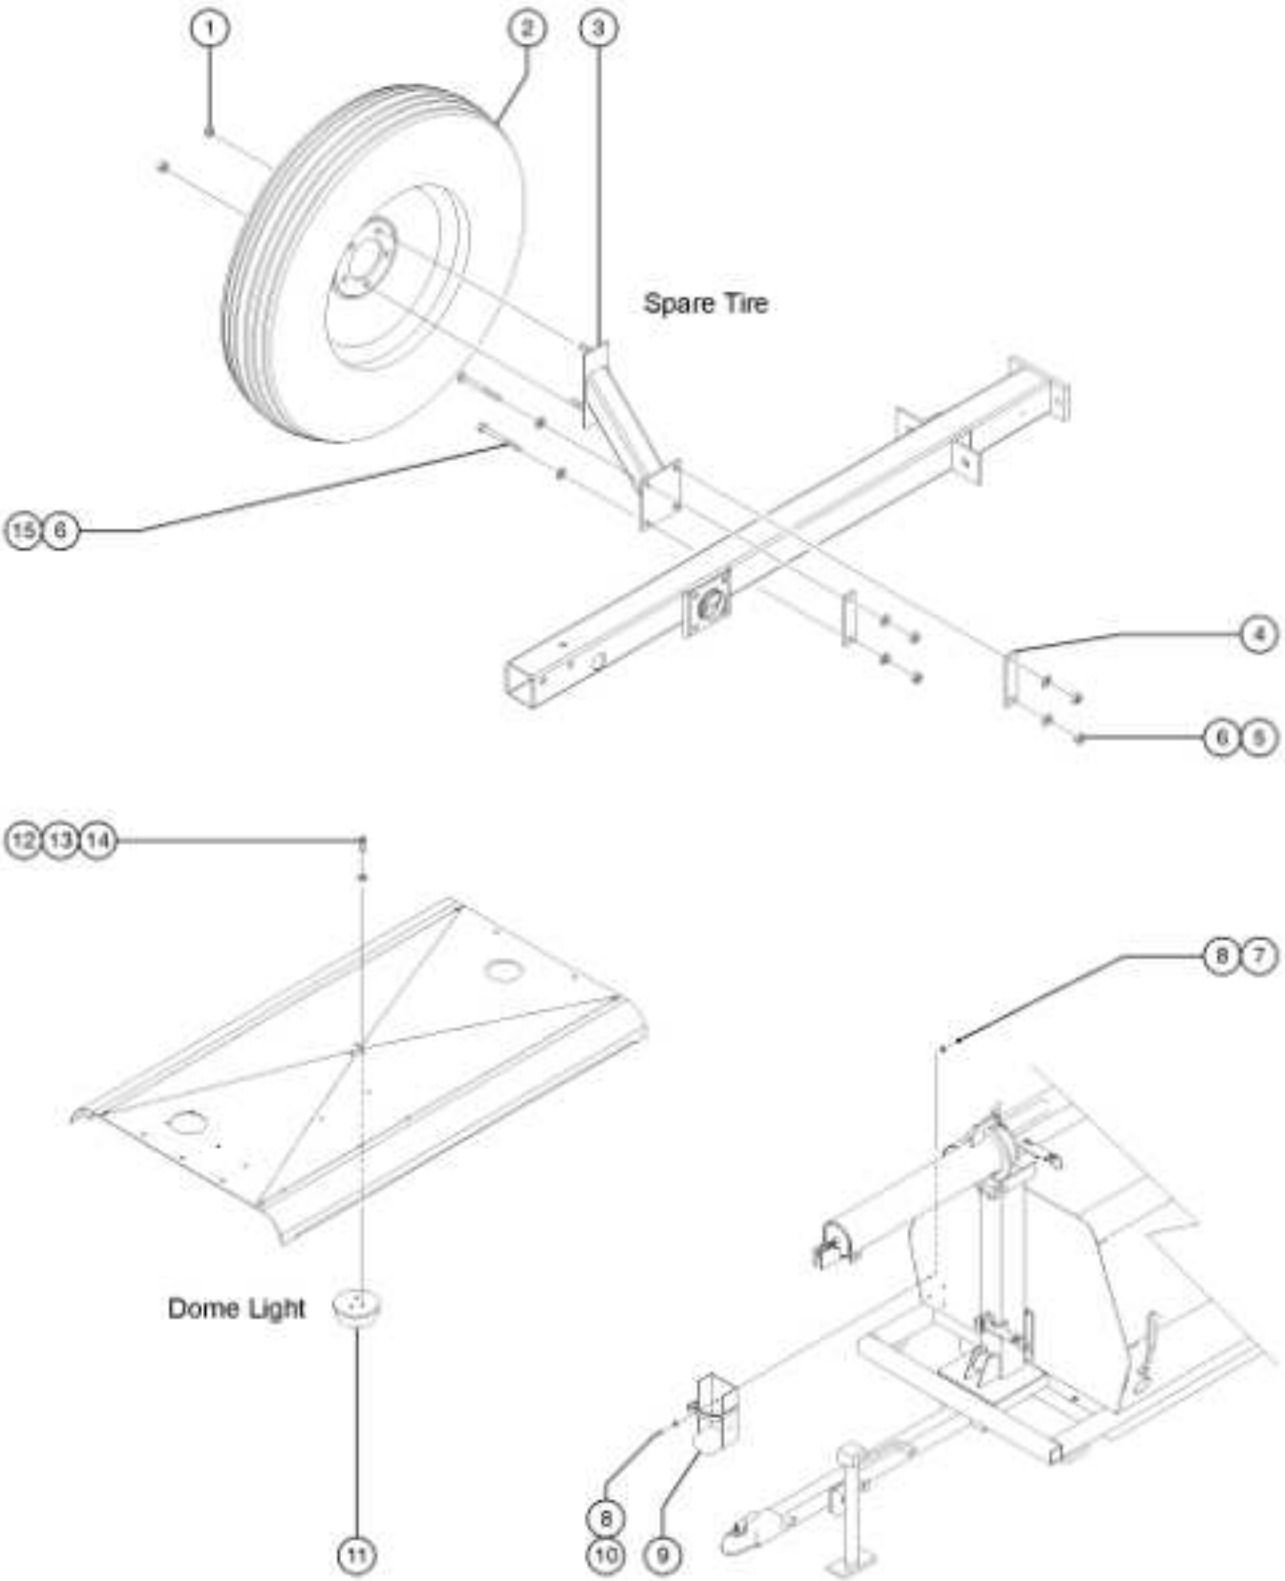

MidWestTech | Terex AL5000 Light Tower Parts Manual | Publication 116443 Order the manual at mid-west-tech.com >

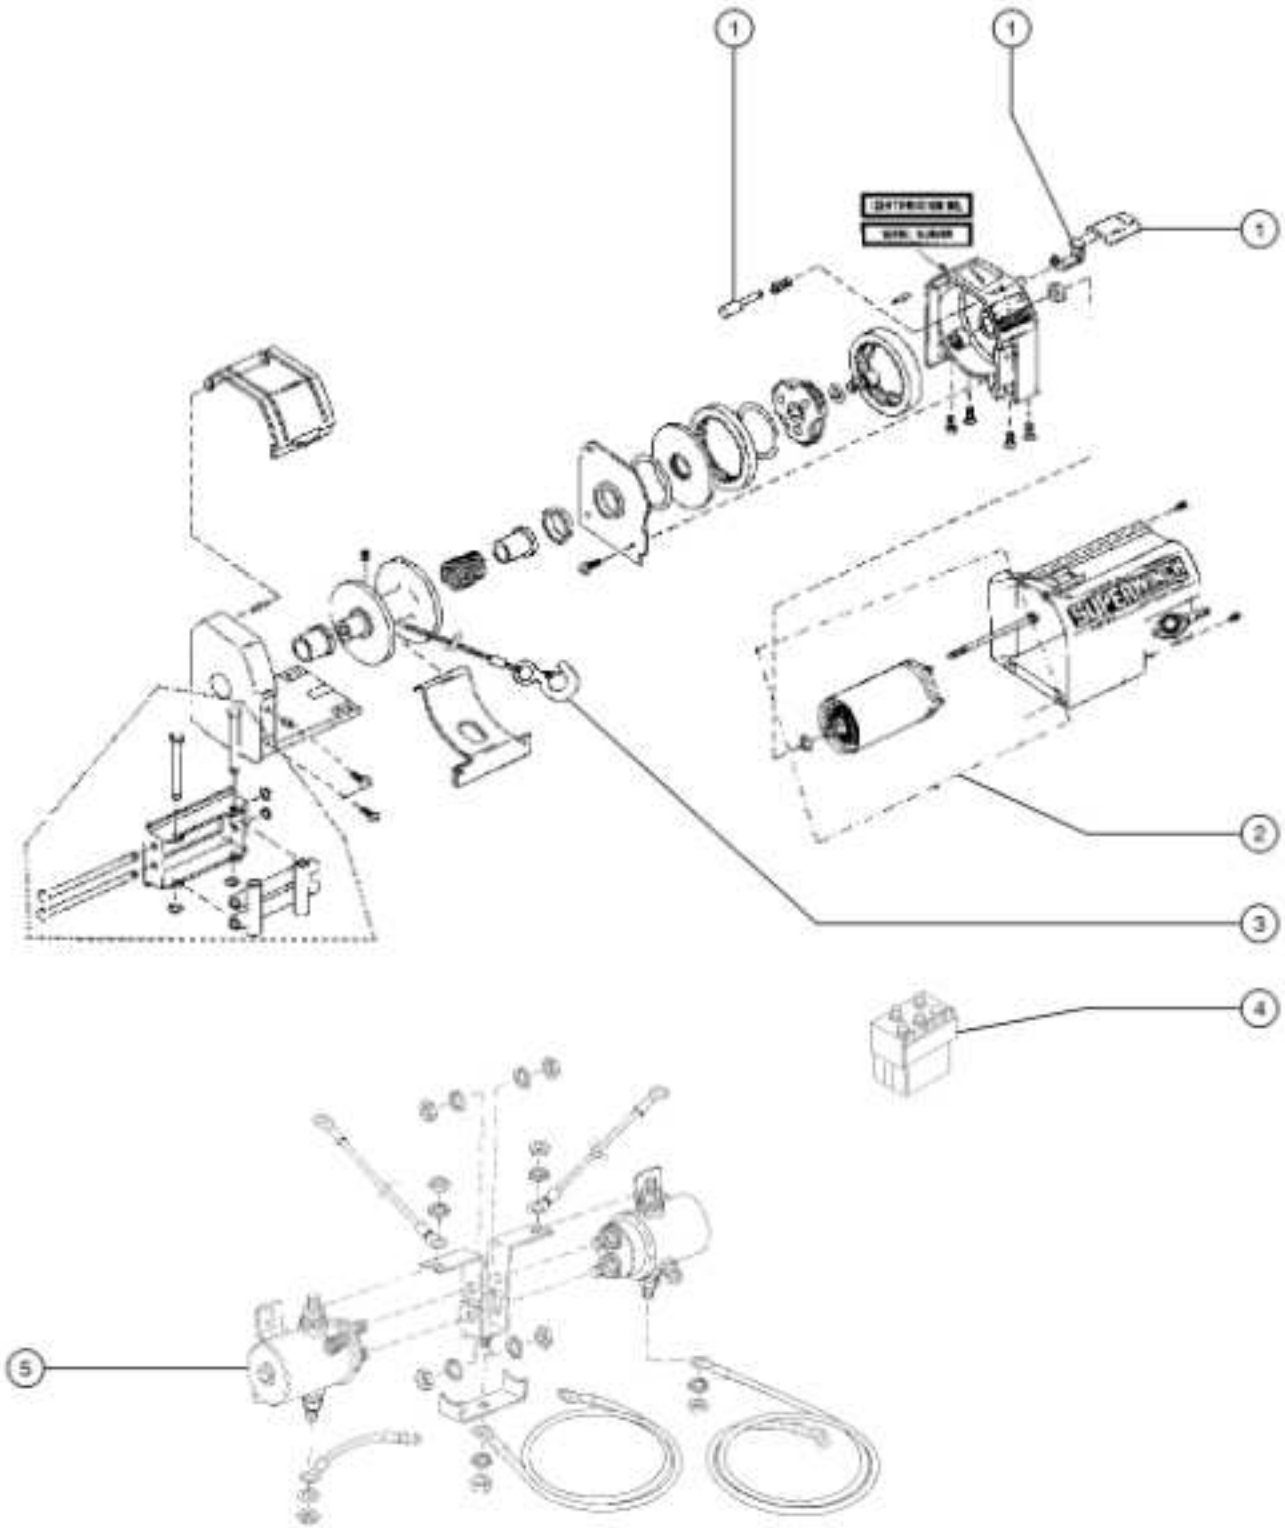

MidWestTech | Terex AL5000 Light Tower Parts Manual | Publication 116443 Order the manual at mid-west-tech.com >