SKYJACK™

MAINTENANCE & PARTS MANUAL



SJ-10000 Series

Engine Powered

Model SJ-9250 Manufactured September 1996 And Since

For Service please call **800 275-9522**
Skyjack Inc. Service Center, 3451 Swenson Ave., St. Charles, IL. 60174 ... FAX 630 262-0006
For Parts in North America and Asia please call **800 965-4626**
Skyjack Inc. Parts Center, 3451 Swenson Ave., St. Charles, IL. 60174 ..... FAX 888 782-4825
For Parts & Service in Europe please call 44-1691-676 236
Skyjack Europe Glovers Meadow, Maesbury Road, Oswestry, Shropshire, UK ..... FAX 44-169- 676 238

117089MM Printed in Canada December 2022

MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

List of Tables

Table 2-1A. Specifications and Features - ANSI/CSA 2
Table 2-1B. Specifications and Features - CE 3
Table 2-2A. Maximum Platform Capacities (Evenly Distributed) - ANSI/CSA 4
Table 2-2B. Maximum Platform Capacities (Evenly Distributed) - CE 5
Table 2-3A. Maximum Platform Capacities (Evenly Distributed w/ #7 Tire Equiped) - ANSI/CSA 6
Table 2-3B. Maximum Platform Capacities (Evenly Distributed w/ #7 Tire Equiped) - CE 7
Table 2-4. Tire Specifications 8
Table 2-5. Owner's Annual Inspection Record 9
Table 2-6. Floor Loading Pressure 10
Table 2-7. Maintenance And Inspection Schedule 11

MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

SECTION 3

SYSTEM COMPONENT IDENTIFICATION AND SCHEMATICS

TABLE OF CONTENTS

SYMBOLS & CHARTS

FIGURE 3.1-1. RELAY TERMINAL FUNCTION IDENTIFICATION 2
FIGURE 3.1-2. ELECTRICAL SYMBOL CHART 3
FIGURE 3.1-3. HYDRAULIC SYMBOL CHART 4

HYDRAULIC SYSTEM

FIGURE 3.2-1. HYDRAULIC SCHEMATIC Powered Extension Platform 5
FIGURE 3.2-2A. HYDRAULIC SCHEMATIC (Machines With Serial Number 5864 and Below) 6
FIGURE 3.2-2A. PARTS LIST (Machines With Serial Number 5864 and Below) 7
FIGURE 3.2-2B. HYDRAULIC SCHEMATIC (Machines With Serial Numbers 5865 and Above) 8
FIGURE 3.2-2B. PARTS LIST (Machines With Serial Numbers 5865 and Above) 9
FIGURE 3.2-3. HYDRAULIC MANIFOLD Component and Port Identification 10

CONTROL BOXES

FIGURE 3.3-1A. CONTROL BOX DIAGRAM (With No Options) (Serial #5220 to 50611) 12
FIGURE 3.3-1B. CONTROL BOX DIAGRAM (With No Options) (Serial #50612 to 50771) 16
FIGURE 3.3-1C. CONTROL BOX DIAGRAM (With No Options) (Serial #50772 and Above) 20
FIGURE 3.3-2A. CONTROL BOX DIAGRAM (Outriggers & All Options) (Serial #5220 to 50611) 24
FIGURE 3.3-2B. CONTROL BOX DIAGRAM (Outriggers & All Options) (Serial #50612 to 50771) 28
FIGURE 3.3-2C. CONTROL BOX DIAGRAM (Outriggers & All Options) (Serial #50772 and Above) 32

ELECTRICAL PANEL DIAGRAMS

FIGURE 3.4-1. ELECTRICAL PARTS LIST 36
FIGURE 3.4-2. ELECTRICAL INVERTER DIAGRAM & SCHEMATIC 41
FIGURE 3.4-3. ENGINE WIRING DIAGRAM - Ford Gasoline Engine 42
FIGURE 3.4-4. ENGINE WIRING DIAGRAM - Ford Dual Fuel Engine 43
FIGURE 3.4-5A. ENGINE WIRING DIAGRAM - Kubota Diesel Engine (Serial No. 51084 & Below) 44
FIGURE 3.4-5B. ENGINE WIRING DIAGRAM - Kubota Diesel Engine (Serial No. 51085 & Above) 45
FIGURE 3.4-6. OUTRIGGER Mechanical Limit Switch Diagram 46
FIGURE 3.4-7. OUTRIGGER Proximity Switch Diagram 47

LARGE PULL-OUT ELECTRICAL DIAGRAMS & SCHEMATICS

ELECTRICAL PANEL DIAGRAMS:

FIGURE 3.5-1 ANSI/SIA and CSA (No Options) 49
FIGURE 3.5-2 CE (No Options) 50
FIGURE 3.5-3 ANSI/SIA and CSA (All Options) 51
FIGURE 3.5-4 CE (All Options) 52

ELECTRICAL SCHEMATICS:

FIGURE 3.5-5 ANSI/SIA & CSA (Outrigger Mechanical Limit Switches, Ford Gasoline Engine & No Options) 53
FIGURE 3.5-6 CE (Outrigger Mechanical Limit Switches, Kubota Diesel Engine & No Options) 54
FIGURE 3.5-7 ANSI/SIA & CSA (Outrigger Mechanical Limit Switches, Ford Dual Fuel Engine & All Options) 55
FIGURE 3.5-8 CE (Outrigger Mechanical Limit Switches, Kubota Diesel Engine & All Options) 56
FIGURE 3.5-9 ANSI/SIA & CSA (Outrigger Proximity Switches, Ford Gasoline Engine & No Options) 57
FIGURE 3.5-10 CE (Outrigger Proximity Switches, Kubota Diesel Engine and No Options) 58
FIGURE 3.5-11 ANSI/SIA & CSA (Outrigger Proximity Switches, Ford Dual Fuel Engine & All Options) 59
FIGURE 3.5-12 CE (Outrigger Proximity Switches, Kubota Diesel Engine & All Options) 60

MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

SECTION 3
SYSTEM COMPONENT IDENTIFICATION AND SCHEMATICS ADDENDUM

TABLE OF CONTENTS

ELECTRICAL SYSTEM

FIGURE 3A. IMPORTANT INFORMATION ..... Page C

FIGURE 3B. MODEL 9250(A) STANDARD/OPTIONAL
ALL FUNCTION ALARM REVISED SCHEMATIC (Machines with serial #50655 and above) ..... Page D

FIGURE 3C. MODEL 9250(A) STANDARD/OPTIONAL
ALL FUNCTION ALARM PANEL MODIFICATION (Machines with serial #50655 and above) ..... Page E

FIGURE 3D. MODEL 9250(A) REVISED SCHEMATIC
(ANSI Models Equipped with Lift/Drive Enable) (Machines with serial #50612 to #50771) ..... Page F

FIGURE 3E. MODEL 9250(A) REVISED SCHEMATIC
(CE Models Equipped with Lift/Drive Enable) (Machines with serial #50612 to #50771) ..... Page G

FIGURE 3F. MODEL 9250(A) REVISED SCHEMATIC
(All Models Equipped with a Drive Enable Joystick) (Machines with serial #50772 and above) ..... Page H

3

MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

Table 2-2A. Maximum Platform Capacities (Evenly Distributed)- ANSI/CSA

MODEL		Total		First Extension		Second Extension	
		Capacity	Number Of Occupants	Capacity	Number Of Occupants	Capacity	Number Of Occupants
7127	One Extension Platform	1500 lbs.	5	500 lbs.	2	Not Available	
7135	One extension Platform	1000 lbs.	4	350 lbs.	1	Not Available	
8243	One extension Platform	1000 lbs.	3	350 lbs.	1	Not Available	
8850	One extension Platform	800 lbs.	3	300 lbs.	1	Not Available	
8831	No extension Platform	2500 lbs.	6	Not Available			
	One Extension Platform	2000 lbs.	6	500 lbs.	2	Not Available	
	Two Extension Platforms	1700 lbs.	6	500 lbs.	2	500 lbs.	2
8841	No extension Platform	1700 lbs.	5	Not Available			
	One Extension Platform	1500 lbs.	5	500 lbs.	2	Not Available	
	Two Extension Platforms	1500 lbs.	5	500 lbs.	2	500 lbs. (227 kg)	2
9250	No extension Platform	2000 lbs.	5	Not Available			
	One Extension Platform	1500 lbs.	5	500 lbs.	2	Not Available	
	Two Extension Platforms	1500 lbs.	5	500 lbs.	2	500 lbs.	2

60376AA-ANSI

NOTE:


Occupants AND materials are not to exceed rated load.
Capacities listed are for standard machines equipped with #6 tires except for model 9250A which is equipped with foam filled tires.
Refer to capacity label at sides of platform for additional information and for models equipped with options.





MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

FIGURE 3.5-12. ELECTRICAL SCHEMATIC - CE (Shown With Outrigger Proximity Switches, Kubota Diesel Engine and All Options)

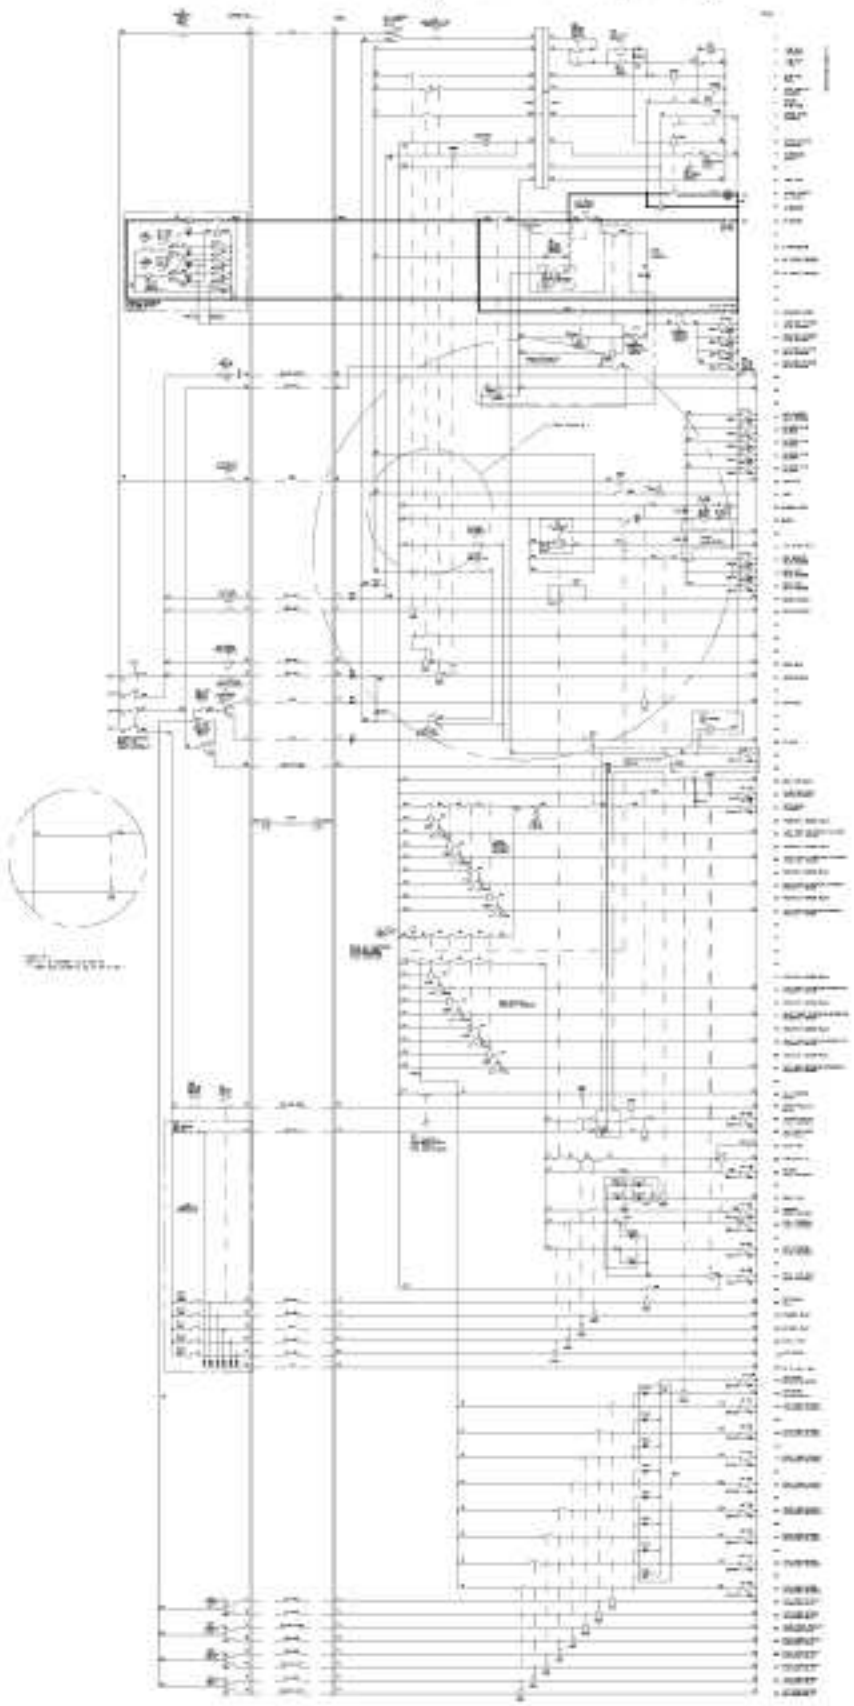

es-08ce-b

MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |...

Order the manual at mid-west-tech.com >

Figure 6-40B. Hydraulic Outrigger Option - Hydraulic Hose Connections
(For Machines With Serial # 5911 And Above)

Index No.	Skyjack Part No.	Qty.	Description
1	(Ref.)	4	CYLINDER ASSEMBLY, Outrigger (For components, refer to Figure 6-41B.)
2	(Ref.)	1	MANIFOLD ASSEMBLY, Outrigger (For components, refer to Figure 6-42B.)
3	116788	1	TUBE ASSEMBLY, Left rear extend
4	116789	1	TUBE ASSEMBLY, Left rear retract
5	116791	1	TUBE ASSEMBLY, Right rear extend
6	116790	1	TUBE ASSEMBLY, Right rear retract
7	116792	1	TUBE ASSEMBLY, Left front retract
8	116793	1	TUBE ASSEMBLY, Left front extend
9	116794	1	TUBE ASSEMBLY, Right front extend
10	116795	1	TUBE ASSEMBLY, Right front retract
11	130843	8	HOSE ASSEMBLY, Outrigger cylinder
12	102370	1	COVER, Outrigger manifold
13	104585	2	HOSE ASSEMBLY, Outrigger manifold to main manifold
14	102085	10	CLAMP, Double tube 3/8"
	109127	20	• INSERT, 3/8" tube
	103858	10	• BOLT, Hex-hd 1/4-20 x 1-1/4" lg.
	103995	10	• WASHER, Flat 1/4"





MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

LIST OF ILLUSTRATIONS

Description	Page No.
FIGURE 6-1. MAIN PLATFORM AND RAILINGS	4
FIGURE 6-2. POWERED EXTENSION PLATFORM	8
FIGURE 6-3. HYDRAULIC HOSE CONNECTIONS - Powered Extension Platform (Machines With One Extension Platform)	12
FIGURE 6-4. HYDRAULIC HOSE CONNECTIONS - Powered Extension Platform (Machines With Two Extension Platform)	13
FIGURE 6-5. POWERED EXTENSION PLATFORM CONTROL BOX ASSEMBLY	14
FIGURE 6-6A. POWERED EXTENSION PLATFORM CYLINDER ASSEMBLY (Machines With Serial Number 50382 and Below)	15
FIGURE 6-6B. POWERED EXTENSION PLATFORM CYLINDER ASSEMBLY (Machines With Serial Number 50383 and Above)	16
FIGURE 6-7A. POWERED EXTENSION PLATFORM ELECTRICAL PANEL (Machines With Serial Number 5876 and Below)	17
FIGURE 6-7B. POWERED EXTENSION PLATFORM ELECTRICAL PANEL (Machines With Serial Numbers From 5877 To 50489)	18
FIGURE 6-7C. POWERED EXTENSION PLATFORM ELECTRICAL PANEL (Machines With Serial Numbers 50490 and Above)	19
FIGURE 6-8A. CONTROL BOX ASSEMBLY (Machines With Serial Numbers 50771 and Below)	20
FIGURE 6-8B. CONTROL BOX ASSEMBLY (Machines With Serial Numbers 50772 and Above)	24
FIGURE 6-9A. DRIVE/STEER CONTROLLER ASSEMBLY (Machines With Serial Numbers 50771 and Below)	31
FIGURE 6-9B. DRIVE/STEER CONTROLLER ASSEMBLY (Machines With Serial Numbers 50772 and Above)	32
FIGURE 6-10. SCISSOR ARM ASSEMBLY	34
FIGURE 6-11A. HYDRAULIC HOSE CONNECTIONS - Scissors (Machines With Serial Number 5864 and Below)	38
FIGURE 6-11B. HYDRAULIC HOSE CONNECTIONS - Scissors (Machines With Serial Number 5865 and Above)	40
FIGURE 6-12A. LIFT CYLINDER ASSEMBLY (Machines With Serial Number 5864 and Below)	42
FIGURE 6-12B. LIFT CYLINDER ASSEMBLY (Machines With Serial Number 5865 and Above)	44
FIGURE 6-13. SCISSOR ARM ELECTRICAL CONNECTIONS	46
FIGURE 6-14A. HORN, LIGHT AND BEEPER ASSEMBLIES (Machines With Serial Number 51369 and Below)	48
FIGURE 6-14B. HORN, LIGHT AND BEEPER ASSEMBLIES (Machines With Serial Number 51370 and Above)	50
FIGURE 6-15. BASE, AXLES AND WHEELS	52
FIGURE 6-16A. HYDRAULIC HOSE CONNECTIONS - Base (Machines With Serial Number 50339 and Below)	56
FIGURE 6-16B. HYDRAULIC HOSE CONNECTIONS - Base (Machines With Serial Number 50340 and Above)	58
FIGURE 6-17. MOTION CONTROL VALVE SYSTEM	62
FIGURE 6-18. FRONT IDLE AXLE ASSEMBLY (2-Wheel Drive Machines)	66
FIGURE 6-19A. STEER CYLINDER ASSEMBLY (Machines with Serial #50382 and Below)	68
FIGURE 6-19B. STEER CYLINDER ASSEMBLY (Machines with Serial #50383 and Above)	69
FIGURE 6-20. FRONT DRIVE AXLE ASSEMBLY (4-Wheel Drive Machines)	70
FIGURE 6-21A. CENTER DRIVE AND DRIVE SHAFTS (Machines with Serial #50339 and Below)	74
FIGURE 6-21B. CENTER DRIVE AND DRIVE SHAFTS (Haessler Drive Serial #359 and Below)	76
FIGURE 6-21C. CENTER DRIVE AND DRIVE SHAFTS (Haessler)	78
FIGURE 6-21D. CENTER DRIVE AND DRIVE SHAFTS (Cushman)	80
FIGURE 6-22. REAR DRIVE AXLE ASSEMBLY	82
FIGURE 6-23A. BRAKE CYLINDER ASSEMBLY (Machines With Serial Number 50361 and Below)	84
FIGURE 6-23B. BRAKE CYLINDER ASSEMBLY (Machines With Serial Number 50362 and Above)	85
FIGURE 6-24. FUEL SIDE CABINET	86
FIGURE 6-25. FUEL TANK ASSEMBLY	88
FIGURE 6-26. HYDRAULIC/ELECTRIC SIDE CABINET	90





MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

Section 4
Troubleshooting Information

Table Of Contents

Introduction 3

Electrical System

4.1-1. All Controls Inoperative 4
4.1-2. No Power to Platform 4
4.1-3. All Functions Inoperative From Platform 4
4.1-4. Engine Will Not Crank From Platform 4
4.1-5. Engine Will Not Crank From Engine Controls 5
4.1-6. Platform Will Not Lower From Base Controls 5
4.1-7. Engine Starts But Will Not Keep Running 5
4.1-8. Choke Inoperative From Platform or Engine Controls 6
4.1-9. Choke Inoperative From Platform 6
4.1-10. Choke Inoperative From Engine Controls 6
4.1-11. High Throttle Inoperative 6
4.1-12. Drive And Steer Inoperative (Serial Number 5900 and Above) 7
4.1-13. Drive And Steer Inoperative (Serial Number 5899 and Below) 8
4.1-14. Brake Will Not Release 8
4.1-15. Steer Right Inoperative 9
4.1-16. Steer Left Inoperative 9
4.1-17. Drive Reverse Inoperative 10
4.1-18. Drive Forward Inoperative 10
4.1-19. First Drive Speed and Steering Inoperative 10
4.1-20. Second Drive Speed Inoperative 11
4.1-21. Third Drive Speed Inoperative 12
4.1-22. High/Low Range Speed Inoperative 12
4.1-23. All Outriggers Inoperative 13
4.1-24. Left Front Outrigger Inoperative 13
4.1-25. Right Front Outrigger Inoperative 14
4.1-26. Left Rear Outrigger Inoperative 14
4.1-27. Right Rear Outrigger Inoperative 15
4.1-28. Platform Will Not Lift With Outriggers Retracted or Extended 15
4.1-29. Platform Will Not Lift or Lower From Platform Controls Only 16
4.1-30. Platform Will Not Lift From Platform or Base Controls With Outriggers Retracted (Serial Number 5899 And Below) 16
4.1-31. Platform Will Not Lift From Platform or Base Controls With Outriggers Retracted (Serial Number 5900 And Above) 17
4.1-32. Platform Will Not Lift From Platform or Base Controls With Outriggers Extended (Serial Number 5899 And Below) 18
4.1-33. Platform Will Not Lift From Platform or Base Controls With Outriggers Extended (Serial Number 5900 And Above) 18
4.1-34. Platform Will Not Lower From Platform or Base Controls 19
4.1-35. Platform Will Not Lower From Platform Controls 19
4.1-36. Platform Will Not Lower From Base Controls 19
4.1-37. Powered Extension Deck Inoperative 19
4.1-38. Powered Extension Deck Will Not Extend 20
4.1-39. Hydraulic Generator Inoperative 20

MidWestTech | Skyjack SJ-9250 Rough Terrain Scissor Lift Maintenance & Parts Manual |... Order the manual at mid-west-tech.com >

Parts List

FIGURE 3.5-4. ELECTRICAL PANEL DIAGRAM - CE (Shown With All Options)

