SKYJACK™

OPERATING MAINTENANCE & PARTS MANUAL



SJIII SERIES

The CONVENTIONALS

Models 3220, 4620, 4626, 4830, 4832, and 6832

For Service in North America and Asia please call *800 275-9522*

SKYJACK Inc. Service Center 3451 Swenson Ave., St. Charles, IL 60174 ..... *FAX 630 262-0006*

For Parts in North America and Asia please call *800 965-4626*

SKYJACK Inc. Parts Center 990 Vernon Rd., Wathina, KS 66090 ..... *FAX 888 782-4825*

For Parts & Service in Canada please call *800 265-2738*

SKYJACK Inc. 55 Campbell Rd., Guelph, Ontario, Canada N1H 1B9 ..... *FAX 519 837-3883*

For Parts & Service in Europe please call *31 297 255 526*

SKYJACK Europe Communicatieweg 29, 3641 SG Mijdrecht Netherlands ..... *FAX 31 297 256 948*

117128AH

October 2025

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT - SECTION, PARAGRAPH — PAGE NO.

SECTION 1 *INTRODUCTION*

PURPOSE OF EQUIPMENT 1
USE OF EQUIPMENT 1
WARNINGS 1
DESCRIPTION 1
SAFETY PANEL AND WARNING LABELS 2
SPECIFICATIONS AND FEATURES 4
WORK PLATFORM MAJOR COMPONENT IDENTIFICATION 5

SECTION 2 *OPERATION*

OPERATOR QULIFICATIONS 1
OPERATING CONTROL IDENTIFICATION
- Base Controls-Electrical 1

SET-UP PROCEDURE 7
OPERATING PROCEDURES
- Prestart Checks 8
- Start and Operation 9
- Shutdown Procedure 9

BATTERY SERVICE AND CHARGING PROCEDURES 10

SECTION 3 *SYSTEMS COMPONENT IDENTIFICATION AND SCHEMATICS*

TABLE OF CONTENTS 1

SECTION 4 *TROUBLESHOOTING INFORMATION*

TROUBLESHOOTING INFORMATION 1

SECTION 5 *MAINTENANCE AND SERVICE*

OPERATORS RESPONSIBILITY FOR MAINTENANCE 1
MAINTENANCE AND INSPECTION SCHEDULE 1
OWNER'S ANNUAL INSPECTION RECORD 1
GENERAL MAINTENANCE HINTS 1
HYDRAULIC SYSTEM AND COMPONENT MAINTENANCE AND REPAIR 2a
RAILING MAINTENANCE AND REPAIR 2b
CONTROLLER TROUBLESHOOTING PROCEDURE 7
CONTROLLER ADJUSTMENT PROCEDURE 8
SYSTEM AND LIFT PRESSURE ADJUSTMENTS 10

SECTION 6 *PARTS LISTS*

LIST OF ILLUSTRATIONS 2

LIST OF TABLES

TABLE 1-1. SPECIFICATIONS AND FEATURES ..... Section 1, Page 4
TABLE 5-1. MAINTENANCE AND INSPECTION SCHEDULE ..... Section 5, Page 3
TABLE 5-2. OWNER'S ANNUAL INSPECTION RECORD ..... Section 5, Page 4
TABLE 5-3. MAXIMUM PLATFORM CAPACITIES ..... Section 5, Page 4
TABLE 5-4. TORQUE SPECIFICATIONS ..... Section 5, Page 5
TABLE 5-5. GENERAL SPECIFICATIONS ..... Section 5, Page 6

SECTION INDEX

1 2 3 4 5 6

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832... Order the manual at mid-west-tech.com >

SECTION 3
SYSTEM COMPONENT IDENTIFICATION AND SCHEMATICS

TABLE OF CONTENTS

ELECTRICAL SYSTEM

FIGURE 3-1. CONTROL BOX DIAGRAM AND PARTS LIST (ANSI/SIA and CSA)
Shown With Horn Option ..... Page 3
FIGURE 3-2. CONTROL BOX DIAGRAM AND PARTS LIST (ANSI/SIA and CSA)
Shown With All Options ..... Page 4
FIGURE 3-3. CONTROL BOX DIAGRAM AND PARTS LIST (CE)
Shown With Horn Option ..... Page 5
FIGURE 3-4. CONTROL BOX DIAGRAM AND PARTS LIST (CE)
Shown With All Options ..... Page 6
FIGURE 3-5. ELECTRICAL SYMBOL CHART ..... Page 7
FIGURE 3-7. RELAY FUNCTION CHART ..... Page 9
FIGURE 3-8. ELECTRICAL SCHEMATIC - All Models (ANSI/SIA and CSA)
Shown With Horn Option ..... Pages 11 & 12
FIGURE 3-9. ELECTRICAL SCHEMATIC - All Models (ANSI/SIA and CSA) &
Shown With All Options ..... Page 14
FIGURE 3-10. ELECTRICAL SCHEMATIC - Models 3220, 4620, 4626, 4830 & 4832 (CE)
Shown With All Options ..... Page 17
FIGURE 3-11. ELECTRICAL SCHEMATIC - Models 6826 & 6832 (CE)
Shown With All Options ..... Page 18
FIGURE 3-12. ELECTRICAL PANEL DIAGRAM - All Models (ANSI/SIA and CSA)
Shown With No Options ..... Pages 21 & 22
FIGURE 3-13. ELECTRICAL PANEL DIAGRAM - All Models (ANSI/SIA and CSA)
Shown With All Options Except EE-Rating ..... Pages 25 & 26
FIGURE 3-14. ELECTRICAL PANEL DIAGRAM - All Models (CE)
Shown With All Options Except EE-Rating ..... Pages 29 & 30
FIGURE 3-15. BATTERY CHARGER SCHEMATIC (Motor Appliance) ..... Page 33
FIGURE 3-16. BATTERY CHARGER SCHEMATIC (Bycan) ..... Page 35

HYDRAULIC SYSTEM

FIGURE 3-20. HYDRAULIC SYMBOL CHART ..... Page 37
FIGURE 3-21. HYDRAULIC SCHEMATIC (Models 3220 & 4620 ..... Page 39
FIGURE 3-22. HYDRAULIC SCHEMATIC (Model 4626) ..... Page 40
FIGURE 3-23. HYDRAULIC SCHEMATIC (Model 48XX) ..... Page 43
FIGURE 3-24. HYDRAULIC SCHEMATIC (Models 6826 & 6832) ..... Page 44
FIGURE 3-25. HYDRAULIC MANIFOLD COMPONENT IDENTIFICATION ..... Page 46

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832... Order the manual at mid-west-tech.com >

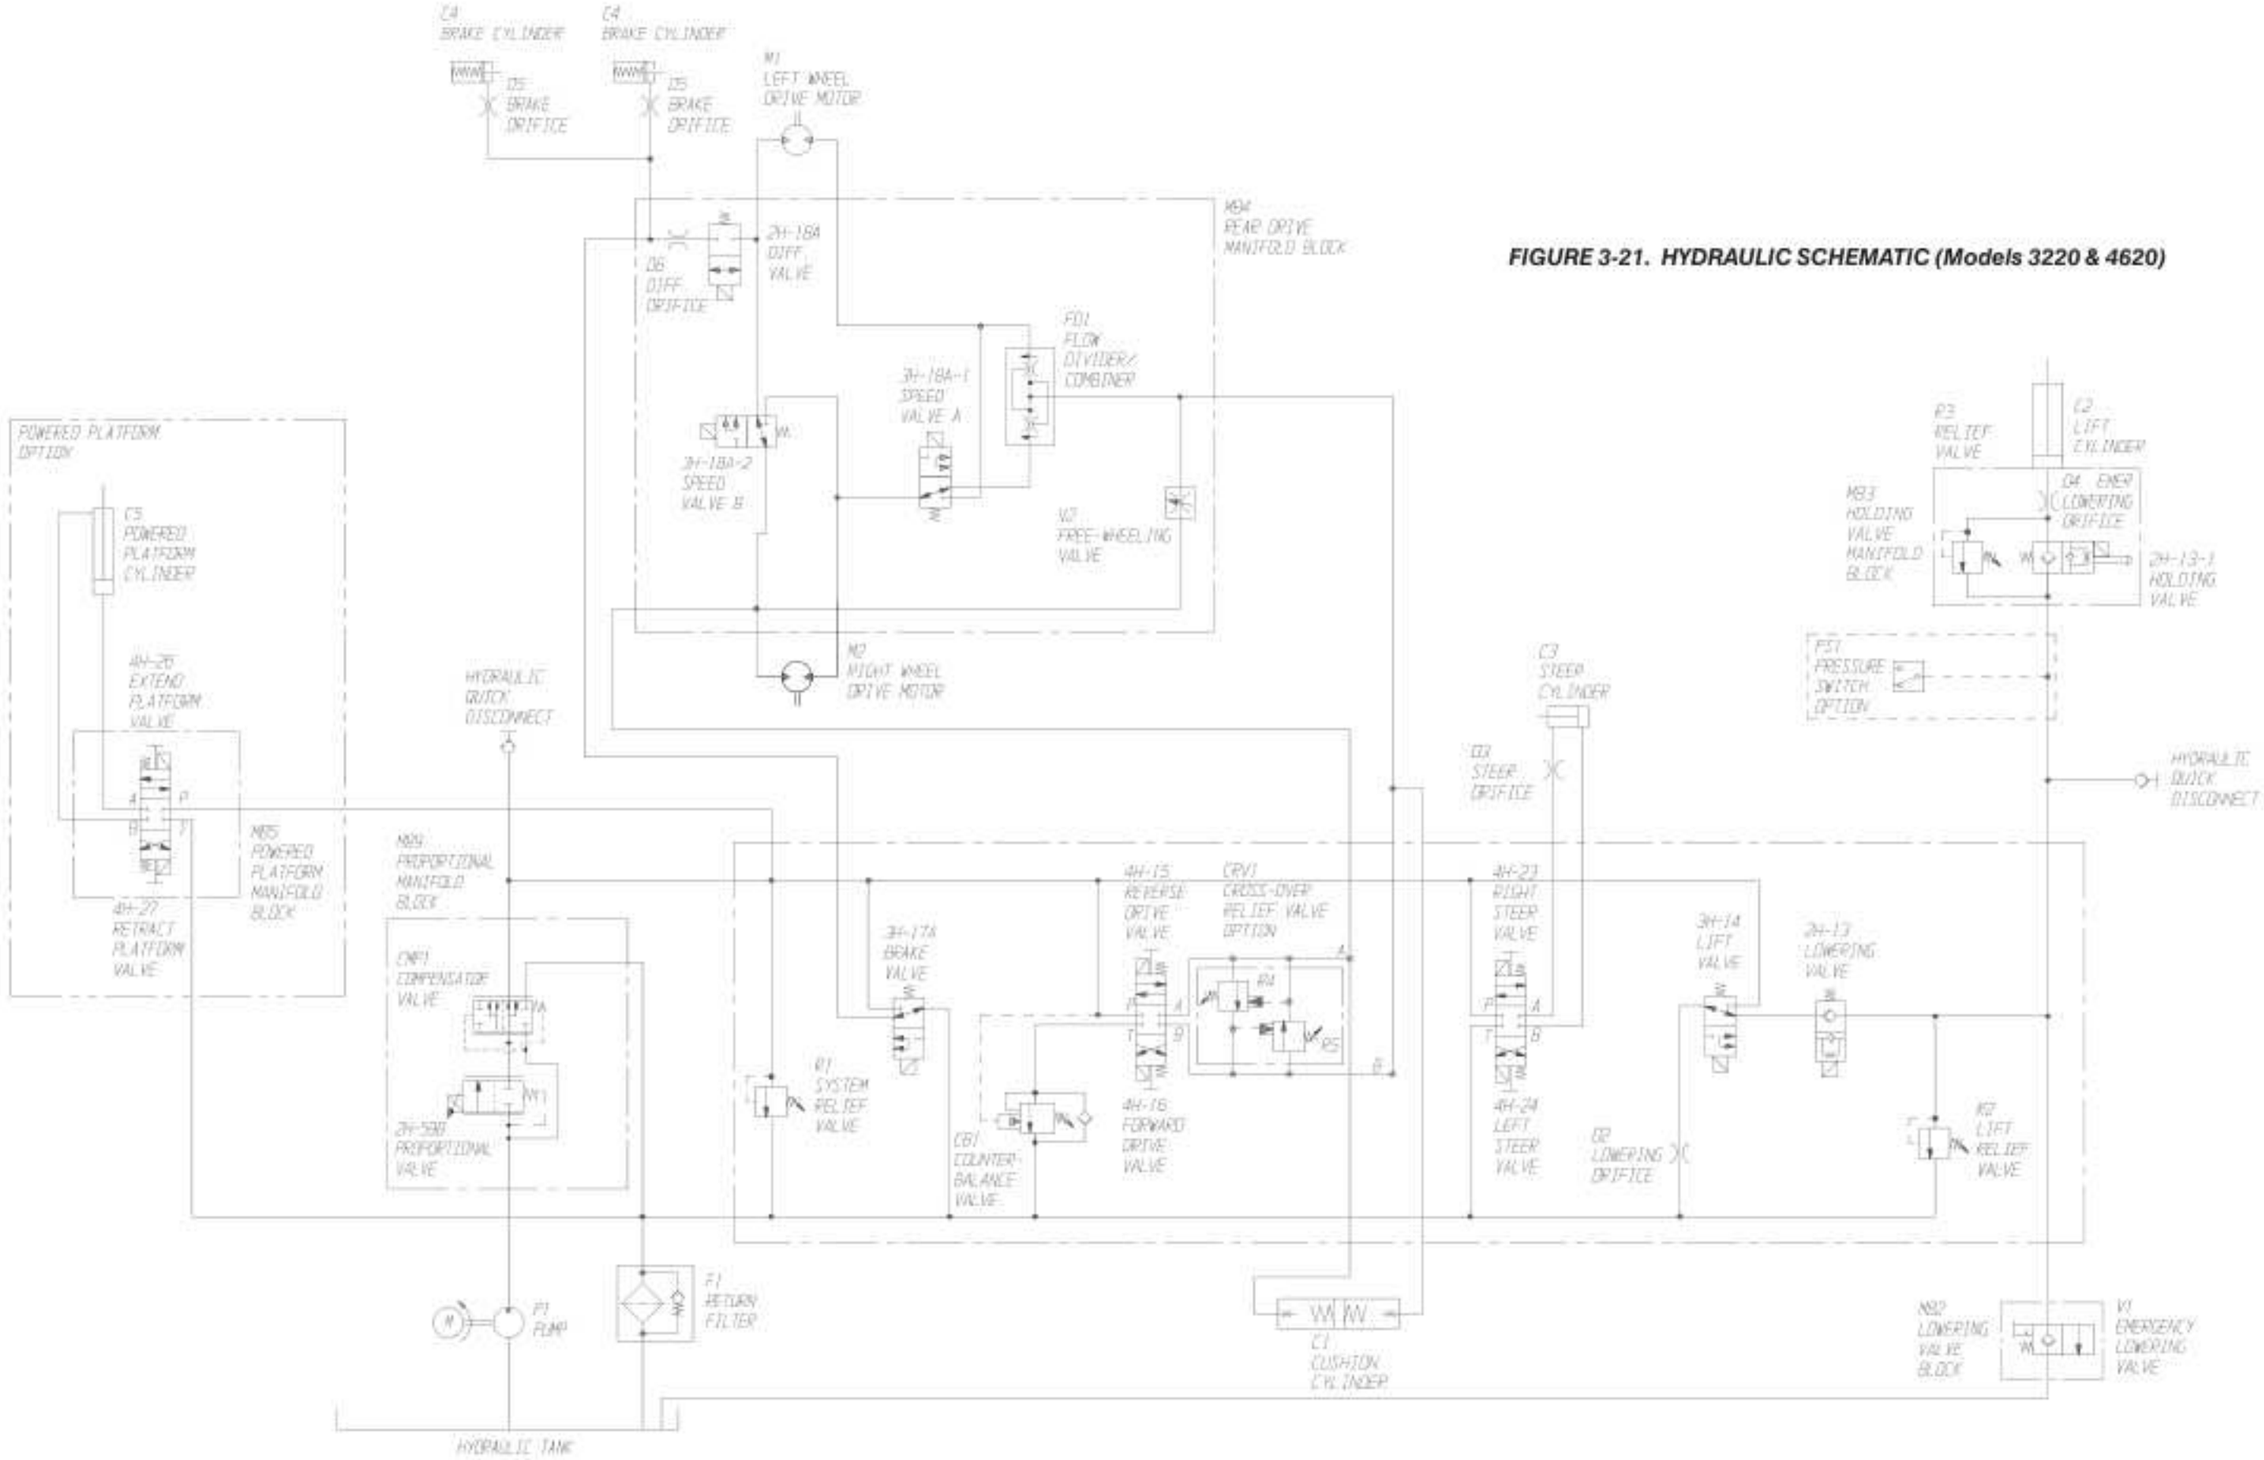


FIGURE 3-21. HYDRAULIC SCHEMATIC (Models 3220 & 4620)

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832 Electric Scissor Lift Operating, Maintenance & Parts Manual | Publication 117128AH

Order the manual at mid-west-tech.com >

TROUBLESHOOTING INFORMATION

TROUBLE	PROBABLE CAUSE	REMEDY
	ELECTRICAL SYSTEM	
REVERSE DRIVE FUNCTION INOPERATIVE	1. Loose or broken wire #15 from Lift/Drive Select Switch (S5) to Base Terminal Block (TB-1). 2. Loose or broken wire #15 from Base Terminal Block (TB-1) to Reverse Drive Valve Coil (4H-15). 3. Reverse Drive Valve Coil (4H-15) defective. 4. Loose or broken wire #02 from Reverse Drive Valve Coil (4H-15) to Base Terminal Block (TB-1). 5. Open Diode (D15).	1. Check continuity. Replace if defective. 2. Check continuity. Replace if defective. 3. Check continuity through coil. Replace if defective. 4. Check continuity. Replace if defective. 5. Check diode. Replace if defective.
BRAKE WILL NOT RELEASE	1. Loose or broken wire #17A from Transfer Relay (17CR). to Brake Valve Coil (3H-17A). 2. Brake Valve Coil (3H-17A) defective. 3. Loose or broken wire #02 from Brake Valve Coil (3H-17A) to Base Terminal Block (TB-1). 4. Open Diode (D17). 5. Transfer Relay (17CR) defective.	1. Check continuity. Replace if defective. 2. Check continuity through coil. Replace if defective. 3. Check continuity through coil. Replace if defective. 4. Check diode. Replace if defective. 5. Check relay. Replace if defective.
LIFT UP INOPERATIVE FROM BASE CONTROLS	1. Defective Up/Down Switch (S2). 2. Loose or broken wire #14E from Up/Down Switch (S2) to Diode (D14E-1). 3. Open Diode (D14E-1). 4. Loose or broken wire #14E from Up/Down Switch (S2) to Diode (D14E-2). 5. Open Diode (D14E-2).	1. Check switch. Replace if defective. 2. Check continuity. Replace if defective. 3. Check Diode. Replace if defective. 4. Check continuity. Replace if defective. 5. Check Diode. Replace if defective.
LIFT DOWN INOPERATIVE FROM BASE CONTROLS	1. Defective Up/Down Switch (S2). 2. Loose or broken wire #13 from Up/Down Switch (S2) to Base Terminal Block (TB-1).	1. Check switch. Replace if defective. 2. Check continuity. Replace if defective.
TWO OR MORE FUNCTIONS AT ONE TIME	1. Shorted Diode.	1. Check continuity of all Diodes. Replace if defective.
POWERED PLATFORM EXTENSION WILL NOT EXTEND OR RETRACT	1. Lift/Drive Select Switch (S5) not in lift position. 2. Loose or broken wire #09 from Platform Terminal Block TB-2 to Powered Platform Enable Switch (S12). 3. Powered Platform Enable Switch (S12) defective. 4. Loose or broken wire #09A from Powered Platform Enable Switch (S12) to Platform Extend/Retract Switch (S11). 5. Loose or broken wire #21B from Platform Terminal Block TB-2 to Base Terminal Block (TB-1). 6. Open Diode (D21B-1). 7. Open Diode (D21B-2). 8. Loose or broken wire #02 from Extend/Valve Coil (4H-26) to Retract Valve Coil (4H-27) to Platform Terminal Block (TB-2).	1. Move switch to lift position. 2. Check continuity. Replace if defective. 3. Check switch. Replace if defective. 4. Check continuity. Replace if defective. 5. Check continuity. Replace if defective. 6. Check diode. Replace if defective. 7. Check diode. Replace if defective. 8. Check continuity. Replace if defective.

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832... Order the manual at mid-west-tech.com >

FIGURE 6-52. LABELS AND NAMEPLATES - CE

Index No.	Skyjack Part No.	Description	Units per Assy.
A	119141	KIT, Label service (All models)	-
1	106760	• LABEL, Keep	2
2	102894	• LABEL, Caution lift	2
3	106761	• LABEL, Clear	2
4	119835	• LABEL, SKYJACK logo	2
5	109985	• LABEL, Annual inspection	1
6	103706	• LABEL, Vertical logo	2
7	117023	• LABEL, CE symbol	2
8	108946	• LABEL, SKYJACK logo	2
9	109441	• LABEL, Emergency lowering (Models 3220 & 4620)	1
	109442	• LABEL, Emergency lowering (Models 4626, 4830, 4832, 6826 & 6832)	1
10	117387	• LABEL, Push to reset power	1
11	117389	• LABEL, Push to reset ground	1
12	108666	• LABEL, Warning replacement parts	1
13	108328	• LABEL, Up/off/down (on base control box)	1
14	110334	• LABEL, Battery charger connection in tray	1
15	118277	• LABEL, Danger/warning	1
16	117294	• LABEL, Manual enclosed	1
17	106691	• LABEL, Operator's checklist	1
18	106705	• LABEL, Do not alter	1
19	106515	• LABEL, Caution, brake	1
20	108665	• LABEL, On slab	1
21	700025	• LABEL, Vertical logo	1
22	106703	• LABEL, Orifice decal (4 in Kit)	AR
23	106406	• LABEL, Safety bar	1
24	102896	• LABEL, Forklift boot	2
25	119674	• LABEL, Battery disconnect switch location	1
26	105983	• LABEL, Power off/on (disconnect switch)	1
27	103297	• LABEL, Free-wheeling valve	1
28	114378	• LABEL, Hydraulic system	1
29	118212	• LABEL, Base/off/platform (on control box)	1
30	111814	• LABEL, Emergency stop (on control box) (on base control box)	2
31	115327	• LABEL, Controller, lift/drive (on control box)	1
32	114372	• LABEL, Torque switch (on control box)	1
33	116577	• LABEL, High/normal torque (on control box)	1
34	106704	• LABEL, Operator warning (on control box)	1
35	102599	• LABEL, Lift/off/drive switch (on control box)	1
36	115326	• LABEL, Controller, to operate (on control box)	1
*37	118171	LABEL, Model designation, SJIII 3220	2
	118173	LABEL, Model designation, SJIII 4620	2
	118174	LABEL, Model designation, SJIII 4626	2
	118175	LABEL, Model designation, SJIII 4830	2
	121497	LABEL, Model designation, SJIII 4832	2
	118176	LABEL, Model designation, SJIII 6826	2
	118177	LABEL, Model designation, SJIII 6832	2
		NOTE: Parts list continued on following page.	

FIGURE 6-52. LABELS AND NAMEPLATES - CE

Index No.	Skyjack Part No.	Description	Units per Assy.
		NOTE: Parts list continued from preceding page.	
*38	108667	LABEL, Platform capacities, Model 3220 w/manual extension platform	2
	108672	LABEL, Platform capacities, Model 3220 w/powered extension platform	2
	108668	LABEL, Platform capacities, Model 4620 w/manual extension platform	2
	108671	LABEL, Platform capacities, Model 4620 w/powered extension platform	2
	108669	LABEL, Platform capacities, Model 4626 w/manual extension platform	2
	108673	LABEL, Platform capacities, Model 4626 w/powered extension platform	2
	108672	LABEL, Platform capacities, Model 4830 w/manual extension platform	2
	121499	LABEL, Platform capacities, Model 4832 w/manual extension platform	2
	108670	LABEL, Platform capacities, Model 6826 w/manual extension platform	2
	108671	LABEL, Platform capacities, Model 6826 w/powered extension platform	2
	108671	LABEL, Platform capacities, Model 6832	2
*39	120250	NAMEPLATE, Serial number, Model 3220	1
	119809	NAMEPLATE, Serial number, Model 4620	1
	120251	NAMEPLATE, Serial number, Model 4626	1
	119807	NAMEPLATE, Serial number, Model 4830	1
	121498	NAMEPLATE, Serial number, Model 4832	1
	119808	NAMEPLATE, Serial number, Model 6826	1
	119806	NAMEPLATE, Serial number, Model 6832	1
*40	117348	PLATE, Safety label	1
*41	117355	PLATE, Manual enclosure mounting	1
*42	117293	ENCLOSURE, Manual	1
*43	103125	STRIPE, White/blue	AR
*44	103110	STRIPE, Red/blue/red	AR
*45	119803	TAPE, Caution 1"	AR
*46	115531	LABEL, Warning, falling hazard (hinged railings)	AR
*47	106693	LABEL, Danger, foam filled tires	1
*48	105352	LABEL, Horn (with horn option)	1
*49	115594	LABEL, Enable (with powered extension platform option)	1
*50	108328	LABEL, Platform extend/retract (with powered extension platform option)	1
*51	120245	LABEL, Side force/incline, Model 3220	1
	119621	LABEL, Side force/wind, Model 4620	1
	120246	LABEL, Side force/wind, Model 4626	1
	119828	LABEL, Side force/wind, Model 4830 and 4832	1
	119618	LABEL, Side force/wind, Models 6826 and 6832	1
*52	112834	LABEL, For indoor use only (Model 3220 and 4832)	2
*53	116038	LABEL, Attention, power deck (with powered extension platform option)	1
*54	106705	LABEL, Warning, do not alter (with powered extension platform option)	1
*55	102975	TAPE, Caution 2"	AR
*56	119866	LABEL, Danger, pinch hand/foot (Models 3220, 4620, 4626, 4830 & 4832)	4
		* Not included in Label Kit.	
		NOTE: Supply Model Number, Serial Number and (2) two letter language code on labels when ordering complete machine labels.	

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832 Electric Scissor Lift Operating, Maintenance & Parts Manual | Publication 117128AH

Order the manual at mid-west-tech.com >

LIST OF ILLUSTRATIONS

Description	Page
FIGURE 6-1. GATE OPTIONS	4
FIGURE 6-2. MAIN PLATFORM AND RAILINGS - Model 3220	6
FIGURE 6-3. MAIN PLATFORM AND RAILINGS - Model 4620 With Rigid Railings	8
FIGURE 6-4. MAIN PLATFORM AND RAILINGS - Model 4620 With Hinged Railings	10
FIGURE 6-5. MAIN PLATFORM AND RAILINGS - Model 4626 With Hinged Railings	12
FIGURE 6-6. MAIN PLATFORM AND RAILINGS - Model 4830 & 4832 With Hinged Railings	14
FIGURE 6-7. MAIN PLATFORM AND RAILINGS - Model 6826 With Hinged Railings	16
FIGURE 6-8. MAIN PLATFORM AND RAILINGS - Model 6832 With Hinged Railings	18
FIGURE 6-9. AC OUTLET ON PLATFORM OPTION	20
FIGURE 6-10. 3 FT. MANUAL EXTENSION PLATFORM - Models 3220, 4620, 4626, 4830 and 4832	22
FIGURE 6-11. 3 FT. MANUAL EXTENSION PLATFORM - Models 6826 and 6832	24
FIGURE 6-12. POWERED EXTENSION PLATFORM ASSEMBLY	26, 28
FIGURE 6-13. HYDRAULIC HOSE CONNECTIONS - Powered Extension Platform	30
FIGURE 6-14. POWERED EXTENSION PLATFORM CYLINDER ASSEMBLY	32
FIGURE 6-15. POWERED EXTENSION PLATFORM CONTROL BOX ASSEMBLY	33
FIGURE 6-16. OPERATOR'S CONTROL BOX ASSEMBLY	34,36
FIGURE 6-17. PROPORTIONAL CONTROL ASSEMBLY	38
FIGURE 6-18. HOSE CONNECTIONS - SCISSORS (Models 3220 and 4620)	39
FIGURE 6-19. HOSE CONNECTIONS - SCISSORS (Models 4626 and 6826)	40
FIGURE 6-20. HOSE CONNECTIONS - SCISSORS (Model 4830 and 4832)	41
FIGURE 6-21. HOSE CONNECTIONS - SCISSORS (Model 6832)	42
FIGURE 6-22. SCISSOR ARM ASSEMBLY - 20 Ft.	44
FIGURE 6-23. SCISSOR ARM ASSEMBLY - 26 Ft.	46
FIGURE 6-24. SCISSOR ARM ASSEMBLY - 30 Ft.	48
FIGURE 6-25. SCISSOR ARM ASSEMBLY - 32 Ft.	50
FIGURE 6-26. LIFT CYLINDER ASSEMBLY	52
FIGURE 6-27. BASE, AXLES AND WHEELS - Models 3220, 4620, 4626, 4830 and 4832	54, 56, 58
FIGURE 6-28. BASE, AXLES AND WHEELS - Models 6826 and 6832	60, 62
FIGURE 6-29. POT HOLE PROTECTION DEVICE	64
FIGURE 6-30. HYDRAULIC HOSE CONNECTIONS - Base (Models 3220, 4620, 4626, 4830 and 4832)	66
FIGURE 6-31. HYDRAULIC HOSE CONNECTIONS - Base (Models 6826 and 6832)	68
FIGURE 6-32. BRAKE CYLINDER ASSEMBLY	70
FIGURE 6-33. STEER CYLINDER ASSEMBLY	71
FIGURE 6-34. REAR DRIVE MANIFOLD ASSEMBLY - Models 3220, 4620, 4626, 4830 and 4832	72
FIGURE 6-35. REAR DRIVE MANIFOLD ASSEMBLY - Models 6826 and 6832	73

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832... Order the manual at mid-west-tech.com >

DANGER

TIP-OVER HAZARDS



DO NOT DRIVE NEAR DROP-OFFS, HOLES, OPEN ELEVATOR SHAFTS, AND LOADING DOCKS.



DO NOT RAISE PLATFORM ON UNEVEN OR SOFT SURFACES.
DO NOT DRIVE ONTO UNEVEN OR SOFT SURFACES WHEN ELEVATED.



DO NOT RAISE PLATFORM ON SLOPE OR DRIVE ONTO SLOPE WHEN ELEVATED.



DO NOT RAISE PLATFORM IN WINDY OR GUSTY CONDITIONS.

ELECTROCUTION HAZARD

THIS MACHINE IS NOT INSULATED. MAINTAIN SAFE CLEARANCES FROM ELECTRICAL POWER LINES AND APPARATUS.
YOU MUST ALLOW FOR PLATFORM SWAY, ROCK, OR SAG.
THIS PLATFORM DOES NOT PROVIDE PROTECTION FROM CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.

VOLTAGE RANGE	MINIMUM SAFE APPROACH DISTANCE	
PHASE TO PHASE	FEET	(METERS)
(0 TO 300V)	AVOID CONTACT	
OVER 300V TO 50KV	10	3.05
OVER 50KV TO 200KV	15	4.60
OVER 200KV TO 350KV	20	6.10
OVER 350KV TO 500KV	25	7.62
OVER 500KV TO 750KV	35	10.67
OVER 750KV TO 1000KV	45	13.72

FAILURE TO AVOID THESE HAZARDS WILL RESULT IN DEATH OR SERIOUS INJURY!

SKYJACK

WARNING

OTHER HAZARDS

1. DO NOT OVERLOAD.
2. DO NOT USE WITHOUT RAILINGS, LOCK PINS, AND ENTRY GATE/CHAIN/BAR IN PLACE.
3. DO NOT USE WITHOUT LOCK PINS INSTALLED ON HINGED RAILINGS.
4. DO NOT USE IF WORK PLATFORM IS NOT WORKING PROPERLY OR IF ANY PART IS DAMAGED OR WORN.
5. DO NOT STAND OR SIT ON GUARDRAILS.
6. DO NOT ATTACH ROPES OR CHAINS TO GUARDRAILS OR USE AS A CRANE.
7. DO NOT USE UNDER INFLUENCE OF ALCOHOL OR DRUGS.
8. DO NOT OVERRIDE SAFETY DEVICES.
9. DO NOT LEAVE MACHINE UNATTENDED WITH KEY IN SWITCH.
10. DO NOT RAISE PLATFORM WHILE MACHINE IS ON A TRUCK, FORK LIFT, OR OTHER DEVICE OR VEHICLE.
11. DO NOT USE LADDER, SCAFFOLDING, OR OTHER DEVICES TO INCREASE THE WORKING HEIGHT OF PLATFORM.
12. DO NOT USE WITH IMPROPERLY INFLATED/DAMAGED TIRES OR WHEELS.
13. DO NOT USE WHEELS OR TIRES THAT ARE NOT ORIGINAL MANUFACTURER'S EQUIPMENT.

FAILURE TO AVOID THESE HAZARDS COULD RESULT IN DEATH OR SERIOUS INJURY!

SKYJACK

Figure 1-1. Safety Panel Labels
(Located at the front center of the platform on the railing)

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832... Order the manual at mid-west-tech.com >

FIGURE 6-51. LABELS AND NAMEPLATES - ANSI/SIA and CSA

Index No.	Skyjack Part No.	Description	Units per Assy.
A	119140	KIT, Label service (All models)	-
1	106760	• LABEL, Keep	2
2	102894	• LABEL, Caution lift	2
3	106761	• LABEL, Clear	2
4	119835	• LABEL, SKYJACK logo	2
5	109985	• LABEL, Annual inspection	1
6	103706	• LABEL, Vertical logo	2
7	108442	• LABEL, Push to "DOWN"	1
8	108946	• LABEL, SKYJACK logo	2
9	109441	• LABEL, Emergency lowering (Models 3220 & 4620)	1
	109442	• LABEL, Emergency lowering (Models 4626, 4830, 4832, 6826 & 6832)	1
10	117387	• LABEL, Push to reset power	1
11	117389	• LABEL, Push to reset ground	1
12	108666	• LABEL, Warning replacement parts	1
13	103805	• LABEL, Up/down (on electrical panel)	1
14	110334	• LABEL, Battery charger connection in tray	1
15	118277	• LABEL, Danger/warning	1
16	117294	• LABEL, Manual enclosed	1
17	106691	• LABEL, Operator's checklist	1
18	106705	• LABEL, Do not alter	1
19	106515	• LABEL, Caution, brake	1
20	108665	• LABEL, On slab	1
21	700025	• LABEL, Vertical logo	1
22	106703	• LABEL, Orifice decal (4 in Kit)	AR
23	106406	• LABEL, Safety bar	1
24	102896	• LABEL, Forklift boot	2
25	119674	• LABEL, Battery disconnect switch location	1
26	105983	• LABEL, Power off/on (disconnect switch)	1
27	103297	• LABEL, Free-wheeling valve	1
28	114378	• LABEL, Hydraulic system	1
29	105983	• LABEL, Power off/on (on control box)	1
30	111814	• LABEL, Emergency stop (on control box)	1
31	115327	• LABEL, Controller, lift/drive (on control box)	1
32	114372	• LABEL, Torque switch (on control box)	1
33	116577	• LABEL, High/normal torque (on control box)	1
34	106704	• LABEL, Operator warning (on control box)	1
35	102599	• LABEL, Lift/off/drive switch (on control box)	1
36	115326	• LABEL, Controller, to operate (on control box)	1
*37	118171	LABEL, Model designation, SJIII 3220	2
	118173	LABEL, Model designation, SJIII 4620	2
	118174	LABEL, Model designation, SJIII 4626	2
	118175	LABEL, Model designation, SJIII 4830	2
	121497	LABEL, Model designation, SJIII 4832	2
	118176	LABEL, Model designation, SJIII 6826	2
	118177	LABEL, Model designation, SJIII 6832	2
		NOTE: Parts list continued on following page.	

FIGURE 6-51. LABELS AND NAMEPLATES - ANSI/SIA and CSA

Index No.	Skyjack Part No.	Description	Units per Assy.
		NOTE: Parts list continued from preceding page.	
*38	108667	LABEL, Platform capacities, Model 3220 w/manual extension platform	2
	108672	LABEL, Platform capacities, Model 3220 w/powered extension platform	2
	108668	LABEL, Platform capacities, Model 4620 w/manual extension platform	2
	108671	LABEL, Platform capacities, Model 4620 w/powered extension platform	2
	108669	LABEL, Platform capacities, Model 4626 w/manual extension platform	2
	108673	LABEL, Platform capacities, Model 4626 w/powered extension platform	2
	108672	LABEL, Platform capacities, Model 4830 w/manual extension platform	2
	121499	LABEL, Platform capacities, Model 4832 w/manual extension platform	2
	108670	LABEL, Platform capacities, Model 6826 w/manual extension platform	2
	108671	LABEL, Platform capacities, Model 6826 w/powered extension platform	2
	108671	LABEL, Platform capacities, Model 6832	2
*39	120250	NAMEPLATE, Serial number, Model 3220	1
	119809	NAMEPLATE, Serial number, Model 4620	1
	120251	NAMEPLATE, Serial number, Model 4626	1
	119807	NAMEPLATE, Serial number, Model 4830	1
	121498	NAMEPLATE, Serial number, Model 4832	1
	119808	NAMEPLATE, Serial number, Model 6826	1
	119806	NAMEPLATE, Serial number, Model 6832	1
*40	117348	PLATE, Safety label	1
*41	117355	PLATE, Manual enclosure mounting	1
*42	117293	ENCLOSURE, Manual	1
*43	103125	STRIPE, White/blue	AR
*44	103110	STRIPE, Red/blue/red	AR
*45	119803	TAPE, Caution 1"	AR
*46	115531	LABEL, Warning, falling hazard (hinged railings)	AR
*47	106693	LABEL, Danger, foam filled tires (Models 6826 & 6832)	1
*48	105352	LABEL, Horn (with horn option)	1
*49	115594	LABEL, Enable (with powered extension platform option)	1
*50	108328	LABEL, Platform extend/retract (with powered extension platform option)	1
*51	115719	LABEL, Connect charger here (EE-rated machines)	1
*52	104589	LABEL, "EE" symbol (EE-rated machines)	2
*53	104588	LABEL, FM approved (EE-rated machines)	2
*54	110333	LABEL, Connect AC supply here	1
*55	102975	TAPE, Caution 2"	AR
*56	119866	LABEL, Danger, pinch hand/foot (Models 3220, 4620, 4626 & 4830)	4
*57	116038	LABEL, Attention, power deck (with powered extension platform option)	1
*58	106705	LABEL, Warning, do not alter (with powered extension platform option)	1
*59	121047	LABEL, Warning, do not disconnect (EE-rated Machines)	1

* Not included in Label Kit.
NOTE: Supply Model Number, Serial Number and (2) two letter language code on labels when ordering complete machine labels.

MidWestTech | Skyjack SJIII 3220, SJIII 4620, SJIII 4626, SJIII 4830, SJIII 4832, SJIII 6832 Electric Scissor Lift Operating, Maintenance & Parts Manual | Publication 117128AH

Order the manual at mid-west-tech.com >