Genie®
A TEREX COMPANY

Service Manual

AL5HT

Part No. 1265482
Rev A
May 2015

Order the manual at mid-west-tech.com >

Table of Contents

Introduction	**Introduction**	**ii**
	Important Information	ii
	Serial Number Legend	**3**
	Serial Number Legend	3
Section 1	**Safety Rules**	**iv**
	General Safety Rules	iv
Section 2	**Specifications**	**1**
	Machine Specifications	1
	Performance Specifications	1
	Generator Options	1
	Kubota D1105-E Engine Specifications	2
	Kubota D1505-E Engine Specifications	3
	Isuzu 4LE1 Engine Specifications	4
	Isuzu 4LE2 Engine Specifications	5
	Isuzu 4LE2-T Engine Specifications	6
	Machine Torque Specifications	7
	SAE and Metric Fasteners Torque Charts	8

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482 Order the manual at mid-west-tech.com >

Table of Contents

Section 3 **Scheduled Maintenance Procedures** **9**

Introduction 9

Pre-Delivery Preparation Report 12

Maintenance Inspection Report 13

Checklist A Procedures **15**

A-1 Inspect the Manuals and Decals 15

A-2 Perform Pre-operation Inspection 16

A-3 Perform Function Tests 16

A-4 Perform Engine Maintenance 17

A-5 Perform Generator Maintenance 17

A-6 Perform Axle Maintenance 18

A-7 Torque the Wheel Lug Nuts 18

A-8 Perform Engine Maintenance 19

A-9 Perform Coupler Maintenance 19

A-10 Grease turntable bearing and rotate gear 20

A-11 Perform Engine Maintenance 20

A-12 Perform Engine Maintenance 21

Checklist B Procedures **22**

B-1 Inspect the Engine Start Battery 22

B-2 Inspect the Electrical Wiring 23

B-3 Torque the Wheel Lug Nuts 24

B-4 Perform Hydraulic Oil Analysis 24

B-5 Perform Engine Maintenance 25

B-6 Perform Engine Maintenance 25

B-7 Perform Generator Maintenance 26

B-8 Perform Coupler Maintenance 26

B-9 Perform Engine Maintenance 27

B-10 Perform Axle Maintenance 27

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482 Order the manual at mid-west-tech.com >

Table of Contents

Checklist C Procedures **28**
C-1 Inspect the Tower Extend/Retract Cables and Pulleys 28
C-2 Perform Engine Maintenance 29
C-3 Perform Axle Maintenance 29
C-4 Perform Engine Maintenance 30
C-5 Perform Engine Maintenance 30

Checklist D Procedures **31**
D-1 Perform Engine Maintenance 31
D-2 Check the Tower Rotation Bearing Bolts 31
D-3 Replace the Hydraulic Return Filter 32
D-4 Perform Engine Maintenance 33
D-5 Perform Engine Maintenance 33
D-6 Perform Engine Maintenance 34
D-7 Perform Generator Maintenance 34
D-8 Perform Tongue Jack and Outrigger Jack Maintenance 35
D-9 Perform Axle Maintenance 35

Checklist E Procedures **36**
E-1 Perform Hydraulic Oil Analysis 36
E-2 Perform Engine Maintenance 37
E-3 Perform Engine Maintenance 38
E-4 Perform Generator Maintenance 38
E-5 Perform Generator Maintenance 39

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482 Order the manual at mid-west-tech.com >

Specifications

Machine Specifications

Total lighting wattage	
4 lights	4000 watts
8 lights	8000 watts
Axle load capacity, maximum	4200 lbs 1905 kg
Fluid capacities	
Hydraulic tank capacity	1.4 gallons 5.3 liters
Hydraulic system capacity (including tank)	2 gallons 7.6 liters
Fuel capacities	
Single tank	30 gallons 114 liters
Large tank (option)	60 gallons 227 liters
Tires and wheels (U.S. models)	
Tire size	ST205/75D15
Load range	C
Lug nut torque, dry	90 ft-lbs 122 Nm
Lug nut torque, lubricated	67.5 ft-lbs 91.5 Nm
Tires and wheels (Australia models)	
Tire size	7.5R16 C 112/110L
Lug nut torque, dry	80 ft-lbs 108 Nm
Lug nut torque, lubricated	75 psi 5.2 bar

Performance Specifications

Tongue weight, maximum	
With fuel (single tank)	150 lbs 68 kg
With fuel (large tank)	130 lbs 59 kg
Run time	
Single tank	50 hours
Large tank	100 hours

Generator Options

Marathon 8 kW 201CSA5412	
Generator rpm @ full load	60Hz, 1800 rpm
Temperature, ambient maximum	104° F 40° C
Power	8 kW
Marathon 8 kW 201CSA5420	
Generator rpm @ full load	60 Hz, 1800 rpm
Temperature, ambient maximum	104° F 40° C
Power	8 kW
Marathon 12 kW 281CSL1513	
Generator rpm @ full load	60 Hz, 1800 rpm
Temperature, ambient maximum	104° F 40° C
Power	12 kW
Marathon 20 kW 334CSA3028	
Generator rpm @ full load	60 Hz, 1800 rpm
Temperature, ambient maximum	104° F 40° C
Power	20 kW

For operational specifications, refer to the Operator's Manual.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice or obligation.

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482 Order the manual at mid-west-tech.com >

Diagnostics



Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.
- ☑ Unless otherwise specified, perform each procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Mast in the stowed position
  - Key switch in the off position with the key removed
  - The red Emergency Stop button in the off position on the electrical control box
  - Wheels chocked
  - Light switches in the off position
  - All external AC power supply disconnected from the machine

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.
- ☑ Read each appropriate fault code thoroughly. Attempting short cuts may produce hazardous conditions.
- ☑ Be aware of the following hazards and follow generally accepted safe workshop practices.


⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.


⚠DANGER High voltage. Exposure to electrical wires or electrical current will result in death or serious injury. Turn off all power when not needed for testing. Use extreme caution when working with high voltage electrical components.

⚠CAUTION Burn hazard. Beware of hot engine components. Contact with hot engine components may cause severe burns. Use caution when working around lamps or a hot engine.

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482 Order the manual at mid-west-tech.com >


Trailer Wiring Diagram - AUS Models

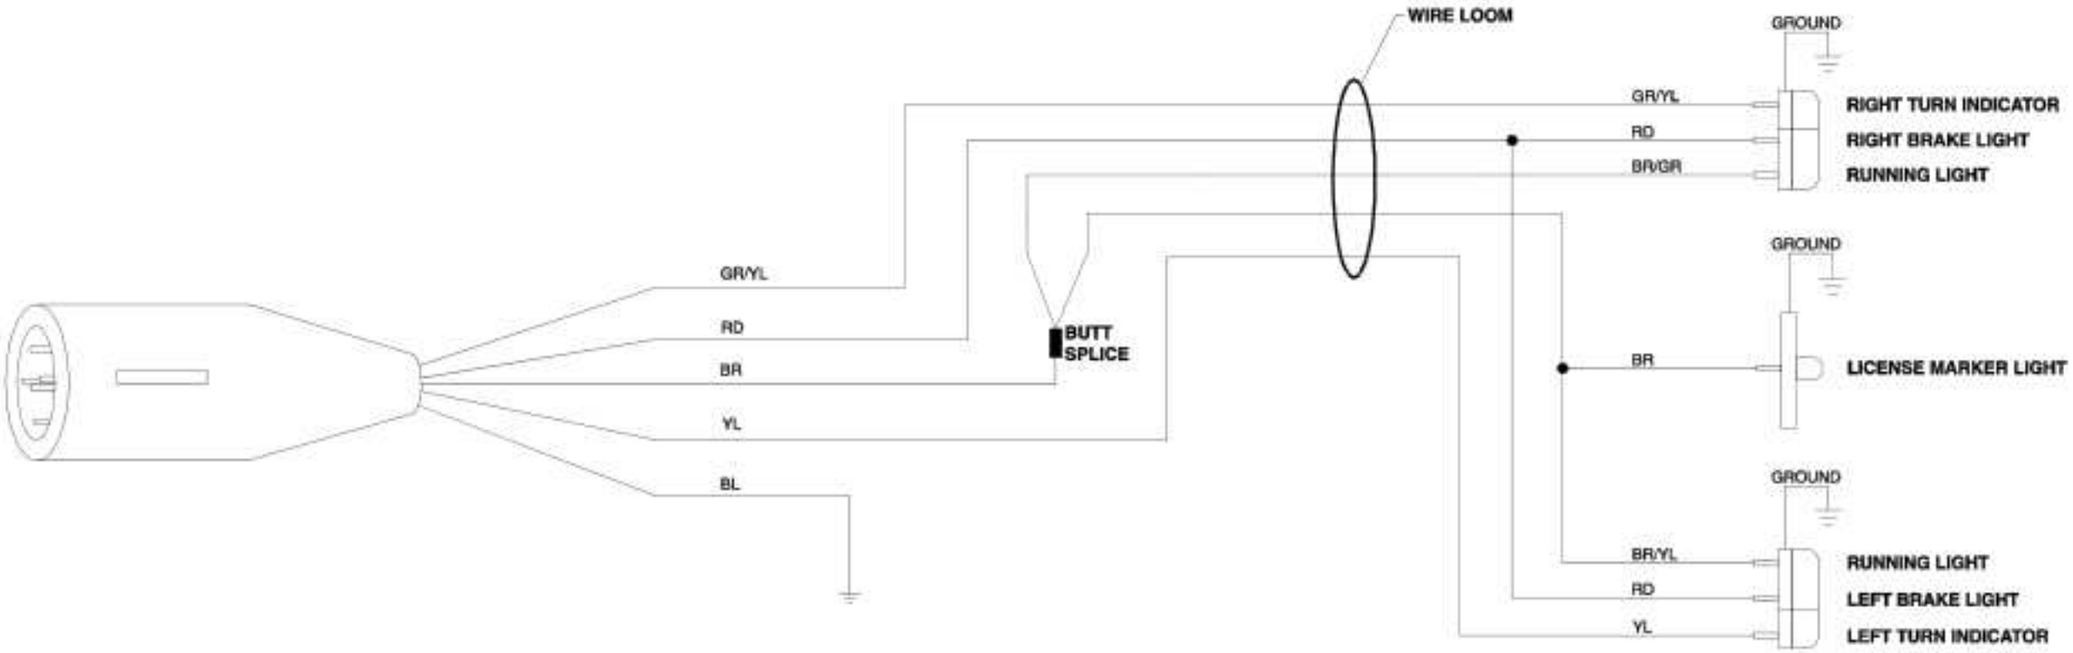

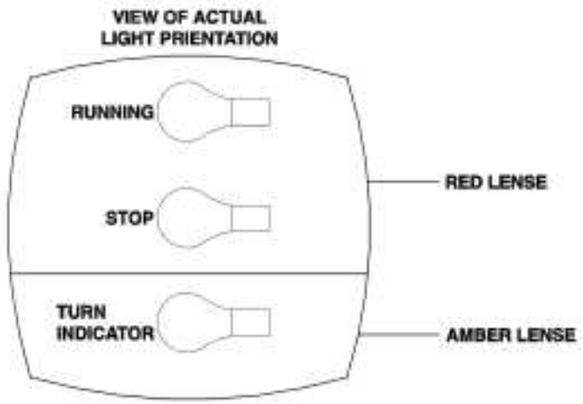

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482
Order the manual at mid-west-tech.com >

Electrical Wiring Schematic ANSI / CSA Models

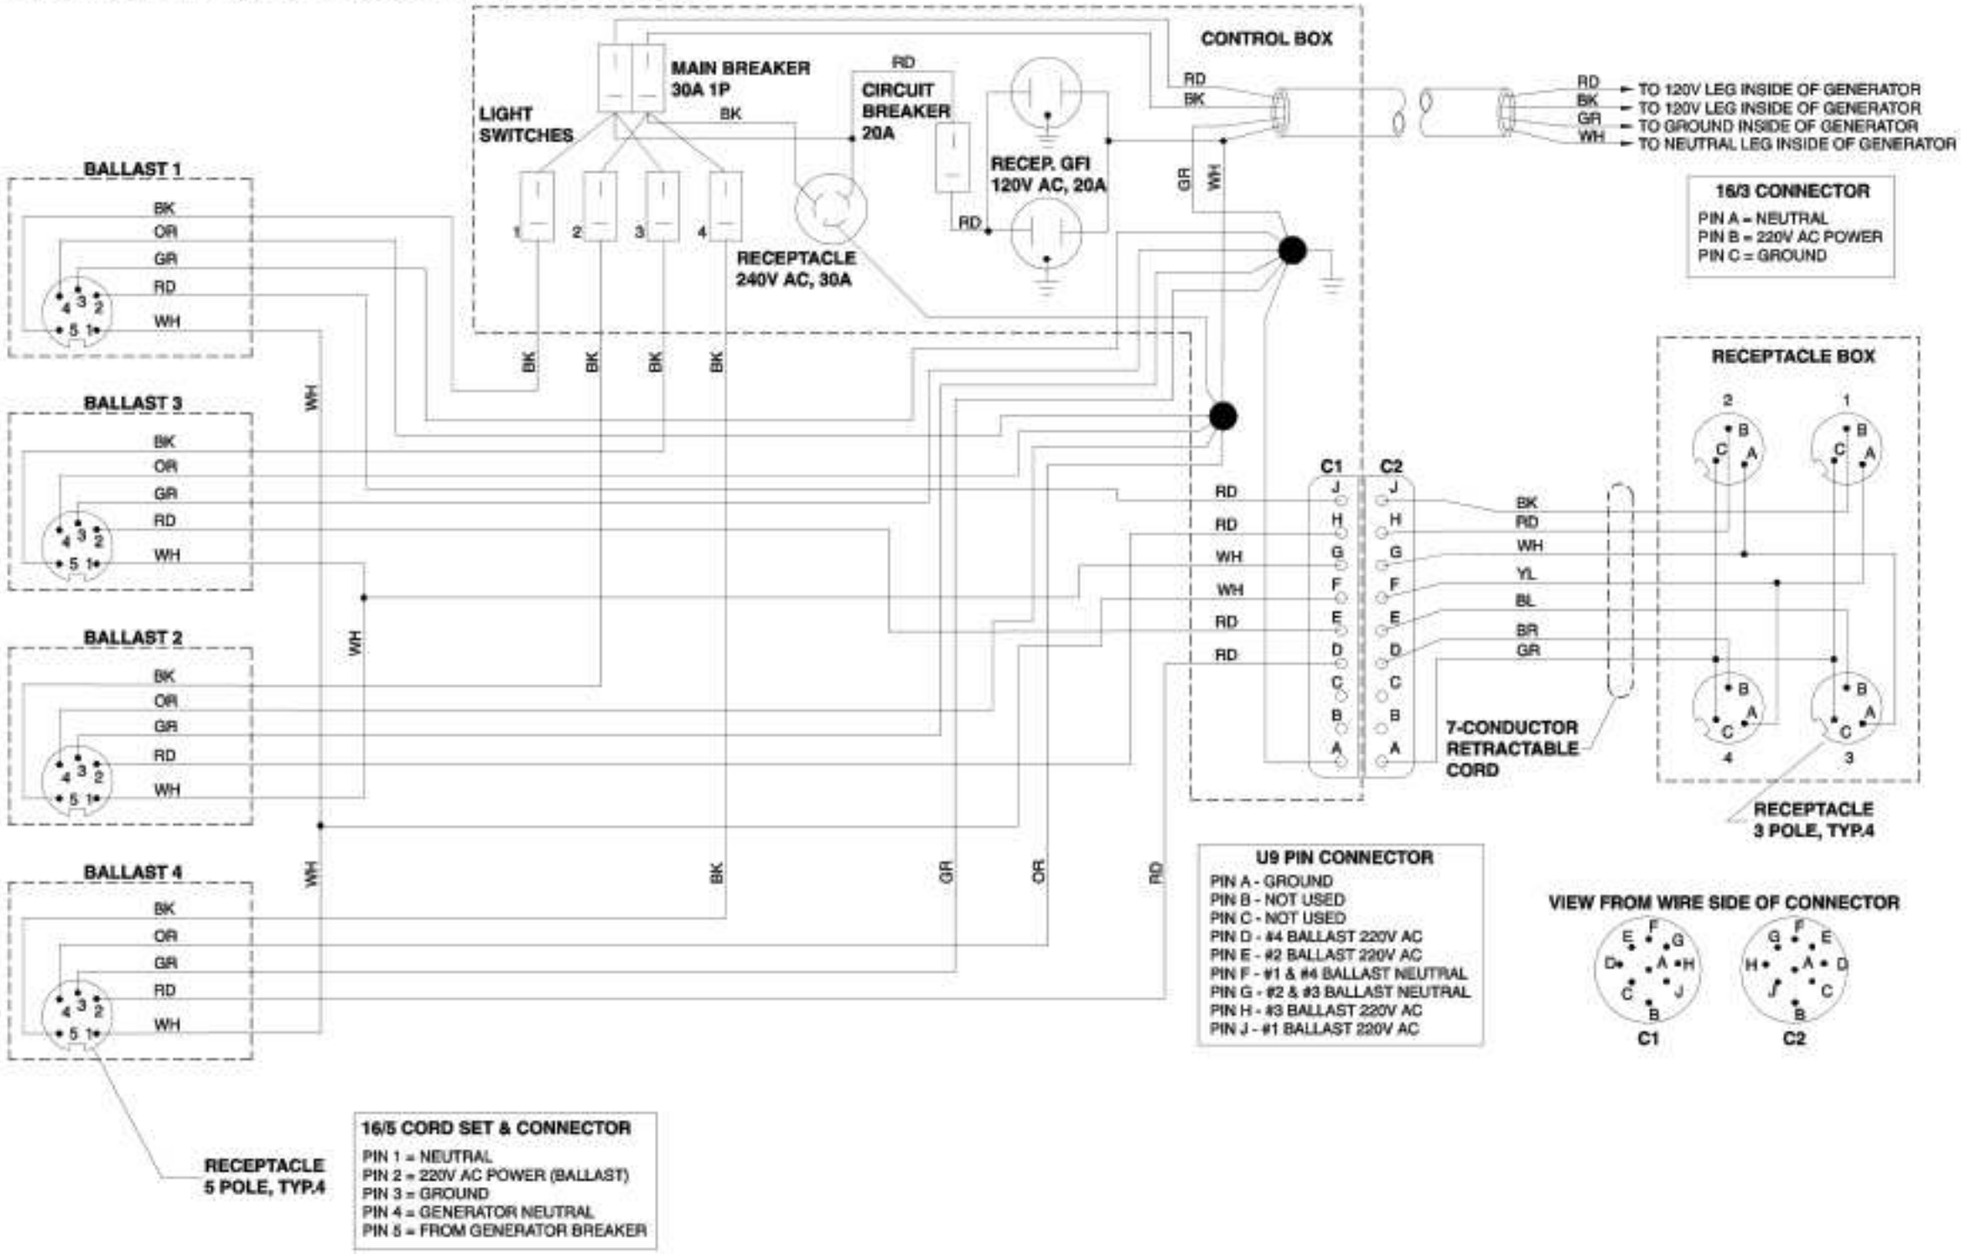

MidWestTech | Terex Genie AL5HT Light Tower Service Manual | Publication 1265482 Order the manual at mid-west-tech.com >