snorkel

660SJ



CE

OPERATOR'S MANUAL

ANSI/CSA/CE/AS/NZS
Serial number 000034 and after
Replaces ANSI/CSA/CE/AS/NZS May 2024

Part Number 1432633
August 2024

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >

Table of Contents

Electrical Danger ..... Inside Front Cover
Proposition 65 Warning ..... Inside Front Cover
Danger Symbols ..... Inside Front Cover
Wheel Orientation Warning ..... Inside Front Cover
Safety Rules ..... Inside Front Cover

Chapter 1 – Introduction

Aerial Platform Features 1
Options 1
Operator's Manual 1
Safety Alerts 1
Operation 2
Maintenance 2
  Used Material Disposal 2
Manual of Responsibilities – ANSI 2
MEWP Safe Use – AS/NZS 2
AS/NZS 1418.10 Commissioning 3
CE Compliance 3
Additional Information 3

Chapter 2 – Specifications

Component Identification 5
Working Envelope – Single Capacity 6
Working Envelope – Dual Capacity 7
General Specifications 9
Engine Specifications 11
Engine Oil Viscosity 11

Chapter 3 – Safety

Electrocution Hazards 13
Minimum Safe Approach Distance – ANSI 13
Minimum Safe Approach Distance – AS/NZS 14
Platform Capacity 14
Manual Force 14
Wind Speeds 14
Prestart Inspection 14
Work Place Inspection and Practices 14
Operation 15
Tip-Over and Falling Hazards 15
Electrical System 16
Hydraulic System 16
Engine and Fuel Handling Precautions 16
Placards and Decals 17
General Safety Rules 17

Chapter 4 – Safety Devices

Emergency Stop Controls 19
Emergency Power System 19
Emergency Lowering Knob
  – Single Platform Capacity Machines Only 20
Ground Operation Switch 20
Platform Foot Switch 20
Guardrails 20
Fall Protection Anchors 20
Ground Fault Circuit Interrupter 20
Platform Overload Sensing System 21
Boom/Drive Cut-out 21
Tilt Alarm/Warning Lights 21
Engine Protection Systems 22
  High Engine Temperature Alarm 22
  Low Oil Pressure Alarm 22
Horn 22
Drive Motion Alarm 22
All Motion Alarm 22
Flashing Lights 22
Driving Lights 22
Platform Work Lights 22
Snorkel Guard 22
Tire Pressure Monitoring System
  – Flotation Tires Only 23

Chapter 5 – Gauges and Displays

Diagnostic Center Display 25
Platform Overload/Tilt Warning Lights 25
Cummins 25
Deutz/Kubota 25
Cummins 25
Deutz/Kubota 25
Dual Platform Capacity System 26
Engine Warning Lights 26
Diesel Particulate Filter Warning Light 26
Fuel 26
Fluid Level and Temperature Gauge 26
Engine Oil 27
Tire Pressure Monitoring 27
System – Flotation Tires Only 27

Chapter 6 – Controls

Battery Disconnect Switch 29
Lower Controls 29
  Start/Emergency Power/Ground Operation Switch 29
  Emergency Stop Button 31
  Controls Selector Switch 31
  Rotation Switch 31
  Boom Elevation Switch 31
  Boom Extension Switch 31
  Jib Articulation Switch 31
  Platform Level Switch 31
  Platform Rotation Switch 31
  Fuel Switch 31
  Platform Overload Warning Light 31
  Dual Platform Capacity System 31
  Diesel Particulate Filter Switch 31
  Tilt Alarm 32
  Diagnostic Center Display 32
  Hydraulic Oil Warm-Up Switch 32
Circuit Breaker Reset Buttons 32
Upper Controls 32
  Start Switch 32
  Emergency Stop Button 33
  Drive Joystick 34
  Drive Range Switch 34
  Boom Joystick 34
  Boom Extension Joystick 34
  Jib/Platform Rotate Joystick 34
  Platform Level Switch 34
  Emergency Power Switch 34
  Horn Switch 35
  Engine Speed Switch 35
  Override Switch 35
  Platform Foot Switch 35
  Platform Overload Warning Light 35
  Dual Platform Capacity System 35
  Tilt Alarm 35
  AC Generator Switch 35
  AC 20 kW Generator Switch – Platform Welder 35
  Dual Fuel 36
  Hydraulic Oil Warm-Up Switch 36
Driving and Platform Work Lights 36

Chapter 7 – Prestart Inspection

Operator's Manual Holder 37

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >

Engine 37
Oil Level 37
Coolant 37
Radiator 38
Fuel Tank 38
Fuel Line 39
Electrical System 39
Battery Terminals 39
Cables and Wiring Harness 39
Hydraulic System 39
Fluid Level 39
Fluid Filter 40
Hoses, Tubes, and Fittings 40
Tires and Wheels 40
Lower Control Station 40
Operating Controls 40
Emergency Stop 41
Emergency Power 41
Diagnostic Center Display 41
Emergency Lowering Knob
– Single Platform Capacity Machines Only 41
Flashing Lights 42
Structures 42
Weldments 42
Boom Slide Pads 42
Wire Ropes 42
Fasteners 43
Upper Control Station 43
Guardrail System 43
Fall Protection Anchors 44
Operating Controls 44
Emergency Stop 44
Emergency Power 45
Horn Switch 45
Snorkel Guard 45
Electrical Power Outlet 45
Level Sensor 45
Panel Carrier 46
All Motion Alarm 46
Sandblast Protection Kit 46
Air Line to Platform 46
Driving and Platform Work Lights 46
Tow Kit 46
Platform Glazier Package 46
Platform Welder 46
Pipe Rack 47
Drive Motion Alarm 47
Placards and Decals 47
Prestart Inspection Checklist 52
Inspection and Maintenance Schedules 53

Chapter 8 – Operation

Cold Weather Start-Up 55
Hydraulic System Cold Weather Warm-Up 55
Hydraulic System Warm-Up Switch 55
Manually Warming The Hydraulic System 55
Preparing for Operation 56
Lower Controls 56
Upper Controls 57
Engine Speed Switch 58
Boom Operation 58
Jib and Boom Simultaneous Operation 58
Dual Platform Capacity System 58
Driving and Steering 58
Drive Speeds 59
Pivoting Front Axle 59
Machine in Stowed Position 59
Machine Not in Stowed Position 60
Boom and Turntable Position/Axle
and Drive Speeds 60
Drive Motion Alarm 60
Boom/Drive Cut-out 60
Platform Overload Sensing System 60
Snorkel Guard 61
Override Switch 61
Gradeability 61
Percent vs. Degree of Slope 61
Driving on a Slope 61
Calculating Percent Grade 62
Machine Gradeability 62
Electrical Power Outlet 63
AC Generator 63
AC 20 kW Generator Switch – Platform Welder 63
Dual Fuel 63
Panel Carrier 63
Platform Capacity 64
Diesel Particulate Filter Regeneration 64
Air Line 65
Driving Lights 65
Platform Work Lights 65
Platform Glazier Package 66
Platform Capacity 66
Platform Welder 66
Platform Capacity 66
Pressure Washer 66
Pipe Rack 67
Snorkel OnSite 68
Tire Pressure Monitoring System
– Flotation Tires Only 68
After Use Each Day 69

Chapter 9 – Stowing and Transporting

Stowing 71
Transporting 71
Driving 71
Winching 72
Hoisting 72
Securing for Transport 73
Storage 74

Chapter 10 – Emergency Operation

Emergency Power System 75
Lower Controls 75
Upper Controls 75
Override Switch 76
Emergency Lowering Knob
– Single Platform Capacity Machines Only 76
Towing 77

Chapter 11 – Troubleshooting

Troubleshooting Chart 79
AC 20 kW Generator – Platform Welder 84
Engine RPM 84
Output Voltage 84
Frequency 84

Appendix A – Glossary

Appendix B – Inspection Checklists

Limited Warranty

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >

⚠Danger

Pinch points may exist between moving components. Death or serious injury will result from becoming trapped between components, buildings, structures, or other obstacles. Make sure all personnel stand clear while operating the aerial platform.

- Controls to position the platform are located on the lower control panel on the turntable and on the upper control panel in the platform.
- Controls to drive the aerial platform are located on the upper control panel only.

Battery Disconnect Switch

The battery disconnect is located behind the cowling door on the right side of the turntable (refer to Figure 6.1).

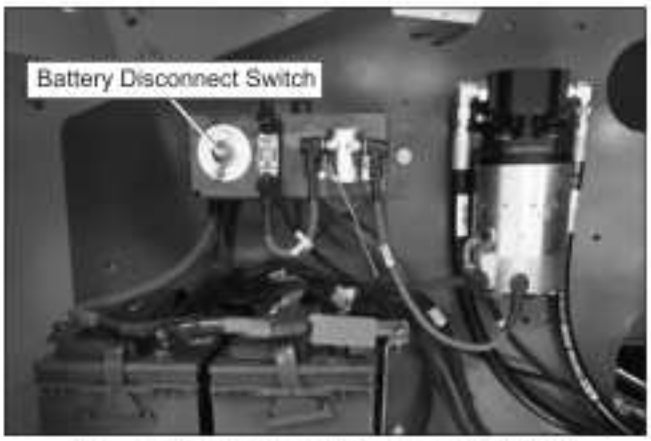


Figure 6.1 – Battery Disconnect Switch

The battery disconnect removes electrical power from all electrically controlled functions when in the off position.

- Place the switch in the on position to electrically connect the batteries to the electrical system.

⚠Caution

Only authorized personnel should operate the aerial platform. Unqualified personnel may cause injury to coworkers or property damage. Lock the battery disconnect switch in the off position before leaving the aerial platform unattended.

- Place the switch in the off position to prevent unauthorized use of the aerial platform. If so equipped, lock the battery disconnect switch in the off position.

Lower Controls

The lower controls (refer to Figure 6.2) are located on the left side of the turntable. Boom and platform functions can be operated from the lower controls. The following are located on the lower control panel:

- Start/emergency power/ground operation switch
- Emergency stop button
- Controls selector switch
- Rotation switch
- Boom elevation switch
- Boom extension switch
- Jib articulation switch
- Platform level switch
- Platform rotation switch
- Platform overload/tilt warning light
- Diesel particulate filter switch – Deutz Stage 5 only
- Fuel switch (dual fuel machines)
- Hydraulic system warm-up switch (option)

Start/Emergency Power/Ground Operation Switch

This switch (refer to Figure 6.2) is used to operate three machine functions. Engine start, activation of the emergency power system, and enable of the machine functions from the lower controls are all controlled with this switch.

Engine Start

The start switch (refer to Figure 6.2) function works like an automobile ignition switch.

An alarm sounds when the switch is turned on to warn others that the machine engine is being started.

- Before starting the engine, check the Diagnostic Center LCD display window. WAIT TO START will be displayed if the engine is cold and the engine heater is on. The message may appear for 1 to 12 seconds, depending on the engine and ambient air temperature.
- Do not start the engine until the wait message is no longer displayed.
- If the engine turns over but does not start while the WAIT TO START message is displayed, turn the control selector switch to the middle/off position and back to the lower controls position. Do not start the engine until the wait message is no longer displayed.
- Hold the switch downward until the engine starts, then release it to on.
- If the engine dies, the controls switch must be turned to off before the engine can be restarted.

Emergency Power

The emergency power function is used to operate turntable, boom, and platform functions using the emergency power system when the engine is off/disabled. The switch is spring returned to the engine position for aerial platform engine operation.

⚠Caution

The emergency power system is for emergency lowering and stowing only. The length of time the pump can be operated depends on the capacity of the batteries. Do not use this system for normal operation.

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >



Figure 8.20 – Pipe Rack Rated Load and Platform Capacity

A pipe rack decal is located on the front of each support at the rear of the platform.

The platform rated work load is the total weight of the personnel and equipment that may be lifted in the platform.

Capacity values indicate the rated lifting capacity and do not indicate aerial platform stability.

The load carried in the pipe rack reduces the platform capacity by the weight of the load being carried.

The platform capacity is reduced by the weight of the two supports and by the weight of the load being carried.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tipover accident. Do not exceed the stated pipe length requirements or use with any other platform option.

The pipe rack is not to be used with any other platform option.

When loading the pipe rack:

- Pipe length cannot exceed 10 feet (305cm).
- The height of the pipes in the rack cannot exceed 6 inches (150mm).
- The load in the racks cannot exceed 150 lbs (68kg).
- Pipes must be centered and overhangs must be equal.

The operator bears ultimate responsibility for ensuring that the aerial platform is properly set up for the particular condition encountered.

Use the following procedure to load the pipe rack.

1. Make certain no one is beneath the platform when operating the machine with the pipe racks loaded.
2. At the front and rear, press on the latch lever to release the latch and unfasten the straps.
3. Place the load evenly on the left and right cradles. Do not exceed the rated load on the pipe rack per pair of supports. Refer to the capacity decals on the pipe rack supports and Figure 8.20.
4. Feed the straps through the latch and pull on the straps to secure the load.
5. Secure the load in the racks before operating machine functions.

Snorkel OnSite

Snorkel OnSite is powered by Trackunit telematics. OnSite provides real-time access to machine information such as machine status (on/off), hours, location, and battery level. This data can help identify usage and maintenance trends to maximize operator efficiency. An optional keypad may be used to limit access to only authorized personnel by PIN code or RFID card.

For more information, please refer to the Trackunit information provided with the machine. For Trackunit Technical Support email supportus@trackunit.com or phone 1-844-661-0340. When contacting Trackunit Technical Support, have the Trackunit serial number, (7 digits starting with 3) available to aid in troubleshooting. The serial number can be found on the fleet list or under Fleet/Unit Page/ Telematics tab.

Tire Pressure Monitoring System – Flotation Tires Only

There are two tire pressure warning lights on the lower and upper control panels (refer to Figure 8.21).

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >

Frequent Maintenance – Every 90 Days or 150 Hours

Item	Procedure	Information	P/F/R
Daily maintenance	Perform maintenance as per schedule	Retain copy of checklist	
Preventive inspection maintenance checklist	Perform inspection, complete form	Retain copy of checklist	
Placards and decals inspection	Inspect using drawing and parts listing in Section 1 – Repair Parts Manual	Replace any missing or unreadable decals/placards	
Door hinges and latches	Lubricate	SAE 10W oil or spray lubricant	
Rotation bearing	Lubricate	Extreme Pressure Grease Above 10° F NLGI Grade 2 Below 10° F NLGI Grade 1	
Rotation bearing teeth and pinion	Lubricate	Open Gear Lubricant ASTM D 445	
Tie rods	Lubricate	Extreme Pressure Grease Above 10° F NLGI Grade 2 Below 10° F NLGI Grade 1	
Gear hubs	Check fluid level, fill if low	SAE Grade 80W-90	
Swing drive	Check fluid level, fill if low	SAE Grade 80W-90	
Platform rotator	Refill if disassembled for repairs	Consult factory	
Platform controller	Check smooth operation/speeds		
Batteries	Check specific gravity	1.260/1.275 at 80° F (26° C)	
Hydraulic return filter	Check condition	Replace if dirty	
Engine rpm	Check for proper engine rpm	See engine owner's manual	
Engine oil and filter	Replace per engine owner's manual	See engine owner's manual	
Engine fuel filter	Check condition	Replace every 6 months or if dirty	

Maintenance Table Key: P = Pass, F = Fail, R = Repaired

Performed by: _____ Date: _____

Model Number: _____ Serial Number: _____

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >

SAFETY RULES

⚠Warning

All personnel shall carefully read, understand and follow all safety rules and operating instructions before operating or performing maintenance on any Snorkel aerial work platform.

Electrocution Hazard	Tip Over Hazard	Collision Hazard	Fall Hazard
			
THIS MACHINE IS NOT INSULATED!	**NEVER** elevate the platform or drive the machine while elevated unless the machine is on a firm, level surface	**NEVER** position the platform without first checking for overhead obstructions or other hazards.	**NEVER** climb, stand, or sit on platform guardrails or midrail.

USE OF THE AERIAL WORK PLATFORM: This aerial work platform is intended to lift persons and his tools as well as the material used for the job. It is designed for repair and assembly jobs and assignments at overhead workplaces (ceilings, cranes, roof structures, buildings etc.). Uses or alterations to the aerial work platform must be approved by **Snorkel**.

THIS AERIAL WORK PLATFORM IS NOT INSULATED! For this reason it is imperative to keep a safe distance from live parts of electrical equipment!

Exceeding the specified permissible maximum load **is prohibited!** See "Platform Capacity" for details.

The use and operation of the aerial work platform as a lifting tool or a crane **is prohibited!**

NEVER exceed the manual force allowed for this machine. See "Manual Force" for details.

DISTRIBUTE all platform loads evenly on the platform.

NEVER operate the machine without first surveying the work area for surface hazards such as holes, drop-offs, bumps, curbs, or debris; and avoiding them.

OPERATE machine only on surfaces capable of supporting wheel loads.

NEVER operate the machine when wind speeds exceed this machine's wind rating. See "Beaufort Scale" for details.

Do not operate the aerial platform in windy or gusty conditions. Do not add anything to or take anything into the aerial platform that will increase the wind loading such as billboards, banners, flags, etc.

IN CASE OF EMERGENCY push EMERGENCY STOP switch to deactivate all powered functions.

IF ALARM SOUNDS while platform is elevated, STOP, carefully lower platform. Move machine to a firm, level surface.

Climbing up the railing of the platform, standing on or stepping from the platform onto buildings, steel or prefab concrete structures, etc., **is prohibited!**

Dismantling the entry gate or other railing components **is prohibited!** Always make certain that the entry gate is closed!

It is prohibited to keep the entry gate in an open position when the platform is raised!

To extend the height or the range by placing of ladders, scaffolds or similar devices on the platform **is prohibited!**

NEVER perform service on machine while platform is elevated without blocking elevating assembly.

INSPECT the machine thoroughly for cracked welds, loose or missing hardware, hydraulic leaks, loose wire connections, and damaged cables or hoses before using.

VERIFY that all labels are in place and legible before using.

NEVER use a machine that is damaged, not functioning properly, or has damaged or missing labels.

To bypass any safety equipment **is prohibited** and presents a danger for the persons on the aerial work platform and in its working range.

NEVER charge batteries near sparks or open flame. Charging batteries emit explosive hydrogen gas.

Modifications to the aerial work platform **are prohibited** or permissible only at the approval by **Snorkel**.

AFTER USE, secure the work platform from unauthorized use by turning the keyswitch off and removing key.

The driving of MEWP's on the public highway is subject to national traffic regulations.

Certain inherent risks remain in the operation of this machine despite utilizing proper design practices and safeguarding.

Harness attachment points are provided in the platform and the manufacturer recommends the usage of a fall restraint harness, especially where required by national safety regulations.

Care must be taken to ensure that the machines meets the requirements of stability during use, transportation, assembly, dismantling when out of service, testing, or foreseeable breakdowns.

In the event of an accident or breakdown see "Emergency Operation." Do not operate the aerial platform if it is damaged or not functioning properly. Qualified maintenance personnel must correct the problem before putting the aerial platform back into service.

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >

Minimum Safe Approach Distance – AS/NZS

Minimum safe approach distances to energized power lines and their associated parts must be observed while operating the aerial platform.

⚠Danger

The aerial platform is not electrically insulated. Death or serious injury will result from contact with, or inadequate clearance from, an energized conductor. Do not go closer than the minimum safe approach distance as defined by national safety regulations.

AS/NZS 2550.10:2006 define minimum distances that must be observed when working near overhead power lines on poles and overhead power lines on towers. Refer to the clearance requirements decals on the machine to determine safe approach distances (refer to Figure 1).

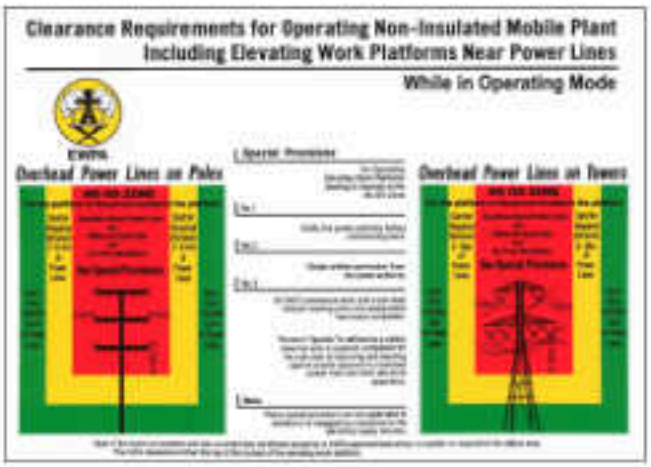


Figure 1 – Minimum Safe Approach Distance

Platform Capacity

Two people and their work materials may occupy the platform.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not exceed the capacity values indicated on the machine decals, placards, and in the machine specifications in this manual.

The maximum unrestricted rated load capacity and the maximum number of occupants for the aerial platform are stated on machine decals, placards, and in the machine specifications in this manual.

Manual Force

Manual force is the force applied by the occupants to objects such as walls or other structures outside the work platform.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not exceed the maximum allowable manual force indicated on the machine decals, placards, and in the machine specifications in this manual.

The maximum allowable manual force is limited to 45 lbs (200 N) of force per occupant, with a maximum of 90 lbs (400 N) for two occupants.

Wind Speeds

Do not add anything to the aerial platform that will increase the wind loading such as billboards, banners, flags, etc.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not operate the machine in wind speeds of 28 mph (12.5 m/s) or greater.

Do not operate the aerial platform in windy conditions with wind gusts or steady wind speeds of 28 mph (12.5 m/s) or greater. Refer to Figure 2.

Prestart Inspection

Perform a prestart inspection before each shift as described in Chapter 7. Do not use the aerial platform on the job unless you are trained and authorized to do so.

Work Place Inspection and Practices

Do not use the aerial platform as a ground connection when welding.

- The welding ground clamp must be attached to the same structure that is being welded.

BEAUFORT RATING	WIND SPEED				GROUND CONDITIONS
	m/s	km/h	ft/s	mph	
3	3,4~5,4	12,25~19,4	11.5~17.75	7.5~12.0	Papers and thin branches move, flags wave.
4	5,4~8,0	19,4~28,8	17.75~26.25	12.0~18	Dust is raised, paper whirls up, and small branches sway.
5	8,0~10,8	28,8~38,9	26.25~35.5	18~24.25	Shrubs with leaves start swaying. Wave crests are apparent in ponds or swamps.
6	10,8~13,9	38,9~50.0	35.5~45.5	24.5~31	Tree branches move. Power lines whistle. It is difficult to open an umbrella.
7	13,9~17.2	50,0~61,9	45.5~56.5	31.~38.5	Whole trees sway. It is difficult to walk against the wind.

Figure 2 – Beaufort Scale

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 1432633 Order the manual at mid-west-tech.com >