snorkel

460SJ



CE

OPERATOR'S MANUAL

ANSI/CSA/CE/AS/NZS
Serial number 000000 and after
Replaces May 2024

Part Number 1433685
May 2025

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

Table of Contents

Electrical Danger ..... Inside Front Cover
Proposition 65 Warning ..... Inside Front Cover
Danger Symbols ..... Inside Front Cover
Wheel Orientation Warning ..... Inside Front Cover
Safety Rules ..... Inside Front Cover

Chapter 1 – Introduction

Aerial Platform Features 1
Options 1
Operator's Manual 1
Safety Alerts 1
Operation 2
Maintenance 2
  Used Material Disposal 2
Manual of Responsibilities – ANSI 2
MEWP Safe Use – AS/NZS 3
AS/NZS 1418.10 Commissioning 3
CE Compliance 3
Additional Information 3

Chapter 2 – Specifications

Component Identification 5
Working Envelope – Single Capacity 6
Working Envelope – Dual Capacity 7
General Specifications 8
Engine Specifications 9
Engine Oil Viscosity 9

Chapter 3 – Safety

Electrocution Hazards 11
Minimum Safe Approach Distance – ANSI 11
Minimum Safe Approach Distance – AS/NZS 12
Platform Capacity 12
Manual Force 12
Wind Speeds 12
Prestart Inspection 12
Work Place Inspection and Practices 12
Operation 13
Tip-Over and Falling Hazards 13
Electrical System 14
Hydraulic System 14
Engine and Fuel Handling Precautions 14
Placards and Decals 15
General Safety Rules 15

Chapter 4 – Safety Devices

Emergency Stop Controls 17
Emergency Power System 17
Emergency Lowering Knob – Single Platform Capacity Machines Only 17
Ground Operation Switch 18
Platform Foot Switch 18
Guardrails 18
Fall Protection Anchors 18
Ground Fault Circuit Interrupter 18
Platform Overload Sensing System 18
Boom/Drive Cut-out 19
Tilt Alarm/Warning Lights 19
Engine Protection Systems 19
  High Engine Temperature Alarm 19
  Low Oil Pressure Alarm 19
Horn 19
Drive Motion Alarm 20
All Motion Alarm 20
Flashing Lights 20
Driving Lights 20
Platform Work Lights 20
Snorkel Guard 20

Chapter 5 – Gauges and Displays

Diagnostic Center Display 21
Platform Overload/Tilt Warning Lights 21
Dual Platform Capacity System 21
Engine Warning Lights 21
Fuel 22
Fluid Level and Temperature Gauge 22
Engine Oil 22

Chapter 6 – Controls

Battery Disconnect Switch 23
Lower Controls 23
  Start/Emergency Power/Ground Operation Switch 23
  Emergency Stop Button 24
  Controls Selector Switch 24
  Rotation Switch 24
  Boom Elevation Switch 24
  Boom Extension Switch 24
  Jib Articulation Switch 25
  Platform Level Switch 25
  Platform Rotation Switch 25
  Platform Overload Warning Light 25
  Dual Platform Capacity System 25
  Tilt Alarm 25
  Diagnostic Center Display 25
  Hydraulic Oil Warm-Up Switch 25
Circuit Breaker Reset Buttons 25
Upper Controls 26
  Start Switch 26
  Emergency Stop Button 26
  Drive Joystick 26
  Drive Range Switch 26
  Boom Joystick 27
  Boom Extension Joystick 27
  Jib/Platform Rotate Joystick 27
  Platform Level Switch 27
  Emergency Power Switch 27
  Horn Switch 28
  Engine Speed Switch 28
  Override Switch 28
  Platform Foot Switch 28
  Platform Overload Warning Light 28
  Dual Platform Capacity System 28
  Tilt Alarm 28
  AC Generator Switch 28
  Hydraulic Oil Warm-Up Switch 28
Driving and Platform Work Lights 29

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

Chapter 7 – Prestart Inspection

Operator's Manual Holder 31
Engine 31
- Oil Level 31
- Coolant 31
- Radiator 32
- Fuel Tank 32
- Fuel Line 32

Electrical System 32
- Battery Terminals 33
- Cables and Wiring Harness 33

Hydraulic System 33
- Fluid Level 33
- Fluid Filter 33
- Hoses, Tubes, and Fittings 33

Tires and Wheels 34
Lower Control Station 34
- Operating Controls 34
- Emergency Stop 35
- Emergency Power 35

Diagnostic Center Display 35
Emergency Lowering Knob – Single Platform Capacity Machines Only 35
Flashing Lights 35
Structures 36
- Weldments 36
- Boom Slide Pads 36
- Fasteners 36

Upper Control Station 36
- Guardrail System 36
- Fall Protection Anchors 37
- Operating Controls 37
- Emergency Stop 38
- Emergency Power 38
- Horn Switch 38
- Snorkel Guard 38
- Electrical Power Outlet 38

Level Sensor 39
Panel Carrier 39
All Motion Alarm 39
Sandblast Protection Kit 39
Air Line to Platform 39
Driving and Platform Work Lights 39
Tow Kit 39
Platform Glazier Package 40
Platform Welder 40
Pipe Rack 40
Drive Motion Alarm 40
Placards and Decals 40
Prestart Inspection Checklist 45
Inspection and Maintenance Schedules 46

Chapter 8 – Operation

Cold Weather Start-Up 47
Hydraulic System Cold Weather Warm-Up 47
- Hydraulic System Warm-Up Switch 47
- Manually Warming The Hydraulic System 47

Preparing for Operation 48
Lower Controls 48
Upper Controls 48
- Engine Speed Switch 49
- Boom Operation 49
- Jib and Boom Simultaneous Operation 49
- Dual Platform Capacity System 49
- Driving and Steering 50
- Drive Speeds 51

Pivoting Front Axle 51
- Machine in Stowed Position 51
- Machine Not in Stowed Position 51
- Boom and Turntable Position/Axle and Drive Speeds 51

Drive Motion Alarm 51
Boom/Drive Cut-out 51
Platform Overload Sensing System 51
Snorkel Guard 52
Override Switch 52
Gradeability 52
- Percent vs. Degree of Slope 53
- Driving on a Slope 53
- Calculating Percent Grade 53
- Machine Gradeability 54

Electrical Power Outlet 54
AC Generator 54
Panel Carrier 54
- Platform Capacity 55

Air Line 55
Driving Lights 55
Platform Work Lights 55
Platform Glazier Package 55
- Platform Capacity 56

Platform Welder 56
- Platform Capacity 56

Pipe Rack 56
Snorkel OnSite 57
After Use Each Day 57

Chapter 9 – Stowing and Transporting

Stowing 59
Transporting 59
- Driving 59
- Winching 60
- Hoisting 60
- Securing for Transport 61

Storage 62

Chapter 10 – Emergency Operation

Emergency Power System 63
Lower Controls 63
Upper Controls 63
Override Switch 64
Towing 65

Chapter 11 – Troubleshooting

Troubleshooting Chart 67

Appendix A – Glossary

Appendix B – Inspection Checklists

Limited Warranty

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

General Specifications

Aerial Platform

Working height	52' 10" (16.10 m)
Maximum platform height	46' 10" (14.27 m)
Horizontal reach	41' (12.50 m)
Main boom	
Articulation	-16° to +72°
Extension	15' (4.57 m)
Jib boom	
Articulation	-65.1° to +70°
Extension	6' 6" (1.98 m)
Turntable rotation	360° continuous
Turning radius, outside	16' 5" (5.0 m)
Turning radius, inside	6' 9" (2.05 m)
Tail swing	34.5" (87.6 cm)
Wheelbase	7' 7" (2.3 m)
Ground clearance	12.5" (31.75 cm)
Maximum wheel load	8,700 lb (3,955 kg)
Maximum ground bearing pressure	92 psi (6.43 kg/cm²)
Maximum distributed floor load	275 psf (1,345 kg/m²)
Tread contact patch	94.75 in² (611 cm²)
Level sensor setting – ANSI/CSA	5 degrees
Level sensor setting – CE/AS/NZS	
Dual capacity	5 degrees
Single capacity	3.5 degrees
Weight, EVW approximate	17,260 lbs (7,845 kg)
Maximum allowable manual force (side pull)	
Per occupant	45 lb (200 N)
Maximum allowable manual force (side pull)	
Two occupants total	90 lb (400 N)
Width	
Overall width	7' 7" (2.31 m)
Transport width – wheels flipped	6' 10" (2.08 m)
Stowed length	
Overall length	28' 4" (8.63 m)
Transport length	28' 9" (8.76 m)
Stowed height	7' 10" (2.38 m)

Platform

Dimensions	
Standard	39" x 96" (99 cm x 243 cm)
Rated work load, standard unrestricted 600 lb (272 kg)	
Rated work load, restricted	1,000 lb (453.5 kg)
Rotation	150 degrees
Maximum number of occupants	2 people
Optional AC generator	110 V
Optional AC generator	208 V, 3-phase, 7.5 kw
Optional AC generator	220 V, 3-phase, 10 kw

Function Speed

Turntable rotation	
Booms retracted – ANSI	85 to 95 seconds
Booms retracted – CE/AS/NZS	165 to 175 seconds
Main boom	
Up – ANSI	32 to 38 seconds
Up – CE/AS/NZS	50 to 55 seconds
Down – ANSI	32 to 38 seconds
Down – CE/AS/NZS	50 to 55 seconds
Extend	30 to 45 seconds
Retract	30 to 45 seconds
Jib boom	
Up	12 to 17 seconds
Down	12 to 17 seconds
Platform rotation	12 to 16 seconds
Platform leveling	
Up – ANSI	12 to 22 seconds
Up – CE/AS/NZS	50 to 55 seconds
Down – ANSI	12 to 22 seconds
Down – CE/AS/NZS	50 to 55 seconds

Drive	
High, boom down/retracted – ANSI/CE/AU/NZS	
Forward – Deutz engines	4.25 mph (6.8 km/h)
Forward – Kubota engines	3.75 mph (6.0 km/h)
Reverse	2.75 mph (4.4 km/h)
Low, boom up/extended	
ANSI	0.75 mph (1.2 km/h)
CE/AS/NZS	0.5 mph (0.80 km/h)

Drive System

Standard	4WD
Gradeability	45%
Axle	front oscillating
Vertical wheel travel	8" (20.32 cm)
Maximum drive height	46' (14 m)

Tires

Foam filled	355/55 D625, 14 ply
Mass	427.5 lbf (194.3 kg)
Flotation air filled – non-directional	33/16LL500
Minimum weight with wheel	150 lb (68.2 kg)

Electrical System

Voltage	12 V DC negative chassis ground
Source	One - 12 V 1000 CCA battery

Hydraulic System

Pressure	
System maximum	4,500 psi (31,026 kPa)
Boom circuit maximum	2,900 psi (19994 kPa)
Reservoir capacity	30 US gal (113.5 l)
System capacity	40 US gal (151.4 l)
Maximum operating temperature	200°F (93°C)
Hydraulic fluid recommended	
Above -12°C (10°F)	ISO VG32
Below -12°C (10°F)	ISO VG15

Engine

Diesel	Deutz D2.9 L4
Output	49 hp (36.5kw)
Diesel	Kubota V1505-TE

Fuel Tank Capacity

Diesel	28 US gal (105.9 l)

Ambient Air Temperature Operating Range

Fahrenheit	0°F to 110°F
Celsius	-18°C to 43°C

Maximum Manual Force

Per occupant	45 lb (200 N)
Two occupants	90 lb (400 N)

Maximum Wind Speed

Gust or steady	28 mph (12.5 m/s)

Vibration

Hand/arm	less than 2.5 m/sec²
Body	less than 0.5 m/sec²

Sound Pressure Level

At work station	below 110 dB(A)
Sound Power Level	80 dB LWAd
Group Classification	
Heavy Duty – intended life	100,000 load cycles

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

⚠Danger

Pinch points may exist between moving components. Death or serious injury will result from becoming trapped between components, buildings, structures, or other obstacles. Make sure all personnel stand clear while operating the aerial platform.

- Controls to position the platform are located on the lower control panel on the turntable and on the upper control panel in the platform.
- Controls to drive the aerial platform are located on the upper control panel only.

Battery Disconnect Switch

The battery disconnect is located behind the cowling door on the right side of the turntable (refer to Figure 6.1).

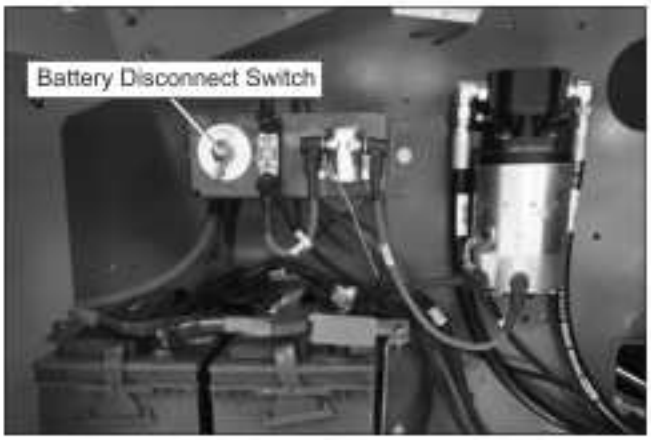


Figure 6.1 – Battery Disconnect Switch

The battery disconnect removes electrical power from all electrically controlled functions when in the off position.

- Place the switch in the on position to electrically connect the batteries to the electrical system.

⚠Caution

Only authorized personnel should operate the aerial platform. Unqualified personnel may cause injury to coworkers or property damage. Lock the battery disconnect switch in the off position before leaving the aerial platform unattended.

- Place the switch in the off position to prevent unauthorized use of the aerial platform. If so equipped, lock the battery disconnect switch in the off position.

Lower Controls

The lower controls (refer to Figure 6.2) are located on the left side of the turntable. Boom and platform functions can be operated from the lower controls. The following are located on the lower control panel:

- Start/emergency power/ground operation switch
- Emergency stop button
- Controls selector switch
- Rotation switch
- Boom elevation switch
- Boom extension switch
- Jib articulation switch
- Platform level switch
- Platform rotation switch
- Platform overload/tilt warning light
- Hydraulic system warm-up switch (option)

Start/Emergency Power/Ground Operation Switch

This switch (refer to Figure 6.2) is used to operate three machine functions. Engine start, activation of the emergency power system, and enable of the machine functions from the lower controls are all controlled with this switch.

Engine Start

The start switch (refer to Figure 6.2) function works like an automobile ignition switch.

An alarm sounds when the switch is turned on to warn others that the machine engine is being started.

- Before starting the engine, check the Diagnostic Center LCD display window. WAIT TO START will be displayed if the engine is cold and the engine heater is on. The message may appear for 1 to 12 seconds, depending on the engine and ambient air temperature.
- Do not start the engine until the wait message is no longer displayed.
- If the engine turns over but does not start while the WAIT TO START message is displayed, turn the control selector switch to the middle/off position and back to the lower controls position. Do not start the engine until the wait message is no longer displayed.
- Hold the switch downward until the engine starts, then release it to on.
- If the engine dies, the controls switch must be turned to off before the engine can be restarted.

Emergency Power

The emergency power function is used to operate turntable, boom, and platform functions using the emergency power system when the engine is off/disabled. The switch is spring returned to the engine position for aerial platform engine operation.

⚠Caution

The emergency power system is for emergency lowering and stowing only. The length of time the pump can be operated depends on the capacity of the batteries. Do not use this system for normal operation.

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

Frequent Maintenance – Every 90 Days or 150 Hours

Item	Procedure	Information	P/F/R
Daily maintenance	Perform maintenance as per schedule	Retain copy of checklist	
Preventive inspection maintenance checklist	Perform inspection, complete form	Retain copy of checklist	
Placards and decals inspection	Inspect using drawing and parts listing in Section 1 – Repair Parts Manual	Replace any missing or unreadable decals/placards	
Door hinges and latches	Lubricate	SAE 10W oil or spray lubricant	
Rotation bearing	Lubricate	Extreme pressure grease Above 10° F NLGI Grade 2 Below 10° F NLGI Grade 1	
Rotation bearing teeth and pinion	Lubricate	Open gear lubricant ASTM D 445	
Tie rods	Lubricate	Extreme pressure grease Above 10° F NLGI Grade 2 Below 10° F NLGI Grade 1	
Gear hubs	Check fluid level, fill if low	Gear lubricant SAE grade 80W-90	
Swing drive	Check fluid level, fill if low	Gear lubricant SAE grade 80W-90	
Platform rotator	Refill if disassembled for repairs	Consult factory	
Platform controller	Check smooth operation/speeds		
Batteries	Check specific gravity	1.260/1.275 at 80° F (26° C)	
Hydraulic return filter	Check condition	Replace if dirty	
Engine rpm	Check for proper engine rpm	See engine owner's manual	
Engine oil and filter	Replace per engine owner's manual	See engine owner's manual	
Engine fuel filter	Check condition	Replace every 6 months or if dirty	

Maintenance Table Key: P = Pass, F = Fail, R = Repaired

Performed by: _____ Date: _____

Model Number: _____ Serial Number: _____

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

SAFETY RULES

⚠Warning

All personnel shall carefully read, understand and follow all safety rules and operating instructions before operating or performing maintenance on any Snorkel aerial work platform.

Electrocution Hazard	Tip Over Hazard	Collision Hazard	Fall Hazard
			
THIS MACHINE IS NOT INSULATED!	**NEVER** elevate the platform or drive the machine while elevated unless the machine is on a firm, level surface	**NEVER** position the platform without first checking for overhead obstructions or other hazards.	**NEVER** climb, stand, or sit on platform guardrails or midrail.

USE OF THE AERIAL WORK PLATFORM: This aerial work platform is intended to lift persons and his tools as well as the material used for the job. It is designed for repair and assembly jobs and assignments at overhead workplaces (ceilings, cranes, roof structures, buildings etc.). Uses or alterations to the aerial work platform must be approved by **Snorkel**.

THIS AERIAL WORK PLATFORM IS NOT INSULATED! For this reason it is imperative to keep a safe distance from live parts of electrical equipment!

Exceeding the specified permissible maximum load **is prohibited!** See "Platform Capacity" for details.

The use and operation of the aerial work platform as a lifting tool or a crane **is prohibited!**

NEVER exceed the manual force allowed for this machine. See "Manual Force" for details.

DISTRIBUTE all platform loads evenly on the platform.

NEVER operate the machine without first surveying the work area for surface hazards such as holes, drop-offs, bumps, curbs, or debris; and avoiding them.

OPERATE machine only on surfaces capable of supporting wheel loads.

NEVER operate the machine when wind speeds exceed this machine's wind rating. See "Beaufort Scale" for details.

Do not operate the aerial platform in windy or gusty conditions. Do not add anything to or take anything into the aerial platform that will increase the wind loading such as billboards, banners, flags, etc.

IN CASE OF EMERGENCY push EMERGENCY STOP switch to deactivate all powered functions.

IF ALARM SOUNDS while platform is elevated, STOP, carefully lower platform. Move machine to a firm, level surface.

Climbing up the railing of the platform, standing on or stepping from the platform onto buildings, steel or prefab concrete structures, etc., **is prohibited!**

Dismantling the entry gate or other railing components **is prohibited!** Always make certain that the entry gate is closed!

It is prohibited to keep the entry gate in an open position when the platform is raised!

To extend the height or the range by placing of ladders, scaffolds or similar devices on the platform **is prohibited!**

NEVER perform service on machine while platform is elevated without blocking elevating assembly.

INSPECT the machine thoroughly for cracked welds, loose or missing hardware, hydraulic leaks, loose wire connections, and damaged cables or hoses before using.

VERIFY that all labels are in place and legible before using.

NEVER use a machine that is damaged, not functioning properly, or has damaged or missing labels.

To bypass any safety equipment **is prohibited** and presents a danger for the persons on the aerial work platform and in its working range.

NEVER charge batteries near sparks or open flame. Charging batteries emit explosive hydrogen gas.

Modifications to the aerial work platform **are prohibited** or permissible only at the approval by **Snorkel**.

AFTER USE, secure the work platform from unauthorized use by turning the keyswitch off and removing key.

The driving of MEWP's on the public highway is subject to national traffic regulations.

Certain inherent risks remain in the operation of this machine despite utilizing proper design practices and safeguarding.

Harness attachment points are provided in the platform and the manufacturer recommends the usage of a fall restraint harness, especially where required by national safety regulations.

Care must be taken to ensure that the machines meets the requirements of stability during use, transportation, assembly, dismantling when out of service, testing, or foreseeable breakdowns.

In the event of an accident or breakdown see "Emergency Operation." Do not operate the aerial platform if it is damaged or not functioning properly. Qualified maintenance personnel must correct the problem before putting the aerial platform back into service.

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >

Minimum Safe Approach Distance – AS/NZS

Minimum safe approach distances to energized power lines and their associated parts must be observed while operating the aerial platform.

⚠Danger

The aerial platform is not electrically insulated. Death or serious injury will result from contact with, or inadequate clearance from, an energized conductor. Do not go closer than the minimum safe approach distance as defined by national safety regulations.

AS/NZS 2550.10:2006 define minimum distances that must be observed when working near overhead power lines on poles and overhead power lines on towers. Refer to the clearance requirements decals on the machine to determine safe approach distances (refer to Figure 1).

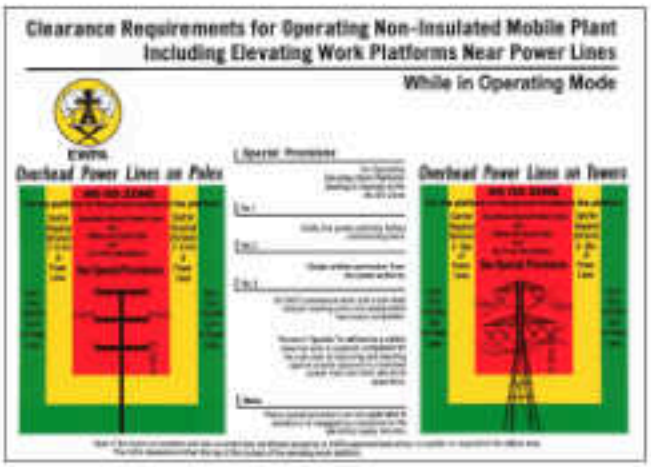


Figure 1 – Minimum Safe Approach Distance

Platform Capacity

Two people and their work materials may occupy the platform.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not exceed the capacity values indicated on the machine decals, placards, and in the machine specifications in this manual.

The maximum unrestricted rated load capacity and the maximum number of occupants for the aerial platform are stated on machine decals, placards, and in the machine specifications in this manual.

Manual Force

Manual force is the force applied by the occupants to objects such as walls or other structures outside the work platform.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not exceed the maximum allowable manual force indicated on the machine decals, placards, and in the machine specifications in this manual.

The maximum allowable manual force is limited to 45 lbs (200 N) of force per occupant, with a maximum of 90 lbs (400 N) for two occupants.

Wind Speeds

Do not add anything to the aerial platform that will increase the wind loading such as billboards, banners, flags, etc.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not operate the machine in wind speeds of 28 mph (12.5 m/s) or greater.

Do not operate the aerial platform in windy conditions with wind gusts or steady wind speeds of 28 mph (12.5 m/s) or greater. Refer to Figure 2.

Prestart Inspection

Perform a prestart inspection before each shift as described in Chapter 7. Do not use the aerial platform on the job unless you are trained and authorized to do so.

Work Place Inspection and Practices

Do not use the aerial platform as a ground connection when welding.

- The welding ground clamp must be attached to the same structure that is being welded.

BEAUFORT RATING	WIND SPEED				GROUND CONDITIONS
	m/s	km/h	ft/s	mph	
3	3,4~5,4	12,25~19,4	11.5~17.75	7.5~12.0	Papers and thin branches move, flags wave.
4	5,4~8,0	19,4~28,8	17.75~26.25	12.0~18	Dust is raised, paper whirls up, and small branches sway.
5	8,0~10,8	28,8~38,9	26.25~35.5	18~24.25	Shrubs with leaves start swaying. Wave crests are apparent in ponds or swamps.
6	10,8~13,9	38,9~50.0	35.5~45.5	24.5~31	Tree branches move. Power lines whistle. It is difficult to open an umbrella.
7	13,9~17.2	50,0~61,9	45.5~56.5	31.~38.5	Whole trees sway. It is difficult to walk against the wind.

Figure 2 – Beaufort Scale

MidWestTech | Snorkel 460SJ Telescopic Boom Lift Operator's Manual | Publication 1433685 Order the manual at mid-west-tech.com >