snorkel

660SJ



CE

OPERATOR'S MANUAL

ANSI/CSA/CE/AS/NZS
Serial number 1500 and after

Part Number 1435596-000
November 2025

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355...

Order the manual at mid-west-tech.com >

Table of Contents

Electrical Danger ..... Inside Front Cover
Proposition 65 Warning ..... Inside Front Cover
Danger Symbols ..... Inside Front Cover
Wheel Orientation Warning ..... Inside Front Cover
Safety Rules ..... Inside Front Cover

Chapter 1 – Introduction

Aerial Platform Features 1
Options 1
Operator's Manual 1
Safety Alerts 1
Operation 2
Maintenance 2
  Used Material Disposal 2
Manual of Responsibilities – ANSI 2
MEWP Safe Use – AS/NZS 2
AS/NZS 1418.10 Commissioning 2
CE Compliance 3
Additional Information 3

Chapter 2 – Specifications

Component Identification 5
Working Envelope – Dual Capacity 6
General Specifications 7
Engine Specifications 9
Engine Oil Viscosity 9

Chapter 3 – Safety

Electrocution Hazards 11
Minimum Safe Approach Distance – ANSI 11
Minimum Safe Approach Distance – AS/NZS 12
Platform Capacity 12
Manual Force 12
Wind Speeds 12
Prestart Inspection 12
Work Place Inspection and Practices 12
Operation 13
Tip-Over and Falling Hazards 13
Electrical System 14
Hydraulic System 14
Engine and Fuel Handling Precautions 14
Placards and Decals 15
General Safety Rules 15

Chapter 4 – Safety Devices

Emergency Stop Controls 17
Emergency Power System 17
Ground Operation Switch 17
Platform Foot Switch 17
Guardrails 18
Fall Protection Anchors 18
Ground Fault Circuit Interrupter 18
Platform Overload Sensing System 18
Boom/Drive Cut-out 19
Tilt Alarm/Warning Lights 19
Engine Protection Systems 19
  High Engine Temperature Alarm 19
  Low Oil Pressure Alarm 19
Horn 19
Drive Motion Alarm 20
All Motion Alarm 20
Flashing Lights 20
Driving Lights 20
Platform Work Lights 20
Snorkel Guard 20
Tire Pressure Monitoring System
 – Flotation Tires Only 20

Chapter 5 – Gauges and Displays

Diagnostic Center Display 21
  Splash Screen 21
Home Screen 21
  Access Level 21
  Platform Capacity 21
  Fault Message/Icon For Platform Capacity 21
  Fault Message/Icon For Chassis Tilt 21
  Fault Message/Icon For Snorkel Guard 21
  Fault Message/Icon For Critical Engine Fault 22
  Icon For Engine Warning 22
  Total Engine Hours 22
  Menu Button 22
Platform Overload/Tilt Warning Lights 22
Dual Platform Capacity System 22
Engine Warning Lights 22
Diesel Particulate Filter Warning Light 22
Fuel Gauge 22
Fluid Level and Temperature Gauge 23
Engine Oil Dipstick 23
Tire Pressure Monitoring System
 – Flotation Tires Only 23

Chapter 6 – Controls

Battery Disconnect Switch 25
Lower Controls 25
  Start/Emergency Power/Ground Operation Switch 25
  Engine Start 25
  Emergency Power 25
  Ground Operation 26
  Emergency Stop Button 26
  Controls Selector Switch 26
  Rotation Switch 26
  Boom Elevation Switch 27
  Boom Extension Switch 27
  Jib Articulation Switch 27
  Platform Level Switch 27
  Platform Rotation Switch 27
  Fuel Switch 27
  Hydraulic Oil Warm-Up Switch 27
  Diagnostic Center Display 27
Circuit Breaker Reset Button 27

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

Upper Controls 28
Start/Emergency Power Switch 28
Emergency Stop Button 29
Drive Joystick 29
Drive Range Switch 29
Jib/Platform Rotation Joystick 29
Boom Joystick 29
Platform Level Switch 30
Horn Switch 30
Override Switch 30
Platform Overload Warning Light 30
Tilt Alarm 30
Dual Platform Capacity System 30
Diesel Particulate Filter Switch 30
Driving and Platform Work Lights 30
AC Generator Switch 30
AC 20 kW Generator Switch – Platform Welder 30
Fuel Switch 30
Platform Foot Switch 31

Chapter 7 – Prestart Inspection

Operator's Manual Holder 33
Engine 33
Oil Level 33
Coolant 33
Radiator 34
Fuel Tank 34
Fuel Line 35
Electrical System 35
Battery Terminals 35
Cables and Wiring Harness 35
Hydraulic System 35
Fluid Level 35
Fluid Filter 36
Hoses, Tubes, and Fittings 36
Tires and Wheels 36
Lower Control Station 36
Operating Controls 36
Emergency Stop 37
Emergency Power 37
Diagnostic Center Display 37
Flashing Lights 37
Structures 37
Weldments 37
Boom Slide Pads 37
Wire Ropes 38
Fasteners 38
Upper Control Station 38
Guardrail System 38
Fall Protection Anchors 39
Operating Controls 39
Emergency Stop 40
Emergency Power 40
Horn Switch 40
Snorkel Guard 40
Electrical Power Outlet 40
Level Sensor 41
Panel Carrier 41
All Motion Alarm 41
Sandblast Protection Kit 41
Air Line to Platform 41
Driving and Platform Work Lights 41
Tow Kit 41
Platform Glazier Package 42
Platform Welder 42
Pipe Rack 42
Drive Motion Alarm 42
Placards and Decals 42
Prestart Inspection Checklist 47
Inspection and Maintenance Schedules 48

Chapter 8 – Operation

Cold Weather Start-Up 49
Hydraulic System Cold Weather Warm-Up 49
Hydraulic System Warm-Up Switch 49
Manually Warming The Hydraulic System 49
Preparing for Operation 50
Lower Controls 50
Upper Controls 51
Engine Speed Switch 51
Boom Operation 51
Jib and Boom Simultaneous Operation 52
Dual Platform Capacity System 52
Driving and Steering 52
Drive Speeds 53
Pivoting Front Axle 53
Machine in Stowed Position 53
Machine Not in Stowed Position 53
Boom and Turntable Position/Axle and Drive Speeds 53
Drive Motion Alarm 54
Boom/Drive Cut-out 54
Platform Overload Sensing System 54
Snorkel Guard 54
Override Switch 54
Gradeability 55
Percent vs. Degree of Slope 55
Driving on a Slope 55
Calculating Percent Grade 56
Machine Gradeability 56
Electrical Power Outlet 56
AC Generator 56
AC 20 kW Generator Switch – Platform Welder 57
Dual Fuel 57
Panel Carrier 57
Platform Capacity 57
Diesel Particulate Filter Regeneration 58
Air Line 58
Driving Lights 59
Platform Work Lights 59
Platform Glazier Package 59
Platform Capacity 59

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

Platform Welder 59
Platform Capacity 60
Pressure Washer 60
Pipe Rack 61
Snorkel OnSite 62
Tire Pressure Monitoring System
– Flotation Tires Only 62
After Use Each Day 62

Chapter 9 – Stowing and Transporting

Stowing 63
Transporting 63
Driving 63
Winching 64
Hoisting 64
Securing for Transport 65
Storage 66

Chapter 10 – Emergency Operation

Emergency Power System 67
Lower Controls 67
Upper Controls 67
Override Switch 68
Towing 68

Chapter 11 – Troubleshooting

Troubleshooting Chart 71
AC 20 kW Generator – Platform Welder 76
Engine RPM 76
Output Voltage 76
Frequency 76

Appendix A – Glossary

Appendix B – Inspection Checklists

Limited Warranty

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

⚠Danger

Pinch points may exist between moving components. Death or serious injury will result from becoming trapped between components, buildings, structures, or other obstacles. Make sure all personnel stand clear while operating the aerial platform.

- Controls to position the platform are located on the lower control panel on the turntable and on the upper control panel in the platform.
- Controls to drive the aerial platform are located on the upper control panel only.

Battery Disconnect Switch

The battery disconnect is located behind the cowling door on the right side of the turntable (refer to Figure 6.1).

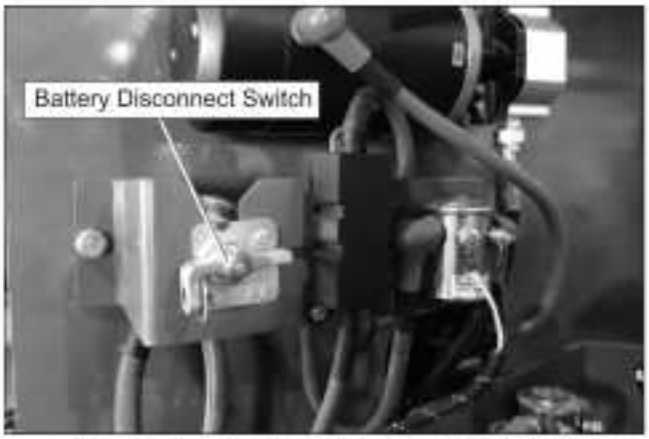


Figure 6.1 – Battery Disconnect Switch

The battery disconnect removes electrical power from all electrically controlled functions when in the off position.

- Place the switch in the on position to electrically connect the batteries to the electrical system.

⚠Caution

Only authorized personnel should operate the aerial platform. Unqualified personnel may cause injury to coworkers or property damage. Lock the battery disconnect switch in the off position before leaving the aerial platform unattended.

- Place the switch in the off position to prevent unauthorized use of the aerial platform. If so equipped, lock the battery disconnect switch in the off position.

Lower Controls

The lower controls (refer to Figure 6.2) are located on the left side of the turntable. Boom and platform functions can be operated from the lower controls. The following are located on the lower control panel:

- Start/emergency power/ground operation switch
- Emergency stop button
- Controls selector switch
- Rotation switch
- Boom elevation switch
- Boom extension switch
- Platform level switch
- Platform rotation switch
- Diagnostic center LCD display
- Circuit breaker reset button
- Fuel switch (dual fuel machines)
- Hydraulic system warm-up switch (option)

Start/Emergency Power/Ground Operation Switch
This switch (refer to Figure 6.2) is used to operate three machine functions. Engine start, activation of the emergency power system, and enable of the machine functions from the lower controls are all controlled with this switch.

If the engine is running, the switch acts as the ground operation switch. If the engine is off, the switch acts as the emergency power switch.

Engine Start
The start switch (refer to Figure 6.2) function works like an automobile ignition switch.

An alarm sounds when the switch is turned on to warn others that the machine engine is being started.

- Before starting the engine, check the Diagnostic Center LCD display window. WAIT TO START will be displayed if the engine is cold and the engine heater is on. The message may appear for 1 to 12 seconds, depending on the engine and ambient air temperature.
- Do not start the engine until the wait message is no longer displayed.
- If the engine turns over but does not start while the WAIT TO START message is displayed, turn the control selector switch to the middle/off position and back to the lower controls position. Do not start the engine until the wait message is no longer displayed.
- Hold the switch downward until the engine starts, then release it to on.
- If the engine dies, the controls switch must be turned to off before the engine can be restarted.

Emergency Power
The emergency power function is used to operate turntable, boom, and platform functions using the emergency power system when the engine is off/disabled. The switch (refer to Figure 6.2) is spring returned to the engine position for aerial platform engine operation.

⚠Caution

The emergency power system is for emergency lowering and stowing only. The length of time the pump can be operated depends on the capacity of the batteries. Do not use this system for normal operation.

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

6. The pressure washer is enabled when the generator is running.

7. Remove the wand from the holder in the platform to operate the pressure washer.

The water pressure may be adjusted using the knob beneath the pressure washer cover (refer to Figure 8.18).



Figure 8.18 – Pressure Adjustment

Pipe Rack

Some machines may be equipped with an optional pipe rack. The pipe rack consists of a pair of supports, mounted to the top and mid rails, one on each side of the rear of the platform (refer to Figure 8.19).

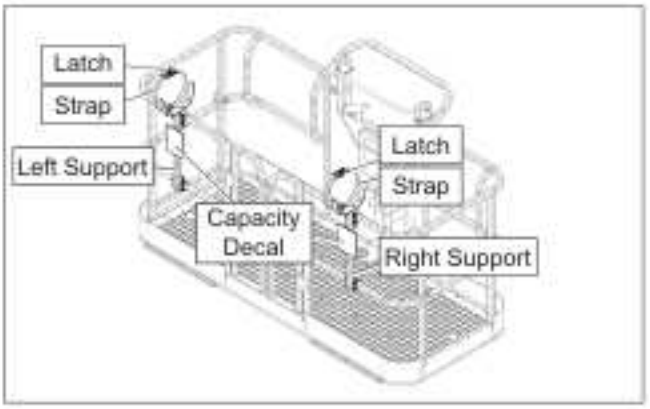


Figure 8.19 – Pipe Rack

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tipover accident. Do not exceed the capacity values indicated on the platform rating placard and on the pipe rack decal.

The rated load per pair of supports and the platform total capacity including the load on the pipe rack is stated on the pipe rack decal shown in Figure 8.20.



Figure 8.20 – Pipe Rack Rated Load and Platform Capacity

A pipe rack decal is located on the front of each support at the rear of the platform.

The platform rated work load is the total weight of the personnel and equipment that may be lifted in the platform.

Capacity values indicate the rated lifting capacity and do not indicate aerial platform stability.

The load carried in the pipe rack reduces the platform capacity by the weight of the load being carried.

The platform capacity is reduced by the weight of the two supports and by the weight of the load being carried.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tipover accident. Do not exceed the stated pipe length requirements or use with any other platform option.

The pipe rack is not to be used with any other platform option.

When loading the pipe rack:

- Pipe length cannot exceed 10 feet (305cm).
- The height of the pipes in the rack cannot exceed 6 inches (150mm).
- The load in the racks cannot exceed 150 lbs (68kg).
- Pipes must be centered and overhangs must be equal.

The operator bears ultimate responsibility for ensuring that the aerial platform is properly set up for the particular condition encountered.

Use the following procedure to load the pipe rack.

1. Make certain no one is beneath the platform when operating the machine with the pipe racks loaded.

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

Annual Maintenance – Every 500 Hours

Item	Procedure	Information	P/F/R
90 day or 150 hour maintenance	Perform maintenance per schedule	Retain copy of checklist	
Hydraulic oil reservoir	Clean and replace fluid	Dexron III ATF	
Hydraulic return filter	Replace	After first 50 hours, then at recommended interval	
Hydraulic high pressure filter	Clean and reinstall		
Hydraulic pressures	Pump setting	Standby pressure: 300 psi	
	Function pressures	Boom up: 2,900 – 3,000 psi	
		Boom down: 1,750 – 1,850 psi	
		Steer: 1,100 – 1,200 psi	
		Level: 2,800 – 2,950 psi	
		Extend/Retract: 2,850 – 2,950 psi	
		Swing: 1,450 – 1,550 psi	
Gear hubs	Replace fluid	SAE Grade 80W-90	
Swing drive	Replace fluid	Sae Grade 80W-90	
Engine coolant	Check condition	See engine owner's manual	

Maintenance Table Key: P = Pass, F = Fail, R = Repaired

Performed by: _____ Date: _____

Model Number: _____ Serial Number: _____

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

SAFETY RULES

⚠Warning

All personnel shall carefully read, understand and follow all safety rules and operating instructions before operating or performing maintenance on any Snorkel aerial work platform.

Electrocution Hazard	Tip Over Hazard	Collision Hazard	Fall Hazard
			
THIS MACHINE IS NOT INSULATED!	**NEVER** elevate the platform or drive the machine while elevated unless the machine is on a firm, level surface	**NEVER** position the platform without first checking for overhead obstructions or other hazards.	**NEVER** climb, stand, or sit on platform guardrails or midrail.

USE OF THE AERIAL WORK PLATFORM: This aerial work platform is intended to lift persons and his tools as well as the material used for the job. It is designed for repair and assembly jobs and assignments at overhead workplaces (ceilings, cranes, roof structures, buildings etc.). Uses or alterations to the aerial work platform must be approved by **Snorkel**.

THIS AERIAL WORK PLATFORM IS NOT INSULATED! For this reason it is imperative to keep a safe distance from live parts of electrical equipment!

Exceeding the specified permissible maximum load **is prohibited!** See "Platform Capacity" for details.

The use and operation of the aerial work platform as a lifting tool or a crane **is prohibited!**

NEVER exceed the manual force allowed for this machine. See "Manual Force" for details.

DISTRIBUTE all platform loads evenly on the platform.

NEVER operate the machine without first surveying the work area for surface hazards such as holes, drop-offs, bumps, curbs, or debris; and avoiding them.

OPERATE machine only on surfaces capable of supporting wheel loads.

NEVER operate the machine when wind speeds exceed this machine's wind rating. See "Beaufort Scale" for details.

Do not operate the aerial platform in windy or gusty conditions. Do not add anything to or take anything into the aerial platform that will increase the wind loading such as billboards, banners, flags, etc.

IN CASE OF EMERGENCY push EMERGENCY STOP switch to deactivate all powered functions.

IF ALARM SOUNDS while platform is elevated, STOP, carefully lower platform. Move machine to a firm, level surface.

Climbing up the railing of the platform, standing on or stepping from the platform onto buildings, steel or prefab concrete structures, etc., **is prohibited!**

Dismantling the entry gate or other railing components **is prohibited!** Always make certain that the entry gate is closed!

It is prohibited to keep the entry gate in an open position when the platform is raised!

To extend the height or the range by placing of ladders, scaffolds or similar devices on the platform **is prohibited!**

NEVER perform service on machine while platform is elevated without blocking elevating assembly.

INSPECT the machine thoroughly for cracked welds, loose or missing hardware, hydraulic leaks, loose wire connections, and damaged cables or hoses before using.

VERIFY that all labels are in place and legible before using.

NEVER use a machine that is damaged, not functioning properly, or has damaged or missing labels.

To bypass any safety equipment **is prohibited** and presents a danger for the persons on the aerial work platform and in its working range.

NEVER charge batteries near sparks or open flame. Charging batteries emit explosive hydrogen gas.

Modifications to the aerial work platform **are prohibited** or permissible only at the approval by **Snorkel**.

AFTER USE, secure the work platform from unauthorized use by turning the keyswitch off and removing key.

The driving of MEWP's on the public highway is subject to national traffic regulations.

Certain inherent risks remain in the operation of this machine despite utilizing proper design practices and safeguarding.

Harness attachment points are provided in the platform and the manufacturer recommends the usage of a fall restraint harness, especially where required by national safety regulations.

Care must be taken to ensure that the machines meets the requirements of stability during use, transportation, assembly, dismantling when out of service, testing, or foreseeable breakdowns.

In the event of an accident or breakdown see "Emergency Operation." Do not operate the aerial platform if it is damaged or not functioning properly. Qualified maintenance personnel must correct the problem before putting the aerial platform back into service.

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >

Minimum Safe Approach Distance – AS/NZS

Minimum safe approach distances to energized power lines and their associated parts must be observed while operating the aerial platform.

⚠Danger

The aerial platform is not electrically insulated. Death or serious injury will result from contact with, or inadequate clearance from, an energized conductor. Do not go closer than the minimum safe approach distance as defined by national safety regulations.

AS/NZS 2550.10:2006 define minimum distances that must be observed when working near overhead power lines on poles and overhead power lines on towers. Refer to the clearance requirements decals on the machine to determine safe approach distances (refer to Figure 1).

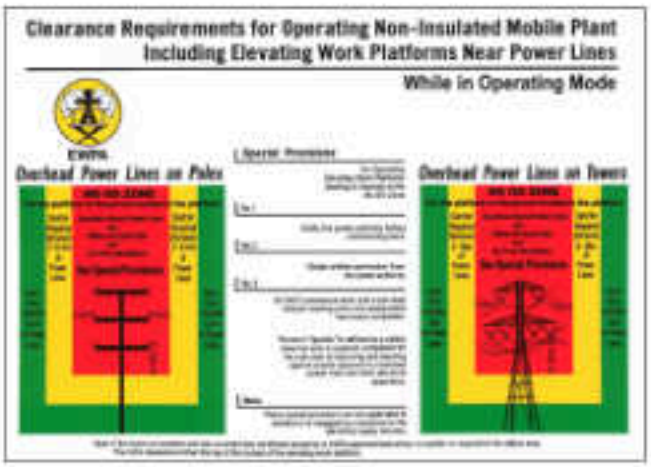


Figure 1 – Minimum Safe Approach Distance

Platform Capacity

Two people and their work materials may occupy the platform.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not exceed the capacity values indicated on the machine decals, placards, and in the machine specifications in this manual.

The maximum unrestricted rated load capacity and the maximum number of occupants for the aerial platform are stated on machine decals, placards, and in the machine specifications in this manual.

Manual Force

Manual force is the force applied by the occupants to objects such as walls or other structures outside the work platform.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not exceed the maximum allowable manual force indicated on the machine decals, placards, and in the machine specifications in this manual.

The maximum allowable manual force is limited to 45 lbs (200 N) of force per occupant, with a maximum of 90 lbs (400 N) for two occupants.

Wind Speeds

Do not add anything to the aerial platform that will increase the wind loading such as billboards, banners, flags, etc.

⚠Danger

The aerial platform can tip over if it becomes unstable. Death or serious injury will result from a tip-over accident. Do not operate the machine in wind speeds of 28 mph (12.5 m/s) or greater.

Do not operate the aerial platform in windy conditions with wind gusts or steady wind speeds of 28 mph (12.5 m/s) or greater. Refer to Figure 2.

Prestart Inspection

Perform a prestart inspection before each shift as described in Chapter 7. Do not use the aerial platform on the job unless you are trained and authorized to do so.

Work Place Inspection and Practices

Do not use the aerial platform as a ground connection when welding.

- The welding ground clamp must be attached to the same structure that is being welded.

BEAUFORT RATING	WIND SPEED				GROUND CONDITIONS
	m/s	km/h	ft/s	mph	
3	3,4~5,4	12,25~19,4	11.5~17.75	7.5~12.0	Papers and thin branches move, flags wave.
4	5,4~8,0	19,4~28,8	17.75~26.25	12.0~18	Dust is raised, paper whirls up, and small branches sway.
5	8,0~10,8	28,8~38,9	26.25~35.5	18~24.25	Shrubs with leaves start swaying. Wave crests are apparent in ponds or swamps.
6	10,8~13,9	38,9~50.0	35.5~45.5	24.5~31	Tree branches move. Power lines whistle. It is difficult to open an umbrella.
7	13,9~17.2	50,0~61,9	45.5~56.5	31.~38.5	Whole trees sway. It is difficult to walk against the wind.

Figure 2 – Beaufort Scale

MidWestTech | Snorkel 660SJ Telescopic Boom Lift Operator's Manual | Publication 14355... Order the manual at mid-west-tech.com >