MODELS | SJ 12



Operating Manual

Vertical Mast Series (ANSI/CSA)

155169AC-A February 2017

SKYJACK

MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A

Order the manual at mid-west-tech.com >

Table of Contents

Section 1 - About Your Aerial Platform

Read and Heed

Aerial Platform Definition 7
Purpose of Equipment 7
Use of Equipment 7
Manual 7
Operator 7
Service Policy and Warranty 7
Optional Accessories 7
Scope of this Manual 7

Safety Rules

Operator Safety Reminders 8
Electrocution Hazard 9
Safety Precautions 10

Section 2 - Operation

2.1 General 15
- 2.1-1 Operator Qualifications 15
- 2.1-2 Operator's Responsibility for Maintenance 15
- 2.1-3 Maintenance and Inspection Schedule 15
- 2.1-4 Owner's Inspections 15

2.2 Major Components 16
2.3 Major Assemblies 17
- 2.3-1 Base 17
- 2.3-2 Lifting Mechanism 17
- 2.3-3 Platform 17

2.4 Serial Number Nameplate 17
2.5 Component Identification 18
- 2.5-1 Main Power Disconnect Switch 18
- 2.5-2 Brake System 18
- 2.5-3 Base Control Console 18
- 2.5-4 Emergency Lowering System 19
- 2.5-5 Battery Charger 19
- 2.5-6 Hourmeter/Circuit Breaker/Diagnostic Switch 19
- 2.5-7 Tilt Alarm 19
- 2.5-8 Platform Control Console 20
- 2.5-9 AC Outlet on Platform 20
- 2.5-10 Manual Storage Box 20
- 2.5-11 Pothole Protection Device 21
- 2.5-12 Lanyard Attachment Anchorage 21
- 2.5-13 Platform Maintenance Lock Mechanism 22



MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A

Order the manual at mid-west-tech.com >

Table of Contents

Section 2 - Operation (Continued)

2.6 Operator's Responsibility 23
2.7 Visual and Daily Maintenance Inspections 24
2.8 Function Tests 29
2.9 Start Operation 35
2.9-1 To Activate Base Control Console 35
2.9-2 To Raise or Lower Platform Using Base Control Console 35
2.9-3 To Activate Platform Control Console 36
2.9-4 To Raise or Lower Platform Using Platform Control Console 36
2.9-5 To Drive Forward or Backward 36
2.9-6 To Steer 37
2.9-7 Shutdown Procedure 37
2.10 Loading/Unloading 38
2.10-1 Driving 38
2.10-2 Lifting 39
2.11 Winching and Towing Procedures 40
2.11-1 To Release Brakes Manually 40
2.12 Emergency Lowering Procedure 41
2.13 Platform Traversing (If equipped) 42
2.14 Accessing the Hydraulic/Electrical Compartment 42
2.15 Battery Maintenance 44
2.15-1 Battery Service Procedure 44
2.15-2 Battery Charging Operation 44
2.16 Tables 46
2.17 Labels 52

List of Tables

2.1 Standard and Optional Features 46
2.2 Owner's Annual Inspection Record 47
2.3 Specifications and Features 47
2.4 Maximum Platform Capacities (Evenly Distributed) 48
2.5 Floor Loading Pressure 48
2.6 Maintenance and Inspection Schedule 50
2.7 Operator's Checklist 51



MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A

Order the manual at mid-west-tech.com >

2.0 Operation

This section provides the necessary information needed to operate the aerial platform. It is important that the user reads and understands this section before operating the aerial platform.

2.1 General

In order for this aerial platform to be in good working condition, it is important that the operator meets the necessary qualifications and follow the maintenance and inspection schedule referred to in this section.

2.1-1 Operator Qualifications

- Only trained and authorized personnel shall be permitted to operate an aerial platform.
- Safe use of this aerial platform requires the operator to understand the limitations and warnings, operating procedures and operator's responsibility for maintenance. Accordingly, the operator must understand and be familiar with this operating manual, its warnings and instructions, and all warnings and instructions on the aerial platform.
- The operator must be familiar with employer's work rules and related government regulations and be able to demonstrate the ability to understand and operate this make and model of aerial platform in the presence of a qualified person.

2.1-2 Operator's Responsibility for Maintenance

⚠ WARNING

Maintenance must be performed by trained and competent personnel who are familiar with mechanical procedures.

Death or serious injury could result from the use of an aerial platform that is not properly maintained or kept in good working condition.

- The operator must be sure that the aerial platform has been properly maintained and inspected before using it.
- The operator must perform all the daily inspections and function tests found in Table 2.6, even if the operator is not directly responsible for the maintenance of this aerial platform.

2.1-3 Maintenance and Inspection Schedule

- The inspection points covered in Table 2.6 indicate the areas of the aerial platform to be maintained or inspected and at what intervals the maintenance and inspections are to be performed.
- The actual operating environment of the aerial platform may affect the maintenance schedule.

⚠ WARNING

Use original or manufacturer-approved parts and components for the aerial platform.

2.1-4 Owner's Inspections

It is the responsibility of the owner to arrange daily, quarterly (or 150 hours) and annual inspections of the aerial platform. Refer to Table 2.6 for recommended maintenance and inspection areas and intervals. A record of annual inspection is kept on a label located on the mast. Refer to Table 2.2 in this manual.

MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A Order the manual at mid-west-tech.com >

2.9-3 To Activate Platform Control Console

1. Turn main power disconnect switch to "|"on position.
2. On base control console, pull out "●" emergency stop button.
3. Select base/off/platform key switch to "" platform position.

WARNING

Ensure that you maintain three points of contact to mount/dismount platform.

4. Open the gate and access the platform.
5. Close the gate.
6. On platform control console, pull out "●" emergency stop button.

2.9-4 To Raise or Lower Platform Using Platform Control Console

WARNING

Be aware of overhead obstructions or other possible hazards around the aerial platform when lifting.

WARNING

Do not lower the platform unless the area below is clear of personnel and obstructions.

1. On platform control console, select lift/off/drive switch to "" lift position.
2. Activate and hold "" enable trigger switch.
3. Move controller handle forward or backward until desired height is reached.
4. Return controller to neutral center position to stop. Release "" enable trigger switch.

WARNING

To protect against unintended movement of the aerial platform, push in the emergency stop button after you have arrived at your desired location or elevation.

NOTE

If the tilt alarm sounds and the platform does not, or only partially raises, immediately lower the platform completely and ensure that the aerial platform is on a firm level surface.

2.9-5 To Drive Forward or Backward

WARNING

Be aware of blind spots when operating the aerial platform.

WARNING

Ensure that there are no personnel or obstructions in the path of travel, including blind spots.

1. On platform control console, select lift/off/drive switch to drive "" position.
2. Activate and hold "" enable trigger switch.
3. Move controller handle "" forward/up or "" backward/down to desired speed and direction of aerial platform travel.
4. Return controller to neutral center position to stop. Release "" enable trigger switch.

WARNING

To protect against unintended movement of the aerial platform, push in the emergency stop button after you have arrived at your desired location or elevation.

MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A Order the manual at mid-west-tech.com >

Table 2.4 Maximum Platform Capacities (Evenly Distributed)

MODEL	Capacity		Maximum Wind Speed	Tilt Cutout Setting
SJ12	500 lb.	2 Person(s)	28 mph	1.5 x 3

267AA

Table 2.5 Floor Loading Pressure

MODEL		Total Aerial Platform Weight	Total Aerial Platform Load	
			Wheel	OUP**
		lb.	lb.	psf
SJ12	min*	1720	430	150
	max*	2220	880	195

268AA

* **min** - Aerial platform weight with no options


max - Aerial platform weight + all options + full capacity

** **LCP - Locally Concentrated Pressure** is a measure of how hard the aerial platform presses on the areas in direct contact with the floor. The floor covering (tile, carpet, etc.) must be able to withstand more that the indicated values above.

OUP - Overall Uniform Pressure is a measure of the average load the aerial platform imparts on the whole surface directly underneath it. The structure of the operating surface (beams, etc.) must be able to withstand more than the indicated values above.

NOTE:

The LCP or **OUP** that an individual surface can withstand varies from structure to structure and is generally determined by the engineer or architect for that particular structure.

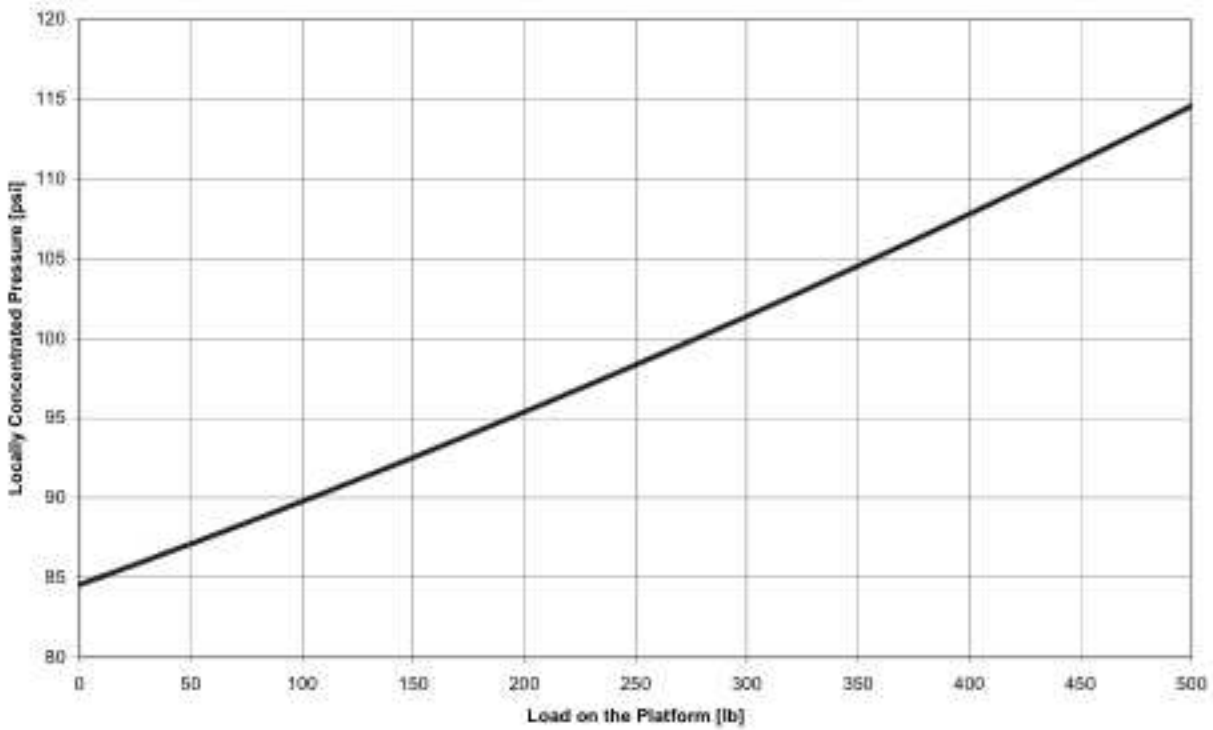

MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A Order the manual at mid-west-tech.com >

Table 2.1 Standard and Optional Features

Models	SJ12
STANDARD EQUIPMENT	
Maximum drive height	Full Height
Variable speed, front two wheel hydraulic drive	•
90° steering (zero inside turning radius)	•
Dual holding brakes	•
Proportional controls	•
24V DC power source	•
Low voltage battery protection	•
Solid rubber, non-marking tires	•
Pothole protection system	•
110V AC outlet at platform with GFI	•
Tilt alarm with drive & lift cut-out	•
All motion audible alarm	•
Lanyard attachment points	•
Operator horn	•
Lift lugs/tie downs	•
Relay based control system	•
Color coded and numbered wiring system	•
Traversing platform	•
Chain entrance gate	•
OPTIONAL EQUIPMENT	
Flashing light	•
AC inverter	•
Light duty pipe rack/steel stud rack	•
Tool tray	•
Fluorescent light holder	•
Full height spring hinged gate	•

265AA

MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A Order the manual at mid-west-tech.com >

Safety Precautions

Know and understand the safety precautions before going on to next section.

WARNING

Failure to heed the following safety precautions could result in tip over, falling, crushing, or other hazards leading to death or serious injury.

- **KNOW** all national, state or territorial/provincial and local rules which apply to your aerial platform and job site.
- **TURN** main power disconnect switch "◯" off when leaving the aerial platform unattended. Remove the key to prevent unauthorized use of the aerial platform.
- **WEAR** all the protective clothing and personal safety devices issued to you or called for by job conditions.
- **DO NOT** wear loose clothing, dangling neckties, scarves, rings, wristwatches or other jewelry while operating this lift.



- **AVOID** entanglement with ropes, cords or hoses.



- **AVOID** falling. Stay within the boundaries of the guardrails.



- **DO NOT** raise the aerial platform in windy or gusty conditions.



- **DO NOT** increase the lateral surface area of the platform. Increasing the area exposed to the wind will decrease aerial platform stability.



- **DO NOT** drive or elevate the aerial platform if it is not on a firm level surface. Do not drive elevated near depressions or holes of any type, loading docks, debris, drop-offs and surfaces that may affect the stability of the aerial platform.



- **If operation in areas with holes or drop-offs is absolutely necessary,** elevated driving shall not be allowed. Position the aerial platform horizontally only with the platform fully lowered. After ensuring that all 4 wheels or outriggers (if equipped) have contact with level firm surface, the aerial platform can be elevated. After elevation, the drive function must not be activated.



- **Elevated driving** must only be done on a firm level surface.



- **DO NOT** ascend or descend a grade when elevated. When fully lowered, ascending or descending grades up to maximum rated inclines listed in Table 2.3.



MidWestTech | Skyjack SJ12 Vertical Mast Lift Operating Manual | Publication 155169AC-A
Order the manual at mid-west-tech.com >