

SERVICE MANUAL (ANSI/CSA)

DC ELECTRIC SCISSORS

MODELS SJIII 3215 SJIII 3219

157927AP October 2025

SKYJACK

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Section 1 - Scheduled Maintenance

Operator's Responsibility for Maintenance

Aerial Platform and Mobile Elevating Work Platform Definition 7
Purpose of Equipment 7
Use of Equipment 7
Manuals 7
Service Policy and Warranty 7
Operator Safety Reminders, Warnings and Precautions 7
Maintenance and Inspection Schedule 8
Owner's Annual Inspection Record 8
Replacement Parts 8
Maintenance and Service Safety Tips 8
Hydraulic System & Component Maintenance and Repair 9
Maintenance Hints 10
Railing Maintenance and Repair 10

Service and Maintenance

About this Section 11
Service Bulletins 11
Maintenance and Inspection 11
Maintenance Instructions 11

Tables

Table 1.1 Owner's Annual Inspection Record 12
Table 1.2 Pre-Delivery/Maintenance Inspection Checklist 13

Scheduled Maintenance

1.1 Scheduled Maintenance Inspections 14
1.2 Function Tests 24

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Table 2.3 Maximum Platform Capacities (Evenly Distributed)


MODEL	Manual Extension Platform				Powered Extension Platform		Maximum Wind Speed	Tilt Cutout Setting
	Total Capacity		Extension Capacity		Total Capacity	Extension Capacity		
3215	600 lb. 272 kg	2 Persons	250 lb. 113 kg	1 Person	N/A		28 mph 12.5 m/s	1.5 x 3.5
3219	550 lb. 249 kg	2 Persons	250 lb. 113 kg	1 Person	N/A		28 mph 12.5 m/s	1.5 x 3.5

1058_ANSI_MPC_AA

NOTE: Overall Capacity - Occupants and materials not to exceed rated load.

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

3.14 Electrical Harness - ZTR Telematics

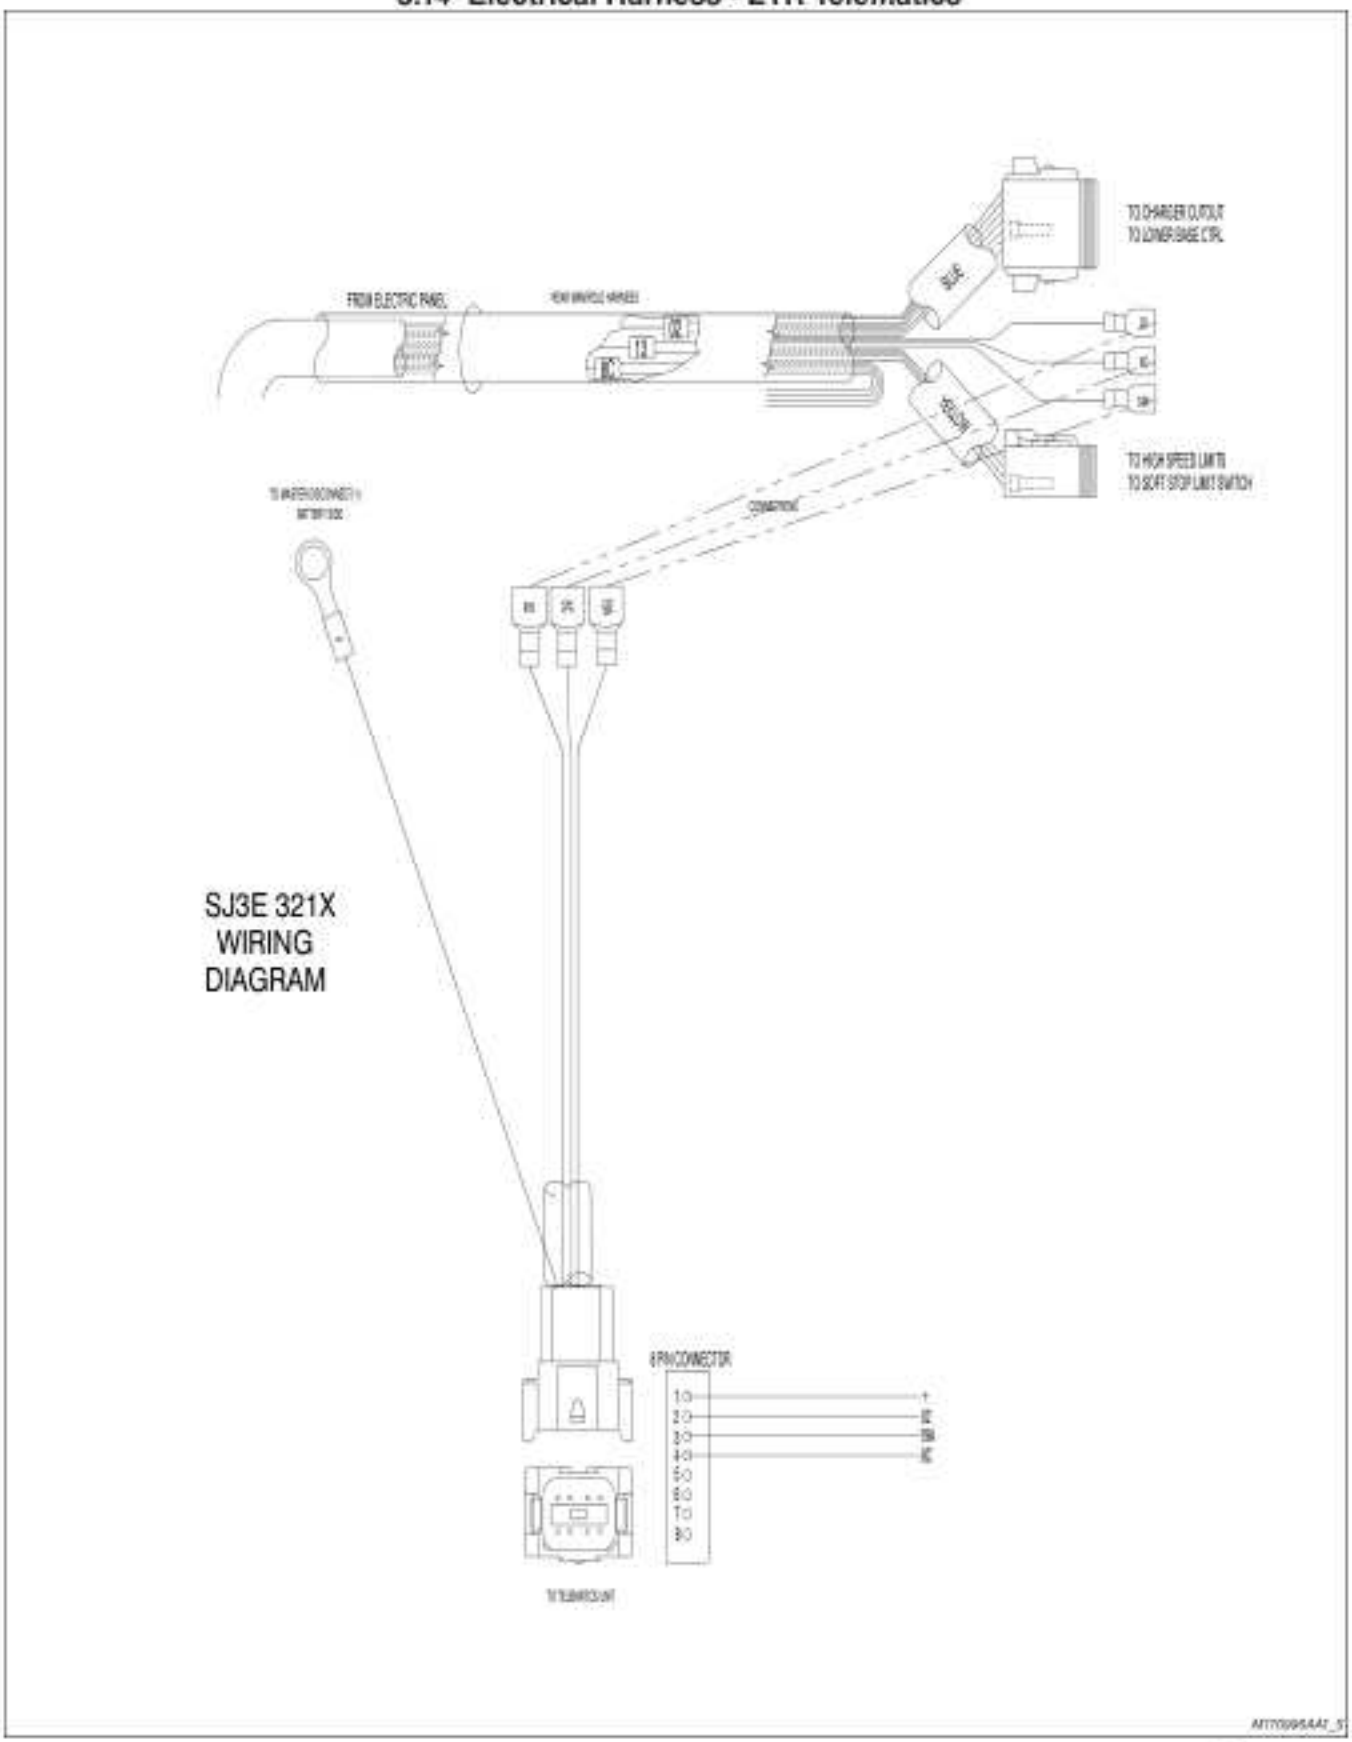

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Introduction - Troubleshooting

The following pages contain a table of Troubleshooting Information for locating and correcting most service trouble which can develop. Careful and accurate analysis of the systems listed in the table of Troubleshooting Information will localize the trouble more quickly than any other method. This manual cannot cover all possible troubles and deficiencies that may occur. If a specific trouble is not listed, isolate the major component in which the trouble occurs, isolate whether the problem is electrical or hydraulic, and then isolate and correct the specific problem.

The content of this section is separated into "probable cause" and "remedy." The information preceded by a number represents the "probable cause." The following line, noted by a dash represents the "remedy" to the "probable cause" directly above it. See example below for clarification.

1. Probable Cause
   - Remedy

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Table 2.7 Torque Specifications for Hydraulic Couplings & Hoses

HYDRAULIC COUPLING TORQUE CHART O-Ring Port Connectors				
SAE Size	Steel Ports		Non-ferrous Ports	
	ft-lb	Nm	ft-lb	Nm
4	14-16	20-22	9-10	12-13
6	24-26	33-35	15-16	20-21
8	50-60	68-78	30-36	41-47
10	72-80	98-110	43-48	60-66
12	125-135	170-183	75-81	102-110
16	200-220	270-300	120-132	162-180
20	210-280	285-380	126-168	171-228
24	270-360	370-490	162-216	222-294
32	-	-	-	-

HOSE END TORQUE CHART for JIC									
Size		Steel				Brass			
Dash	Frac.	ft-lb		Nm		ft-lb		Nm	
		Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
-4	1/4"	10	11	13	15	5	6	6.75	9
-6	3/8"	17	19	23	26	12	15	17	20
-8	1/2"	34	38	47	52	20	24	27.66	33
-10	5/8"	50	56	69	76	34	40	46.33	55
-12	3/4"	70	78	96	106	53	60	72.33	82
-16	1"	94	104	127	141	74	82	100.5	111
-20	1 1/4"	124	138	169	188	75	83	101.5	113
-24	1 1/2	156	173	212	235	79	87	107	118
-32	2"	219	243	296	329	158	175	214	237

HOSE END TORQUE CHART for Flat-Face O-Ring Seal (Steel)					
Size		Torque Specification			
Dash	Frac.	ft-lb		Nm	
		Min.	Max.	Min.	Max.
-4	1/4"	10	12	14	16
-6	3/8"	18	20	24	27
-8	1/2"	32	40	43	54
-10	5/8"	46	56	60	75
-12	3/4"	65	80	90	110
-14	1"	65	80	90	110
-16	1 1/4"	92	105	125	240
-20	1 1/2	125	140	170	190
-24	2"	150	180	200	245

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Section 6 - APPENDIX A

Parts List

6.1 Electrical Component Parts List....128

Diagrams and Schematics

6.2 Platform Control Console Diagram - Motor Controller....129
6.3a Electrical Panel Diagram - Motor Controller....130
6.3b Electrical Panel Diagram - Motor Controller....131
6.4 Electrical Panel M/C with Inverter Option....132
6.5 Main Manifold Harness - Motor Controller....133
6.6 Hydraulic Schematic - Motor Controller....134
6.7a Electrical Schematic - Motor Controller....135
6.7b Electrical Schematic - Motor Controller....136

Troubleshooting

Introduction - Troubleshooting....138

Electrical System

6.7-1 All Controls Inoperative....139
6.7-2 All Controls Except for Down Function Inoperative....140
6.7-3 All Controls Inoperative From Base Control Console....140
6.7-4 No Up Function from Base Control Console....140
6.7-5 Up Function Slow from Base Control Console....141
6.7-6 No Down Function from Base Control Console....141
6.7-7 All Controls Inoperative From Platform Control Console....142
6.7-8 No Up Function from Platform Controls....142
6.7-9 Up Function Slow from Platform Control Console....143
6.7-10 No Down Function from Platform Controls....143
6.7-11 Steer Only Inoperative....143
6.7-12 Right Steer Inoperative....144
6.7-13 Left Steer Inoperative....144
6.7-14 Drive Only Inoperative....144
6.7-15 No Drive or Steer when Platform Fully Lowered....144
6.7-16 No Drive or Steer when Platform Elevated....145
6.7-17 Platform Drives in Slow Speed Only....145
6.7-18 Brake will not Release....145
6.7-19 Forward Drive Function Inoperative....145
6.7-20 Reverse Drive Function Inoperative....146


Hydraulic System

6.8-1 All Function Inoperative....146
6.8-2 All System Sluggish....146
6.8-3 Platform Drifts Down....146
6.8-4 Platform Lifts Slowly....146
6.8-5 Platform does not Lift....146
6.8-6 Platform will not Lower....147
6.8-7 Platform Lowers Slowly (3215 only)....147
6.8-8 Platform Drives Slow....147
6.8-9 Platform will not Drive in Forward or Reverse....147
6.8-10 Brake(s) will not Release....147
6.8-11 Platform does not Steer....147

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

3.21c Electrical Panel Diagram (EE Rated)

Serial Breakdown Reference Chart	
Model	**Serial Number**
SJIII 3215	10001534 & Above
SJIII 3219	22093343 & Above

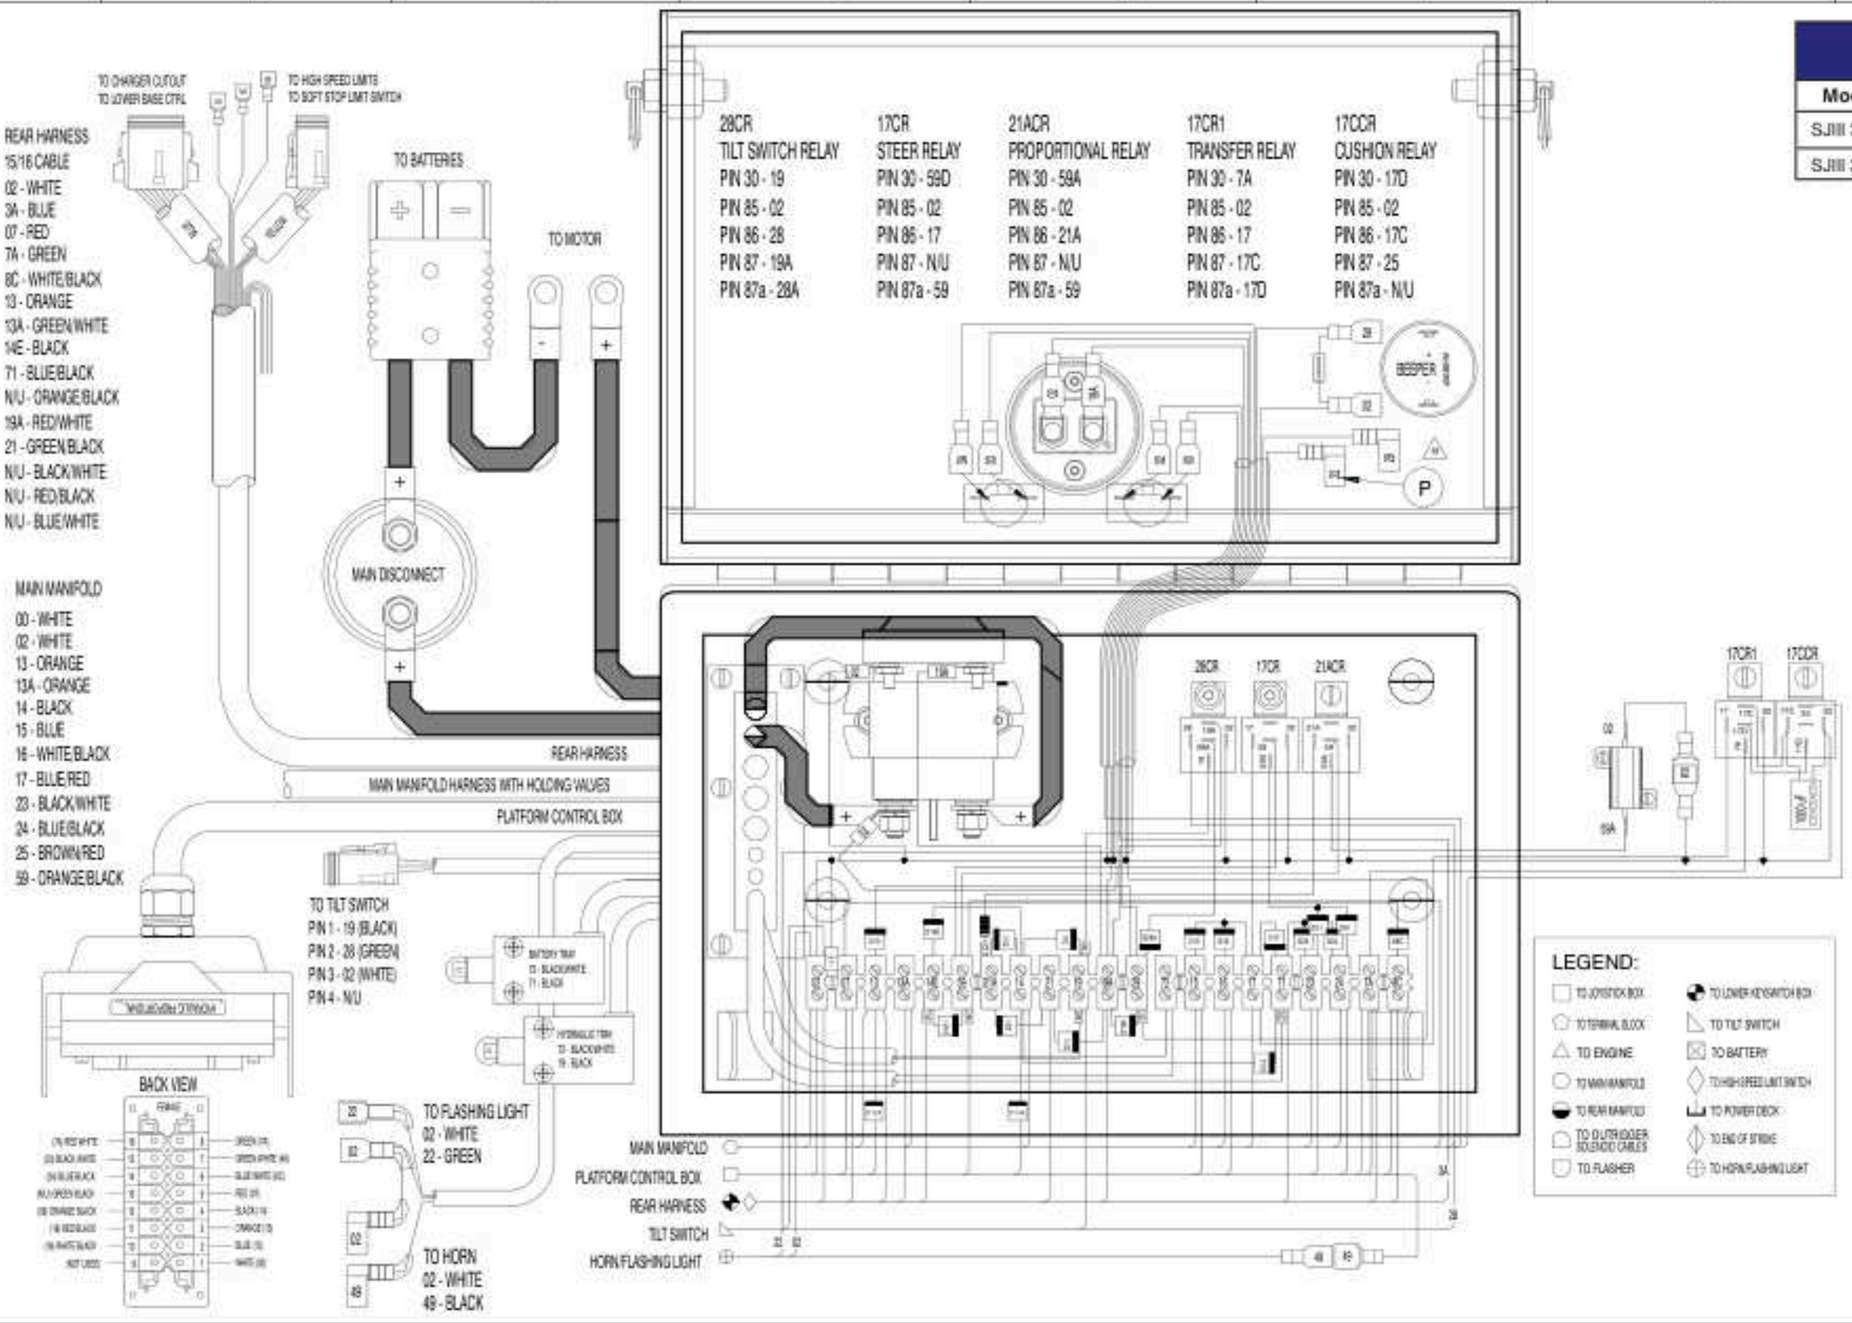

MidWestTech | Skyjack SJIII 3215, SJIII 3219 Electric Scissor Lift Service Manual | Publication 157927AP

Order the manual at mid-west-tech.com >