

OPERATING MANUAL (ANSI/CSA)

ROUGH TERRAIN SCISSORS

MODELS SJ6826 RT SJ6832 RT

158005AD-A December 2025

SKYJACK

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >

Table of Contents

Section 1 - About Your Aerial Platform 5
Read and Heed 5
Safety Rules 6

Section 2 - Familiarization 13
2.1 Familiarization of SJ68RT Series 13
2.2 Component Identification 14
2.3 Visual & Daily Maintenance Inspections 19
2.4 Function Tests 28
2.5 Winching and Towing Procedure 37
2.6 Emergency Lowering Procedure 38

Section 3 - Operation 39
3.1 General 39
3.2 Major Components 40
3.3 Major Assemblies 41
3.4 Serial Number Nameplate 41
3.5 Component Identification 42
3.6 Component Identification (Optional Equipment/Attachments) 44
3.7 Operator's Responsibility 46
3.8 Start Operation 47
3.9 Refueling Procedure 54
3.10 Guardrail Folding Procedure 56
3.11 Loading/Unloading 58
3.12 Moving the Aerial Platform Through a Doorway 60
3.13 Maintenance Support Procedure 62

Section 4 - Tables 63
Table 4.1 Standard and Optional Features 63
Table 4.2 Specifications and Features 64
Table 4.3 Owner's Annual Inspection Record 65
Table 4.4 Maximum Platform Capacities (Evenly Distributed) 66
Table 4.5 Floor Loading Pressure 67
Table 4.6 Maintenance and Inspection Schedule 69
Table 4.7 Operator's Checklist 70

Section 5 - Labels 71

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >

3.8-10 Generator (If Equipped)

To start generator:

1. On platform control console, select lift/torque/drive switch or lift/drive switch to "↑↓" lift position.
2. On outrigger/generator control console, select generator switch to " " energized position. The engine will automatically switch to low throttle and the generator will start.

To restore normal operation:

3. Flip generator switch to "○" off position. The generator will turn off.

NOTE

Activating any lift or outrigger functions, changing key switch settings, activating emergency stop or an engine stall will turn off the generator. The platform may be lowered during generator operation.

3.8-11 Electrical Inverter (If Equipped)

The inverter is operational with alternating current available at all times when the aerial platform is on. The emergency stop button will turn the inverter off.

To check status of inverter:

1. Inverter state is indicated by the LEDs on the face of the inverter. A glowing green LED indicates normal operation. If a fault occurs, the status LEDs will indicate the area responsible. Refer to Section 3.6-2.

3.8-12 Shutdown Procedure

1. Completely lower the platform.
2. On the platform control console, push in "●" emergency stop button.

⚠ WARNING

Ensure that you maintain three points of contact when using the ladder to mount/ dismount platform.

3. Use the ladder to dismount from platform..
4. Turn platform/engine/base key switch to "⏱" engine position and remove key.
5. Turn emergency main power disconnect switch to "○" off position.

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >

Table 4.4 Maximum Platform Capacities (Evenly Distributed)

MODEL		Total Machine Weight			Extension			Maximum Wind Speed	Tilt Cutout Setting (Degrees)
		Capacity		Number of Occupants	Capacity		Number of Occupants		
6826	One Extension Platform	1250 lb.	567 kg	4	300 lb.	136 kg	1	12.5 m/s	2.5 x 4.5
6832	One Extension Platform	1000 lb.	453.6 kg	4	300 lb.	136 kg	1	12.5 m/s	2.5 x 4.5

RTC T4.4AB - 1000490P


NOTE:

Occupants and materials are not to exceed rated load.
Refer to capacity label for additional information and for models equipped with options.


MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >


Labels - Models 6826 & 6832

Front Side (Continued)

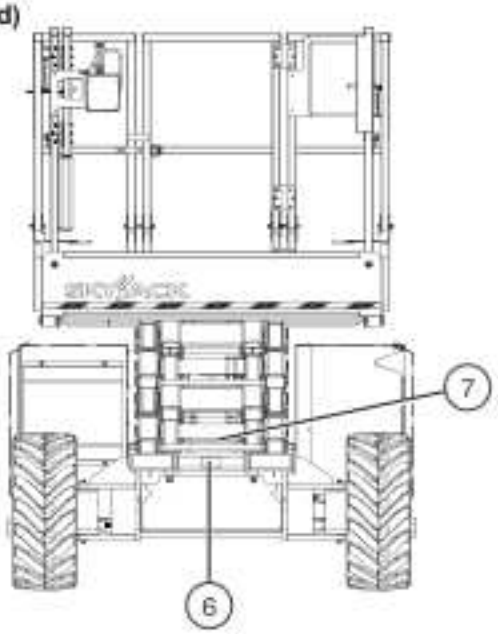


Top View

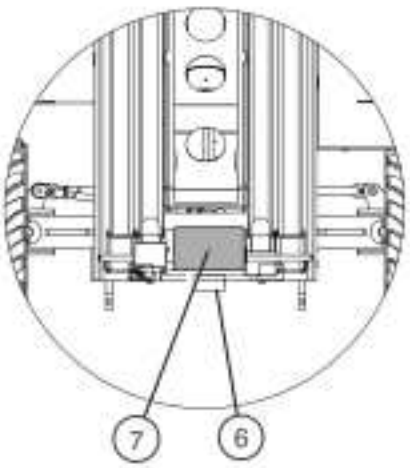

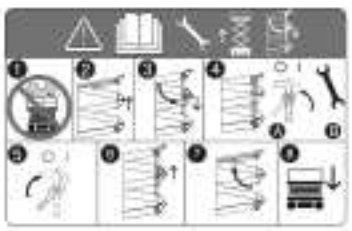No.	Label Pictorial	Description
6		**Lift and Tie Down Points** Only use these points for lifting or tying down.
7		**How to engage maintenance support for inspection or maintenance.** Refer to Operating manual. 1. Remove all material from platform. 2. Raise platform until there is adequate clearance to swing down maintenance support. 3. Swing maintenance support down from storage bracket into a vertical position. Lower platform until the bottom end of maintenance support rests on the lower cross bar. 4. Maintenance support is now secured. (A) Turn main power disconnect switch to off position. (B) Perform inspection/maintenance. 5. Turn main power disconnect switch to on position. 6. Raise platform until there is adequate clearance to swing up maintenance support. 7. Swing maintenance support up and place into storage bracket. 8. Ensure platform is fully lowered.

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >

3.2 Major Components

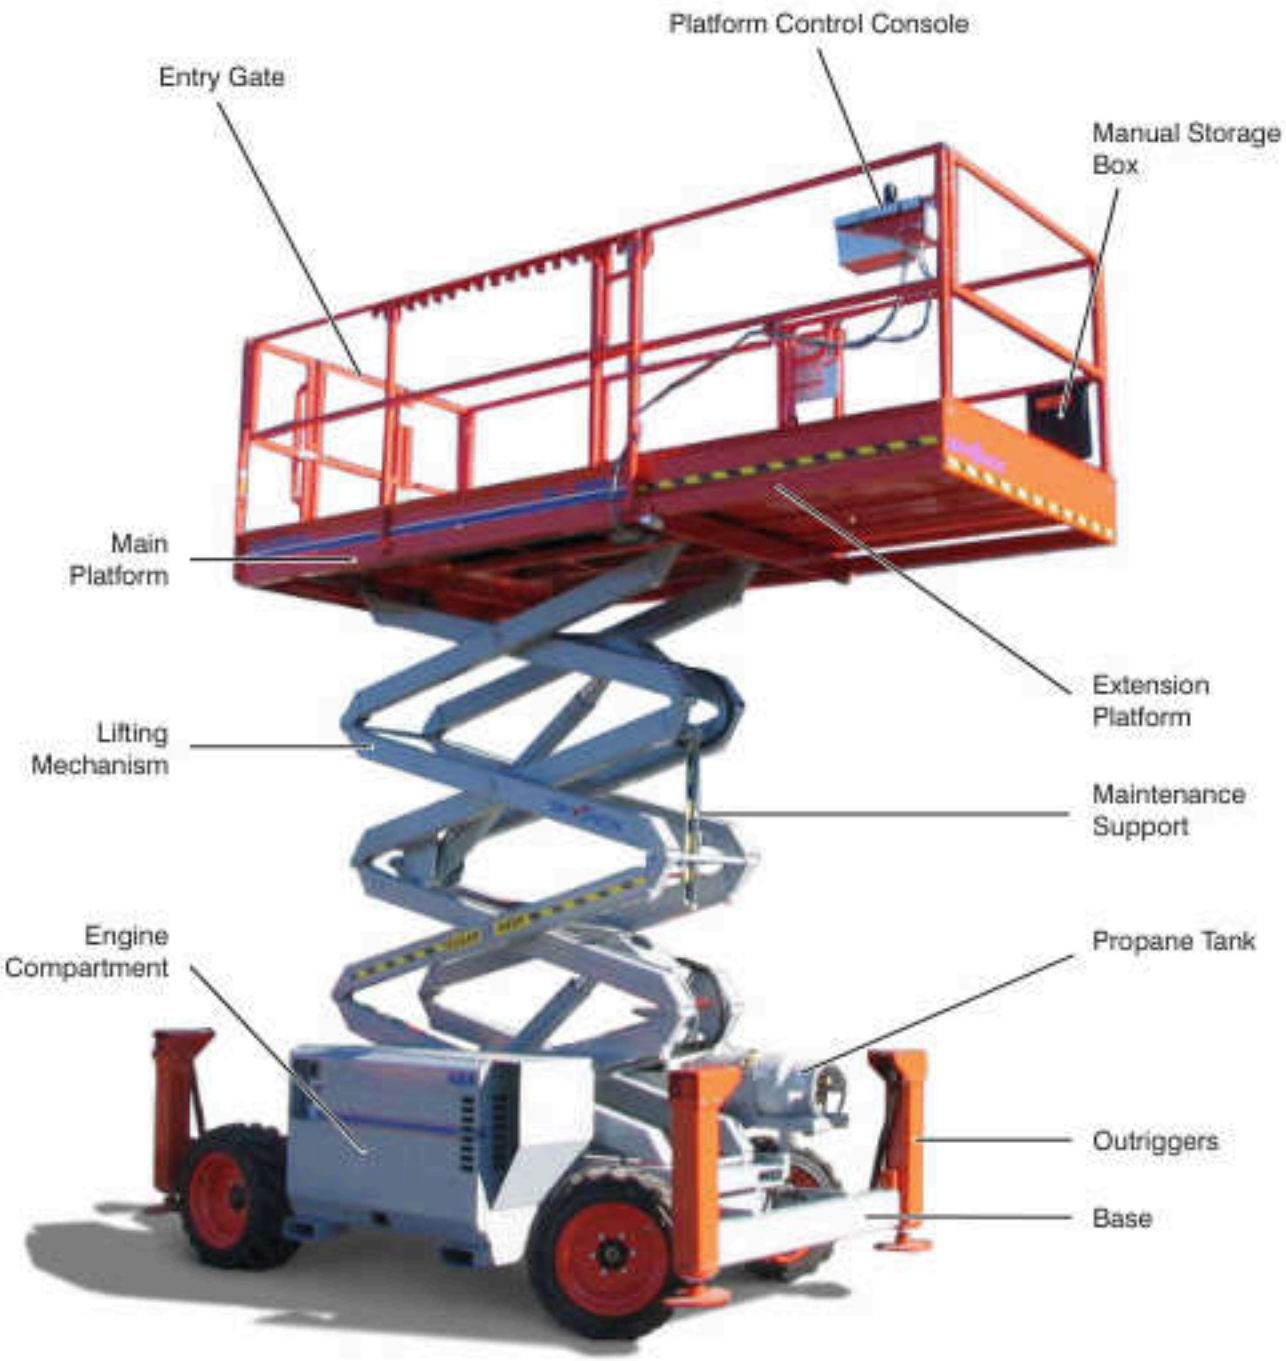

SKYJACK Model SJ 6826RT Aerial Platform

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >

Table 4.1 Standard and Optional Features

MODEL	Compact RT's	
	6826	6832
STANDARD EQUIPMENT		
Platform controls	•	•
Base controls	•	•
Four-wheel drive	•	•
23.1 kW (31 hp) Kubota DF972 dual fuel - gasoline/propane engine	•	•
Easy operation 60" roll out extension	•	•
Swing out engine tray	•	•
Multiple wet disc – Spring applied hydraulic release brakes	•	•
Manual brake release	•	•
110V AC outlet on platform	•	•
Tilt alarm with drive/lift cutout	•	•
Lanyard attachment points	•	•
Hinged railing system	•	•
Operator horn	•	•
Spring loaded full height gate at rear	•	•
Forklift pockets, tie down/lifting lugs	•	•
Foam filled low profile grip lug tires	•	•
Hourmeter	•	•
Color coded and numbered wiring system	•	•
Hydraulic oil level indicators	•	•
OPTIONAL EQUIPMENT		
Flashing light	•	•
18.5 kW (24.8 hp) Kubota D902 diesel water-cooled engine	•	•
Diesel scrubber	•	•
All motion audible alarm	•	•
Shop air line to platform	•	•
800 Watt AC inverter	•	•
Work lights	•	•
Independent leveling hydraulic outriggers	•	•
Extra propane tank	•	•

80436AE-ANSI

MidWestTech | Skyjack SJ6826 RT, SJ6832 RT Rough Terrain Scissor Lift Operating Manua... Order the manual at mid-west-tech.com >