snorkel

SR5719



OPERATOR'S and MAINTENANCE MANUAL

Part Number 159-0001-000
June 2018

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

Table of Contents

1. GENERAL INFORMATION 8
1.1 PRELIMINARY INFORMATION 9
1.1.1 DOCUMENT IDENTIFICATION 9
1.1.2 SYMBOLS USED IN THE MANUAL 9
1.1.3 MANUAL OWNERSHIP 9
1.1.4 VALIDITY 9
1.1.5 THE IMPORTANCE OF THE MANUAL 10
1.1.6 RECIPIENTS OF THE MANUAL 10
1.1.7 SAFE-KEEPING OF THE MANUAL 10
1.1.8 TERMINOLOGY USED 10
1.2 THE MANUFACTURER 11
1.3 THE DEALER 11
1.4 CE CERTIFICATION 12
1.5 OPERATOR TRAINING 12
1.5.1 DRIVING ABILITY 12
1.6 MACHINE IDENTIFICATION 12
1.6.1 TECHNICAL NAME 12
1.6.2 IDENTIFICATION PLATE 13
1.7 NOISE 14
1.7.1 SR5719 TIER IV FINAL MODEL 14
1.8 VIBRATION 14
TECHNICAL SPECIFICATIONS 15
1.8.1 MACHINE MASS – SR5719 MODEL 15
1.8.2 MACHINE SIZE – SR5719 MODEL 16
1.8.3 BRAKING SYSTEMS 17
1.8.4 TRANSMISSION 17
1.8.5 STEERING 17
1.8.6 HYDRAULIC SERVICES SYSTEM 18
1.8.7 DIFFERENTIAL BRIDGES 18
1.8.8 DIESEL ENGINE 18
1.8.9 COOLING SYSTEM 18

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

1.8.10 TIRES 18
1.8.11 DRIVER CABIN 19
1.9 REGULATORY REFERENCES 20
2. SAFETY 22
2.1 INTENDED USE OF THE MACHINE 23
2.2 UNINTENDED USE 23
2.3 LIMITS OF USE 24
2.4 GENERAL REGULATIONS FOR USE 25
2.5 WORKING ON SITE 25
2.6 MANEUVERING ON UNEVEN GROUND 27
2.7 MANEUVERING ON A TRANSVERSAL SLOPE 27
2.8 MANEUVERING ON A LONGITUDINAL SLOPE 28
2.9 IN CASE OF TIPPING OVER 28
2.10 PREPARING TO DRIVE 29
2.10.1 ACCESS TO THE DRIVER CABIN 29
2.10.2 ADJUSTING THE DRIVER'S SEAT 30
2.10.3 TILTING THE SEAT 31
2.10.4 SAFETY BELTS 31
2.10.5 ADJUSTING THE STEERING WHEEL 32
2.11 OPENING THE BACK WINDOW 32
2.12 HEATING AND AIR CONDITIONING 32
2.13 SAFETY DECALS 34
2.14 LOAD DIAGRAM 36
2.14.1 STABILITY CONDITIONS 37
2.15 ANTI-TIP SYSTEM (LLMI-LLMC) 38
2.16 TRANSPORTING THE MACHINE 39
2.16.1 LOADING AND UNLOADING WITH RAMPS 39
2.16.2 LOADING AND UNLOADING WITH A CRANE 39
2.17 GENERAL SAFETY WARNINGS 40
2.18 CHECKING ENGINE START UP 41
2.19 MOVEMENT IN REVERSE DRIVE 42
2.20 REFUELLING THE MACHINE 42
2.20.1 FUEL QUALITY (DIESEL) 43
2.21 STORING THE MACHINE 43

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

2.22 MACHINE DEMOLITION 43
2.23 USING THE MACHINE 43
2.23.1 DRIVING ABILITY 44
2.23.2 RESPONSIBLE USE 44
2.23.3 RESPONSIBLE DRIVING 44
2.24 ROAD CIRCULATION 45
2.24.1 BEFORE MOVING 45
2.24.2 FORWARD DRIVE 45
2.24.3 REVERSE DRIVE 45
2.24.4 PARKING 46
3 SR5719 TIER IV FINAL CONTROLS AND GENERAL REGULATIONS 47
3.1 DESCRIPTION OF THE CONTROLS 48
3.1.1 CONTROL LEVERS ON THE STEERING COLUMN 48
3.1.2 DESCRIPTION OF THE RIGHT FRONT DASHBOARD 50
3.1.3 RIGHT FRONT DASHBOARD 73
3.1.4 FIRST RIGHT SIDE DASHBOARD 73
3.1.5 SECOND RIGHT SIDE DASHBOARD 75
3.1.6 TOP RIGHT SIDE DASHBOARD 76
3.1.7 PEDALS 76
3.1.8 JOYSTICK 78
3.1.9 FLOATING BOOM FUNCTION 80
3.1.10 BOOM SUSPENSION FUNCTION 80
4 OPERATING WITH THE MACHINE 81
4.1 START UP 82
4.2 FORWARD DRIVE OR REVERSE DRIVE 82
4.3 STEERING 83
4.4 SELECTING THE DRIVING MODE 84
4.5 ACCESSORY COUPLING AND RELEASE 85
4.6 STACKING 88
4.6.1 HOW TO DRAW A LOAD 88
4.6.2 HOW TO DRAW A LOAD FROM ABOVE 88
4.7 LIMITS OF MACHINE USE 89
4.7.1 TRANSPORTING THE LOAD 89
4.7.2 TRANSPORTING THE LOAD ON A SLOPE 90

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

2.4 GENERAL REGULATIONS FOR USE



When transporting a load, keep the accessory at a maximum height of 300 mm from the ground.

Where possible avoid winding roads, otherwise, move cautiously and very slowly.

Respect the limits imposed by the load diagram referred to the accessory being used. If a different accessory from that delivered with the machine is purchased at a later time, please contact the Manufacturer to obtain the correct load diagram.
If the material to be moved is on a supporting base, before lifting it with the material, ensure that it is in good condition and can withstand the weight to be lifted.

Never lift a strapped load with the forks; use the specific accessory. The edges of the forks could in fact cut the lifting cables due to the weight, thereby causing the loss of material. In any case, never lift a load with only one arm of the fork.
When transporting a suspended load from a rope, do not allow it to swing excessively, otherwise, stop immediately and wait for the load to stabilise before proceeding.

When transporting a load with a mobile centre of gravity, such as a liquid, avoid sudden acceleration and braking. Be very careful when the route has a slight gradient.
Immediately after use, place the accessory in a horizontal position and if it seems unstable, prop it with suitable and safe supports to make it stable.
It is forbidden to operate the machine under the influence of alcohol and/or drugs and/or medicine, which alters the physical and mental condition.

2.5 WORKING ON SITE



Operate in good physical and mental conditions.
It is forbidden to operate the machine under the influence of alcohol and/or drugs.
It is mandatory to wear a safety belt.
You must wear ear plugs or hearing protection headphones in case of excessive noise. A safety helmet must be worn in case of the risk of objects falling from above, even if the machine's driver cabin is designed to protect against such a risk.
Keep the machine as far as possible from the edges of excavations or the road and always examine the conformation and the condition of the work area in relation to the dimensions of the machine in the various configurations.
Identify the best route toward the work area.
Ground capacity characteristics:


- Turned soils, soft ground, land filled ground — 0-1 kg/cm^2
- Average particle size sand — 2-2.5 kg/cm^2
- Gravel — 3-4 kg/cm^2
- Clay soil — 2-4 kg/cm^2
- Rocky ground — 10-15 kg/cm^2

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

3.1 DESCRIPTION OF THE CONTROLS

3.1.1 CONTROL LEVERS ON THE STEERING COLUMN

3.1.1.1 LEFT LEVER OF THE STEERING WHEEL (STALK)

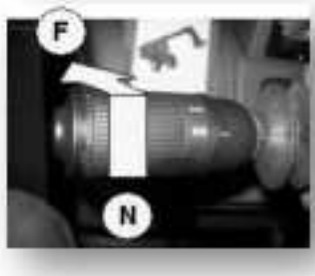

To enable the forward drive of the machine (F), pull the lever towards the steering wheel and move it forward. The letter "F" will appear on the display on the front right dashboard.

To enable the reverse drive of the machine (R), pull the lever towards the steering wheel and move it back. The letter "R" will appear on the display on the front right dashboard.

Enable the neutral gear (N) by moving the lever to the central position.



The lever controls do not operate when:

- the parking brake is engaged
- the operator is not sitting in the driver's seat.
- The outriggers are not fully lifted*

For the function of the button located at the top of the lever, see the "Levelling the Machine" paragraph*.

In the guide below the left lever of the steering wheel is referred to as the "stalk".

The lever can be used only if the steering mode is with just the front wheels It is dangerous to change the driving direction when the machine is moving at high speed; the machine suddenly inverts the driving direction; before changing direction, allow the machine to reduce speed to a minimum.



When reverse drive is selected an acoustic signal will sound to indicate the risk of danger to any people in the maneuvering area.

Attention! If the operator leaves the driver's seat, the neutral gear "N" is automatically engaged after 3 seconds. Operation of the lever is disabled if the "concentric" and/or "crab" steering mode is selected.

* If in place or if the function is in place.

3.1.1.2 LEVER ON THE RIGHT OF THE STEERING WHEEL

Lights control



Rotate the lever by holding it from the knurled part until the desired symbol of the rotating part is aligned with the horizontal line of the fixed part. 3 positions are possible:

- Position 0 = lights off
- Position 1 = parking lights on
- Position 2 = low beam lights on

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

5.11 MAINTENANCE SCHEDULE

The data sheet below lists all the necessary maintenance operations and the frequency required to maintain the efficiency of the machine. 51.7 kW TIER IV FINAL Yanmar engine


GROUP	TYPE OF VERIFICATION	CHECK DAILY	FREQUENCY OF SCHEDULED MAINTENANCE						
			EVERY 50 HOURS	EVERY 250 HOURS	EVERY 500 HOURS	EVERY 1000 HOURS	EVERY 1500 HOURS	EVERY 2000 HOURS	EVERY 3000 HOURS
RADIATOR	Check and top up the cooling liquid	X							
	Check and clean the radiator	X		X					
	Clean the closing nets	X		X					
	Check and tension the cooling fan belt		X 1st time	X 2nd and subsequent times					
	Change the cooling liquid[2]							X	
HEAD	Adjust the play of the discharge-intake valves (if required)					X			
ELECTRICAL COMPONENTS	Check the indicators	X							
	Check the battery		X						
ENGINE OIL	Check the engine oil level	X							
	Change the oil and filter[2]		X 1st time		X 2nd and subsequent times				
EMISSION CONTROL SYSTEM	Inspect the turbocharger								X
	Inspect, clean and check the EGR valve								X
	Clean the main EGR valve								X
	Clean the EGR radiator (clean the water/air pipes)								X
	Inspect the engine casing ventilation system							X	
	Check and clean the DPF fine particulate matter filter								X
	Inspect and clean the intake throttle valve								
FUEL	Check/replace the fuel filter/water separator	X			X				
	Empty the water separator		X						
	Check and clean the injector								X
HOSES	Change the fuel and cooling system supply pipes[2]							X	
UNLOADING	Check the integrity of the exhaust pipe		X						

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

5.28 INSPECTING, CHARGING AND REPLACING THE BATTERY

The battery is the part that allows the electrical system of the machine to operate. Its malfunction could create problems in the machine start-up and operating phases. It is housed inside the front compartment shown in the figure.

Inspection

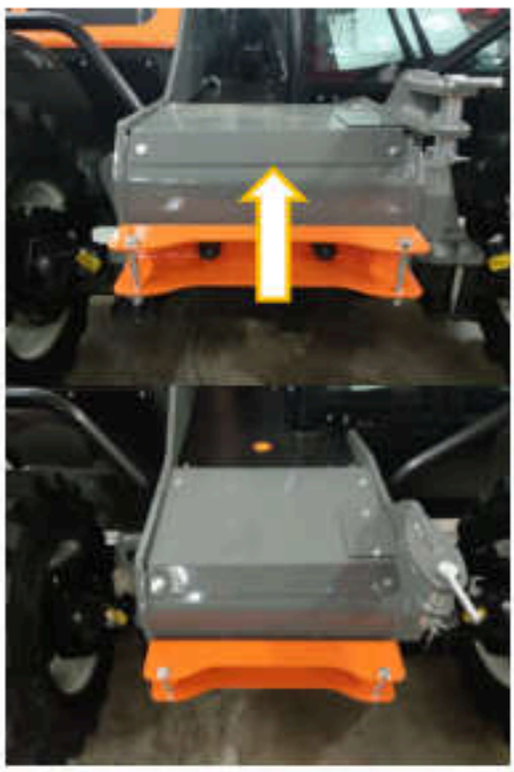

The battery can be inspected by removing the cover from the battery compartment on the front of the machine. It can be opened by loosening the four screws.
It is good practice to carry out a periodic inspection (every 50 hours) to verify its external conditions.

Attention! *If charging or replacing or any other operation that requires the removal of contact terminals from the battery and its disconnection, ALWAYS wait at least 1 minute from when the machine is switched off. This interval is required for the control unit to complete its next control cycle after the machine is switched off.*

Attention! *If charging or replacing or any other operation that requires the removal of the battery from its compartment, bear in mind that the sulphuric acid contained within is poisonous and can cause burns. It is therefore necessary to work in a ventilated place, with appropriate protective equipment for the face and skin; do not light naked flames nearby and keep children away.*
Proceed as follows only if you are well aware of your actions.

Charging



If a battery is flat due to prolonged inactivity or due to malfunctions in the machine charging system or is drained accidentally, contact a specialised workshop or provide your own in accordance with minor precautions to safeguard your safety and the integrity of the battery. Operate in a ventilated area that is covered and away from sources of flame and sparks, remove the battery from the machine by loosening the clamps below the plastic protective parts (refer to the following operations to replace the battery) and connect the battery poles to the

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >

2.13 SAFETY DECALS

Below is a list and description of the safety decals on the machine to indicate attention and/or operations that are required in the specific point where the decal is affixed or to indicate the relevant behaviour for operator safety. The safety decals must be intact and legible and must be restored if damaged accidentally. If a decal is affixed on a part that is replaced, a similar decal must be affixed to the new part.
Order damaged, illegible and/or removed decals from Snorkel by indicating the part number for each decal, which is found on each one. The list here below is only meant as an indication.

DECAL	CODE AND DESCRIPTION
	Label on a yellow background with black writing. Read the manual before operating the machine. Switch the engine off and remove the keys from the panel before performing any maintenance. Pay attention to contact made with overhead power lines. It is forbidden to stand under the raised boom or under suspended loads.
	Sticker on a yellow background with black writing. Meaning: fasten the safety belts.
	Sticker on a yellow background with black writing. Meaning: lubrication point.
	Sticker on a yellow background with black writing. Meaning: lifting point.
	Sticker on a yellow background with black writing. Meaning: towing point.
	Sticker on a yellow background with black writing. Meaning: anchor point.
	Sticker on a yellow background with black writing. Meaning: diesel tank.

MidWestTech | Snorkel SR5719 Telehandler Operator's and Maintenance Manual | Pu... Order the manual at mid-west-tech.com >