SKYJACK

SERVICE MANUAL

SJ82T, SJ86T

TELESCOPIC BOOMS



170454AO
August 25 2026
ANSI/CSA, CE, AS

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

Table of Contents

Section 1 – Scheduled Maintenance 13

1.1 Read and Heed 13

1.1-1 Aerial Platform and Mobile Elevating Work Platform Definition 13

1.1-2 Purpose of Equipment 13

1.1-3 Use of Equipment 13

1.1-4 Manual 13

1.1-5 Service Policy and Warranty 13

1.1-6 Operator Safety Reminders, Warnings and Precautions 13

1.2 Maintenance and Service 14

1.2-1 Maintenance and Inspection Schedule 14

1.2-2 Owner's Annual Inspection Record 14

1.2-3 Replacement Parts 14

1.2-4 Maintenance and Service Safety Tips 14

1.2-5 Hydraulic System & Component Maintenance and Repair 15

1.2-6 Hydraulic Maintenance Hints 15

1.2-7 Railing Maintenance and Repair 16

1.3 Scheduled Maintenance 17

1.3-1 Service Bulletins 17

1.3-2 Maintenance and Inspection 17

1.3-3 Maintenance Instructions 17

1.4 Owner's Annual Inspection Record 18

1.5 Pre-Delivery/Maintenance Inspection Checklist 19

1.6 Scheduled Maintenance Inspections 20

1.6-1 Labels 20

1.6-2 Electrical 20

1.6-3 Limit Switches 20

1.6-4 Hydraulic 20

1.6-5 Limit Switches (B) 21

1.6-6 Engine Compartment 21

1.6-7 Control Compartment 24

1.6-8 Base 26

1.6-9 Platform Assembly 28

1.6-10 Boom Assembly 29

1.6-11 Optional Equipment/Attachments 31

1.7 Function Tests 32

Section 2 – Maintenance Tables and Diagrams 33

2.1 Standard Hose Numbering System 33

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

2.2 MEWP Torque Specifications 35
2.3 Axle Torque Specifications 36
2.4 Torque Specifications for Fasteners (US) 37
2.5 Torque Specifications for Fasteners (Metric) 38
2.6 Torque Specifications for Hydraulic Couplings & Hoses 39
2.7 Axles Maintenance Intervals 40
2.8 Tire Specifications 41
2.9 Floor Loading Pressure 42
2.10 Hydraulic Specifications & Gear Oil 43
2.11 Specifications & Features - Dimensional Data 44
2.12 Specifications & Features - Performance and Speeds 45
2.13 Engine Specifications 46
2.14 Axle Oscillation Diagrams 48
2.15 Dimension and Reach Diagram - SJ82T 49
2.16 Dimension and Reach Diagram - SJ86T 50

Section 3 – System Component Identification and Schematics 51

3.1 Electrical Symbol Chart 52
3.2 Hydraulic Symbol Chart 53
3.3 Wire Number and Color Code 54
3.4 Wire Numbers and Color Codes - Additional 55
3.5 Hydraulic Parts List 56
3.6 Electrical Parts List 59
3.7 Hourmeter/Counter Harness - CE 64
3.8 Rotary Manifold Port Identification 65
3.9 System and Drive Pump Port Identification 67
3.10 Drive Motors Port Identification 68
3.11 Jib Valve Port Identification 69
3.12 No Jib Valve Port Identification 70
3.13 Brake Manifold Port Identification 71
3.14 Pressure Reducing Valve Port Identification 72
3.15 Main Manifold Port Identification 73
3.16 Main Manifold Electrical Component Identification 74
3.17 Main Manifold Hydraulic Component Identification 75
3.18 Main Harness Wiring Diagram 76
3.19 Boom Lift Valve Harness 77
3.20 Differential Lock Harness 78
3.21 Platform Rotate & Jib Harnesses 79
3.22 Platform to Base Control Cable Harnesses 80
3.23 Power Control Cable Connections 81
3.24 Limit Switch Connections 82
3.25 Load Sensing Cable Connection - CE & AS 83
3.26 ECU Engine Wiring Diagram - Deutz Diesel Engine 84
3.27 Glow Plug and EGR Harnesses - Deutz Diesel Engine 85

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

3.28 Generator and Oil Cooler Harness Connections 86
3.29 Generator Wiring 87
3.30 SGE Wiring Diagrams 88
3.31 Platform Work Light 89
3.32 Positive Air Shut-Off Option Harness 90
3.33 Dual Capacity Sensing Module 91
3.34 Load Circuit - ANSI/CSA with Deutz TD2.9L 92
3.35 Hydraulic Schematic 93
3.36 Platform Controls Wiring - SJ82T ANSI/CSA 94
3.37 Platform Controls Wiring - SJ86T ANSI/CSA 95
3.38 Platform Controls Wiring - SJ86T CE - Deutz TCD2.2 96
3.39 Platform Controls Wiring - SJ86T CE - Deutz TD2.9L 97
3.40 Platform Controls Wiring - SJ86T AS 98
3.41 Base Controls Wiring - SJ82T ANSI/CSA - Deutz D2011 99
3.42 Base Controls Wiring - SJ82T ANSI/CSA - Deutz TD2.9L 100
3.43 Base Controls Wiring - SJ82T ANSI/CSA - Deutz TD2.9L with Positive Air Shut-Off 101
3.44 Base Controls Wiring - SJ82T ANSI/CSA - Perkins 2.2TA 102
3.45 Base Controls Wiring - SJ86T ANSI/CSA - Deutz D2011 103
3.46 Base Controls Wiring - SJ86T ANSI/CSA - Deutz TD2.9L 104
3.47 Base Controls Wiring - SJ86T ANSI/CSA - Deutz TD2.9L with Positive Air Shut-Off 105
3.48 Base Controls Wiring - SJ86T ANSI/CSA - Perkins 2.2TA 106
3.49 Base Controls Wiring - SJ86T CE - Deutz TCD2.2 107
3.50 Base Controls Wiring - SJ86T CE - Deutz D2011 108
3.51 Base Controls Wiring - SJ86T CE - Deutz TD2.9L 109
3.52 Base Controls Wiring - SJ86T AS - Deutz D2011 110
3.53 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Deutz D2011 (S/N 97101144 & below) 111
3.54 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Deutz D2011 (S/N 97101145 & above) 112
3.55 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Deutz TD2.9L (S/N 97101144 & below) 113
3.56 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Deutz TD2.9L (S/N 97101145 & above) 114
3.57 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Perkins 2.2TA (S/N 97101144 & below) 115
3.58 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Perkins 2.2TA (S/N 97101145 & above) 116
3.59 Electrical Schematic - SJ86T CE Deutz TCD2.2 117
3.60 Electrical Schematic - SJ86T CE Deutz D2011 (S/N 97101144 & below) 118
3.61 Electrical Schematic - SJ86T CE Deutz D2011 (S/N 97101145 & above) 119
3.62 Electrical Schematic - SJ86T CE Deutz TD2.9L (S/N 97101144 & below) 120
3.63 Electrical Schematic - SJ86T CE Deutz TD2.9L (S/N 97101145 & above) 121
3.64 Electrical Schematic - SJ86T AS Deutz D2011 (S/N 97101144 & below) 122
3.65 Electrical Schematic - SJ86T AS Deutz D2011 (S/N: 97101145& above) 123
3.66 Engine Electrical Schematic - Deutz TCD2.2 124
3.67 Engine Interface Harness Schematic - Deutz TCD2.2 125
3.68 Engine Electrical Schematic - Deutz TD2.9L (S/N 97101144 & below) 126
3.69 Engine Electrical Schematic - Deutz TD2.9L (S/N 97101145 & above) 127
3.70 Engine Electrical Schematic CE - Deutz TD2.9L (S/N 97101144 & below) 128
3.71 Engine Electrical Schematic CE - Deutz TD2.9L (S/N 97101145 & above) 129

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

Table 2.4 Torque Specifications for Fasteners (US)

Size	Torque Type	SAE 2		SAE 5		SAE 8	
		Dry	Lubed	Dry	Lubed	Dry	Lubed
4-40	(in-lb)	(5)	(4)	(8)	(6)	(12)	(9)
	Nm	0.6	0.5	0.9	0.7	1.4	1.0
4-48	(in-lb)	(6)	(5)	(9)	(7)	(13)	(10)
	Nm	0.7	0.6	1.0	0.8	1.5	1.1
6-32	(in-lb)	(10)	(8)	(16)	(12)	(23)	(17)
	Nm	1.1	0.9	1.8	1.4	2.6	1.9
6-40	(in-lb)	(12)	(9)	(18)	(13)	(25)	(19)
	Nm	1.4	1.0	2.0	1.5	2.8	2.1
8-32	(in-lb)	(19)	(14)	(30)	(22)	(41)	(31)
	Nm	2.1	1.6	3.4	2.5	4.6	3.5
8-36	(in-lb)	(20)	(15)	(31)	(23)	(43)	(32)
	Nm	2.3	1.7	3.5	2.6	4.9	3.6
10-24	(in-lb)	(27)	(21)	(43)	(32)	(60)	(45)
	Nm	3.1	2.4	4.9	3.6	6.8	5.1
10-32	(in-lb)	(31)	(23)	(49)	(36)	(68)	(51)
	Nm	3.5	2.6	5.5	4.1	7.7	5.8
1/4-20	(in-lb) ft-lb	(86)	(50)	8	(75)	12	9
	Nm	7.5	5.6	11	8.5	16	12
1/4-28	(in-lb) ft-lb	(76)	(56)	10	(86)	14	10
	Nm	8.6	6.3	14	9.7	19	14
5/16-18	ft-lb	11	8	17	13	25	18
	Nm	15	11	23	18	34	24
5/16-24	ft-lb	12	9	19	14	25	20
	Nm	16	12	26	19	34	27
3/8-16	ft-lb	20	15	30	23	45	35
	Nm	27	20	41	31	61	47
3/8-24	ft-lb	23	17	35	25	50	35
	Nm	31	23	47	34	68	47
7/16-14	ft-lb	32	24	50	35	70	55
	Nm	43	33	68	47	95	75
7/16-20	ft-lb	36	27	55	40	80	60
	Nm	49	37	75	54	108	81
1/2-13	ft-lb	50	35	75	55	110	80
	Nm	68	47	102	75	149	108
1/2-20	ft-lb	55	40	90	65	120	90
	Nm	75	54	122	88	163	122
9/16-12	ft-lb	70	55	110	80	150	110
	Nm	95	75	149	108	203	149
9/16-18	ft-lb	80	60	120	90	170	130
	Nm	108	81	163	122	230	176
5/8-11	ft-lb	100	75	150	110	220	170
	Nm	136	102	203	149	298	230
5/8-18	ft-lb	110	85	180	130	240	180
	Nm	149	115	244	176	325	244
3/4-10	ft-lb	175	130	260	200	380	280
	Nm	237	176	353	271	515	380
3/4-16	ft-lb	200	150	300	220	420	320
	Nm	271	203	407	298	569	434
7/8-9	ft-lb	170	125	430	320	600	460
	Nm	230	169	583	434	813	624
7/8-14	ft-lb	180	140	470	360	660	500
	Nm	244	190	637	488	895	678
1-8	ft-lb	250	190	640	480	900	680
	Nm	339	258	868	651	1220	922
1-12	ft-lb	270	210	710	530	1000	740
	Nm	366	285	963	719	1356	1003
1-14	ft-lb	280	210	730	540	1020	760
	Nm	380	285	990	732	1383	1030
1 1/8-7	ft-lb	350	270	800	600	1280	960
	Nm	475	366	1085	813	1735	1302
1 1/8-12	ft-lb	400	300	880	660	1440	1080
	Nm	542	407	1193	895	1952	1464
1 1/4-7	ft-lb	500	380	1120	840	1820	1360
	Nm	678	515	1519	1139	2468	1844
1 1/4-12	ft-lb	550	420	1240	920	2000	1500
	Nm	746	569	1681	1247	2712	2034
1 3/8-6	ft-lb	670	490	1460	1100	2380	1780
	Nm	908	664	1979	1491	3227	2413
1 3/8-12	ft-lb	750	560	1680	1260	2720	2040
	Nm	1017	759	2278	1708	3688	2766
1 1/2-6	ft-lb	870	650	1940	1460	3160	2380
	Nm	1180	881	2630	1979	4284	3200
1 1/2-12	ft-lb	980	730	2200	1640	3560	2660
	Nm	1329	990	2983	2224	4827	3606

NOTE: *Lubed includes lubricants such as lubrizing, oil, grease, and some uncured thread lockers. Refer to the specific thread locker manufacturer's instructions for specific torque adjustments.* *1374AB*

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

Section 4 – Troubleshooting Information

4.1 Introduction


The following pages contain a table of Troubleshooting for locating and correcting most service trouble which can develop. Careful and accurate analysis of the systems listed in the table of Troubleshooting will localize the trouble more quickly than any other method. This manual cannot cover all possible troubles and deficiencies that may occur. If a specific trouble is not listed, isolate the major component in which the trouble occurs, isolate whether the problem is electrical or hydraulic, and then isolate and correct the specific problem.

The content of this section is separated into "probable cause" and "remedy". See the example below for clarification.

1. Probable cause	**Remedy**

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

Reprogramming the Existing Tilt Switch

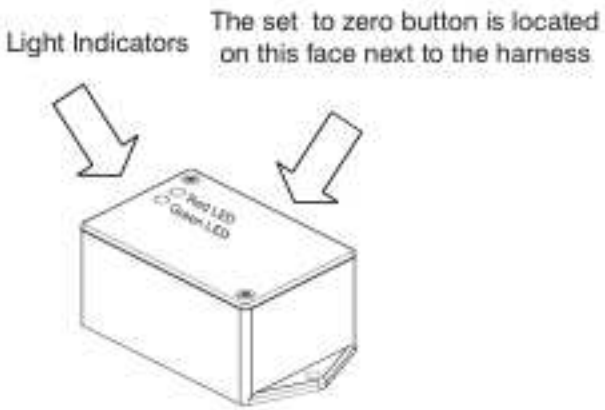

NOTE


The tilt circuit is only powered when the controls are powered up.

1. Turn the main disconnect switch to the ON position.
2. Turn the base/off/platform key switch to the base position.
3. Pull out both emergency stop buttons.
4. Verify the switch is powered (the red or green LED will be solid).



5. Reprogram the Tilt Switch

   a. Press and hold the set to zero button for 5 seconds.
   Results: Both LEDs will be OFF.

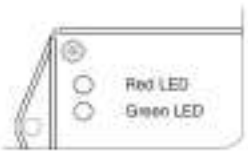

   b. Both LEDs will flash.



IMPORTANT

Step "c" must be completed within a 5 second period, or the switch will automatically exit program mode and return to normal operation using the previously stored data.

   c. Press and release the set to zero button 3 times.
   d. If the 5 second period has expired prior to completion, repeat steps "a", "b" and "c".

   e. Observe program delay / stabilization time (only the red LED will blink for 4 seconds).




   f. Both LEDs will flash for 1 second.
   Results: The switch is learning the new zero position.



   g. Both LEDs will turn on solid for 1 second.
   Results: The new zero position has been learned.



   h. The green LED will flash and then the red LED will turn on solid for 2 seconds.
   Results: The switch is verifying the new zero position.

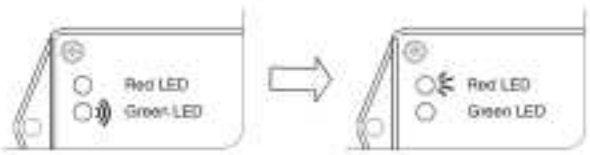

   i. The green LED will turn on solid.
   Results: The switch is ready for normal operation.




6. Turn the main power disconnect switch to the off position.
7. Push in the emergency stop buttons.
8. Proceed to *Verify Tilt Circuit*.

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

5.4-13 Platform and Jib Boom Installation . . . 213
5.4-14 Platform Installation (no Jib Boom) . . . 214
5.4-15 Platform Control Console Connection . . . 215
5.4-16 Extension Cylinder and Wire Rope Replacement . . . 216
5.4-17 Extension Cylinder and Cable Assembly Removal . . . 216
5.4-18 Extension Cylinder and Wire Rope Assembly Installation . . . 219
5.4-27 Wire Rope Tension . . . 222
5.4-19 Wire Rope Inspection . . . 225
5.4-28 Replace the Lift Cylinder . . . 226
5.5 Limit Switches . . . 234
5.5-1 Limit Switch Locations and Trip Points . . . 234
5.4-20 Check and Adjust the Limit Switches . . . 235
5.4-21 Directional Sensing Limit Switch (LS1) . . . 235
5.4-22 High Speed Drive / Tilt Override Limit Switch (LS2) . . . 237
5.4-23 Fly-in Limit Switch (LS3) . . . 238
5.4-24 Boom Angle (Dual Load) Limit Switch (LS4) . . . 239
5.4-25 Boom Extension (Dual Load) Limit Switch (LS5) . . . 241
5.4-26 Lift Cushion Limit Switch (LS6) . . . 243
5.6 Turret . . . 245
5.6-1 Check and Replace the High Pressure Filter . . . 245
5.6-2 Adjust the Turret Rotation Gear Backlash . . . 245
5.6-3 Check the Swing Drive Oil . . . 246
5.6-4 Change the Swing Drive Oil . . . 246
5.6-5 Battery Replacement . . . 247
5.6-6 Ring Gear Bolt Torque Sequence . . . 247
5.6-7 Electronic Tilt Switch Setup Procedure . . . 248
5.6-8 Check Rotation Bearing for Axial Wear . . . 250
5.6-9 Resetting the Emergency Lowering Counter (CE only) . . . 251
5.7 Deutz Diesel Engines . . . 252
5.7-1 Replace Engine Oil and Filter . . . 252
5.7-2 Replace the Fuel Filter . . . 253
5.7-3 Replace the Air Filter . . . 253
5.7-4 Check the Engine Belt . . . 253
5.7-5 Check the Oil Cooler (Deutz D2011 only) . . . 253
5.7-6 Deutz TD2.9L Fault Codes . . . 254
5.8 Hydraulic Tank . . . 274
5.8-1 Change the Hydraulic Tank Filter . . . 274
5.8-2 Change the Hydraulic Oil . . . 274
5.9 Manifolds and Hydraulic Pumps . . . 275
5.9-1 Hydraulic Brake Pressure Adjustment . . . 275
5.9-2 Hydraulic Standby Pressure Adjustment . . . 276
5.9-3 Hydraulic High Pressure Adjustment . . . 277
5.9-4 Hydraulic System Relief Valve Adjustment . . . 278


MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1... Order the manual at mid-west-tech.com >

Diagram 2.16 Dimension and Reach Diagram - SJ86T

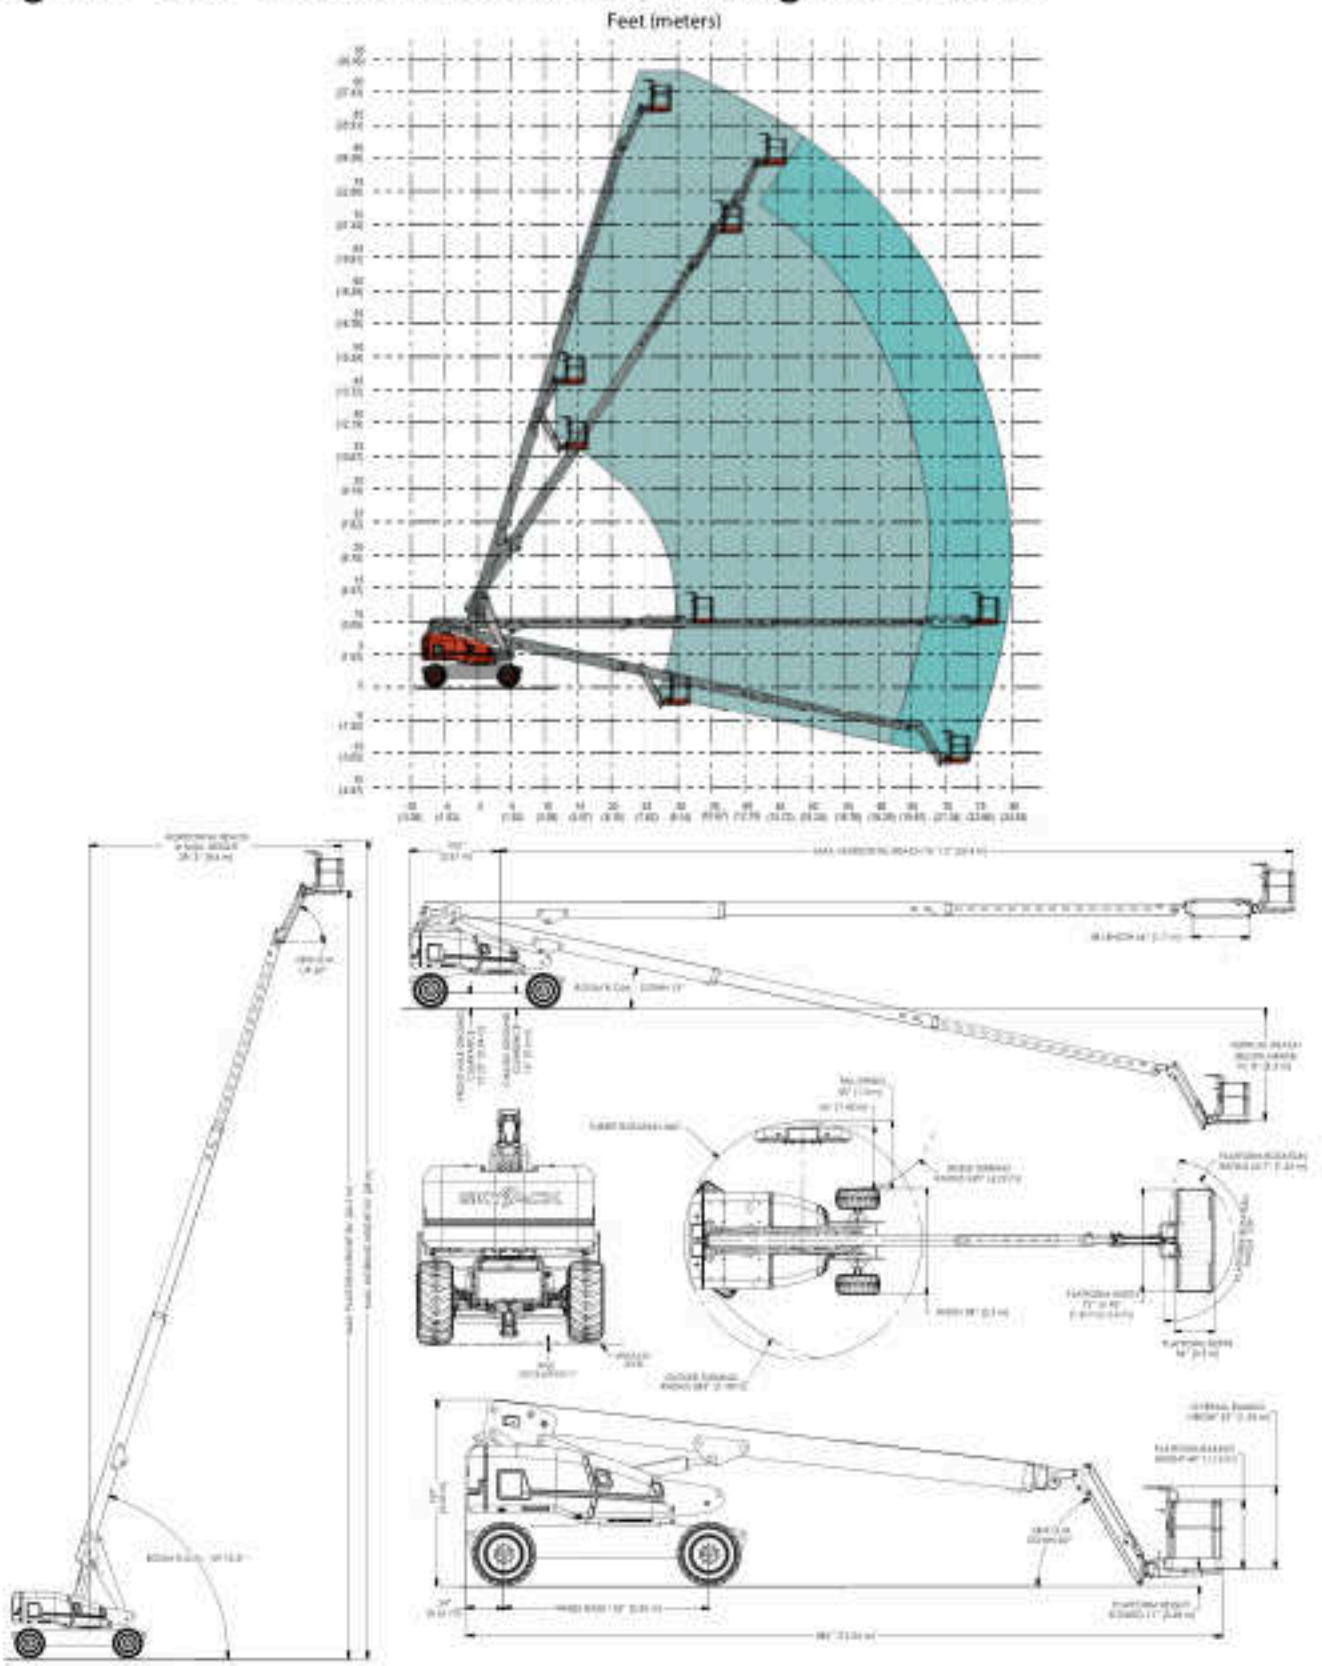

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 1...
Order the manual at mid-west-tech.com >

3.57 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Perkins 2.2TA (S/N 97101144 & below)

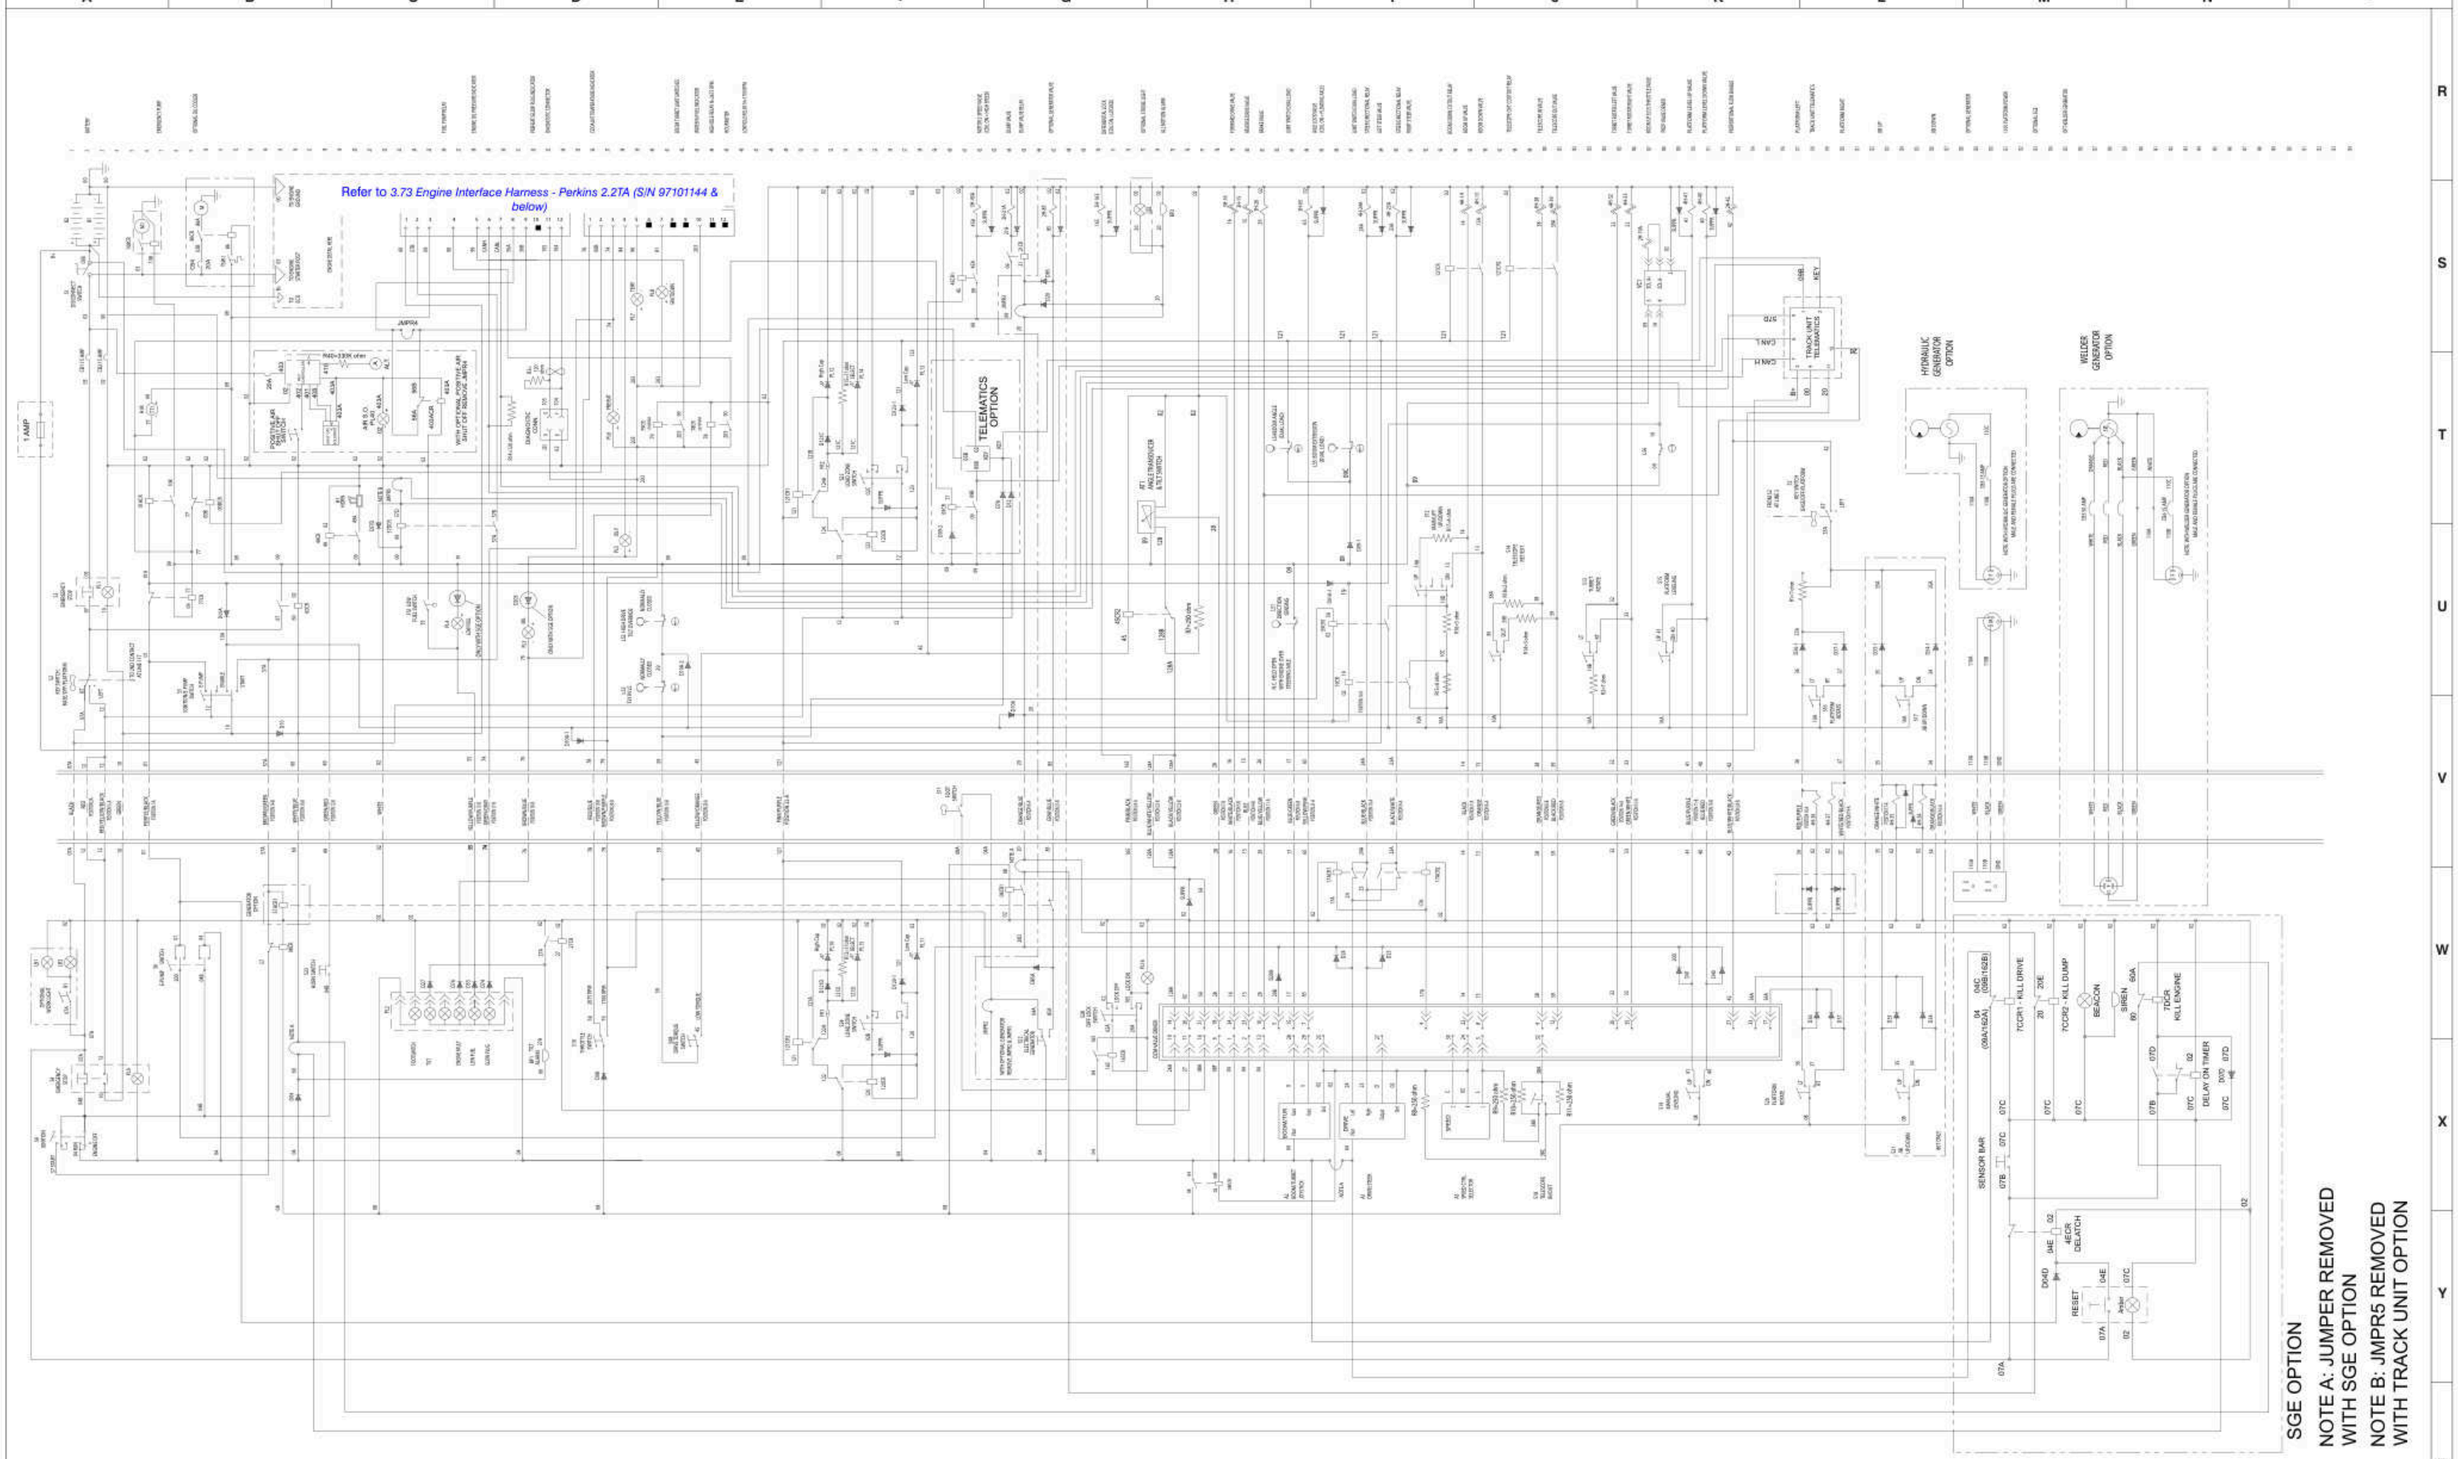

M210317AF-I

3.57 Electrical Schematic - SJ82T & SJ86T ANSI/CSA Perkins 2.2TA (S/N 97101144 & below)

MidWestTech | Skyjack SJ82T, SJ86T Telescopic Boom Lift Service Manual | Publication 170454AO
Order the manual at mid-west-tech.com >