

OPERATING MANUAL (ANSI/CSA)

ROUGH TERRAIN SCISSORS

MODELS SJ8831 RT SJ8841 RT SJ9250 RT

171006AIA November 2, 2022

SKYJACK

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >

Table of Contents

Section 1 - About Your Aerial Platform 5
Read and Heed 5
Safety Rules 6

Section 2 - Familiarization 13
2.1 Familiarization of SJRT Full Size Series 13
2.2 Component Identification 14
2.3 Visual & Daily Maintenance Inspections 18
2.4 Function Tests 28
2.5 Winching and Towing Procedure 39
2.6 Emergency Lowering Procedures 40

Section 3 - Operation 41
3.1 General 41
3.2 Major Components 42
3.2 Major Components 42
3.3 Major Assemblies 43
3.4 Serial Number Nameplate 43
3.5 Component Identification 44
3.6 Component Identification (Optional Equipment/Attachments) 46
3.7 Operator's Responsibility 48
3.8 Start Operation 49
3.9 Refueling Procedures 56
3.10 Loading/Unloading 58
3.11 Guardrail Folding Procedure 60
3.12 Maintenance Support Procedure 62

Section 4 - Tables 63
Table 4.1 Standard and Optional Features 63
Table 4.2 Owner's Annual Inspection Record 64
Table 4.3 Specifications and Features 65
Table 4.4 Maximum Platform Capacities (Evenly Distributed) 66
Table 4.5 Maximum Platform Capacities (Evenly Distributed with Optional #7 Tires) 67
Table 4.6 Floor Loading Pressure 68
Table 4.7 Tire Specifications 70
Table 4.8 Maintenance and Inspection Schedule 71
Table 4.9 Operator's Checklist 72

Section 5 - Labels 73

Section 6 - Skyjack Features 90

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >

3.8-11 Generator (If Equipped)

To start the hydraulic generator:

1. On platform control console, select off/lift/drive key switch to "↑ ↓" lift position.
2. Depress and hold " " engine start pushbutton to start the engine.
3. On auxiliary control console, select hydraulic generator switch to "|" energized position. Engine will automatically switch to high throttle and generator will start.

To stop the hydraulic generator:

4. Select hydraulic generator switch to "○" off position. The generator will turn off and throttle will return to selected speed.

NOTE

Activating any lift or outrigger functions, changing the key switch setting, activating the emergency stop or an engine stall will turn off the generator. The platform may be lowered during generator operation.

3.8-12 Electrical Inverter (If Equipped)

The inverter is operational with alternating current available at all times when, and only when, the engine is running at high throttle. Deselecting the high idle throttle setting or stopping the engine will turn the inverter off.

To check the status of the inverter:

1. During routine operation, the on/off switch should remain in the on position. To prevent automatic inverter operation when high throttle is activated, slide the on/off switch on the inverter to the off position.
2. Inverter state is indicated by the LEDs on the face of the inverter. A glowing green LED indicates normal operation. If a fault occurs, the status LEDs will indicate the area responsible. After the fault condition is corrected, the inverter will automatically reset itself.

3.8-13 Shutdown Procedure

1. Completely lower the platform.
2. On platform control console, push in "●" emergency stop button.
3. Select off/lift/drive key switch to "○" off position and remove key.

⚠ WARNING

Ensure that you maintain three points of contact when using the ladder to mount/ dismount the platform.

4. Use the ladder to dismount from platform.
5. On base control console, push in "●" emergency stop button.
6. On engine control console, select engine off/on/ start switch to "○" off position.
7. Turn main power disconnect switch to "○" off position.

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >


Table 4.4 Maximum Platform Capacities (Evenly Distributed)

MODEL		Total		First Extension		Second Extension		Maximum Wind Speed	Tilt Cutout Setting (Degrees)
		Capacity	Number of Occupants	Capacity	Number of Occupants	Capacity	Number of Occupants		
8831	No Extension Platform	2500 lb. 1134 kg	6	Not Available				12.5 m/s	2.5 x 4.5
	One Extension Platform	2000 lb. 908 kg	6	500 lb. 227 kg	2	Not Available			
	Two Extension Platforms	1700 lb. 771 kg	6	500 lb. 227 kg	2	500 lb. 227 kg	2		
8841	No Extension Platform	1700 lb. 771 kg	5	Not Available				12.5 m/s	2.5 x 4.5
	One Extension Platform	1500 lb. 681 kg	5	500 lb. 227 kg	2	Not Available			
	Two Extension Platforms	1500 lb. 681 kg	5	500 lb. 227 kg	2	500 lb. 227 kg	2		
9250	No Extension Platform	2000 lb. 907 kg	5	Not Available				12.5 m/s	2.5 x 4.5
	One Extension Platform	1500 lb. 681 kg	5	500 lb. 227 kg	2	Not Available			
	Two Extension Platforms	1500 lb. 681 kg	5	500 lb. 227 kg	2	500 lb. 227 kg	2		

GEDRAH-ANSI-R

NOTE:
Occupants and materials are not to exceed rated load.
Capacities listed are for standard machines equipped with #6 tires.
Refer to capacity label at sides of platform for additional information and for models equipped with options.

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >

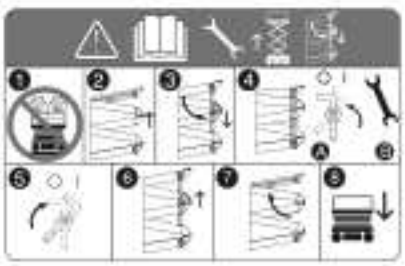No.	Label Pictorial	Description
9	SJ8841 RT	**Model Number*** Product Identifier *Model number will vary, may not be as shown.
10		**Keep Clear** Keep clear. Stay away from aerial platform when in operation.
11		**How to engage maintenance support for inspection or maintenance.** Refer to operating manual. 1. Remove all material from platform. 2. Raise platform until there is adequate clearance to swing down maintenance support. 3. Swing maintenance support down from storage bracket into a vertical position. Lower platform until the bottom end of maintenance support rests on the lower cross bar. 4. Maintenance support is now secured. (A) Turn main power disconnect switch to off position. (B) Perform inspection/maintenance. 5. Turn main power disconnect switch to on position. 6. Raise platform until there is adequate clearance to swing up maintenance support. 7. Swing maintenance support up and place into storage bracket. 8. Ensure platform is fully lowered.
12		**Battery Warmer/Hydraulic Oil Heater (If Equipped)** Do not leave heaters plugged in for longer than 12 hours consecutively.
13		**Battery Warmer/Hydraulic Oil Heater (If Equipped)** Do not use heaters if temperature is above freezing.

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >

Table 4.7 Tire Specifications

WARNING


Air pressure can affect stability. Temperature changes can affect air pressure. It is important to inspect all tires for proper tire inflation prior to use. Tires must be checked by end user on a daily basis. Tire inflation pressures must be checked weekly with a calibrated gauge. If the measured pressure is less than the specification, reinflate to the pressure specified below. Tires must not be inflated above the recommended specification. Do not intermix tires of different types on one aerial platform. Use only tires of type originally supplied.

Tire Size		Fill Specification			FULL SIZE		
		Fill Type	Ply Rating	Pressure (Factory) (kPa)	8831	8841	9250
#6A	10-16.5 CARLISLE US LOADER	Air	10	75* (517.1)*	S	S	S
#6A	10-16.5 OTR OUTRIGGER (Non-Marking)		10	75* (517.1)*	O	O	O
#7A	31-15.5-15 GOODYEAR TERRA XTRAC		8	45* (310.3)*	O	O	O
#6F	10-16.5 CARLISLE US LOADER	Foam	10	N/A	O	O	O
#6F	10-16.5 OTR OUTRIGGER (Non-Marking)		10	N/A	O	O	O
#7F	31-15.5-15 GOODYEAR TERRA XTRAC		8	N/A	O	O	O

60378AH-ANSI-R

* Factory preset @ 20°C. **Check pressures regularly as tires can lose pressure over time and over different ambient temperatures even under normal conditions.**

† Usage: (**S**)tandard Or (**O**)ptional
(**N/A**) Not Available

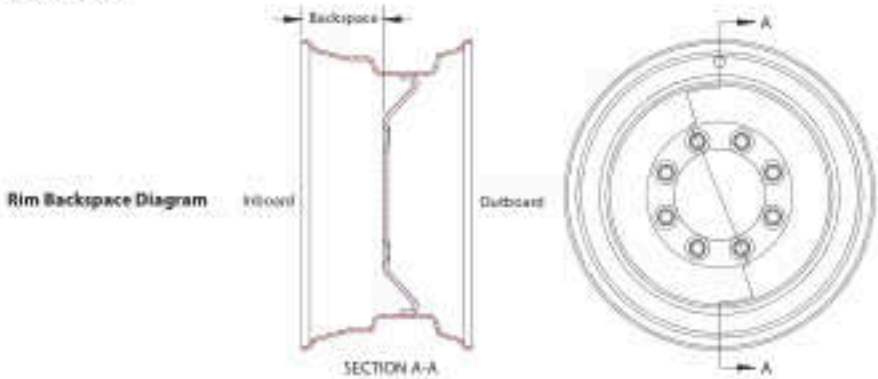

Rim Size / Serial Number	Backspace		
	8831	8841	9250
#6 & #6F	4-3/4"	4-3/4"	3-3/4"
	121mm	121mm	95 mm
#7 & #7F	All models are 4-3/8"		

60360AE-ANSI

WARNING

Intermixing tires of different types or using tires of types other than those originally supplied with this equipment can adversely affect stability. Therefore, replace tires only with the exact Skyjack-approved type. Failure to operate with matched approved tires in good condition may result in death or serious injury.

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >

3.9 Refueling Procedures

This section provides the operator with the procedure on how to refuel the engine with regular fuel and install the propane cylinder.

IMPORTANT

Before using the aerial platform ensure there is enough fuel to finish the job.

WARNING

Follow all local and federal regulations for propane handling.

WARNING

Failure to heed the following safety precautions could result in death or serious injury:

- **Use extreme caution while refueling aerial platforms.**
- **Ensure engine and all systems are turned off before refueling.**
- **Refuel aerial platform only in a well ventilated area away from open flame and other sources of ignition, authorized by your employer and supervisor.**
- **Liquid propane gas fuel is a gas that is heavier than air. It will settle in low spots. Any flame or spark could cause a fire that could cause serious injury.**
- **When changing liquid propane gas cylinder, Check all connections for damage or missing parts.**
- **Never try to start an aerial platform if you smell gas.**
- **For gasoline engine models, use only unleaded gasoline with an octane rating 87 or higher.**

WARNING

Do not smoke in an area where aerial platforms are stored or refueled.

3.9-1 Regular Fuel (Gasoline or Diesel)

1. Ensure engine and all systems are turned off and emergency stop buttons are depressed.
2. Open fuel compartment door and remove fuel cap.
3. Carefully fill the fuel tank ensuring that no spillage occurs.
4. Securely replace fuel cap.
5. Ensure there are no leaks in the fuel system.
6. Wipe up any spilled fuel.
7. Dispose of rags in an approved container.

Protection of Environment from Chemical Dangers

WARNING

Gasoline, diesel fuel, engine oil and hydraulic fluid are chemicals, which can contaminate the environment. If they are spilled during filling and reach the water, they can cause damage to the environment, e.g., death of fish. For such damage, the party responsible is liable! Therefore, gasoline, diesel fuel, engine oil or hydraulic fluid must not get into the sewage system, streams, rivers or other surface water. For that reason, immediately remove the dripped off or spilled gasoline, diesel fuel, engine oil or hydraulic fluid with appropriate means and dispose of these means according to the regulations.

MidWestTech | Skyjack SJ8831 RT, SJ8841 RT, SJ9250 RT Rough Terrain Scissor Lift Ope... Order the manual at mid-west-tech.com >