
TEREX AERIALS

SELF-PROPELLED BOOM LIFT
MODEL TB120

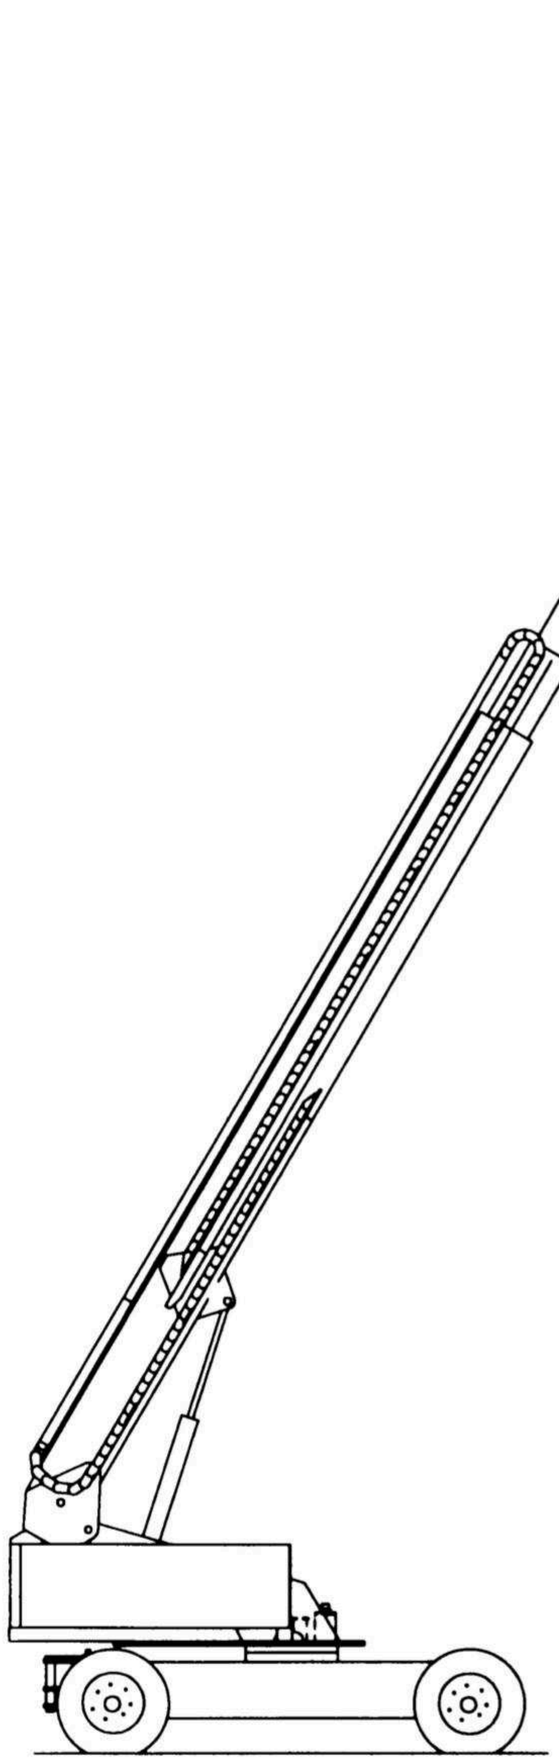

FOR PARTS OR SERVICE
CONTACT:

SERVICE AND MAINTENANCE MANUAL

Terex Aerials
10600 W. Brown Deer Road
Milwaukee, WI 53224
U.S.A.

Telephone: (414) 362-9300
Facsimile: (414) 355-0832

Terex Aerials
106 12th Street S. E.
Waverly, IA 50677
U.S.A.

Telephone: (319) 352-3920
Facsimile: (319) 352-5727

Terex Aerials
Courtstown Industrial Park
Little Island, Co.
Cork, Ireland

Telephone: (353) 21-353011
Facsimile: (353) 21-353368

Issued: July '98
P/N 17157

MidWestTech | Terex TB120 Boom Lift Service Manual | Publication 17157

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vii
Machine Specifications ix
Machine Component Locator xi
Undercarriage Component Locator xii
Superstructure Component Locator xiii
Boom Component Locator xiv
Platform Component Locator xvii
Lubrication Chart xviii
Lubrication Diagram xix

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-3
Towing procedures 1-3
Truck or Trailer Transport, Boom in STOW-N-GO™ Mode 1-4
Truck or Trailer Transport, Boom in Conventional Mode 1-9
Unloading Procedure 1-11
Emergency System and Procedures 1-15
Emergency Pumps 1-15
Emergency Drive Function 1-16
Emergency Lowering 1-17

Section 2: Hydraulic System

Hydraulic Fluid 2-5
Handling Precautions 2-5
Fluid Recommendations 2-5
Fluid Contamination Checks 2-5
System Flushing Procedure 2-6
Hydraulic System Components 2-7
Electro-Proportional Circuit 2-7
Hydraulic Pump 2-7
Hydraulic pump adjustment 2-7
Emergency Pumps 2-7
Emergency Pump Adjustment 2-7
Ground Valve Bank Assembly 2-8
Inlet Section 2-8
End Cover (Adapter Manifold) 2-8
Main Valve Segment 2-8
Operation 2-9
Maintenance 2-9
Hydraulic Circuit Line Check 2-9
Main Valve Segment 2-9
Valves 2-10
Drive Relief Valve 2-10
Drive Valve Assembly 2-10
Hi/ Low Speed Drive Valve 2-10
Selector Valve 2-10
Flow Divider Valve Assembly 2-11
Motion Control Valve Assembly 2-11
Selector Valve Assembly 2-11
Selector Valve 2-11
Check Valve 2-11

MidWestTech | Terex TB120 Boom Lift Service Manual | Publication 17157

Order the manual at mid-west-tech.com >


Table of Contents (Continued)

Section 2: Hydraulic System (Continued)

Hydraulic Fluid Reservoir 2-12
Hydraulic reservoir maintenance 2-12
High Pressure Filter 2-12
Boom Lift System 2-12
Boom Lift Valve Segment 2-12
Flow Control Valve 2-13
Flow Control Valve Adjustment 2-13
Lift Cylinder 2-13
Boom Telescope (Extend) System 2-13
Boom Extend valve segment 2-13
Pressure Relief Valve 2-14
Telescope (Extend) Cylinder 2-14
Superstructure Swing System 2-14
Swing Valve Segment 2-15
Swing Drive/ Reducer Assembly 2-15
Swing Drive/ Reducer Assembly Adjustment 2-15
Integral Brake Assembly 2-15
Swing System Maintenance 2-16
Jib Boom System 2-16
Jib Boom Valve Segment 2-16
Jib Cylinder 2-16
Platform Rotate System 2-17
Rotate Control Valve 2-17
Double Pilot Operated Check Valve 2-17
Rotary Actuator 2-17
Rotary Actuator Maintenance 2-18
Platform Rotator Manifold 2-18
Platform Level System 2-18
Level Control Valve 2-19
Double Pilot Operated Check Valve 2-19
Master Level Cylinder 2-19
Slave Level Cylinder 2-19
Relief Valves 2-20
Steer System 2-20
Selector Valve Assembly 2-20
Selector Valve 2-20
Check Valve 2-21
Steer Valve Segment 2-21
Hydraulic Swivel 2-21
Steer Cylinder 2-21
Steer Disconnect Knob 2-21
Steer System Maintenance 2-22
Axle Extend System 2-22
Axle Extend Cylinders 2-23
Selector Valve Assembly 2-23
Selector Valve 2-23
Check Valve 2-23
Steer Valve Segment 2-23
Hydraulic Swivel 2-23

October 1994

MidWestTech | Terex TB120 Boom Lift Service Manual | Publication 17157 Order the manual at mid-west-tech.com >

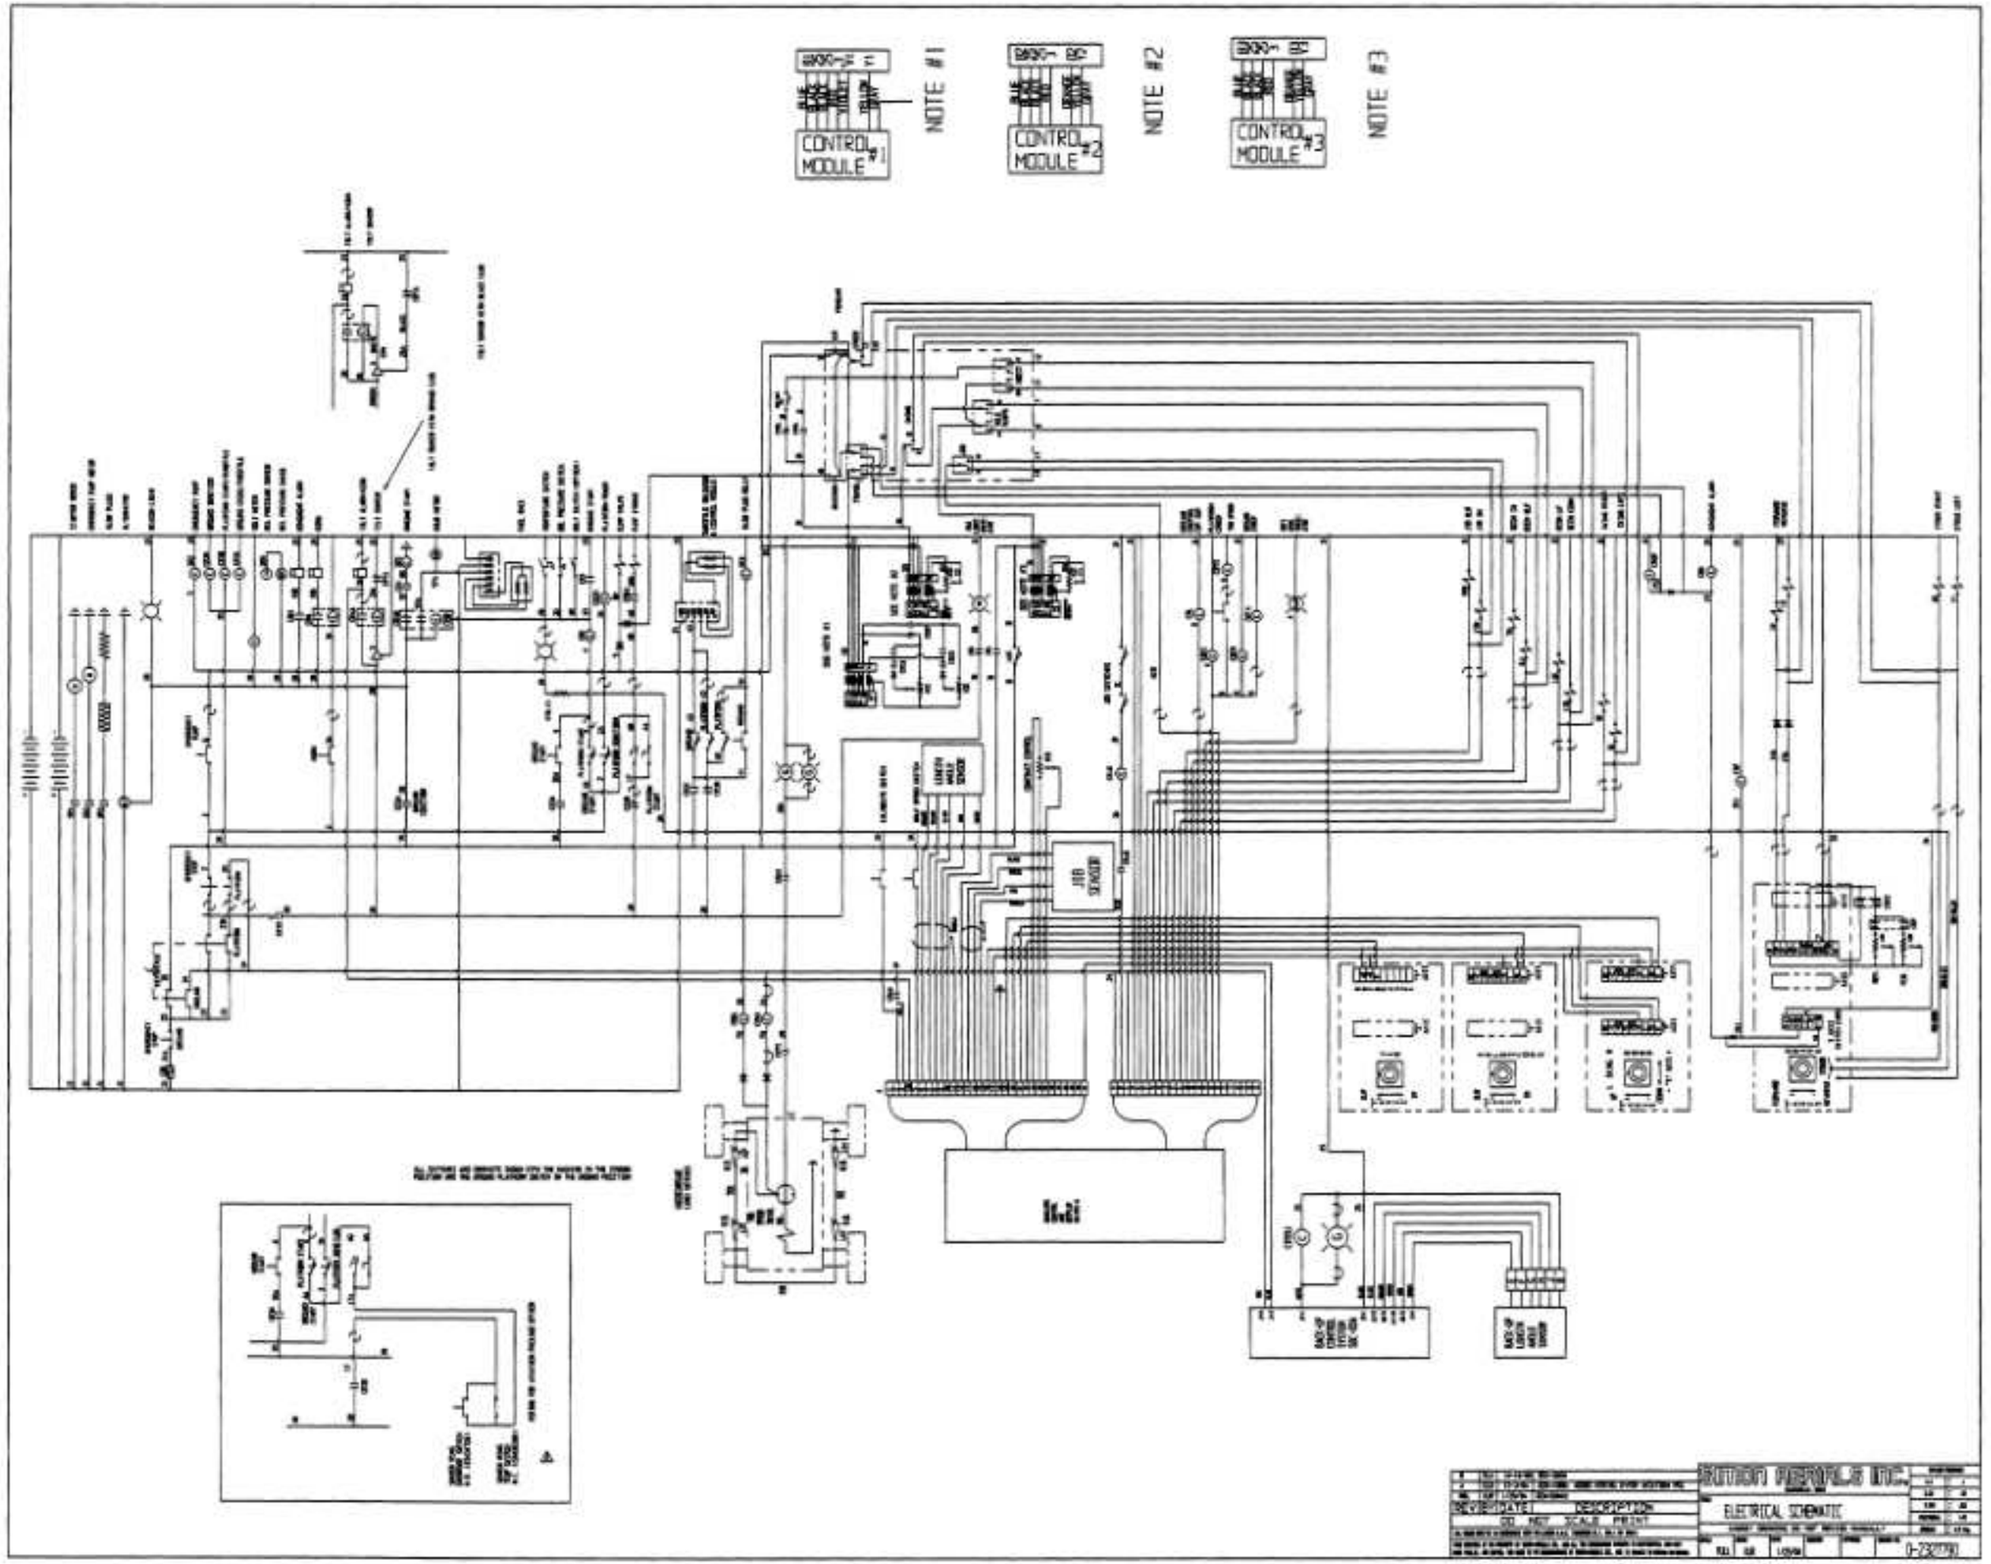

Order the manual at mid-west-tech.com >