
TEREX AERIALS

SELF-PROPELLED BOOM LIFT
MODEL TB86

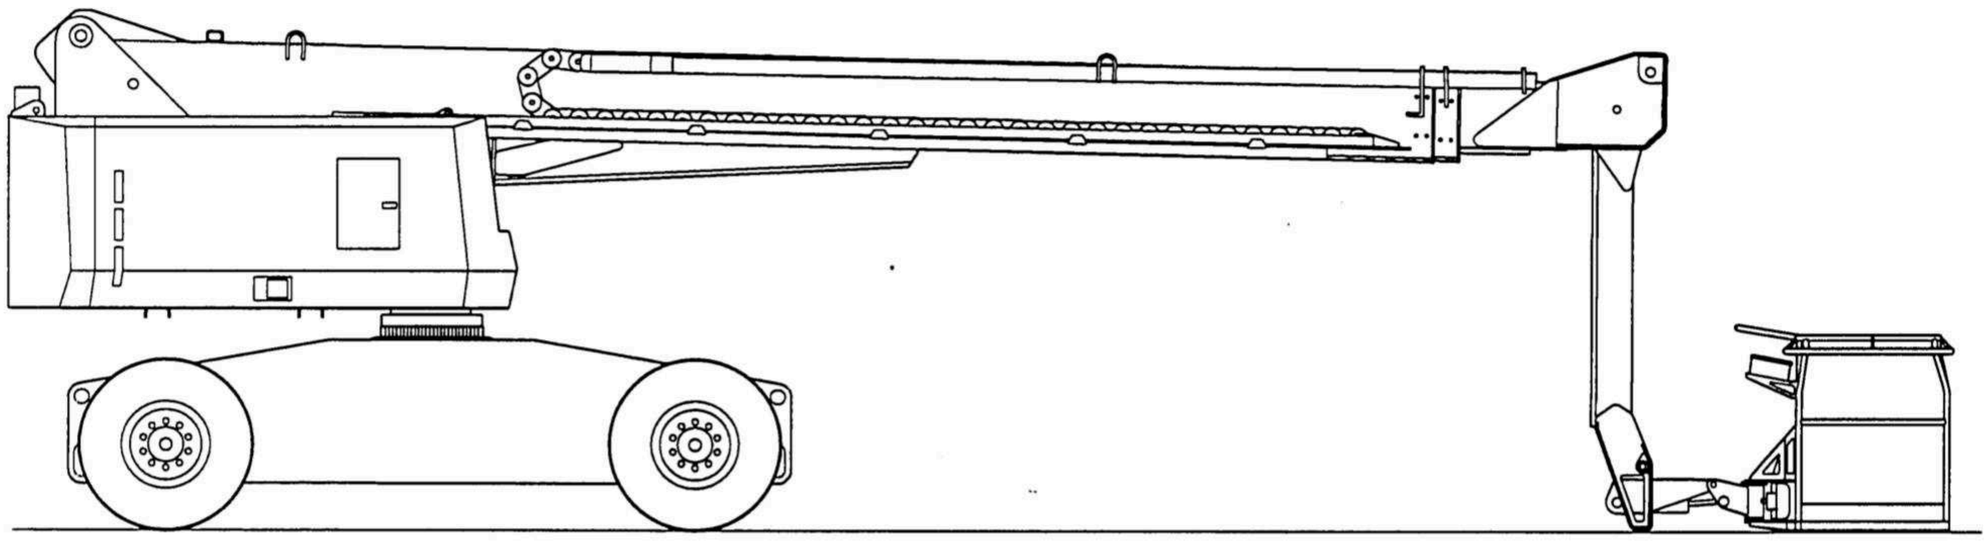

Art # A00.00311E

FOR PARTS OR SERVICE
CONTACT:

SERVICE AND MAINTENANCE MANUAL

Terex Aerials
10600 W. Brown Deer Road
Milwaukee, WI 53224
U.S.A.

Telephone: (414) 362-9300
Facsimile: (414) 355-0832

Terex Aerials
106 12th Street S. E.
Waverly, IA 50677
U.S.A.

Telephone: (319) 352-3920
Facsimile: (319) 352-5727

Terex Aerials
Courtstown Industrial Park
Little Island, Co.
Cork, Ireland

Telephone: (353) 21-353011
Facsimile: (353) 21-353368

Issued: July '98
P/N 17159

MidWestTech | Terex TB86 Boom Lift Service Manual | Publication 17159

Order the manual at mid-west-tech.com >

Table of Contents

Introduction vi
Machine Specifications viii
Machine Component Locator ix
Undercarriage Component Locator x
Superstructure Component Locator xi
Superstructure Component Locator xii
Base Boom Component Locator xiii
Mid Boom Component Locator xiv
Tip Boom Component Locator xv
Jib Boom Component Locator xvi
Platform Component Locator xvii
Lubrication Chart xviii
Lubrication Diagram xix

Section 1: Transportation and Emergency Procedures

Transporting the Unit 1-4
Truck or Trailer Transport 1-4
Unloading Procedures 1-6
Emergency System and Procedures 1-8
Emergency Electrical Pump 1-8
Unpowered Emergency Movement 1-8
Emergency Lowering 1-9

Section 2: Hydraulic System

Hydraulic Fluid .....
- Handling Precautions 2-5
- Fluid Recommendations 2-5
- Fluid Contamination Checks 2-5
- System Flushing Procedure 2-6

Hydraulic System Components
- Electro-Proportional Circuit 2-7
- Main Hydraulic Pump 2-7
  - Hydraulic Pump Adjustment 2-9
  - Main Pump Replacement 2-9
- Emergency Pump
  - Emergency Pump Adjustment 2-10
- Ground Valve Bank Assembly
  - Inlet Section 2-11
  - Main Valve Segment 2-11
  - Operation 2-11
  - Maintenance
  - Hydraulic Circuit Line Check 2-12
  - Main Valve Segment 2-12
- Drive Valve Manifold -2WD 2-12
  - Hi Speed Drive Enable Valve 2-12
  - Flow Divider/Combiner Valve 2-12
  - Counterbalance Valve 2-13
  - Brake Valve Circuit 2-13

MidWestTech | Terex TB86 Boom Lift Service Manual | Publication 17159

Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 2: Hydraulic System (Continued)

Drive Valve Manifold -4WD 2-14
- Hi Speed Drive Enable Valve 2-14
- Flow Divider/ Combiner Valve 2-14
- Counterbalance Valve 2-14
- Brake Valve Circuit 2-14
- Selector Spool Valve Circuit 2-15

Drive Motor 2-15

Hydraulic Fluid Reservoir
- Hydraulic Reservoir Maintenance 2-16

Hydraulic Fluid Filter
- Return Filter 2-16
- High Pressure Filter 2-16

Boom Lift System
- Boom Lift Valve Segment 2-16
- Flow Control Valve
- Flow Control Valve Adjustment 2-17
- Lift Cylinder 2-17

Boom Telescope (Extend) System
- Boom Extend Valve Segment 2-17
- Pressure Relief Valve 2-18
- Telescope (Extend) Cylinder 2-18

Superstructure Swing System
- Swing Valve Segment 2-18
- Planetary Gear Swing Reducer with Integral Brake
- Swing Drive/ Reducer Assembly Adjustment 2-19

Jib Boom System
- Jib Boom Valve Segment 2-20
- Jib Cylinder 2-20

Platform Rotate System
- Rotate Control Valve 2-21
- Rotary Actuator
- Rotary Actuator Maintenance 2-21
- Platform Rotator Manifold 2-21

Platform Levelling System
- Level Control Valve 2-22
- Double Pilot Operated Check Valve 2-22
- Master Levelling Cylinder 2-22
- Slave Levelling Cylinder 2-23
- Relief Valves 2-23

Steer System
- Selector Valve Segment 2-24
- Steer Pressure Relief Valve 2-24
- Steer Cylinder 2-24
- Steer Disconnect Knob 2-24
- Steer System Maintenance 2-25
- Hydraulic Swivel 2-25

Axle Extend System
- Jack and Extend Valves 2-26
- Hydraulic Jack 2-26
- Axle Extend Cylinder 2-26

MidWestTech | Terex TB86 Boom Lift Service Manual | Publication 17159 Order the manual at mid-west-tech.com >

Table of Contents (Continued)

Section 3: Drive System


Drive System Components 3-3
- Drive Motor 3-3
- Drive Valve Segment 3-3
- Drive Valve Manifold - Two Wheel Drive 3-4
  - Hi Speed Drive Enable Valve 3-4
  - Flow Divider/ Combiner Valve 3-4
  - Counterbalance Valve 3-4
  - Brake Valve Circuit 3-4
- Drive Valve Manifold - Four Wheel Drive 3-6
  - Hi Speed Drive Enable Valve 3-6
  - Flow Divider/ Combiner Valve 3-6
  - Counterbalance Valve 3-6
  - Brake Valve Circuit 3-6
- Toggle Switch on the Pendant Control 3-8
- Platform Control Handle (Joystick) 3-8

Section 4: Electrical System

Electrical System 4-3
- Battery 4-3
  - Battery Maintenance (In Use) 4-3
  - Battery Preventive Maintenance 4-4
  - Battery Replacement 4-4
- Movement Alarm 4-4
- Tilt Alarm 4-4
  - Tilt Alarm Test 4-4
  - Tilt Alarm Adjustment 4-5
- Relay 4-5
- Circuit Breaker 4-5
- Limit Switch 4-5
- Emergency Pump 4-5
- Emergency Stop Button 4-5
- Remote Control Pendant Switch Removal 4-5
- Ground Control Cabinet Switch Removal 4-6
- Platform Console Switch Removal 4-6
- Platform Control Board 4-6
- Electronics Control Module 4-6

MidWestTech | Terex TB86 Boom Lift Service Manual | Publication 17159 Order the manual at mid-west-tech.com >

MidWestTech | Terex TB86 Boom Lift Service Manual | Publication 17159

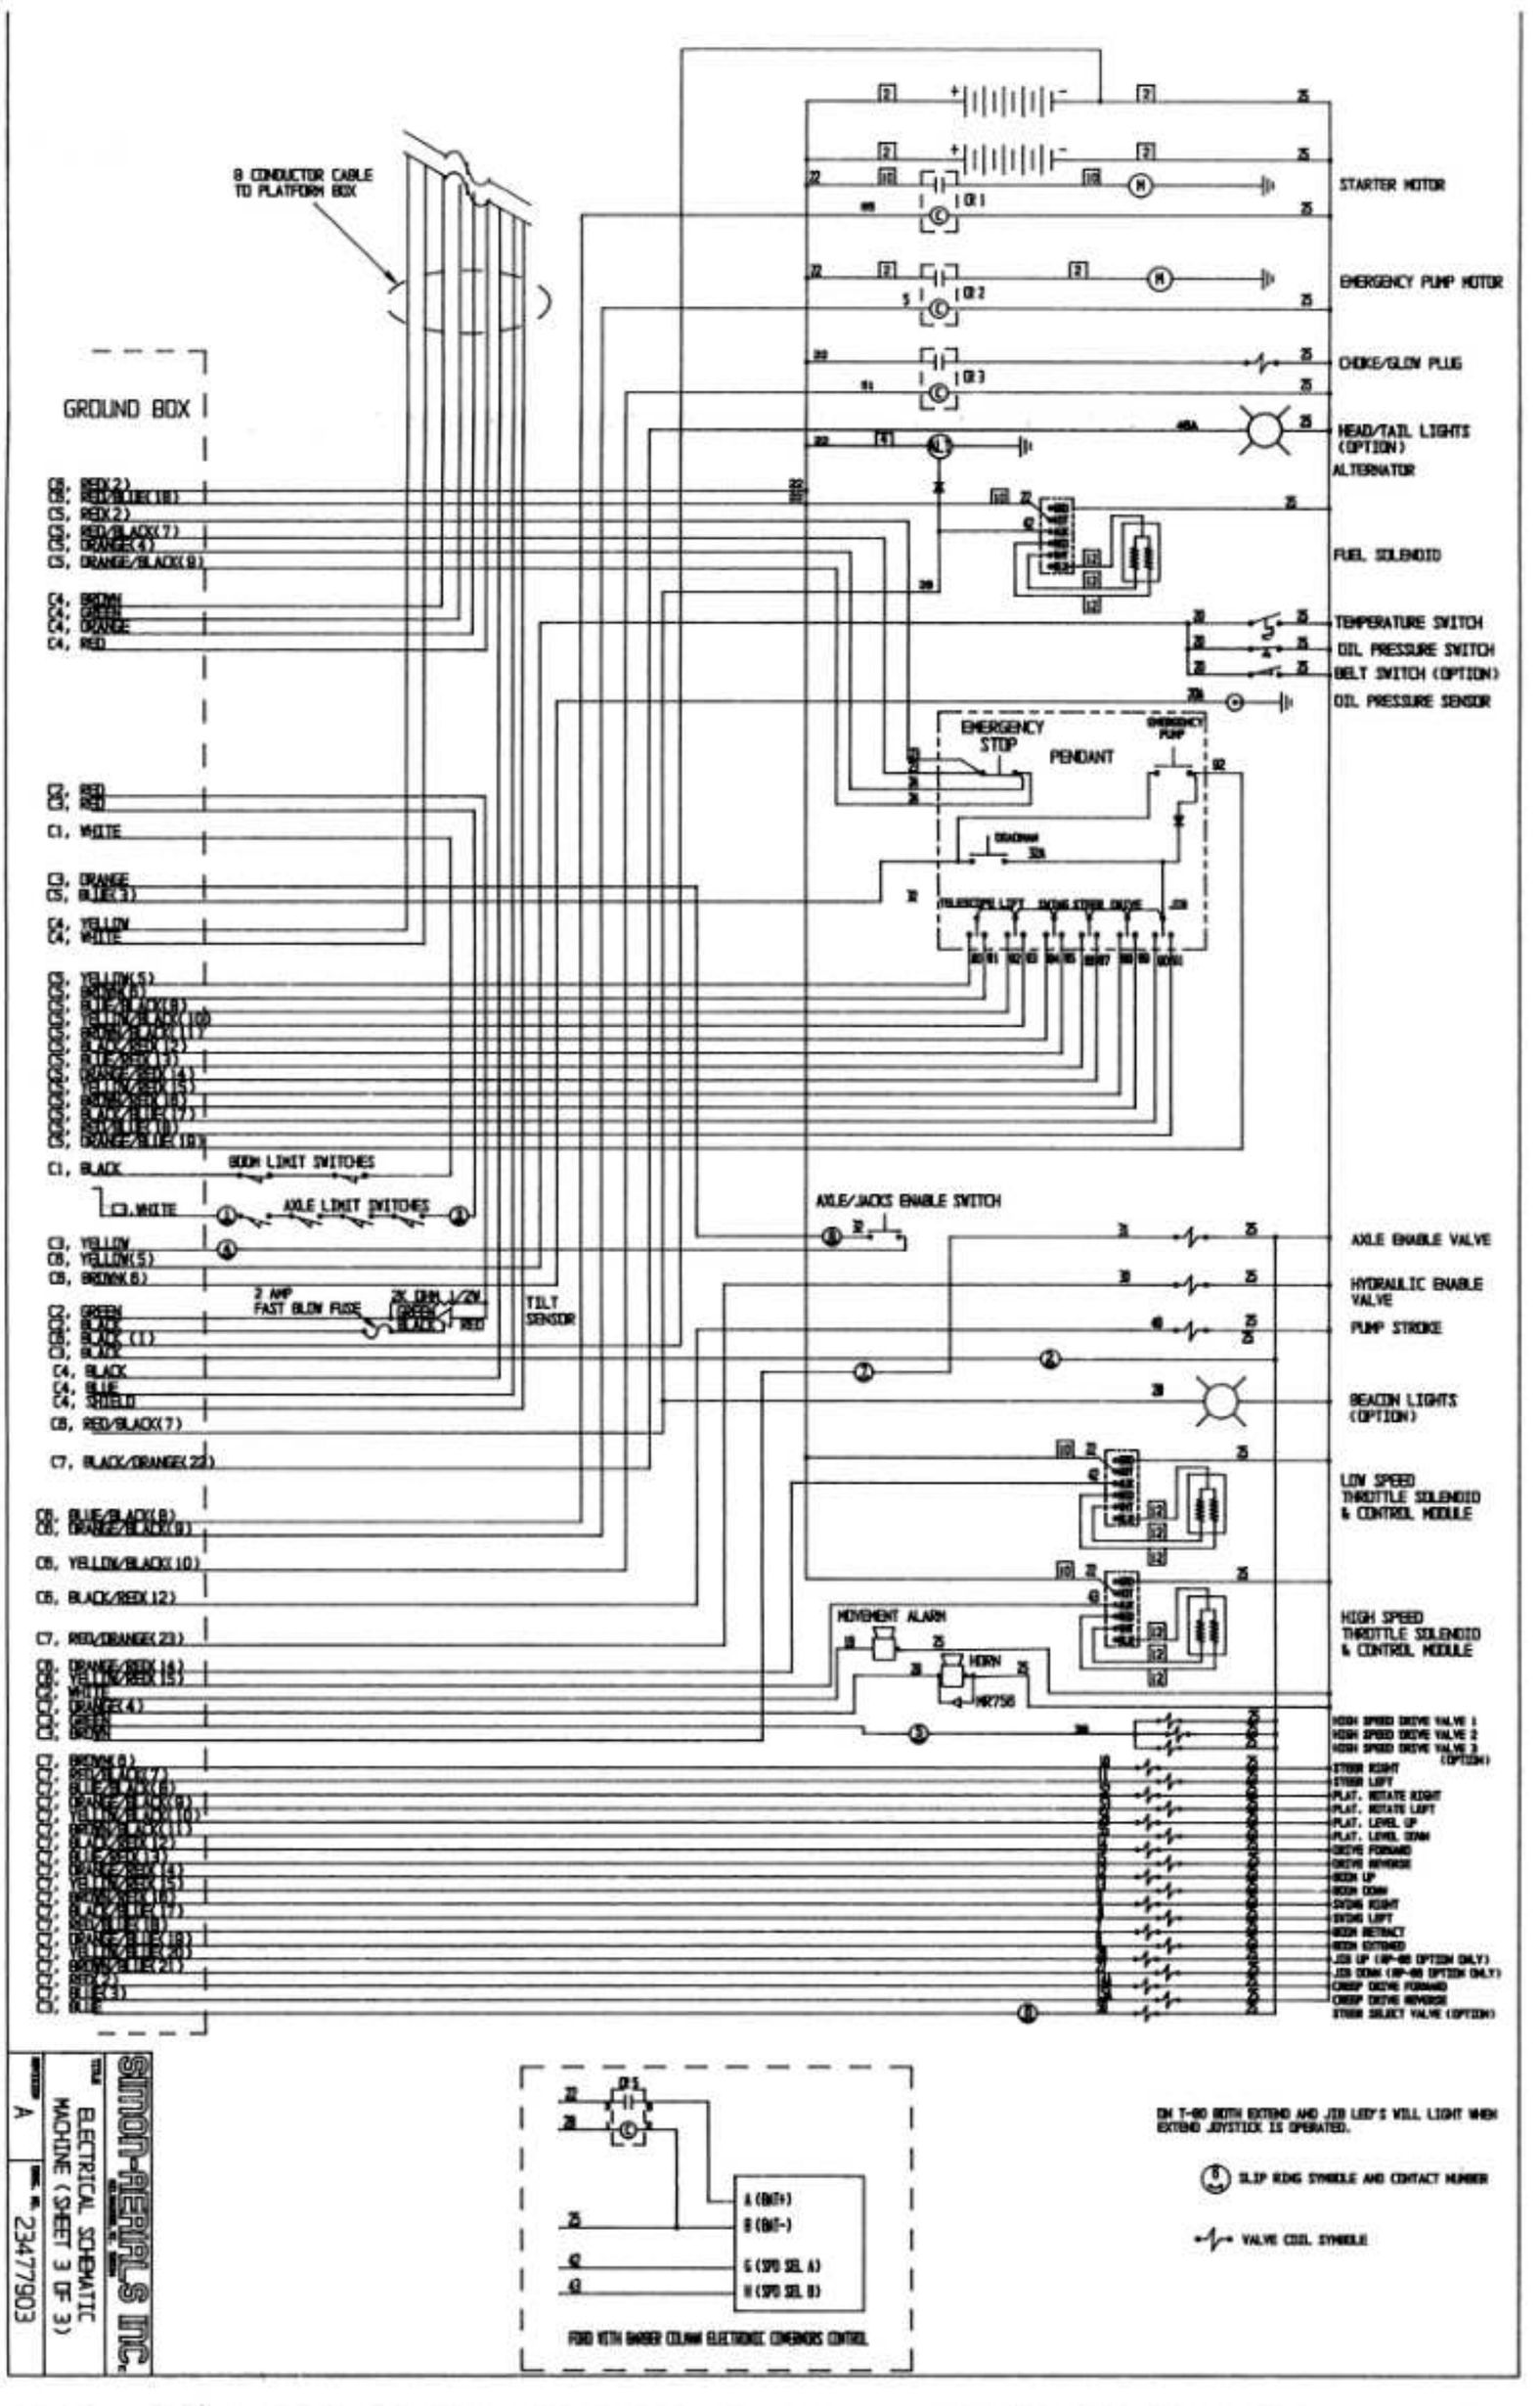

SIMON-AERIALS INC.	TITLE: ELECTRICAL SCHEMATIC MACHINE (SHEET 3 OF 3)	REVISION: A
	DWG. NO. 2347903	

Order the manual at mid-west-tech.com >