
TEREX AERIALS

TECHNICAL MANUAL

SELF-PROPELLED KNUCKLE BOOM LIFT
MODEL TA50RT (BI-FUEL)

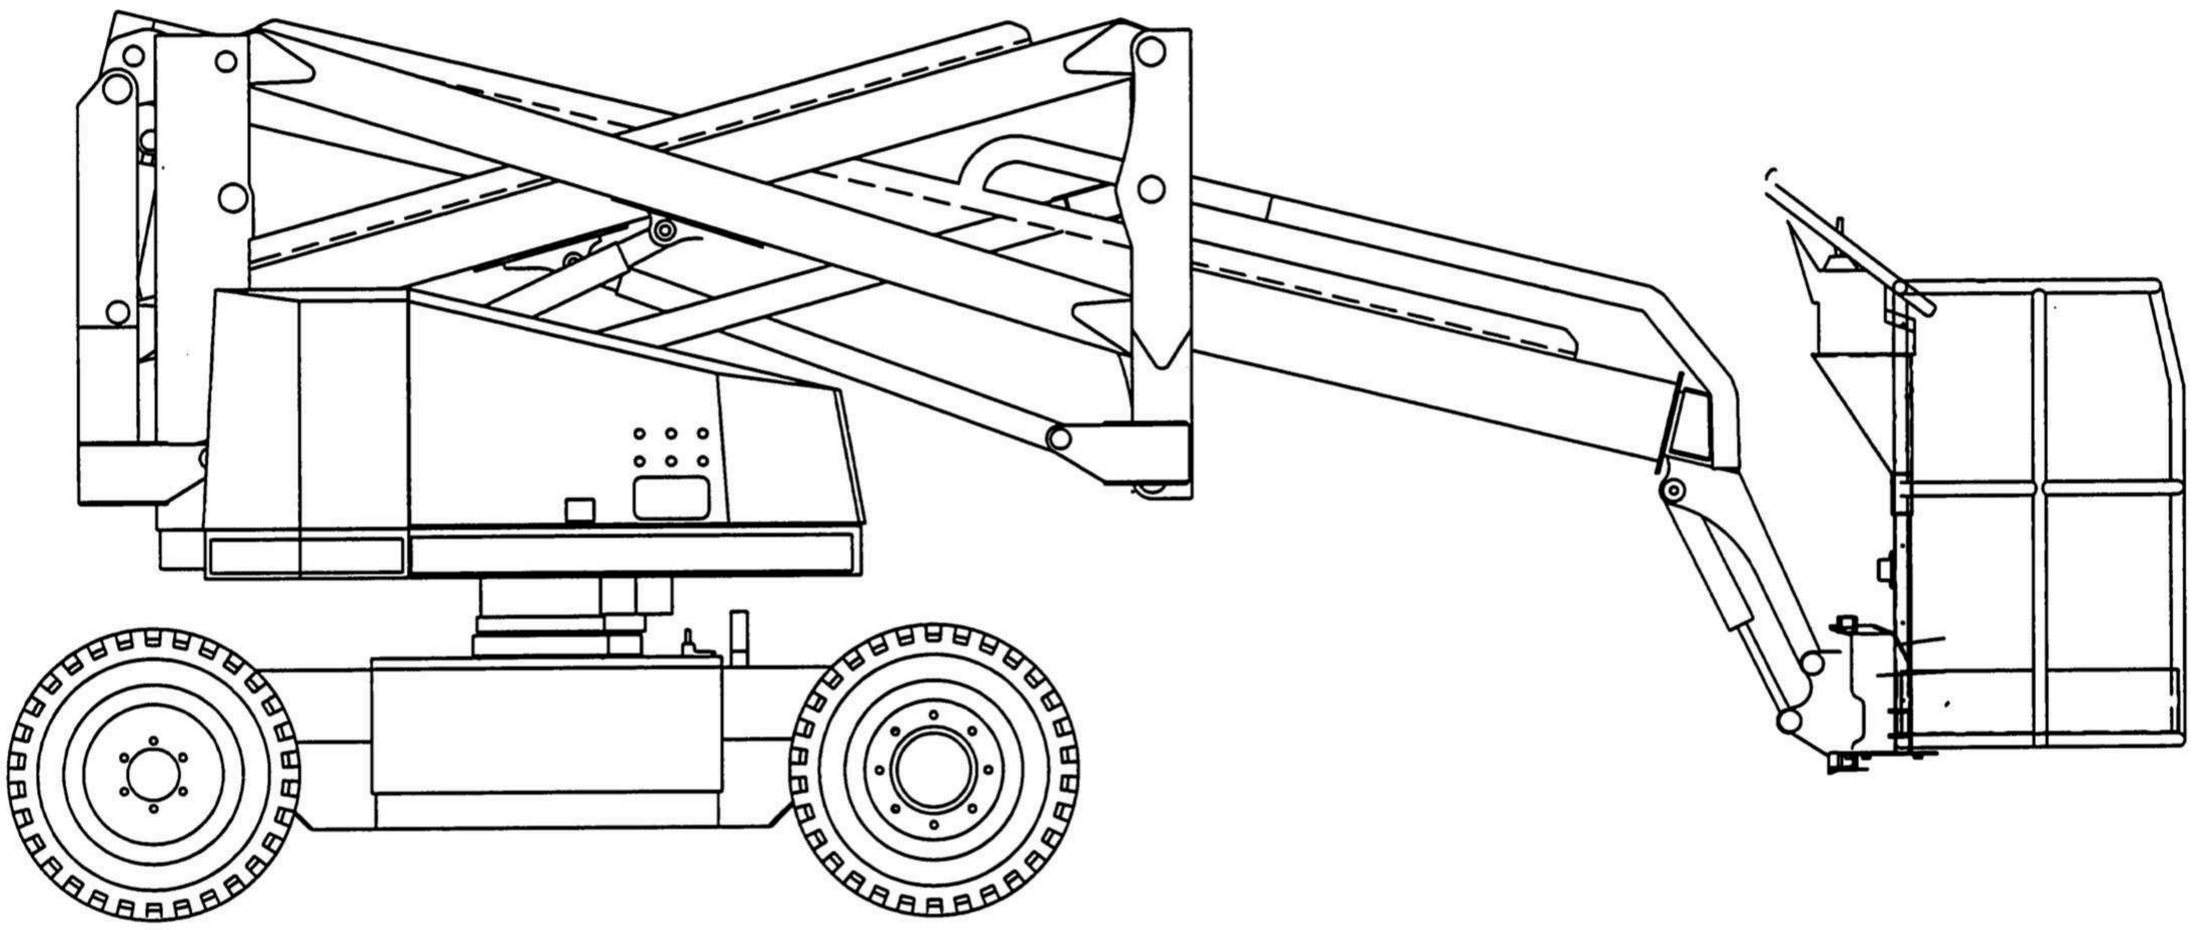

FOR PARTS OR SERVICE
CONTACT:

OPERATION, SERVICE and PARTS MANUAL

Terex Aerials
10600 W. Brown Deer Road
Milwaukee, WI 53224
U.S.A.

Telephone: (414) 362-9300
Facsimile: (414) 355-0832

Terex Aerials
106 12th Street S. E.
Waverly, IA 50677
U.S.A.

Telephone: (319) 352-3920
Facsimile: (319) 352-5727

Terex Aerials
Courtstown Industrial Park
Little Island, Co.
Cork, Ireland

Telephone: (353) 21-353011
Facsimile: (353) 21-353368

Issued: April '98
P/N 17326

MidWestTech | Terex TA50RT Bi Fuel Self Propelled Knuckle Boom Boom Lift Service Manual | Publication 17326

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

INTRODUCTION (i)
AND DECLARATIONS OF CONFORMITY (ii)

		Page No.
1.	**TA50RT Specification**	1-1
1.1	Design Specifications	1-1
1.1.1	Closed Dimensions and Weights	1-1
1.1.2	Operating Dimensions	1-1
1.1.3	Design Specifications	1-1
1.1.4	Working Envelope	1-2
1.1.5	General Arrangement	1-2
1.2	Component Specifications	1-3
1.2.1	Mechanical Components	1-3
1.2.2	Hydraulic Components	1-3
1.2.3	Oil	1-3
1.2.4	Equivalent Oils	1-3
1.2.5	Electrical Components	1-3
1.2.6	Engine Details	1-4
2.	**Safety Precautions**	2-1
2.1	Safety Symbols	2-1
2.2	Safety Rules and Precautions	2-2
2.3	Safety Features	2-6
2.3.1	Emergency Stop Pushbuttons	2-6
2.3.2	Footswitch Control	2-6
2.3.3	Tilt Alarm	2-6
2.3.4	Movement Alarm	2-6
2.3.5	Torque Chart	2-6
3.	**Operating Procedures**	3-1
3.1	Pre-use Checks	3-1
3.2	Ground Control Checks	3-1
3.3	Cage Control Checks	3-2
3.4	Unloading Procedures	3-2
3.5	Driving	3-3
3.5.1	Drive Controls	3-3
3.5.1.1	Forward and Reverse	3-3
3.5.1.2	Drive Speed Control	3-5
3.5.1.3	Steering Control	3-5
3.5.1.4	Travel Speed Control	3.5
3.6	Differential Lock	3-5
3.6.1	Engage Differential Lock	3-5
3.7	Braking System	3-6
3.7.1	Brakes in Static Mode	3-6
3.7.2	Brakes in Drive Mode	3-6

MidWestTech | Terex TA50RT Bi Fuel Self Propelled Knuckle Boom Boom Lift Service Manu... Order the manual at mid-west-tech.com >

		Page No.
3.7.3	Emergency Braking	3-6
3.8	Access Operations (Cage Control)	3-7
3.9	Access Operations (Ground Control)	3-7
3.10	After Use and Storage Instructions	3-8
3.11	Special Precautions (Cold Weather)	3-10
3.12	Special Precautions	3-10
3.12.1	Towing	3-10
3.12.1.1	Towing without Towing Package	3-10
3.12.2	Wind Conditions	3-10
3.12.3	Crane Operations	3-10
3.12.4	Driving on Slopes	3-10
3.12.5	Testing the Tilt Alarm	3-11
3.12.6	Oil and Battery Charge Warning Lamps	3-11
4.	**Emergency Procedures & Systems**	4-1
4.1	Emergency Procedures	4-1
4.1.1	Situation: Platform elevated, operator not incapacitated, but unit will not operate properly using the platform controls.	4-1
4.1.2	Situation: Unit elevated, with operator incapacitated at platform controls.	4-2
4.1.3	Situation: Platform in contact with live power lines, and operator incapacitated.	4-2
4.2	Emergency Systems & Procedures	4-3
4.2.1	Emergency Pump	4-3
4.2.2	Emergency Rotation	4-3
4.2.3	Emergency Towing	4-3
4.2.3.1	Towing with towing package fitted	4-4
4.2.3.2	Towing without towing package	4-4
4.2.4	Emergency Lowering from Cage (Optional)	4-6
5.	**Maintenance Schedules**	5-1
5.1	General Information	5-1
5.1.1	Introduction	5-1
5.1.2	Hydraulic Oils	5-1
5.1.3	Diesel Engine Oil	5-2
5.2	Servicing Check List (Basic Machine Only)	5-3
5.2.1	Servicing (Daily)	5-3
5.2.2	Servicing (Weekly)	5-3
5.2.3	Servicing (Monthly)	5-4
5.2.4	Servicing (Six Monthly)	5-6
5.2.5	Servicing (Yearly)	5-6
5.2.6	Servicing (Four Yearly)	5-7
5.3	Servicing	5-7
5.3.1	Daily Routine Servicing	5-7
5.3.1.1	Hydraulic Oil Level	5-7
5.3.1.2	Tyre Condition	5-7

MidWestTech | Terex TA50RT Bi Fuel Self Propelled Knuckle Boom Boom Lift Service Manu... Order the manual at mid-west-tech.com >

		Page No
5.3.1.3	Cage Door Lock	5-7
5.3.2	Weekly Routine Service	5-7
5.3.2.1	Control Valves	5-7
5.3.2.2.	Hydraulic System	5-7
5.3.2.3	Steering	5-8
5.3.2.4	Start Battery	5-8
5.3.2.5	Pivot Pins	5-8
5.3.3.	Monthly Routine Servicing	5-8
5.3.3.1	Hydraulic Oil	5-8
5.3.3.2	Chassis Bolts	5-9
5.3.3.3	Slew Ring Gear Teeth	5-9
5.3.3.4	Lubrication	5-9
5.3.3.5	Pivot Pin Security	5-9
5.3.3.6	Drive Gearbox Oil Level	5-9
5.3.4	Six Monthly Routine Servicing	5-9
5.3.4.1	Cage Levelling	5-9
5.3.4.2	Boom Pivots	5-10
5.3.4.3	Boom Cylinders	5-10
5.3.4.4	Axle	5-10
5.3.4.5	Return Line Filter	5-10
5.3.4.6	Machine Systems Test	5-10
5.3.5	Yearly Routine Servicing	5-10
5.3.5.1	Hydraulic Oil	5-10
5.3.5.2	Hydraulic Oil Tank	5-11
5.3.5.3	Hydraulic Tank Refill Procedure	5-11
5.3.5.4	Structural Examination	5-11
5.3.5.5	Cage Mounting	5-11
5.3.5.6	Levelling Cylinders	5-11
5.3.6	Four Yearly Routine Servicing	5-12
5.3.6.1	Flexible Hoses	5-12
5.3.6.2	Pivot Pins and Bearings	5-12
5.3.6.3	Pin Replacement	5-12
5.3.6.3.1	Boom Pin Replacement	5-12
5.3.6.3.2	Tie Rail Pin Replecement	5-13
5.3.6.3.3	Lift Cylinder Pin Replacement	5-13
5.3.6.3.4	Self Levelling Cylinder Pin Replacement	5-13
5.3.6.3.5	Zoom Boom Cylinder Pin Replacement	5-13
5.3.6.4	Zoom Cylinder	5-14
5.3.6.5	Zoom Pads	5-14
5.3.6.5.1	Front Zoom Pad Replacement	5-14
5.3.6.5.2	Rear Zoom Boom Replacement	5-14
5.3.6.6	Lift Cylinder Seals	5-14
5.3.6.6.1	Seal Replacement - Cylinder In-place	5-15
5.3.6.6.2	Seal Replacement - Cylinder Removed	5-15
5.4	Lubrication	5-16
5.4.1	General Lubrication	5-16
5.4.2	Slew Bearing/Gear Lubricants	5-16

MidWestTech | Terex TA50RT Bi Fuel Self Propelled Knuckle Boom Boom Lift Service Manu... Order the manual at mid-west-tech.com >