
TEREX AERIALS

SELF-PROPELLED ARTICULATING BOOM LIFT MODEL TA33

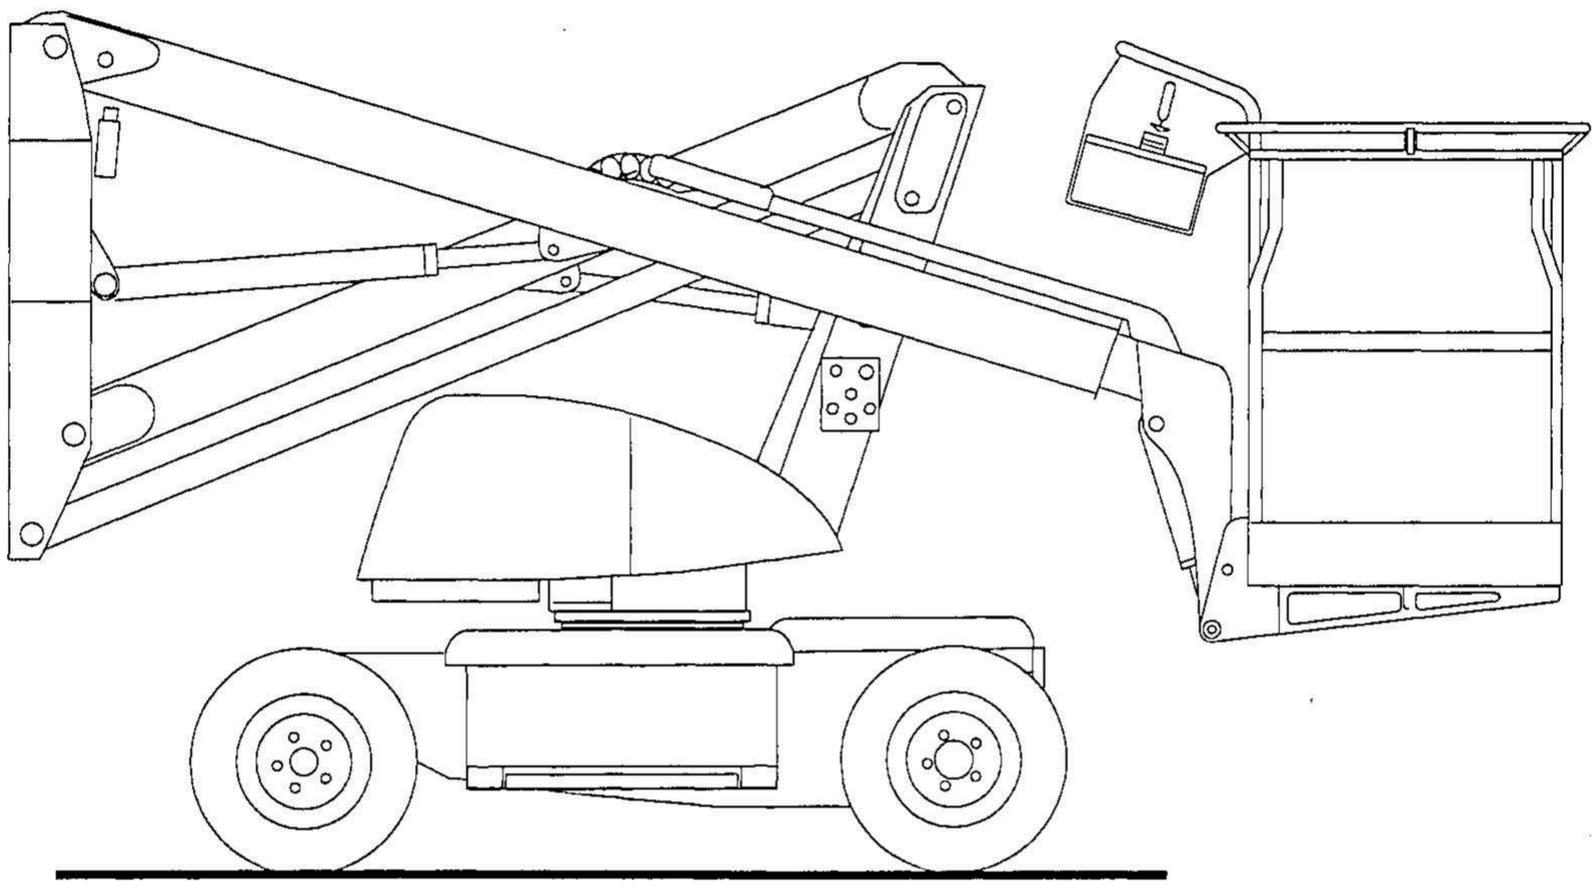

Art # A00.00489E

FOR PARTS OR SERVICE CONTACT:

OPERATION AND TECHNICAL MANUAL

Terex Aerials
10600 W. Brown Deer Road
Milwaukee, WI 53224
U.S.A.

Telephone: (414) 362-9300
Facsimile: (414) 355-0832

Terex Aerials
Courtstown Industrial Park
Little Island, Co.
Cork, Ireland

Telephone: (353) 21-353011
Facsimile: (353) 21-353368

Terex Worldwide Parts Distribution Center
8800 Rostin Road
Southaven, MS 38671-0923
U.S.A.

Telephone: (601) 393-1351
Facsimile: (601) 393-1751

Issued: July '98
P/N 17331

MidWestTech | Terex TA33 Self Propelled Articulating Boom Boom Lift Service Manual | Publication 17331

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Introduction iii
Machine Specifications iv
Machine Diagrams v
Range Diagram v
Gradeability Conversion Chart vi

SECTION 1: TRANSPORTATION AND EMERGENCY PROCEDURES

Transporting the Unit 1-4
Truck or Trailer Transport 1-4
Unloading Procedures 1-6
Emergency System and Procedures 1-8
Emergency Pump 1-8
Emergency Rotation 1-8
Unpowered Emergency Movement 1-9
Emergency Procedures 1-10

SECTION 2: MAINTENANCE

General Maintenance Tips 2-3
Hydraulic Fluid 2-4
Handling Precautions 2-4
Fluid Recommendations 2-4
Fluid Contamination Checks 2-5
System Flushing Procedure 2-6
Hydraulic Pressure Check 2-8
Hydraulic Oil Filter Check 2-8
Controller Diagnostics 2-8
Battery 2-10
Battery Charger 2-12
Tilt Alarm 2-13
Shift Operational Checklist 2-14
Monthly Operational Checklist 2-17
Semi-Annual Operational Checklist 2-19
Troubleshooting 2-22
Lubrication Chart 2-24

MidWestTech | Terex TA33 Self Propelled Articulating Boom Boom Lift Service Manual | Pu... Order the manual at mid-west-tech.com >