
TEREX AERIALS

VERTICAL LIFT, MODEL TV20

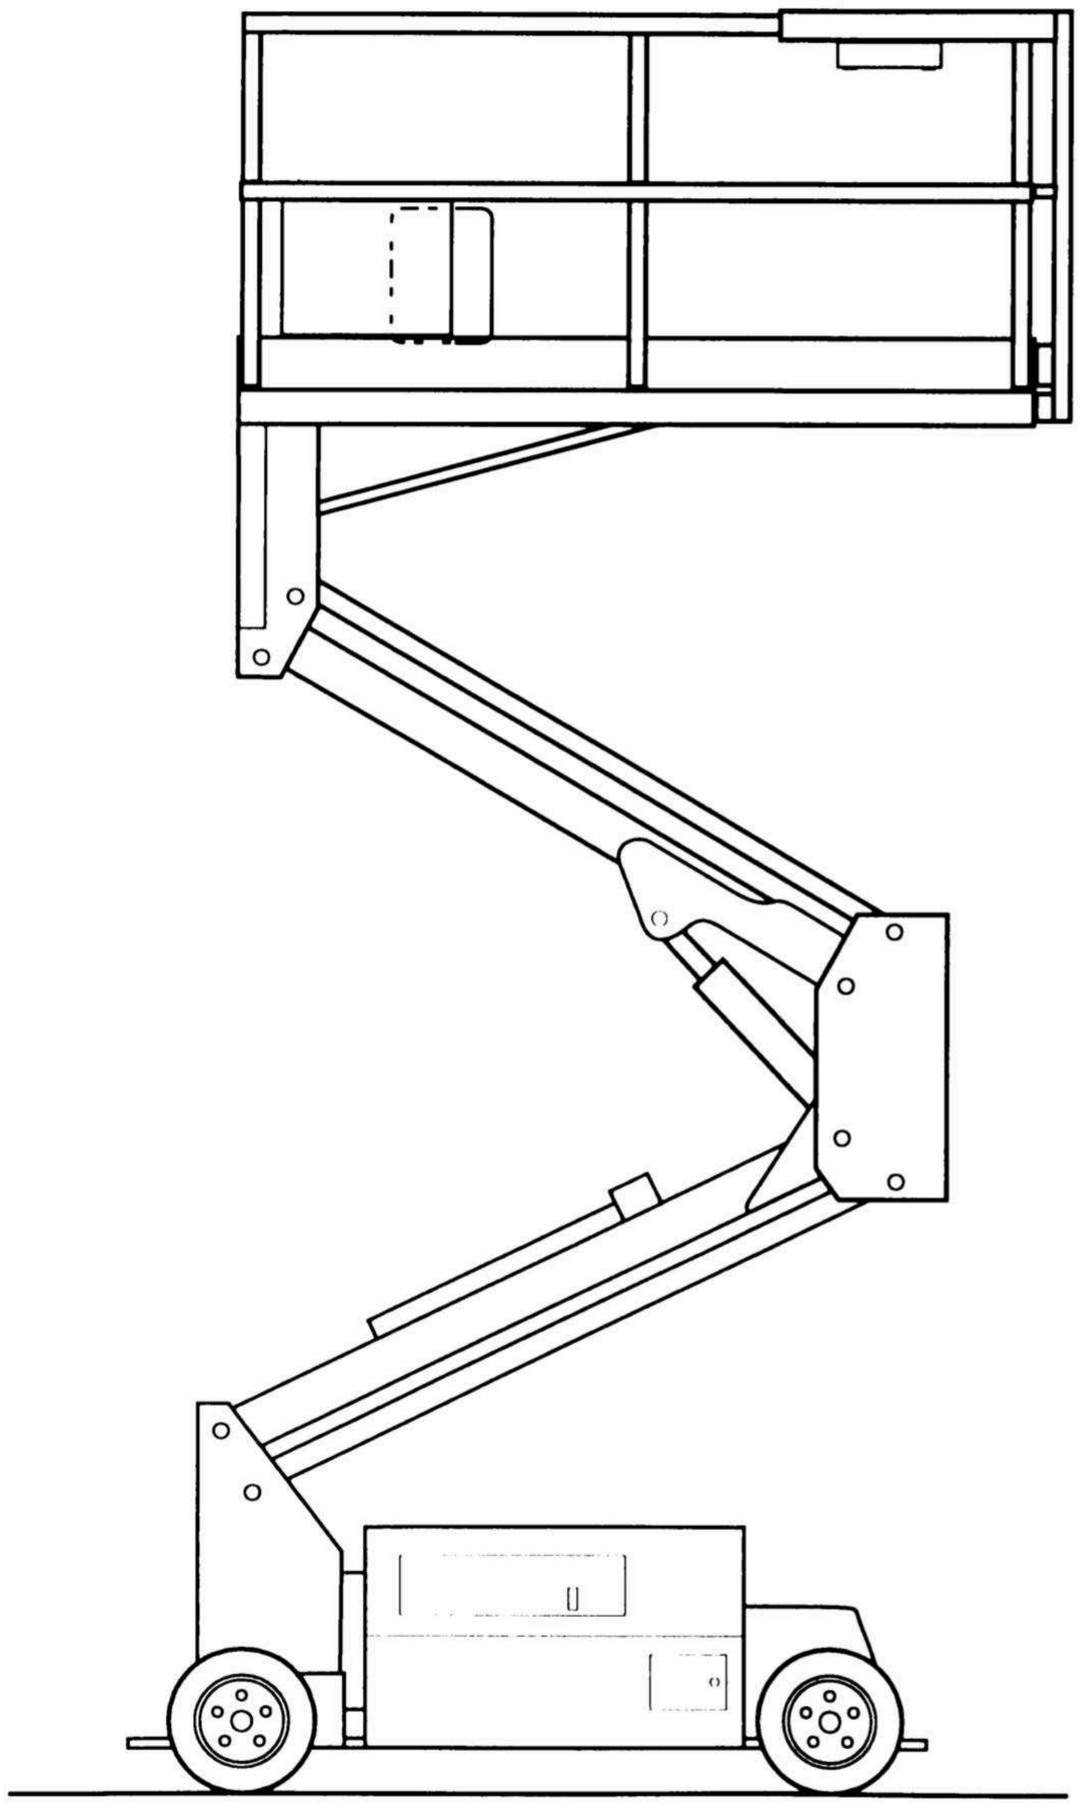

Art # A00.00710E

FOR PARTS OR SERVICE
CONTACT:

SERVICE AND MAINTENANCE MANUAL

Terex Aerials
10600 W. Brown Deer Road
Milwaukee, WI 53224
U.S.A.

Telephone: (414) 362-9300
Facsimile: (414) 355-0832

Terex Aerials
106 12th Street S. E.
Waverly, IA 50677
U.S.A.

Telephone: (319) 352-3920
Facsimile: (319) 352-5727

Terex Aerials
Courtstown Industrial Park
Little Island, Co.
Cork, Ireland

Telephone: (353) 21-353011
Facsimile: (353) 21-353368

Issued: July '98
P/N 17513

MidWestTech | Terex TV20 Vertical Boom Lift Service Manual | Publication 17513

Order the manual at mid-west-tech.com >

Table of Contents

Introduction iii
Machine Specifications iv
Primary Machine Components v
Undercarriage Components vii
Lubrication Chart viii
Lubrication Diagram ix

Transportation and Emergency Procedures
Transporting the Unit 1-3
Moving of the 2034 Link 1-3
Fork Lifting of the 2034 Link 1-3
Truck Transport of the 2034 Link 1-3
Single Point Lifting Hook (option) 1-3
Unloading Procedures 1-4
Emergency System and Procedures 1-5
Emergency Lowering with Hand Pump 1-5
Emergency Drive 1-5
Emergency Procedures 1-6

Hydraulic System
Hydraulic Fluid 2-3
Handling Precautions 2-3
Fluid Recommendations 2-3
Hydraulic Fluid Analysis 2-3
System Flushing Procedure 2-4
Hydraulic System Components 2-5
Hydraulic Fluid Reservoir 2-5
Hydraulic Pump 2-5
Control Valve Assembly 2-5
Main Relief Valve 2-5
Sequence Valve 2-6
Steer Valve 2-6
Steer Bypass Valve 2-6
Drive Valve 2-6
Counterbalance Valves (Drive) 2-6
Lift Valve (Normally Closed) 2-6
Cylinder Lowering Valve 2-7
Brake Release Shuttle Valve 2-7
Hi Speed Valve 2-7
Check Valves 2-7
Velocity Fuse 2-7
Cylinders 2-7
Drive Motors 2-8
Limit Switch 2-8
Hydraulic System Functional Description 2-8

Electrical System
Battery 3-3
Battery Maintenance (In Storage) 3-3
Battery Maintenance (In Use) 3-3
Battery Preventive Maintenance 3-3

MidWestTech | Terex TV20 Vertical Boom Lift Service Manual | Publication 17513
Order the manual at mid-west-tech.com >

Battery Replacement 3-4
Battery Charger 3-4
Movement Alarm (Optional) 3-4
Tilt Alarm (Optional) 3-4
Descent Alarm (Optional) 3-5
Automatic Warning Beacon (Optional) 3-5
Relays 3-5

Mechanical Components
Undercarriage 4-3
Tires 4-3
Changing Tires 4-3
Wheels And Lug Nuts 4-4
Front Hub Assembly 4-4
Repacking Front Wheel Bearings 4-4
Drive Motors 4-4
Steer Cylinder Seal Replacement 4-4
Brake Cylinder Seal Replacement 4-5
Hoses and Cables 4-5
Boom 4-5
Boom Lift Cylinder 4-5
Boom Lift Cylinder Removal 4-6
Boom Lift Cylinder Replacement 4-6
Boom Lift Cylinder Seal Replacement 4-7
Boom And Parallel Arm Pivot Pin Replacement 4-7
Boom And Parallel Arm Pivot Pin Bushing Replacement 4-8
Lift Cylinder Holding Valve Replacement 4-8
Cushion Cylinder Replacement 4-8

Troubleshooting
General Troubleshooting Tips 5-3
Troubleshooting Chart 5-4


Maintenance
Maintenance Schedule 6-3
General Maintenance Tips 6-3
First Three Months of Operation 6-3
Routine Servicing 6-3
Daily Service 6-4
Monthly Service 6-4
Weekly Service 6-4
Semi-Annual Service 6-5
Annual Service 6-5
Four Year Interval Service 6-5
Shift Operational Checklist 6-6
Weekly Operational Checklist 6-8
Monthly Operational Checklist 6-9
Semi-Annual Operational Checklist 6-10

Index

Appendix

TABLE OF CONTENTS

MidWestTech | Terex TV20 Vertical Boom Lift Service Manual | Publication 17513 Order the manual at mid-west-tech.com >

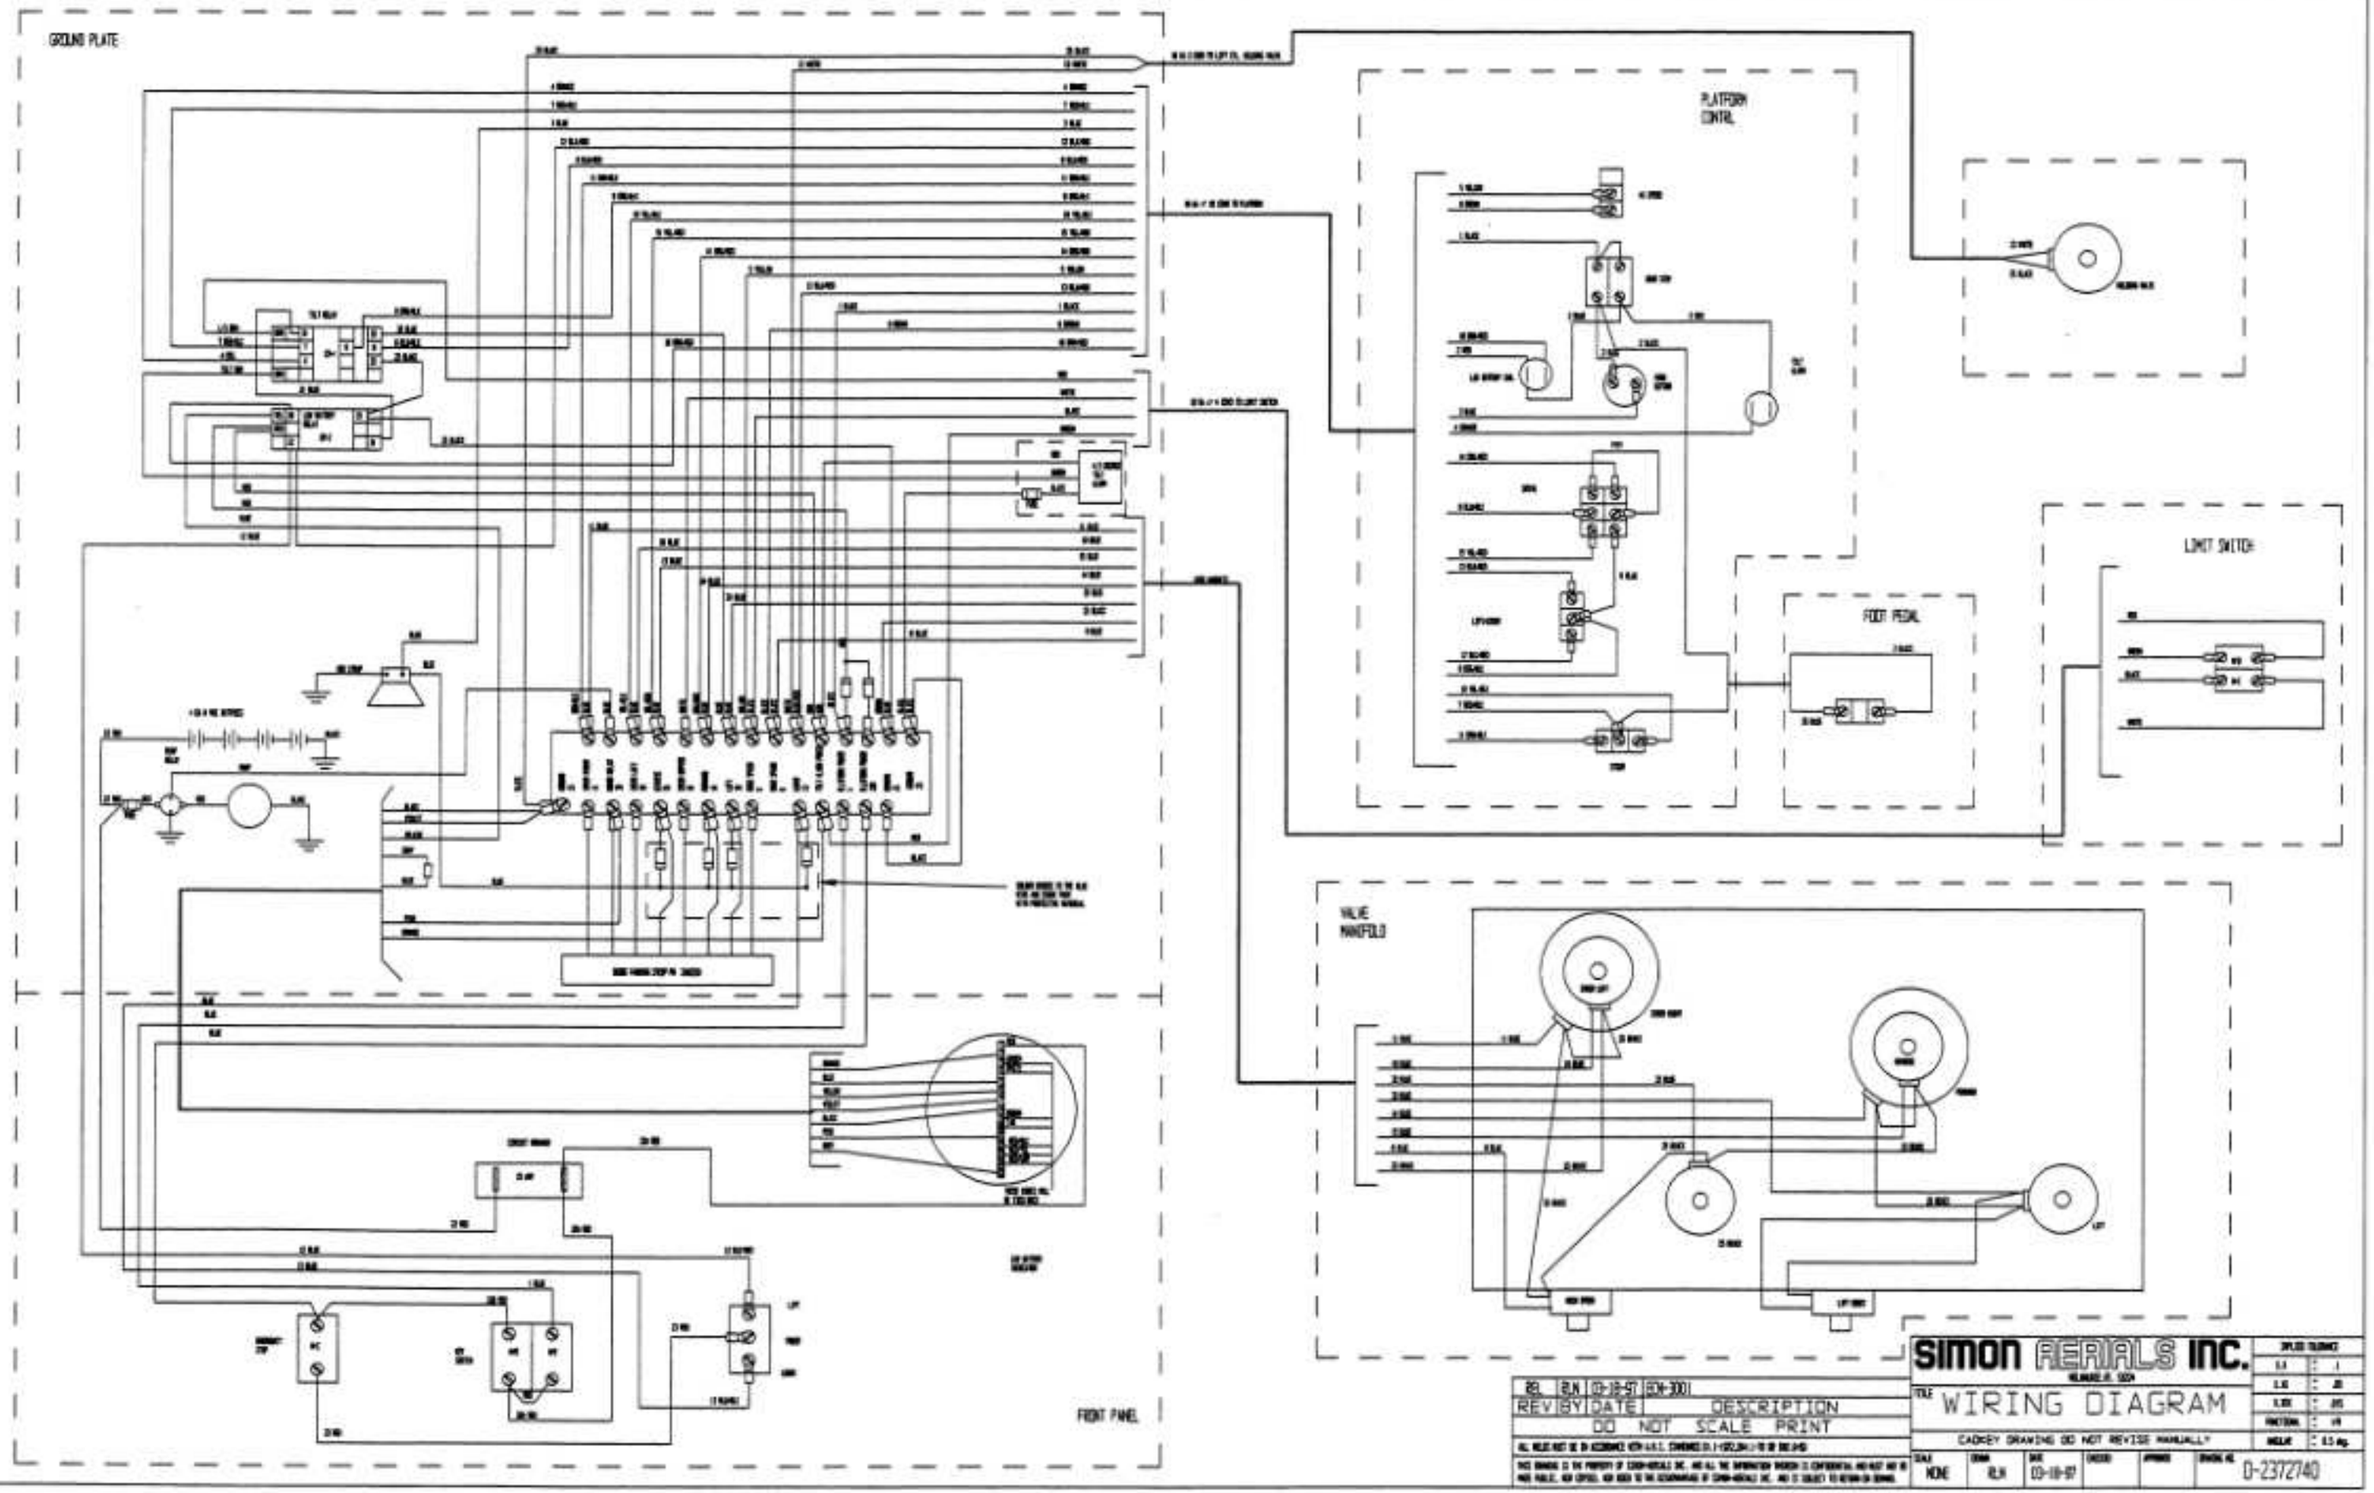

Order the manual at mid-west-tech.com >