OPERATOR'S MANUAL

MidWestTech | Hyundai 20D-7SA Forklift Service Manual | Publication 20D-7SA

Order the manual at mid-west-tech.com >

Table of Contents

Table of Contents 1
Brief Introduction 2
I Safety 3
1. Applications of Forklift Truck 3
2. Operating Sites and Working Environments of Forklift Truck 3
3. Safety Issues before Use 5
4. Safety Issues before Use and during Operation 8
5. Safety Issues during Service and Maintenance 15
6. Safety Issues for Use of Battery 17
7. Safety Issues for Installation, Adjustment, and Use of Attachments 19
8. Safety Issues for Use of LPG Fork lift Truck 21
9 . Label Plates 21
II Operating Devices and Operating Methods 30
1. LCD (Liquid Crystal Display) instruments 32
2. Switches Part 33
3. Control Part 34
4. Truck Body Part 38
III Driving and Operation 43
1. Use of New Truck 43
2. Relationship between Load and Forklift Truck Stability 43
3. Load Center and Load Curve 44
4. Stability of Forklift Truck 44
5. Conveyance and Loading-Unloading of Forklift Truck 44
6. Starting Forklift Truck 45
7. Running 46
8. Loading 50
9. Stacking 50
10. Unpiling 51
11. Storage 51
IV Regular Examination and Maintenance 53
1. Examination Requirements 53
2. Examination Items 53
3. Maintenance 61
4. Regular Maintenance Timetable 63
V Miscellaneous 77
1. Drawing of Lubricating System 77
2. Oils Used for Forklift Truck 78
3. Electric Circuit Diagram 79

MidWestTech | Hyundai 20D-7SA Forklift Service Manual | Publication 20D-7SA Order the manual at mid-west-tech.com >

3) **RADIATOR CAP & FAN** (item 6)

This warning label is positioned on the cooling fan shroud of the radiator to warn of the danger or injury from spinning fan blades and forbid to open the filler cap of the radiator because operator might get scalded due to spouting of hot water. When the engine is running. Be sure that you keep your hands, fingers, arms, and clothing away from a spinning fan. Don't stand in line with a spinning fan. Fan blades can break at excessively high RPM and be thrown out of the engine compartment.

⚠ Never open the filler cap while engine running or at high coolant temperature.



4) **HAND CAUTION** (item 3)

This label is positioned on respectively near the front fender and the rear fender of the left side of the main frame.


⚠ It warns of the danger of injury from movement between rails, chains, sheaves, fork carriage, and other parts of the mast assembly. Do not climb on or reach into the mast. Personal injury will result if any part of your body is put between moving parts of the mast.




5) **TIRE LABEL** (item 14, 15)

This label is positioned on both side of main frame.


⚠ Tire pressure must be checked in accordance with the manual.

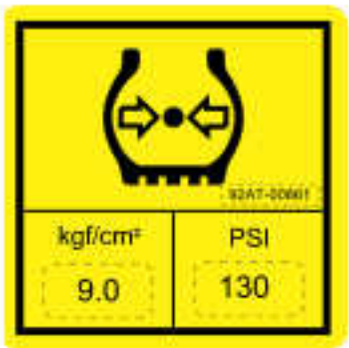

2t~2.5t

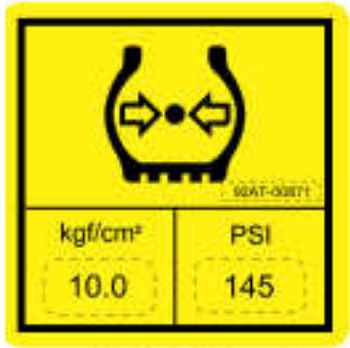

3t~3.5t Front

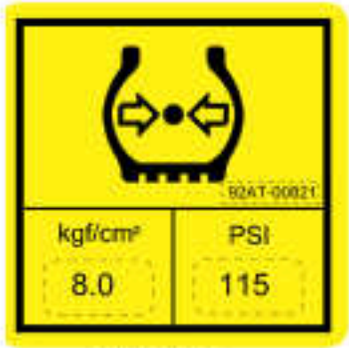


3t~3.5t Rear

MidWestTech | Hyundai 20D-7SA Forklift Service Manual | Publication 20D-7SA Order the manual at mid-west-tech.com >

reservoir is semi-transparent so that we can observe the level of the brake fluid from the outside.

(11) Cover of the hydraulic oil tank

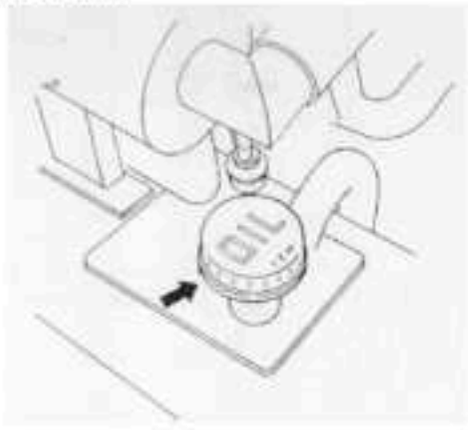

Cover of the hydraulic oil tank is installed in the right inner side of the inner combustion engine hood from which the hydraulic oil is filled. The cover is also equipped with dipstick.

(12) Fuel tank cap



Fuel tank cap is located on the left rear side of the vehicle body. To open it, just turn it in counterclockwise direction.

⚠ Attention

·A vent hole is located in fuel tank cap so that the air can enter into the fuel tank. If the vent hole is blocked, some troubles will occur in fuel system. When filling fuel each time, check whether the vent hole is in good status.

⚠ Attention

—Fill fuel—

·Stop the vehicle, shut down the engine and place the parking brake lever in lock position. Make sure there are no open fire and no smoking around. The driver should not stay in vehicle when filling fuel.

·It is necessary to cover the cap after filling fuel. A loose cap may cause fuel leakage or start a fire under poor condition.

·Before starting the engine, make sure the cap of the fuel tank is covered tightly and there is no fuel leakage on or around the vehicle.

·When checking the fuel level, be mindful not to use open fire such as fire from match or cigarette lighter.

MidWestTech | Hyundai 20D-7SA Forklift Service Manual | Publication 20D-7SA Order the manual at mid-west-tech.com >