

SERVICE MANUAL (ANSI/CSA)

DC ELECTRIC SCISSORS

MODELS SJIII 3226 SJIII 4632

210280AD October 2025

SKYJACK

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Section 1
SCHEDULED MAINTENANCE

Table of Contents

Operator's Responsibility for Maintenance
Aerial Platform and Mobile Elevating Work Platform Definition 7
Purpose of Equipment 7
Use of Equipment 7
Manuals 7
Service Policy and Warranty 7
Operator Safety Reminders, Warnings and Precautions 7
Maintenance and Inspection Schedule 8
Owner's Annual Inspection Record 8
Replacement Parts 8
Maintenance and Service Safety Tips 8
Hydraulic System & Component Maintenance and Repair 9
Maintenance Hints 10
Railing Maintenance and Repair 10

Service and Maintenance
About this Section 11
Service Bulletins 11
Maintenance and Inspection 11
Maintenance Instructions 11

Tables
Table 1.1 Owner's Annual Inspection Record 12
Table 1.2 Pre-Delivery/Maintenance Inspection Checklist 13

Scheduled Maintenance
1.1 Scheduled Maintenance Inspections 14
1.2 Function Tests 25

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >


Table 2.3 Maximum Platform Capacities (Evenly Distributed)

MODEL	Manual Extension Platform				Powered Extension Platform		Maximum Wind Speed	Tilt Cutout Setting (Degrees)
	Total Capacity		Extension Capacity		Total Capacity	Extension Capacity		
3226	500 lb. 227 kg	2 Persons	250 lb. 113 kg	1 Person	N/A		28 mph 12.5 m/s	1.5 x 3.5
4632	700 lb. 318 kg	2 Persons	250 lb. 113 kg	1 Person	N/A		28 mph 12.5 m/s	2.5 x 4.5

NOTE: Overall Capacity - Occupants and materials not to exceed rated load.

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

3.11 Telematics Harness - M6

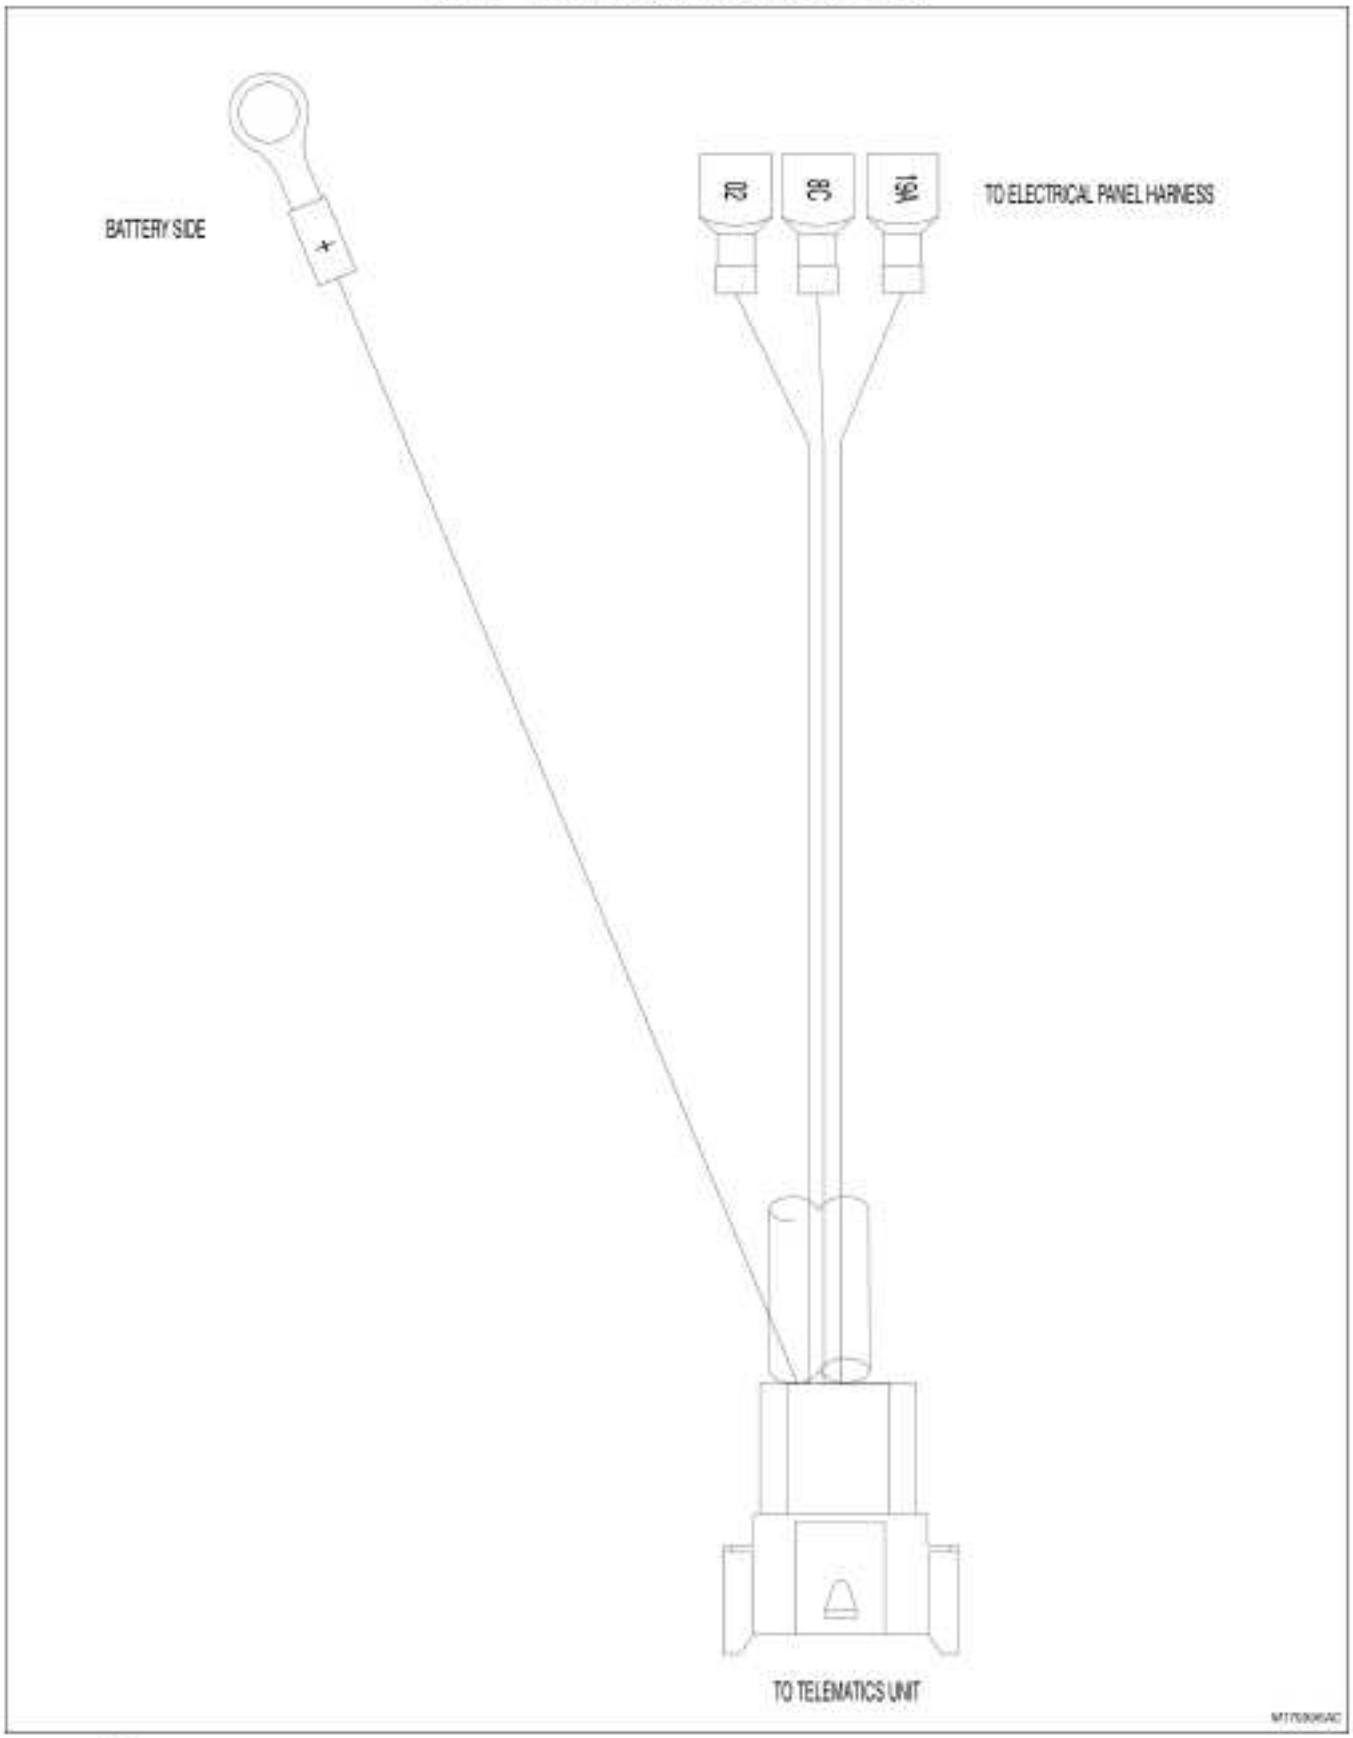

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Introduction

The following pages contain a table of Troubleshooting Information for locating and correcting most service trouble which can develop. Careful and accurate analysis of the systems listed in the table of Troubleshooting Information will localize the trouble more quickly than any other method. This manual cannot cover all possible troubles and deficiencies that may occur. If a specific trouble is not listed, isolate the major component in which the trouble occurs, isolate whether the problem is electrical or hydraulic, and then isolate and correct the specific problem.

The content of this section is separated into "probable cause" and "remedy." The information preceded by a number represents the "probable cause." The following line, noted by a dash represents the "remedy" to the "probable cause" directly above it. See example below for clarification.

1. Probable Cause
   - Remedy

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Table 2.7 Torque Specifications for Hydraulic Couplings & Hoses

HYDRAULIC COUPLING TORQUE CHART O-Ring Port Connectors				
SAE Size	Steel Ports		Non-ferrous Ports	
	ft-lb	Nm	ft-lb	Nm
4	14-16	20-22	9-10	12-13
6	24-26	33-35	15-16	20-21
8	50-60	68-78	30-36	41-47
10	72-80	98-110	43-48	60-66
12	125-135	170-183	75-81	102-110
16	200-220	270-300	120-132	162-180
20	210-280	285-380	126-168	171-228
24	270-360	370-490	162-216	222-294
32	-	-	-	-

HOSE END TORQUE CHART for JIC									
Size		Steel				Brass			
Dash	Frac.	ft-lb		Nm		ft-lb		Nm	
		Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
-4	1/4"	10	11	13	15	5	6	6.75	9
-6	3/8"	17	19	23	26	12	15	17	20
-8	1/2"	34	38	47	52	20	24	27.66	33
-10	5/8"	50	56	69	76	34	40	46.33	55
-12	3/4"	70	78	96	106	53	60	72.33	82
-16	1"	94	104	127	141	74	82	100.5	111
-20	1 1/4"	124	138	169	188	75	83	101.5	113
-24	1 1/2	156	173	212	235	79	87	107	118
-32	2"	219	243	296	329	158	175	214	237

HOSE END TORQUE CHART for Flat-Face O-Ring Seal (Steel)					
Size		Torque Specification			
Dash	Frac.	ft-lb		Nm	
		Min.	Max.	Min.	Max.
-4	1/4"	10	12	14	16
-6	3/8"	18	20	24	27
-8	1/2"	32	40	43	54
-10	5/8"	46	56	60	75
-12	3/4"	65	80	90	110
-14	1"	65	80	90	110
-16	1 1/4"	92	105	125	240
-20	1 1/2	125	140	170	190
-24	2"	150	180	200	245

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Table 2.2 Floor Loading Pressure

MODEL		Total Aerial Platform Weight		Total Aerial Platform Load					
				Wheel		LCP**		OUP**	
		lb.	kg	lb.	kg	psi	KPa (kN/m^2)	psf	KPa (kN/m^2)
3226	min*	4100	1860	1644	746	120	827.5	210	10.0
	max*	4610	2091	1844	836	130	896.5	235	11.5
4632	min*	5075	2302	2030	921	208	1434.1	180	8.6
	max*	5775	2620	2310	1048	223	1537.5	205	9.8

1237AA_ANSI

* **min** - Total aerial platform weight with no options

max - Aerial platform weight + all options + full capacity

** **LCP - Locally Concentrated Pressure** is a measure of how hard the aerial platform presses on the areas in direct contact with the floor. The floor covering (tile, carpet, etc.) must be able to withstand more that the indicated values above.


OUP - Overall Uniform Pressure is a measure of the average load the aerial platform imparts on the whole surface directly underneath it. The structure of the operating surface (beams, etc.) must be able to withstand more than the indicated values above.

NOTE:

The **LCP** or **OUP** that an individual surface can withstand varies from structure to structure and is generally determined by the engineer or architect for that particular structure.

MidWestTech | Skyjack SJIII 3226, SJIII 4632 Electric Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

3.16 Electrical Panel Wiring SJIII 3226

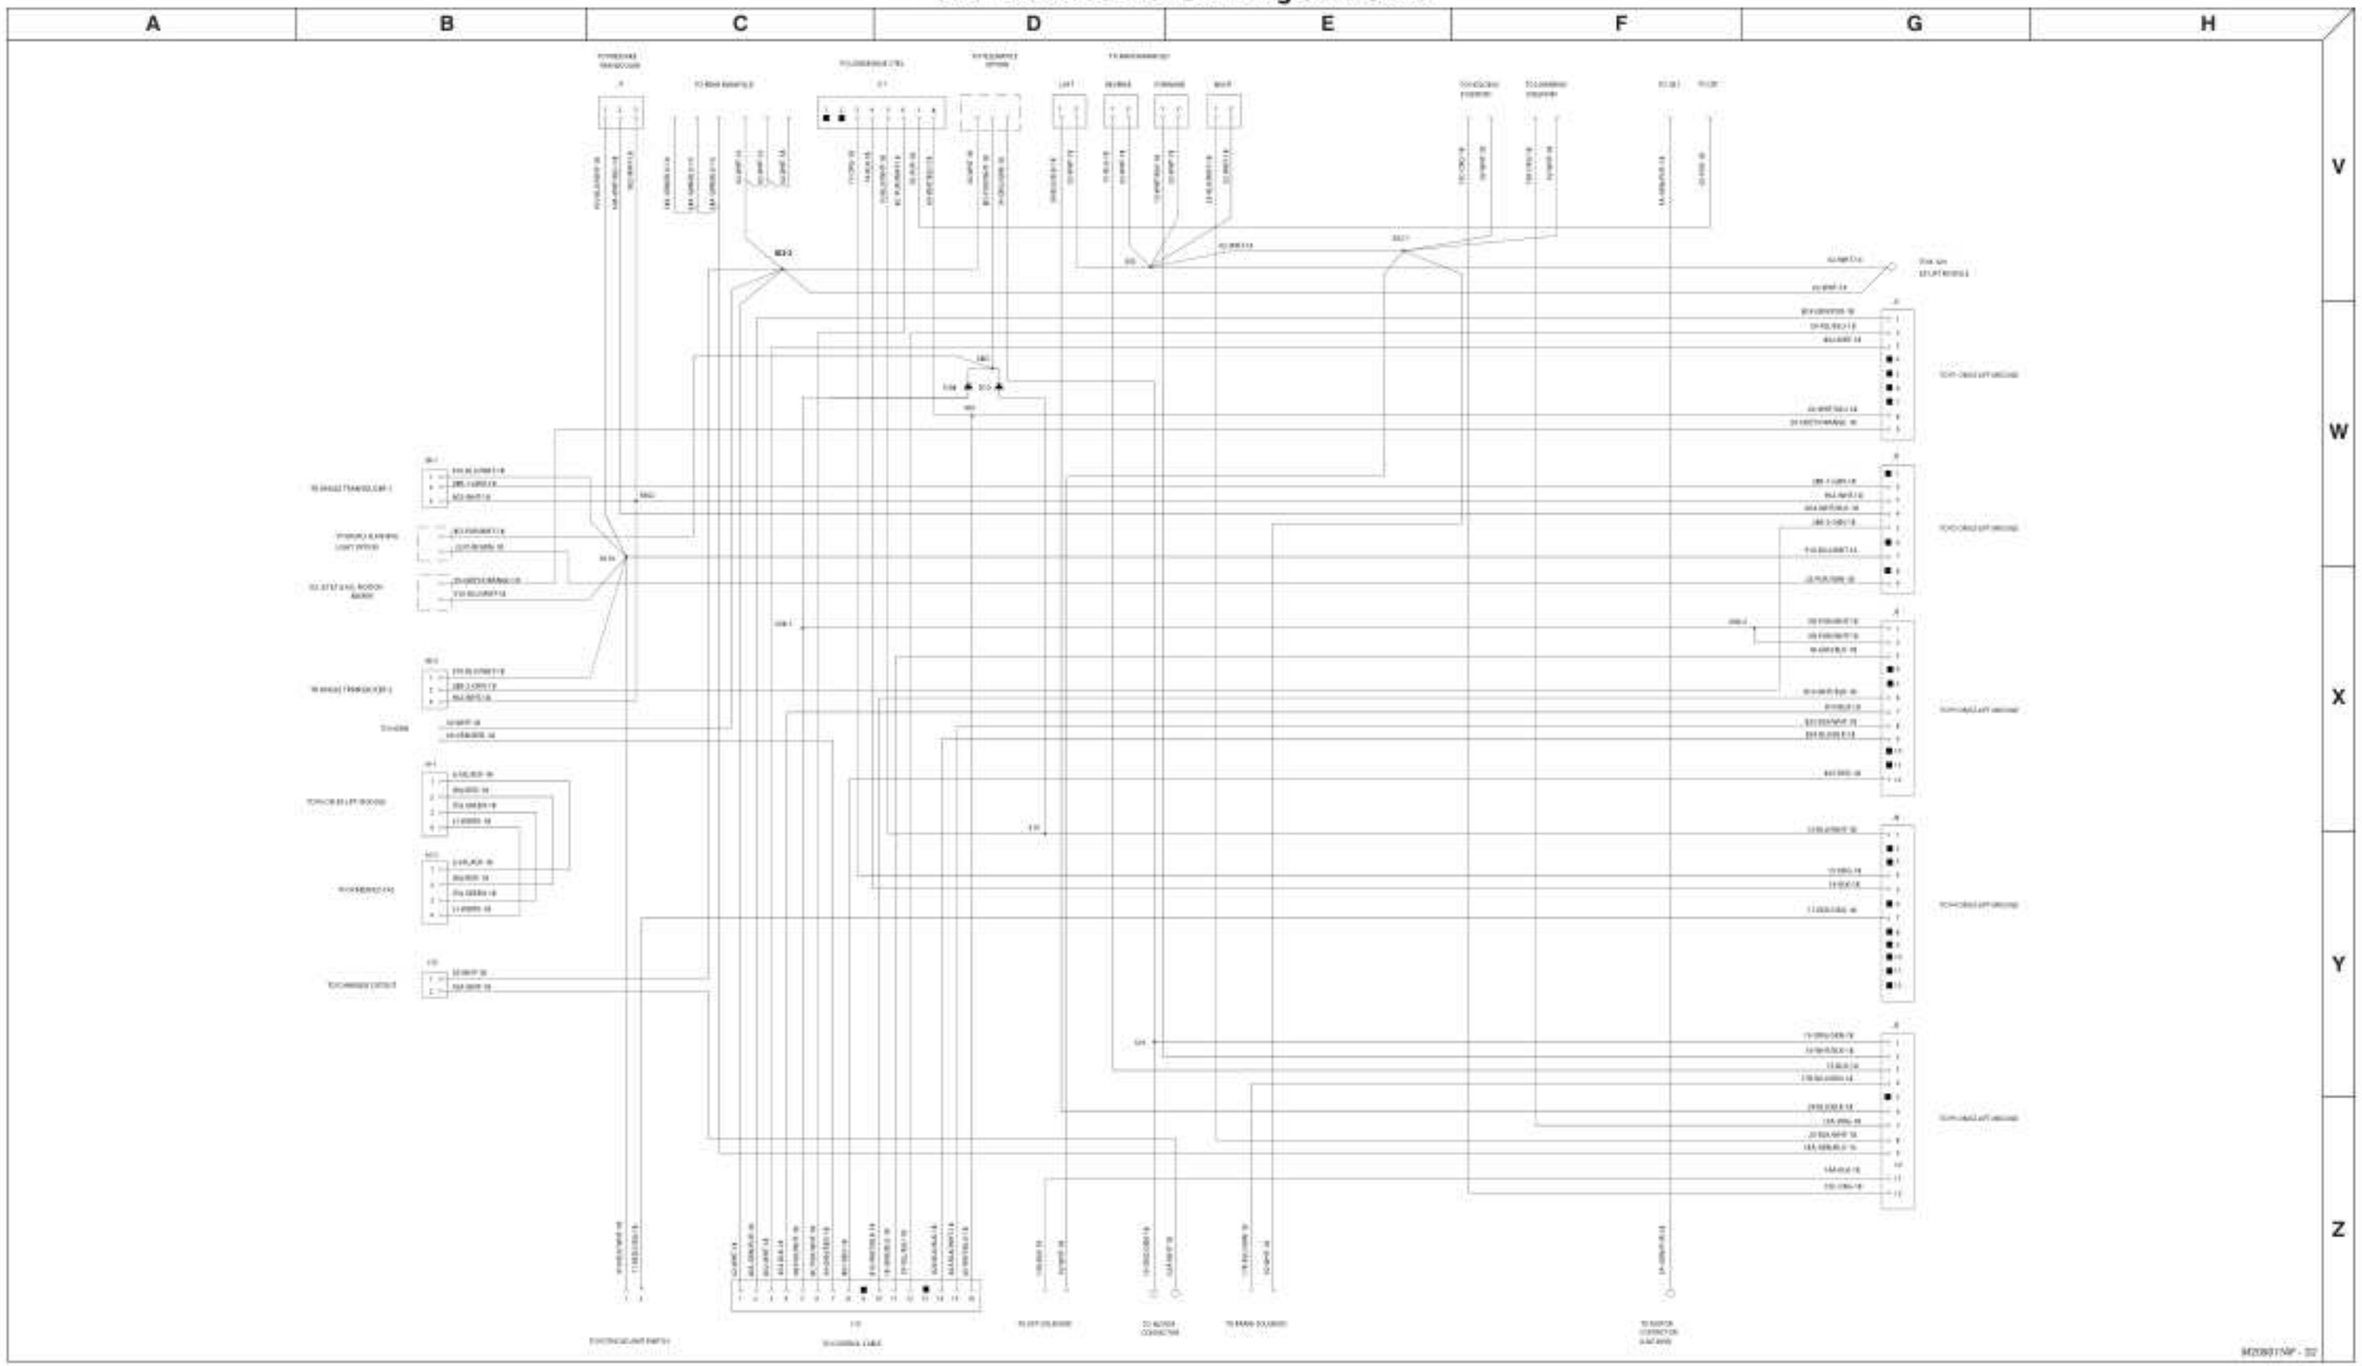

Order the manual at mid-west-tech.com >