TEREX

Service Manual

Serial Number Range

AL4
AL4000

from AL406-25121 to AL416J-4399
from AL4J-4400

Part No. 218567
Rev B
August 2016

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii
Revision History iii
Serial Number Legend v

Section 1 **Safety Rules**

General Safety Rules vi

Section 2 **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 1
Generator Options ..... 2 - 2
Perkins 403D-11 Engine ..... 2 - 2
Kubota D1105-D3BG Engine Specifications ..... 2 - 4
SAE and Metric Fasteners Torque Charts ..... 2 - 5

Section 3 **Scheduled Maintenance Procedures**

Introduction ..... 3 - 1
Maintenance Inspection Report ..... 3 - 3

Checklist A Procedures

A-1 Inspect the Manuals and Decals ..... 3 - 5
A-2 Perform Pre-operation Inspection ..... 3 - 6
A-3 Perform Function Tests ..... 3 - 6

Section 3 **Scheduled Maintenance Procedures**, continued

A-4 Perform Engine Maintenance ..... 3 - 7
A-5 Perform Coupler Maintenance ..... 3 - 7

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567
Order the manual at mid-west-tech.com >

A-6 Test the Brakes (if equipped) ..... 3 - 8
A-7 Torque the Wheel Lug Nuts ..... 3 - 8
A-8 Check the Tires and Wheels ..... 3 - 9
A-9 Inspect the Engine Air Filter ..... 3 - 9
A-10 Perform Generator Maintenance - Leroy Somer Models ..... 3 - 10
A-11 Perform Engine Maintenance - Kubota Models ..... 3 - 10
A-12 Perform Engine Maintenance - Kubota Models ..... 3 - 11
A-13 Inspect the Cable and Cable Pulleys ..... 3 - 11
A-14 Perform Engine Maintenance - Kubota Models ..... 3 - 12
A-15 Perform Engine Maintenance - Kubota Models ..... 3 - 13
A-16 Perform Generator Maintenance - Marathon Models ..... 3 - 13
A-17 Drain the Fuel Filter/Water Separator - Kubota Models ..... 3 - 14
A-18 Adjust the Brakes (if equipped) ..... 3 - 15

Checklist B Procedures

B-1 Inspect the Engine Start Battery or Lighting Battery Pack ..... 3 - 17
B-2 Inspect the Electrical Wiring ..... 3 - 18
B-3 Torque the Wheel Lug Nuts ..... 3 - 19
B-4 Perform Engine Maintenance - Perkins Models ..... 3 - 19
B-5 Perform Jack Maintenance ..... 3 - 20
B-6 Inspect and Lubricate the Winch ..... 3 - 20
B-7 Lubricate the T-bolt ..... 3 - 21
B-8 Inspect and Adjust the Brakes (if equipped) ..... 3 - 21
B-9 Inspect the Suspension ..... 3 - 23
B-10 Perform Engine Maintenance - Kubota Models ..... 3 - 24

Section 3 **Scheduled Maintenance Procedures**, continued

Checklist C Procedures

C-1 Perform Engine Maintenance ..... 3 - 25
C-2 Clean the Light Assemblies ..... 3 - 25

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

C-3 Grease the Wheel Bearings ..... 3 - 26
C-4 Inspect the Electric Brake Magnets (if equipped) ..... 3 - 27
C-5 Perform Engine Maintenance - Kubota Models ..... 3 - 28
C-6 Perform Generator Maintenance - Leroy Somer Models ..... 3 - 29

Checklist D Procedures

D-1 Perform Engine Maintenance - Kubota Models ..... 3 - 30
D-2 Perform Generator Maintence - Leroy Somer Models ..... 3 - 30
D-3 Perform Coupler Maintenance ..... 3 - 31

Checklist E Procedures

E-1 Replace the Mast Lift Cable ..... 3 - 32
E-2 Perform Engine Maintenance ..... 3 - 32
E-3 Perform Engine Maintenance ..... 3 - 33
E-4 Perform Generator Maintenance - Marathon Models ..... 3 - 33
E-5 Perform Generator Maintenance - Leroy Somer Models ..... 3 - 34
E-6 Perform Generator Maintenance - Leroy Somer Models ..... 3 - 34

Section 4 Repair Procedures

Introduction ..... 4 - 1

Mast

1-1 Mast ..... 4 - 2

Winch

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567 Order the manual at mid-west-tech.com >

SPECIFICATIONS

Generator Options
6 kw and 8 kw

Generator speed @ full load	60 Hz	1800 rpm
Temperature, ambient maximum		104°F 40°C
Capacitor (disconnected)		25 µF

7 kw

Generator speed @ full load	50 Hz	1500 rpm
Temperature, ambient maximum		104°F 40°C
Capacitor (disconnected)		25 µF

Perkins 403D-11 Engine

Displacement	68.9 cu in 1.1 liters
Number of cylinders	3
Bore and stroke	3.03 x 3.19 inches 77 x 81 mm
Horsepower, net intermittent	25 @ 3000 rpm 18.6 kW
Firing order	1 - 2 - 3
Compression ratio	23:1
Compression pressure	425 psi 29 bar
Pressure of the lowest cylinder must be within 50 psi / 3.5 bar of the highest cylinder, though at no time less than 360 psi / 25 bar	
Idle speed @ no load (with 7kw generator)	1500 rpm
Frequency	50 hz
Idle speed @ no load (with 6kw or 8kw generator)	1800 rpm
Frequency	60 hz
Governor	centrifugal mechanical
Valve clearance, cold	0.0078 in 0.2 mm
Engine coolant capacity	2.0 quarts 1.9 liters
Engine coolant should be clean soft water with 50% anti freeze concentration ethylene glycol to BS 6580:1992 or ASTMD 3306-89 or AS 2108-1977	

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice.

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567 Order the manual at mid-west-tech.com >

Troubleshooting

Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.
- ☑ Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
  - Machine parked on a firm, level surface
  - Mast in the stowed position
  - Light switches in the off position
  - Wheels chocked

Before Troubleshooting:


- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.
- ☑ Be aware of the following hazards and follow generally accepted safe workshop practices.

⚠ DANGER Electrocution/burn hazard. Exposure to electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

⚠ DANGER High voltage. Exposure to electrical wires or electrical current will result in death or serious injury. Remove all rings, watches and other jewelry. Turn off all power when not needed for testing. Use extreme caution when working with high voltage electrical components.

⚠ CAUTION Burn hazard. Contact with hot engine components may cause severe burns. Use caution when working around lamps or a hot engine.

General Repair Process

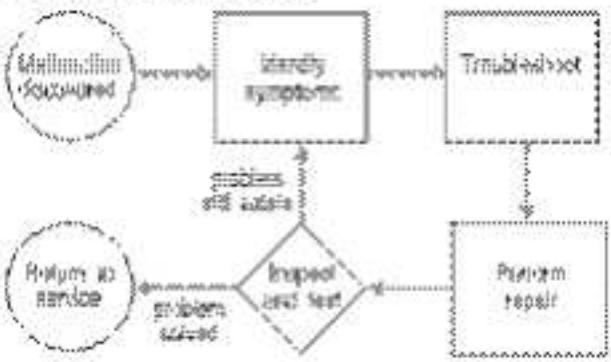

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567 Order the manual at mid-west-tech.com >

Schematics

Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate operator's manual on your machine before attempting any maintenance or repair procedure.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.


About This Section

There is one group of schematics in this section.

Electrical Schematics

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

General Repair Process

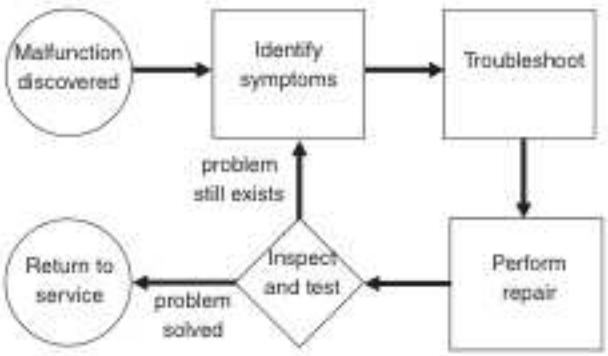

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567 Order the manual at mid-west-tech.com >

SPECIFICATIONS

SAE FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

SIZE	THREAD	Grade 5				Grade 8				A574 High Strength Black Oxide Bolts	
		LUBED		DRY		LUBED		DRY		LUBED	
		in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
1/4	20	80	9	100	11.3	110	12.4	140	15.8	130	14.7
	28	90	10.1	120	13.5	120	13.5	160	18	140	15.8
		LUBED		DRY		LUBED		DRY		LUBED	
		ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
5/16	18	13	17.6	17	23	18	24	25	33.9	21	28.4
	24	14	19	19	25.7	20	27.1	27	36.6	24	32.5
3/8	16	23	31.2	31	42	33	44.7	44	59.6	38	51.5
	24	26	35.2	35	47.4	37	50.1	49	66.4	43	58.3
7/16	14	37	50.1	49	66.4	50	67.8	70	94.7	61	82.7
	20	41	55.5	55	74.5	60	81.3	80	108.4	68	92.1
1/2	13	57	77.3	75	101.6	80	108.4	110	149	93	126
	20	64	86.7	85	115	90	122	120	162	105	142
9/16	12	80	108.4	110	149	120	162	150	203	130	176
	18	90	122	120	162	130	176	170	230	140	189
5/8	11	110	149	150	203	160	217	210	284	180	244
	18	130	176	170	230	180	244	240	325	200	271
3/4	10	200	271	270	366	280	379	380	515	320	433
	16	220	298	300	406	310	420	420	569	350	474
7/8	9	320	433	430	583	450	610	610	827	510	691
	14	350	474	470	637	500	678	670	908	560	759
1	8	480	650	640	867	680	922	910	1233	770	1044
	12	530	718	710	962	750	1016	990	1342	840	1139
1 1/8	7	590	800	790	1071	970	1315	1290	1749	1090	1477
	12	670	908	890	1206	1080	1464	1440	1952	1220	1654
1 1/4	7	840	1138	1120	1518	1360	1844	1820	2467	1530	2074
	12	930	1260	1240	1681	1510	2047	2010	2725	1700	2304
1 1/2	6	1460	1979	1950	2643	2370	3213	3160	4284	2670	3620
	12	1640	2223	2190	2969	2670	3620	3560	4826	3000	4067


METRIC FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

Size	Class 4.6				Class 8.8				Class 10.9				Class 12.9			
(mm)	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
5	16	1.8	21	2.4	41	4.63	54	6.18	58	6.63	78	8.84	68	7.75	91	10.3
6	19	3.05	36	4.07	69	7.87	93	10.5	100	11.3	132	15	116	13.2	155	17.6
7	45	5.12	60	6.83	116	13.2	155	17.6	167	18.9	223	25.2	1.95	22.1	260	29.4
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
8	5.4	7.41	7.2	9.88	14	19.1	18.8	25.5	20.1	27.3	26.9	36.5	23.6	32	31.4	42.6
10	10.8	14.7	14.4	19.6	27.9	37.8	37.2	50.5	39.9	54.1	53.2	72.2	46.7	63.3	62.3	84.4
12	18.9	25.6	25.1	34.1	48.6	66	64.9	88	69.7	94.5	92.2	125	81	110	108	147
14	30.1	40.8	40	54.3	77.4	105	103	140	110	150	147	200	129	175	172	234
16	46.9	63.6	62.5	84.8	125	170	166	226	173	235	230	313	202	274	269	365
18	64.5	87.5	86.2	117	171	233	229	311	238	323	317	430	278	377	371	503
20	91	124	121	165	243	330	325	441	337	458	450	610	394	535	525	713
22	124	169	166	225	331	450	442	600	458	622	612	830	536	727	715	970
24	157	214	210	285	420	570	562	762	583	791	778	1055	682	925	909	1233

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567 Order the manual at mid-west-tech.com >

Electrical Schematic
(ANSI / CSA models)

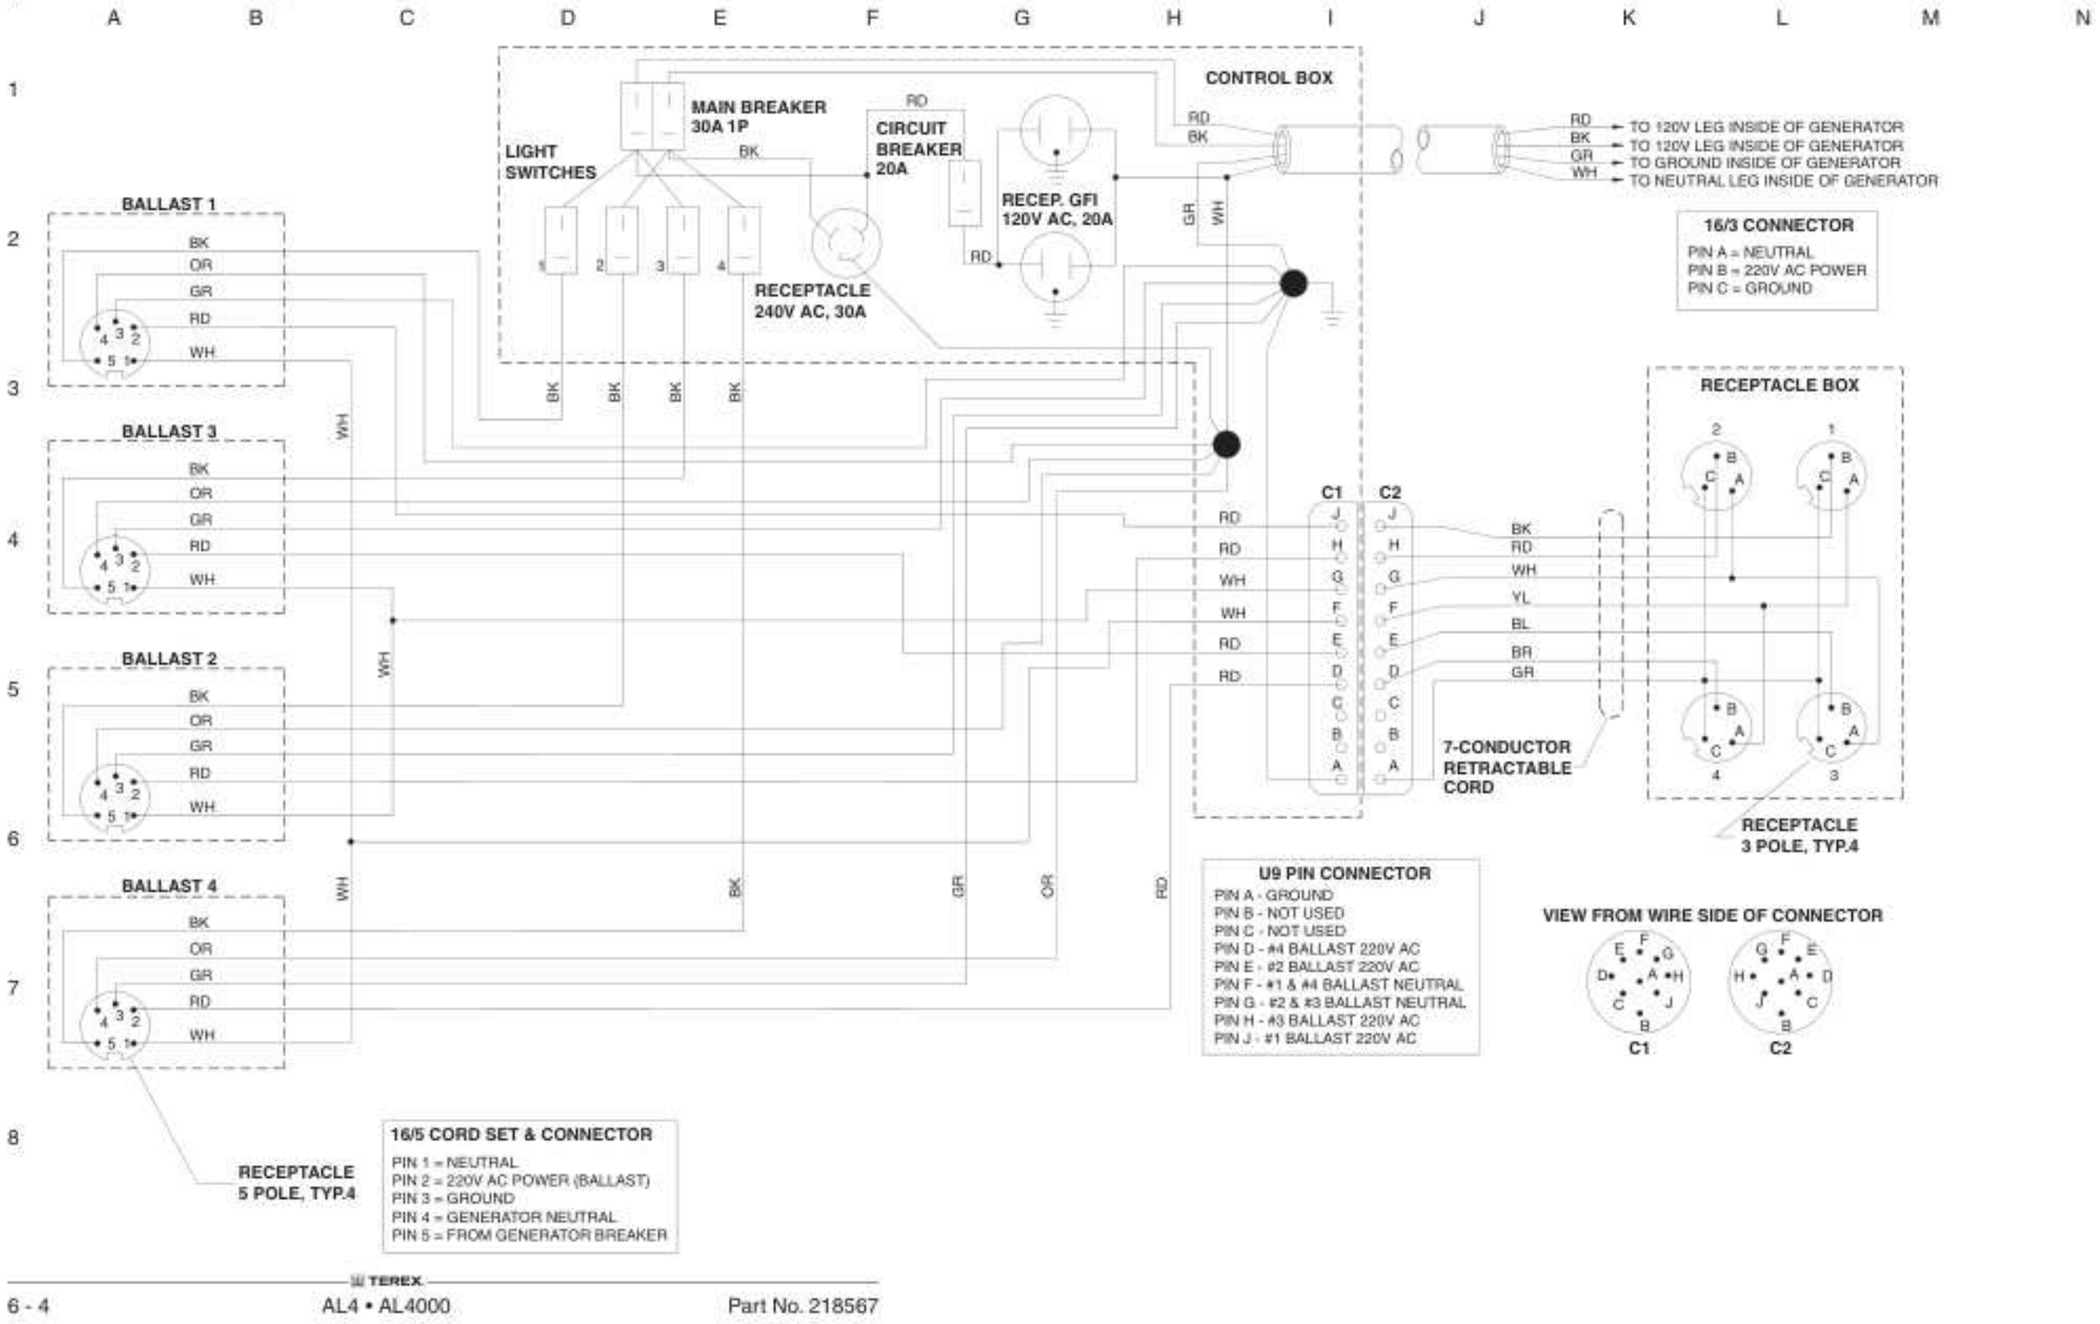

MidWestTech | Terex AL4, AL4000 Light Tower Service Manual | Publication 218567
Order the manual at mid-west-tech.com >