TEREX

Parts Manual

Serial Number Range

AL4L

from SN AL4L10-001 to AL4L16-229

from SN AL4L16J-230 to AL416LJ-1499

AL5L

from SN AL5L10-001 to AL5L15-128

from SN AL4LJ-1500

Part No. 228775

Rev B11

November 2018

Order the manual at mid-west-tech.com >

Table of Contents

This manual is updated frequently. If you have a printed manual, you can keep it up to date by downloading new figures from the Genie website at www.genielift.com. For the most up-to-date parts information, visit the Parts Lookup System on the Genie website at www.genielift.com.

How to Read Your Serial Number....3
Parts Stocking List....7
How to Order Parts....8
Service Parts Fax Order Form....9

Electronic Version

Click on any page number to view the figure.

100 Decals

101.1 Decals with Words, AL4L With Battery....10
102.1 Decals with Symbols, AL4L With Battery....12
103.1 Decals with Words, AL4L With Engine....14
104.1 Decals with Symbols, AL4L With Engine....16
105.1 Decals with Words, AL5L....18
106.1 Decals with Symbols, AL5L....20

200 Base Components

201.1 Frame....22
202.1 Axle With Hydraulic Brakes....24
203.1 Axle With Electric Brakes....26
204.1 Battery and Charger Installation....28
205.1 Cabinet, View 1....30
205.1 Cabinet, View 1 (to SN AL4L13-146)....32
205.2 Cabinet, View 1 (from SN AL4L13-147)....34
206.1 Cabinet, View 2....36
207.1 Hitches....38

300 Engine Components

301.1 Engine, Kubota D1105-E3BG, View 1, AL4L....40
302.1 Engine, Kubota D1105-E3BG, View 1, AL5L....42
303.1 Engine, Kubota D1105-E3BG, View 2....44
304.1 Engine, Kubota D1105-E3BG, View 3....46
305.1 Engine, Kubota D1105-E3BG, View 4....48

400 Electrical Components

401.1 Control Box, AL4L With Battery....50
402.1 Control Box, AL4L With Engine, View 1....52
403.1 Control Box, AL4L With Engine, View 2....54
404.1 Control Box, AL5L, View 1....56
405.1 Control Box, AL5L, View 2....58
406.1 Wiring Harnesses....60

500 Mast Components

501.1 Mast Assembly, Cable Routing....62
502.1 Tower Base Assembly....64
502.1 Tower Base Assembly....66
503.1 6" Round Base Assembly....68
504.1 4" Mast Assembly....70
505.1 2" and 3" Mast Assemblies....72
506.1 Light Assembly....74
507.1 Winch Assembly....76

600 Accessories

601.1 Spare Tire and Dome Light....78
602.1 Battery Watering System....80

Indices

Part Number Index....82
Part Description Index....85


Cross References

MidWestTech | Terex Genie AL4L, AL5L Light Tower Parts Manual | Publication 228775 Order the manual at mid-west-tech.com >


Item	Part No.	Description	Qty.
1	230405GT	WIRING KIT,ALXL,TIME CIRCUIT	1
2A	230774GT	WIRE ASSY,ANDERSON TO BATTERY	
3A	230773GT	WIRE ASSY,ANDERSON TO CONT BOX	1
4	116099GT	KIT,5-WIRE TRAILER LIGHT HRNS.....1 *(includes instructions)*	
--	663430GT	CONNECTOR,TAILLIGHT,4 PIN *4-pole round pin connector*	
--	663420GT	CONNECTOR,TAIL LIGHT,6 POLE *6-pole round pin connector*	
--	663400GT	CONNECTOR,7-POLE,TLITE,RND PIN *7-pole round pin connector (cable guard required, order separately)*	
--	663405GT	CABLE GUARD FOR 7P CONN(663400) *for 663405GT*	
--	663401GT	CONNECTOR,BLADE,POS,TAILT, 7P *7-pole blade connector*	
--	T109325GT	SVC KIT,TAILLIGHTS,AL *(taillight installation kit)*	
5	22112575GT	COIL CORD,DEUTSCH	1 *includes connector*
5	826916GT	KIT COIL CORD W/ JUNCTION BOX	1 *includes connector*
--		Ref., JUNCTION BOX *(refer to 506.1)*	
--	660287GT	CORD,RETRACT,66COIL,14/7 SOWA *coil cord w/o junction box*	
6	160276GT	CABLE SET,BATTERY,24" RED&BLK	
7	54454GT	BATTERY CABLE ASSY,NEG,8.5"	
8	54451GT	BATTERY CABLE ASSY,7.0"JUMPER	
9	160276GT	CABLE SET,BATTERY,24" RED&BLK	
10	227418GT	BATTERY CABLE,2 TERM,50"	

MidWestTech | Terex Genie AL4L, AL5L Light Tower Parts Manual | Publication 228775 Order the manual at mid-west-tech.com >

506.1 Light Assembly

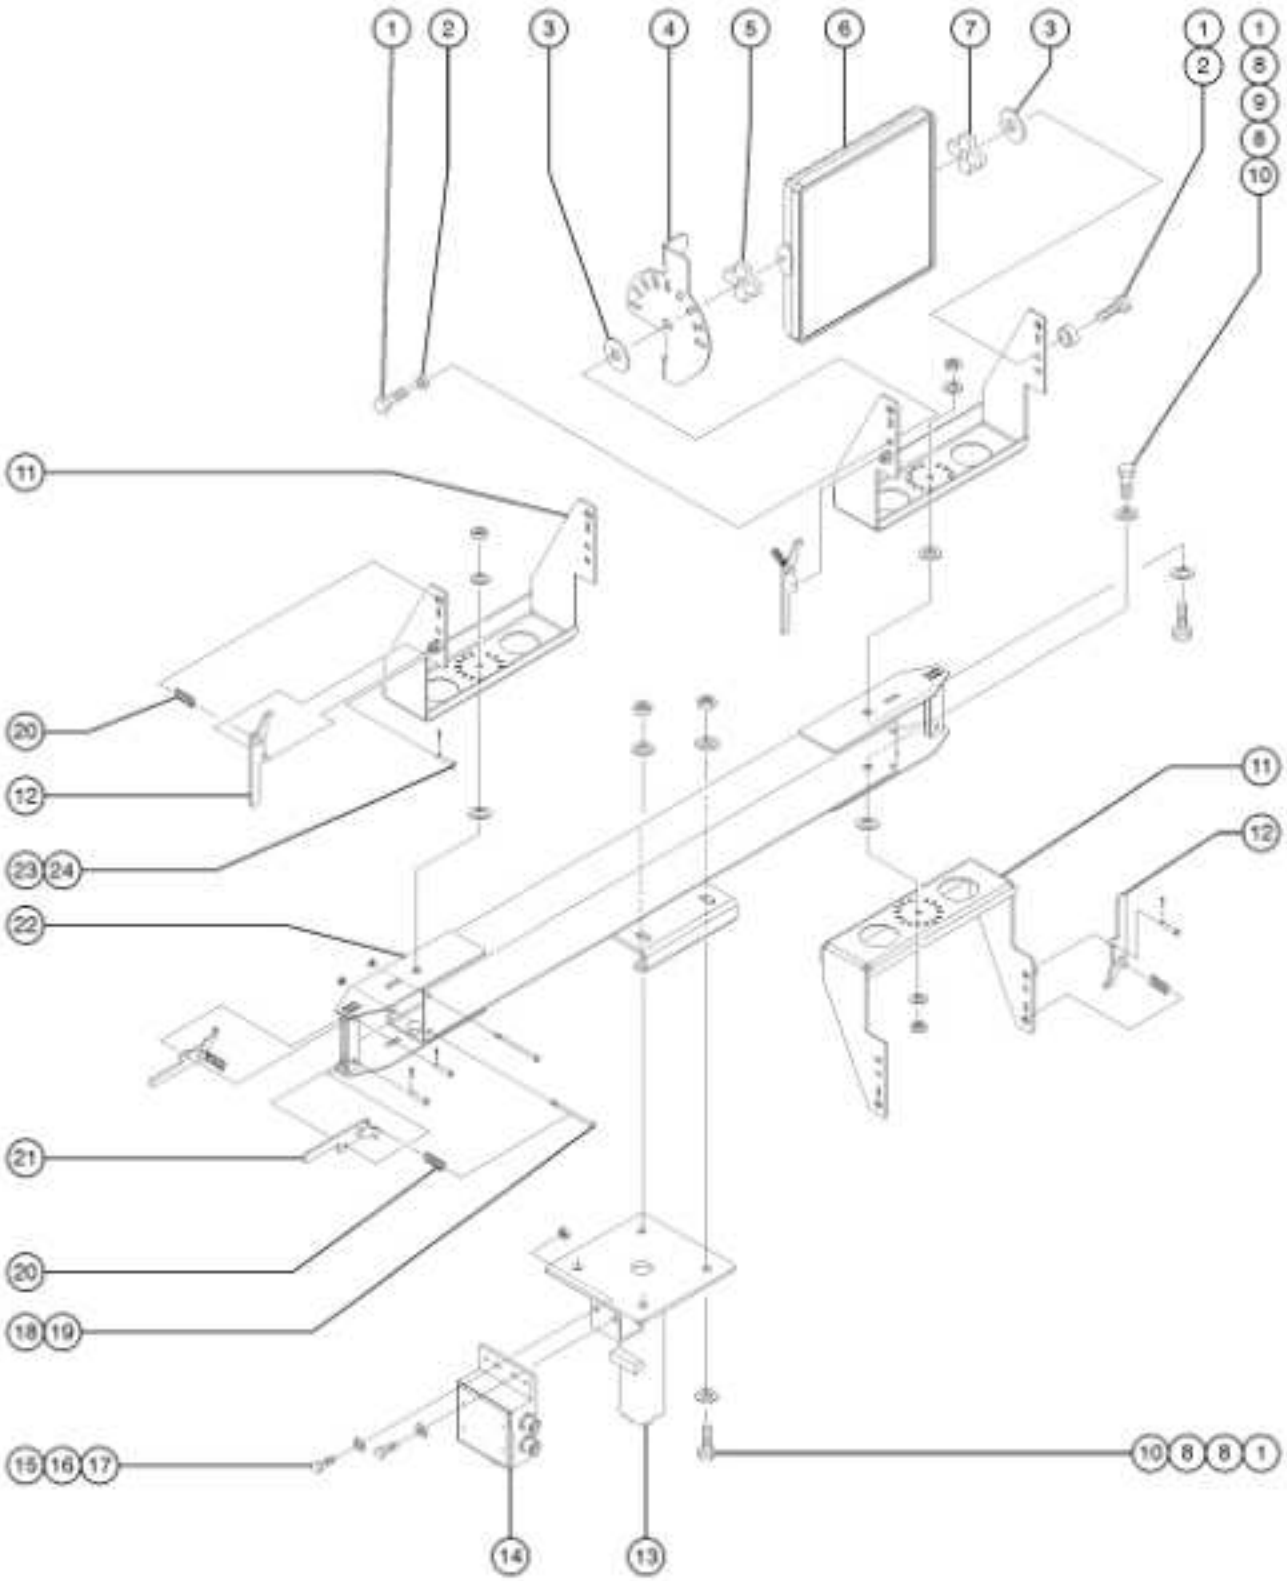

MidWestTech | Terex Genie AL4L, AL5L Light Tower Parts Manual | Publication 228775 Order the manual at mid-west-tech.com >

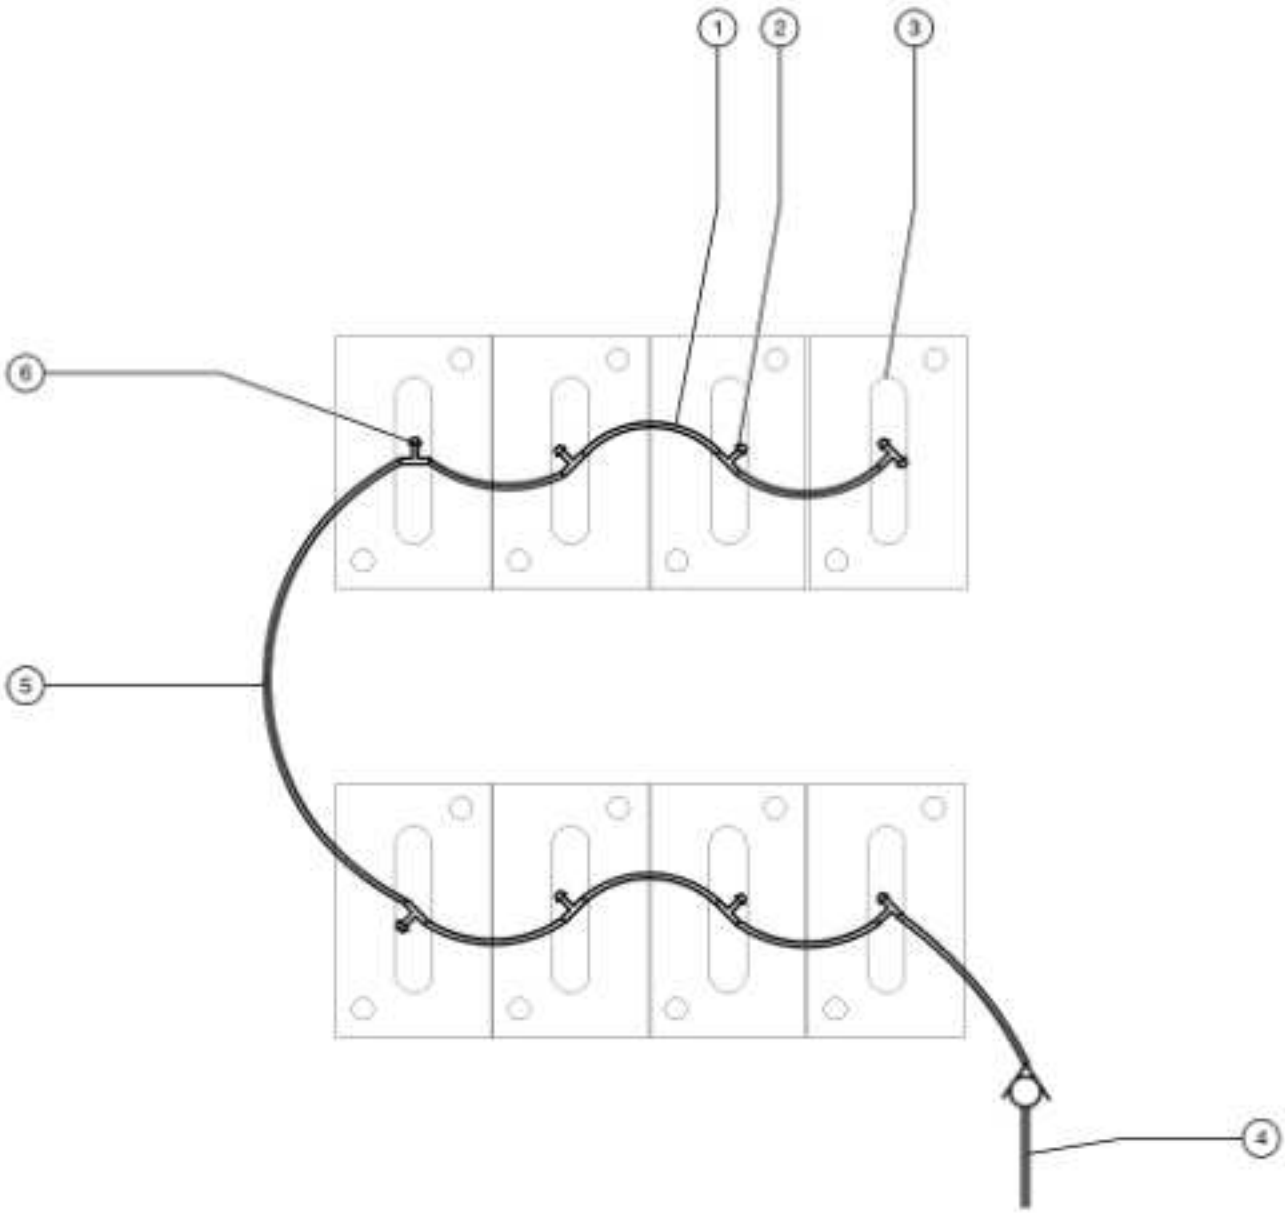

MidWestTech | Terex Genie AL4L, AL5L Light Tower Parts Manual | Publication 228775 Order the manual at mid-west-tech.com >