PART MANUAL

534C-9
534C-10

2460-4100

August 25, 2006
Starting Serial No.
534C-9 - 0344001
534C-10 - 0266001

CORPORATE OFFICE

JLG INDUSTRIES, INC.
1 JLG DRIVE
McConnellsburg, PA
17233-9533
USA
Telephone: (717) 485-5161
Fax: (717) 485-6417

GRADALL DIVISION

JLG INDUSTRIES, INC.
406 Mill Avenue S.W.
New Philadelphia, OH
44663
USA
Telephone: (330) 339-2211
Fax: (330) 339-8458

MidWestTech | Gradall 534C-9, 534C-10 Telehandler Parts Manual | Publication 2460-4100 Order the manual at mid-west-tech.com >

SECTION 1 – INTRODUCTION

Table of Contents ..... 1-1 thru 1-4
Alphabetical Index ..... 1-5 thru 1-8
Service Kits 1-9, 1-10
* Part Number Index ..... 1-11 thru 1-26

SECTION 2 – CHASSIS & ATTACHING PARTS

Frame Shrouding & Trim 2-1
Rear Axle & Attaching Parts 2-2
Front Axle Mounting 2-3
Cab Glass 2-4
Outrigger Mounting 2-5

SECTION 3 – BOOM

First Boom Section 3-1
Second Boom Section 3-2
Third Boom Section 3-3
Extension & Retraction Cables 3-4
Quick Switch Assembly 3-5
Boom Cross Section/Push Beam Pin 3-6

SECTION 4 – ATTACHMENTS

Buckets 4-1
Carriage Assembly 4-2
Truss Boom 4-3
Truss Boom W/Winch 4-4
6Ft. Vertical Mast 4-5
48" Slope Piler Carriage 4-6
66" Slope Piler Carriage 4-7
100 Degree Swing Fork 4-8
Quick Hook 4-9
6Ft. Swing Mast W/Side Shift 4-10
100 Degree Drywall Swing Fork Assembly 4-11
Swinging Slope Piler 4-12
180 Degree Swing Frame 4-13

SECTION 5 – ENGINE & ATTACHING PARTS

Engine Left Side View 5-1
Engine Right Side View 5-2
Fuel Tank & Lines 5-3
Radiator & Hoses 5-4
Oil Cooler 5-4
Air Cleaner Piping 5-5
Air Cleaner 5-6
Exhaust System 5-7

MidWestTech | Gradall 534C-9, 534C-10 Telehandler Parts Manual | Publication 2460-4100
Order the manual at mid-west-tech.com >

SECTION 6 – DRIVE TRAIN

* Front Axle Assembly 6-1
Front Axle 6-2
Front Axle Housing 6-3
Parking Brake Assembly 6-4
Front Axle Shaft & Planetary Wheel End 6-5
Brake Assembly 6-6
Front Axle Differential Carrier 6-7
Rear Steering Axle Drive Hub 6-8
Wheels & Tires 6-9

SECTION 7 – CONTROLS

Tilt & Sway Control 7-1
Brake & Inching Linkage 7-2
Accelerator Linkage 7-3
Floor Plate Assy 7-4
Steering Column & Attaching Parts 7-5

SECTION 8 – BRAKE CIRCUITS

Service Brake Lines 8-1
Inching & Parking Brake Lines 8-2

SECTION 9 – HYDRAULIC CIRCUITS

Oil Supply & Pressure Lines 9-1
Dump Circuit 9-2
Front Drive Circuit 9-3
Rear Drive Circuit 9-4
Lift Cylinder 9-5
Crowd Cylinder 9-6
Tilt & Tilt Compensating Cylinder 9-7
Sway Cylinder 9-8
Steering Cylinder 9-9
Joystick Circuit 9-10
Stabilizer Cylinder (534C-10) 9-11
Outrigger Cylinder (534C-10 9-12

SECTION 10 – HYDRAULIC COMPONENTS

Tilt Cylinder 10-1
Crowd Cylinder 10-2
Lift Cylinder 10-3
Compensating Cylinder 10-4
Sway Cylinder 10-5
Steering Cylinder 10-6

* *Moved page 6-1 to top of page 1-2*

MidWestTech | Gradall 534C-9, 534C-10 Telehandler Parts Manual | Publication 2460-4100 Order the manual at mid-west-tech.com >

SECTION 10 – HYDRAULIC COMPONENTS (Continued)

Stabilizer Cylinder 10-7
Outrigger Cylinder (534C-10) 10-8
Priority Flow Control Valve 10-9
Brake Valve 10-10
Solenoid Valve 10-11
Dual P.O. Check Valve 10-12
Dual P.O. Check Valve (534C-10) 10-12
Inching Valve 10-13
Main Hydraulic Control Valve 10-14
Hydraulic Reservoir & Filters 10-15
Front Drive Motor 10-16
Main Hydraulic Pump 10-17
Hydrostatic Transmission Pump 10-18
Hydraulic Gear Pump 10-19
Joystick Assembly 10-20
Traction Lock Valve 10-21
Rear Drive Motor 10-22
Truss Boom Winch 10-23
Winch Motor 10-24
Crossover Valve 10-25
Stabilizer Valve 10-26
Outrigger Valve (534C-10) 10-27
* Thermal Bypass Valve 10-28

SECTION 11 – ELECTRICAL

Gauge Panel Assembly 11-1
Dash Panel 11-2
Battery & Cables 11-3

SECTION 12 – MISCELLANEOUS

Frame Decals 12-1
Boom Decals 12-2


SECTION 13 – OPTIONAL EQUIPMENT

Block Heater 13-1
Winch Installation 13-2
Work Light 13-3
Auxiliary Hydraulics W/Electrics 13-4
Vandal Kit 13-5
Glow Pllug Installation (534C-9) 13-6
R.H. Tilt Sway 13-7

* *Added Page 10-28.*

MidWestTech | Gradall 534C-9, 534C-10 Telehandler Parts Manual | Publication 2460-4100 Order the manual at mid-west-tech.com >

ATTACHMENTS
(9130-5016) 66" Slope Piler Carriage
Starting Serial No. 0344001
Starting Serial No. 0266001
Original Issue 9-94
Revised 6-14-06

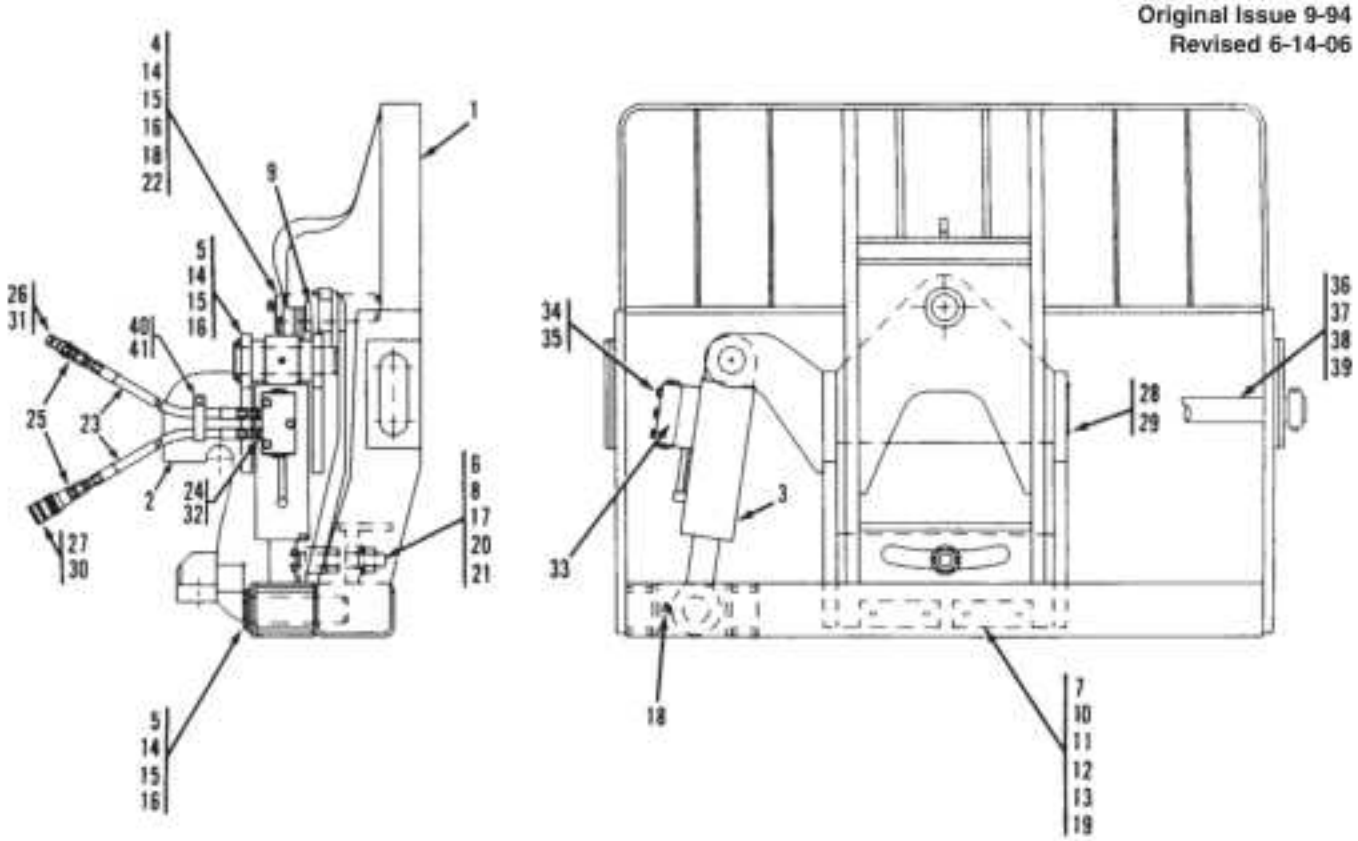

Item	Part No.	Qty.	Description Of Part
	9130-5016	Ref	66" SLOPE PILER CARRIAGE (includes all items)
	9114-3317	1	CAPACITY DECAL, 534C-9 (not shown)
	9115-3013	1	CAPACITY DECAL, 534C-10 (not shown)
1	9130-6030	1	CARRIAGE WELDMENT
2	9108-6122	1	ADAPTER WELDMENT
3		Ref	SWAY CYLINDER (see page 13-11 for details)
4	9108-3248	1	BUSHING
* 5	3423263	2	PIN
6	9020-4007	1	TUBE
7	9103-3186	2	BEARING PAD
8	9108-1577	1	TAP BOLT
9	9108-1594	1	THRUST WASHER
*10	9020-5870	AR	SHIM
11	9103-1236	2	SPACER
*12	8820-1535	4	HEX HD CAPSCREW, 3/8-24X1-1/4, GR5
*13	8820-1534	4	HEX HD CAPSCREW, 3/8-24X1, GR5
14	9108-1313	3	KEEPER PLATE
15	8820-1065	6	HEX HD CAPSCREW, 1/2-13X1, GR5
16	8855-1013	6	LOCKWASHER, 1/2
17	8852-1016	1	HEX LOCKNUT, 1-8
*18	8867-1022	2	LUBE FITTING, 90 DEGREES, 1/8
19	8856-1109	4	FLAT WASHER, 3/8
20	8850-1016	1	HEX NUT, 1-8
21	0510-1441	1	WASHER, 1-1/16
22	9108-1622	1	PIN
23	8471-6434	2	HOSE ASSY

Item	Part No.	Qty.	Description Of Part
24	8366-1316	2	CONNECTOR
*25	8866-1010	2	CONNECTOR, **(Before S/N 2005283-01)**
	8866-2018	2	CONNECTOR, **(S/N 2005283-01 & After)**
*26	9116-3138	1	MALE QUICK DISCONNECT, **(Before S/N 2005283-01)**
	9140-3414	1	MALE QUICK DISCONNECT, **(S/N 2005283-01 & After)**
*27	9116-3139	1	FEMALE QUICK DISCONNECT, **(Before S/N 2005283-01)**
	9140-3413	1	FEMALE QUICK DISCONNECT, **(S/N 2005283-01 & After)**
28	8834-1022	4	DRIVE SCREW, #10X3/8
29	9015-3001	1	SERIAL NUMBER PLATE
30	9104-3125	1	DUST PLUG
31	9104-3126	1	DUST CAP
*32	8866-2105	2	ELBOW, 90 DEGREES, (swivel nut)
33		Ref	DUAL P.O. CHECK VALVE (see page 13-12 for details)
34	8820-1040	3	HEX HD CAPSCREW, 3/8-16X2-1/4, GR5
35	8855-1011	3	LOCKWASHER, 3/8
36	9130-1083	1	FORK PIN
37	9020-0003	2	COLLAR
38	8820-1105	2	HEX HD CAPSCREW, 5/8-11X4, GR5
39	8852-1310	2	LOCKNUT, 5/8-11
*40	8452-1062	1	SUPPORT CLAMP
*41	7714-3015	1	WHIZ-LOCK NUT, 3/8-16

ER 46361, 48269, 49530, 49939, 50170 LK

** Revised illustration & parts list.*

MidWestTech | Gradall 534C-9, 534C-10 Telehandler Parts Manual | Publication 2460-4100 Order the manual at mid-west-tech.com >


HYDRAULIC CIRCUITS
Dump Circuit
534C-9 Starting Serial No. 0344436 thru 0344523
534C-10 Starting Serial No. 0266063 thru 0266074
Original Issue 6-96
Revised 6-3-98

Item	Part No.	Qty.	Description Of Part
* 1	8471-8748	1	HOSE ASSY
2		Ref	HYDRAULIC RESERVOIR ASSY (see page 10-15 for details)
* 3	8866-2070	1	ELBOW, 90 DEGREES (includes item 9)
4	8471-8424	1	HOSE ASSY
5	8692-1327	1	TEE
6	9103-3230	1	REDUCER
7	8362-3032	1	ELBOW, 90 DEGREES
8		Ref	OIL COOLER (see page 5-4 for details)
9	8859-1210	3	O-RING
10	8866-2028	2	CONNECTOR (includes item 9)
11	8471-8480	1	HOSE ASSY
12	9114-3058	1	TUBE ASSY
13		Ref	MAIN CONTROL VALVE ASSY (see page 10-14 for details)
14	8471-8381	1	HOSE ASSY
15	9114-3060	1	TUBE ASSY
16	7713-3053	1	CLAMP SET, 3/4 TUBE
17	7713-3052	1	COVER PLATE
18	8820-1010	2	HEX HD CAPSCREW, 1/4-20X2-1/4, GR5
19	8850-1004	2	HEX NUT, 1/4-20
20	8855-1009	2	LOCKWASHER, 1/4
21	8856-1107	2	FLAT WASHER, 1/4
*22	8471-8999	1	HOSE ASSY
23	9105-3450	1	REDUCER ELBOW, 90 DEGREES
24		Ref	FRONT DRIVE MOTOR (see page 10-16 for details)
25	8471-8387	1	HOSE ASSY
26	8471-8479	1	HOSE ASSY
27	8866-2103	1	ELBOW, 90 DEGREES (swivel nut)
28	8866-2062	1	ELBOW, 90 DEGREES (includes item 29)
29	8859-1202	1	O-RING
30		Ref	PRIORITY FLOW CONTROL VALVE (see page 10-9 for details)
*31	8471-8956	1	HOSE ASSY
32	8866-2242	1	SWIVEL NUT RUN TEE, 3/4 TUBE
33	8866-2008	1	CONNECTOR (include item 34)
34	8859-1207	1	O-RING
35		Ref	HYDROSTATIC TRANSMISSION (see page 10-18 for details)
36	8365-1133	1	REDUCER W/ADAPTER
37	8866-2240	1	SWIVEL NUT RUN TEE, 1/2 TUBE
38	8471-8851	1	HOSE ASSY
39	8471-8850	1	HOSE ASSY
40	8471-8380	1	HOSE ASSY
41	8866-2239	1	SWIVEL NUT RUN TEE, 3/8 TUBE
42	8866-2005	1	CONNECTOR (includes item 43)
43	8859-1204	2	O-RING
44		Ref	TRACTION LOCK VALVE (see page 10-21 for details)
45	8471-6547	1	HOSE ASSY
46	8866-2064	1	ELBOW, 90 DEGREES (includes item 43)
47		Ref	SOLENOID VALVE (see page 10-11 for details)


* *Changed serial number due to product revision.*


MidWestTech | Gradall 534C-9, 534C-10 Telehandler Parts Manual | Publication 2460-4100 Order the manual at mid-west-tech.com >

OPTIONAL EQUIPMENT
(9114-5036) R.H. Tilt/Sway
Starting Serial No. 0344001
Starting Serial No.0266001
Original Issue 9-94

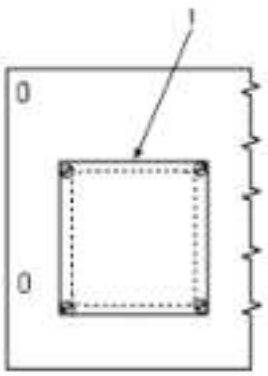


PARTIAL VIEW A-A

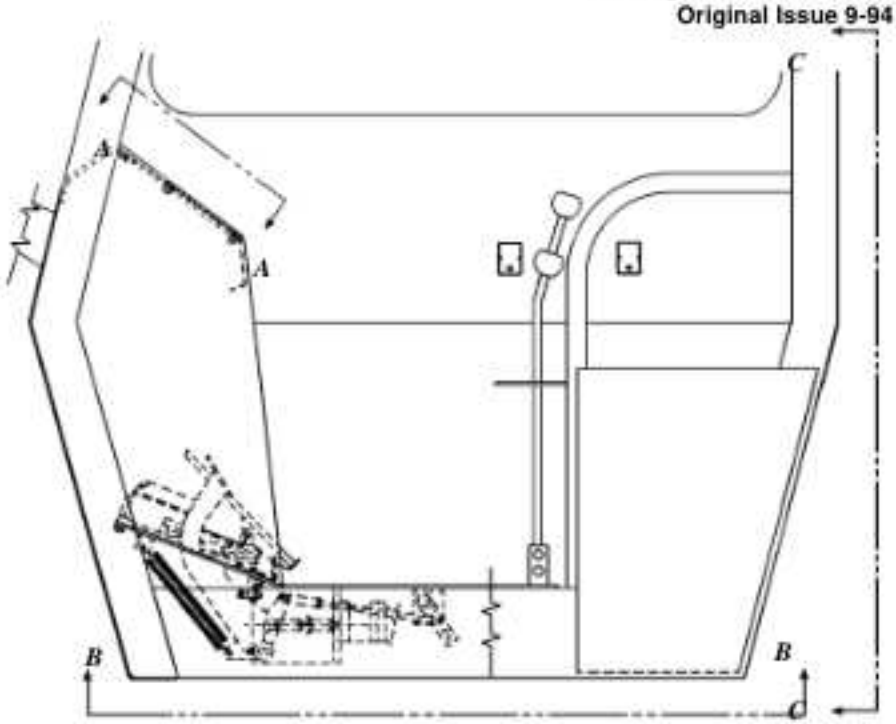

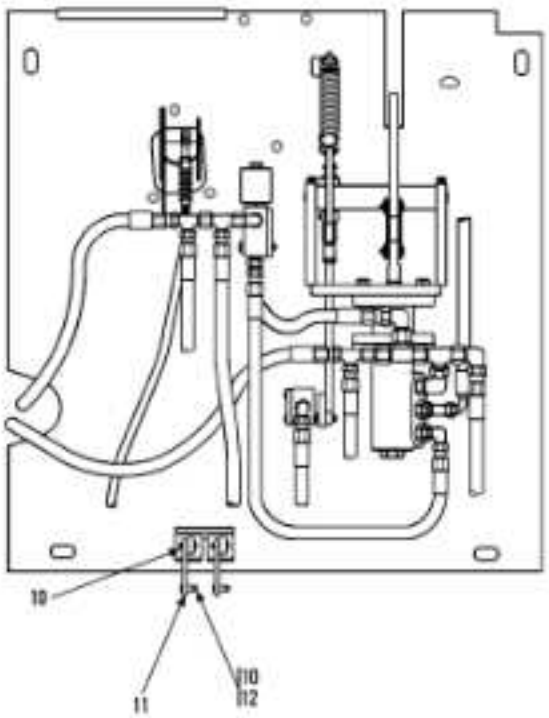

VIEW B-B

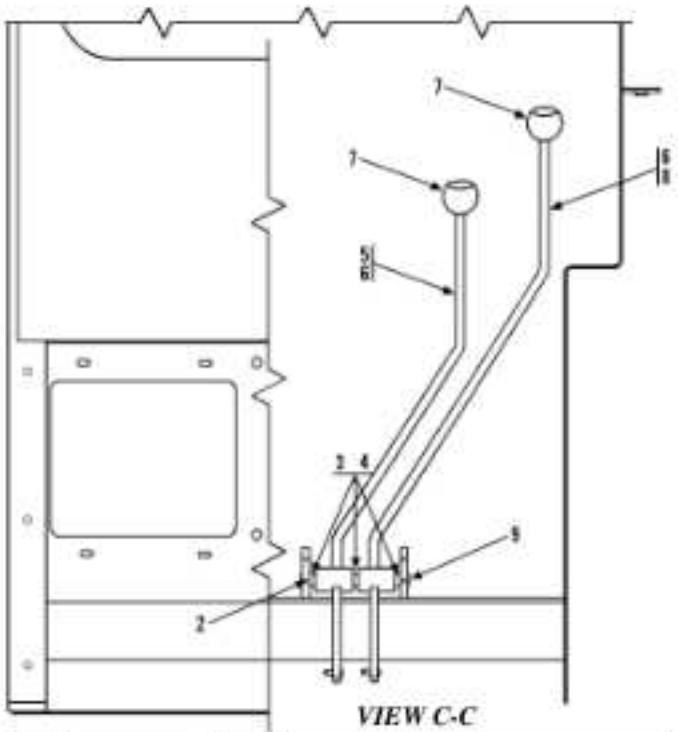

VIEW C-C

Item	Part No.	Qty.	Description Of Part
	9114-5036	Ref	R.H. Tilt/Sway
1	9108-1480	1	COVER PLATE
2	8863-1338	1	COTTER PIN
3	9002-8662	3	WAVE BEND WASHER
4	8856-1113	9	WASHER, 5/8
5	9114-6043	1	SWAY LEVER

Item	Part No.	Qty.	Description Of Part
6	9108-3136	4	BUSHING
7	9020-0636	2	KNOB
8	9114-6042	1	TILT LEVER
9	9108-1354	1	SHAFT
10	8863-1301	4	COTTER PIN
11	9114-1224	2	ROD LINKAGE
12	9002-1552	2	CLEVIS PIN

Order the manual at mid-west-tech.com >