
SKYJACK

PARTS MANUAL

SJ3220 E, SJ3226 E, SJ3232 E

DC ELECTRIC SCISSORS

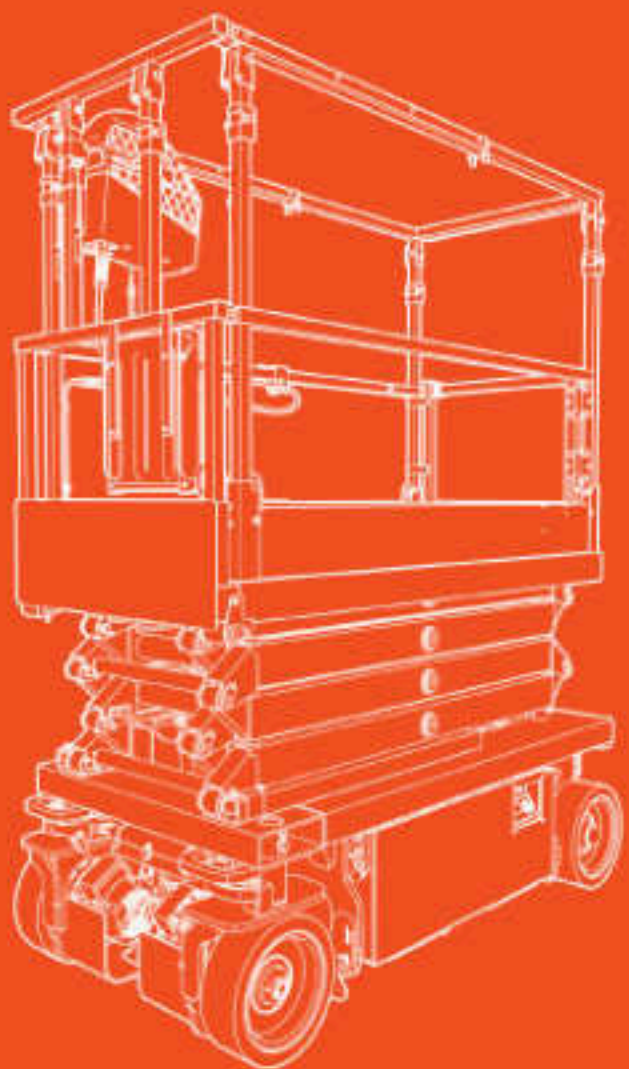

248001ADA
August 11 2026
ANSI/CSA, CE, AS, KC

MidWestTech | Skyjack SJ3220 E, SJ3226 E, SJ3232 E Electric Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

Table of Contents

Foreword 7

General 7
Parts Ordering Information 7
Method of Listing 7
Quantities 7
How To Order Repair Parts 7
Recommended Service Parts 8

Section 1 – Platform 11

1.1 Main Platform 12
1.2 Extension Platform 13
1.3 Main Platform Railings 14
1.4 Extension Platform Railings 16
1.5 Half Gate 18
1.6 Full Gate 20
1.7 Platform Control Box 22
1.8 SkyProtect - Platform Control Box 24
1.9 Powerdeck Control Box 28
1.10 Powerdeck Cylinder 30

Section 2 – Scissors 31

2.1 Scissor Stack - SJ3220 E 32
2.2 Scissor Stack - SJ3226 E 34
2.3 Scissor Stack - SJ3232 E 36
2.4 1st Level 38
2.5 2nd Level 40
2.6 3rd Level - SJ3226 E and SJ3232 E 42
2.7 4th Level - SJ3232 E 44
2.8 Top Level - SJ3220 E 46
2.9 Top Level - SJ3226 E 48
2.10 Top Level - SJ3232 E 50
2.11 Scissor Hardware 52
2.12 Lift Cylinder 54
2.13 Maintenance Stand 56

Section 3 – Base 57

3.1 Base 58
3.2 Steering Assembly 60

MidWestTech | Skyjack SJ3220 E, SJ3226 E, SJ3232 E Electric Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

Recommended Service Parts

Description	Year 1 Qty	Year 2 Qty	Year 3 Qty	Skyjack Part No.
Outlet GFI (ANSI/CSA)	1	1	1	109698
Pump motor brush repair kit	0	1	1	169623
Pushbutton head, black (horn)	0	1	1	147058
Relay 12V 40 amp	1	1	1	127035
Relay 24 V 40 amp	0	1	1	243091
Rotary sensor	0	1	1	243095
Tilt switch	0	1	1	248651
Toggle switch (hi/low drive)	0	1	1	115574
Toggle switch (lift/off/drive)	0	1	1	207741
Batteries				
Battery, 6V (ANSI/CSA, CE, KC) U22000XC2	0	4	4	procure locally
AGM Battery, 6V dry (ANSI/CSA) EVGC6A-A	0	4	4	procure locally
Hydraulic				
Element, hydraulic filter cartridge	1	1	1	104254
Filler/breather, hydraulic tank	0	0	1	102693
Pressure transducer SJ3220 E	0	1	1	241130
Pressure transducer SJ3226 E	0	1	1	240648
Seal kit, lift cylinder	0	1	2	241145
Seal kit, steer cylinder	0	1	1	105816
Valve, relief - main	0	1	2	244056
Valve, relief - scissor	0	1	2	220064
Valve, solenoid - holding	0	0	2	248115
Valve, solenoid - lift/lower	0	0	1	244026
Valve, solenoid - powerdeck	0	0	1	113953
Valve, solenoid - steering	0	0	1	241128

MidWestTech | Skyjack SJ3220 E, SJ3226 E, SJ3232 E Electric Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

1.8 SkyProtect - Platform Control Box

Index No.	Skyjack Part No.	Qty.	Description
26	147061	1	BLOCK, LED - red (24 V)
27	147053	1	BLOCK, Contact - NC
28	147054	1	BLOCK, Contact - NO
28	(Ref)	1	HARNESS, Platform control box *(For components, refer to Section 7.3 Platform Control Box Harness - ANSI/CSA, CE, AS)*
30	147058	1	HEAD, Pushbutton - black
31	144016	2	SEAL, Toggle switch
32	147056	2	LATCH
33	111181	2	GUARD, Toggle switch
34	240709	1	COVER, Control box
35	115574	1	SWITCH, Toggle (1NT1-2)
36	102853	1	SWITCH, Toggle (1NT1-7)
37	243057	2	LIGHT, LED - green (24 V)
38	228884	1	LIGHT, LED - amber (24 V)
39	174058	1	LABEL, Control box - e-drive
40	147051	1	HEAD, Emergency stop
41	236341	1	JOYSTICK, CAN - single axis with rocker
42	256192	2	SCREW, Pan head (M5 x 10 SS)
43	256193	2	WASHER, Flat (M5)

MidWestTech | Skyjack SJ3220 E, SJ3226 E, SJ3232 E Electric Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

2.3 Scissor Stack - SJ3232 E

Index No.	Skyjack Part No.	Qty.	Description
-	265060	1	SCISSOR STACK ASSEMBLY - *SJ3232 E*
1	(Ref.)	1	• INSIDE LEVEL 1 *(For components, refer to Section 2.4 1st Level)*
2	(Ref.)	1	• INSIDE LEVEL 2 *(For components, refer to Section 2.5 2nd Level)*
3	(Ref.)	1	• INSIDE LEVEL 3 *(For components, refer to Section 2.6 3rd Level - SJ3226 E and SJ3232 E)*
4	(Ref.)	1	• INSIDE LEVEL 4 *(For components, refer to Section 2.9 Top Level - SJ3226 E)*
5	(Ref.)	1	• INSIDE LEVEL 3 *(For components, refer to Section 2.9 Top Level - SJ3226 E)*
6	(Ref.)	1	• OUTSIDE LEVEL 1 *(For components, refer to Section 2.4 1st Level)*
7	(Ref.)	2	• OUTSIDE LEVEL MIDDLE *(For components, refer to Section 2.6 3rd Level - SJ3226 E and SJ3232 E)*
8	(Ref.)	1	• OUTSIDE LEVEL 4 *(For components, refer to Section 2.9 Top Level - SJ3226 E)*
9	(Ref.)	1	• OUTSIDE LEVEL 3 *(For components, refer to Section 2.9 Top Level - SJ3226 E)*
10	(Ref.)	1	• CYLINDER, Upper
11	(Ref.)	1	• CYLINDER, Lower *(For components, refer to Section 2.12 Lift Cylinder)*
12	(Ref.)	1	• MAINTENANCE STAND *(For components, refer to Section 2.13 Maintenance Stand)*
13	(Ref.)	1	• HOSES (not shown) *(For components, refer to Section 8.4 Hydraulic Hoses - SJ3226 E)*

MidWestTech | Skyjack SJ3220 E, SJ3226 E, SJ3232 E Electric Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >

Index No.	Skyjack Part No.	Qty.	Description
-	241939	1	SCISSOR STACK ASSEMBLY - ***SJ3226 E***
1	(Ref.)	1	• INSIDE LEVEL 1 *(For components, refer to Section 2.4 1st Level)*
2	(Ref.)	1	• INSIDE LEVEL 2 *(For components, refer to Section 2.5 2nd Level)*
3	(Ref.)	1	• INSIDE LEVEL 3 *(For components, refer to Section 2.6 3rd Level - SJ3226 E and SJ3232 E)*
4	(Ref.)	1	• INSIDE LEVEL 4 *(For components, refer to Section 2.9 Top Level - SJ3226 E)*
5	(Ref.)	1	• OUTSIDE LEVEL 1 *(For components, refer to Section 2.4 1st Level)*
6	(Ref.)	2	• OUTSIDE LEVEL MIDDLE *(For components, refer to Section 2.6 3rd Level - SJ3226 E and SJ3232 E)*
7	(Ref.)	1	• OUTSIDE LEVEL 4 *(For components, refer to Section 2.9 Top Level - SJ3226 E)*
8	(Ref.)	1	• CYLINDER, Upper
9	(Ref.)	1	• CYLINDER, Lower *(For components, refer to Section 2.12 Lift Cylinder)*
10	(Ref.)	1	• MAINTENANCE STAND *(For components, refer to Section 2.13 Maintenance Stand)*
11	(Ref.)	1	• HOSES (not shown) *(For components, refer to Section 8.4 Hydraulic Hoses - SJ3226 E)*

MidWestTech | Skyjack SJ3220 E, SJ3226 E, SJ3232 E Electric Scissor Lift Parts Manual |... Order the manual at mid-west-tech.com >