SKYJACK

OPERATION MANUAL

SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, SJ4732 E, SJ4740 E

DC ELECTRIC SCISSORS

249533AGA

July 14 2026
ANSI/CSA

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >

Table of Contents

Section 1 – About this Mobile Elevating Work Platform (MEWP) 9

1.1 Read and Heed 9

1.1-1 Mobile Elevating Work Platform (MEWP) definition 9

1.1-2 Purpose of equipment 9

1.1-3 Use of equipment 9

1.1-4 Operation manual 9

1.1-5 Operator 9

1.1-6 Service policy and warranty 9

1.1-7 Ownership of machine 9

1.1-8 Optional accessories 9

1.1-9 Scope of this manual 9

1.2 Primary assemblies 10

1.3 Serial number nameplate 11

1.4 Maintenance responsibility 12

1.4-1 Operator 12

1.4-2 Maintenance and inspection schedule 12

1.4-3 Owner 12

Section 2 – General Safety Precautions 13

2.1 Electrocution hazards 13

2.1-1 Minimum distance from electrical conductors 13

2.2 Safety instructions 14

2.3 Fall protection 17

2.4 Worksite inspection 17

Section 3 – Familiarization 19

3.1 Overview of the MEWP 20

3.2 Manual storage box 21

3.3 Control functions 21

3.3-1 Main power disconnect switch 21

3.3-2 Base control console 21

3.3-3 Platform control console 22

3.4 Features and devices 23

3.4-1 Lowered travel position and elevated travel position 23

3.4-2 Drive speed 23

3.4-3 Tilt switch 23

3.4-4 Brake release system 24

3.4-5 Emergency-lowering system 24

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >

3.4-6 *Fall-protection anchorage* . . . 24
3.4-7 *Anti-static strip* . . . 24
3.4-8 *Platform load-sensing system* . . . 25
3.4-9 *Pothole protection device* . . . 25
3.4-10 *Maintenance support* . . . 25
3.5 General components . . . **26**
3.5-1 *Battery charger* . . . 26
3.5-2 *Folding-guardrail system* . . . 26
3.5-3 *Extension platform* . . . 26
3.5-4 *Display panel* . . . 27
3.6 Optional equipment . . . **28**
3.6-1 *Dual Flashing Lights* . . . 28
3.6-2 *AC power outlet on the platform* . . . 28
3.6-3 *Secondary Guarding Lift Enable (SGLE) push-button* . . . 28
3.6-4 *White Noise Alarm* . . . 28
3.6-5 *Elevate™ telematics access control unit* . . . 29
3.6-6 *ECOTray Leak Containment System* . . . 30
3.6-7 *Dual height control console (SJ3226 E, SJ3232 E and SJ4740 E)* . . . 30

Section 4 – Inspections Before Operation . . . 31
4.1 Operator's responsibility . . . **31**
4.2 Visual and daily maintenance inspections . . . **32**
4.2-1 *Labels* . . . 32
4.2-2 *Pothole protection limit switches* . . . 32
4.2-3 *Electrical* . . . 32
4.2-4 *Hydraulic* . . . 32
4.2-5 *Wheel/tire assembly* . . . 33
4.2-6 *Rear* . . . 34
4.2-7 *Battery tray* . . . 35
4.2-8 *Front* . . . 36
4.2-9 *Hydraulic and electric tray* . . . 37
4.2-10 *Platform assembly* . . . 38
4.2-11 *Lift mechanism* . . . 39
4.3 Function tests . . . **40**
4.3-1 *MEWP controls* . . . 41
4.4 Operator's checklist . . . **47**

Section 5 – Operation . . . 49
5.1 Energize the base control console . . . **49**
5.2 Raise or lower the platform with the base control console . . . **49**
5.3 Energize the platform control console . . . **50**
5.4 Raise or lower the platform with the platform control console . . . **50**
5.5 Raise and lower with the SGLE platform control console (optional equipment) . . . **51**

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >

5.6 Drive forward or rearward . . . 51
5.7 Steer . . . 52
5.8 Select the low-speed or high-speed mode . . . 52
5.9 Extend/retract the extension platform . . . 53
5.9-1 *Extend/retract the extension platform manually* . . . 53
5.9-2 *Extend/retract the powered extension platform (if equipped, SJ3220 E)* . . . 53
5.10 MEWP shutdown . . . 54

Section 6 – Procedures . . . 55

6.1 Use the emergency-lowering function . . . 55
6.2 Release the brakes manually . . . 55
6.3 Winch and tow the MEWP . . . 56
6.4 Use the platform control console from the ground . . . 57
6.4-1 *Disconnect and remove the platform control console* . . . 57
6.4-2 *Operate the MEWP from the ground* . . . 57
6.5 Move the MEWP for transport . . . 59
6.5-1 *Hoist the MEWP* . . . 59
6.5-2 *Drive and tie down the MEWP* . . . 60
6.6 Charge the Battery . . . 61
6.7 Use the Maintenance Support . . . 62
6.7-1 *Deploy the maintenance support* . . . 63
6.7-2 *Store the maintenance support* . . . 63
6.8 Guardrail lock-pin locations . . . 64
6.9 Fold the guardrails . . . 68
6.9-1 *Fold the guardrails - SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, SJ4732 E* . . . 69
6.9-2 *Fold the RapidFold guardrail system - SJ3219 E* . . . 76
6.9-3 *Fold the guardrails - SJ4740 E* . . . 81
6.10 Move the MEWP through a doorway . . . 91

Section 7 – Specifications . . . 93

7.1 Standard and optional equipment . . . 93
7.2 Owner's annual inspection record . . . 94
7.3 Specifications . . . 95
7.4 Environment . . . 96
7.5 Maximum platform capacities . . . 97
7.6 Floor loading pressure . . . 98

Section 8 – Labels . . . 99

8.1 Base control console . . . 100
8.2 Platform control console . . . 101
8.3 Dual height control console label (SJ3226 E, SJ3232 E and SJ4740 E, if equipped) . . . 102
8.4 Power deck control console label (SJ3220 E), if equipped . . . 103
8.5 Rear . . . 104
8.6 Left side . . . 108

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >

5.3 Energize the platform control console

1. Turn the **main power disconnect** switch to the on position.
2. Pull the **emergency-stop** button on the base control console.

⚠ WARNING

If you do not hear a beep and the light does not come on, lock and tag the MEWP. Remove the MEWP for servicing. If you do not obey, there is a risk of death or serious injury.

3. Turn the **off/platform/base key** switch to the platform position.

⚠ WARNING

Fall hazard. Use the three points of contact principle when you use the MEWP ladder to enter or exit the platform. If you do not obey, there is a risk of death or serious injury.

4. Enter the platform and close the gate.
5. Pull the **emergency-stop** button on the platform control console.

5.4 Raise or lower the platform with the platform control console

1. Energize the platform control console (refer to *Section 5.3*).

⚠ WARNING

Look for overhead obstructions or other possible hazards around the MEWP when you raise the platform. Do not lower the platform unless the area below is clear of personnel and obstructions. If you do not obey, there is a risk of death or serious injury.

2. For SJ3226 E, SJ3232 E and SJ4740 E only (if equipped):
   Lift the **dual height** switch ❶ and select the indoor (no wind) or outdoor (wind) position.



3. Move the **lift/off/drive** switch to the lift position.
4. The indicator light turns green to indicate the lift function is enabled.
5. Squeeze and hold the **function-enable** switch.

NOTE

The drive or lift function is enabled for 10 seconds. The power to both drive and lift circuits disconnects if the function-enable switch is not used within 10 seconds.

6. Move the **controller handle** until you are at the necessary height..

NOTE

The lower function is not proportional.

7. Squeeze the **function-enable** switch.
8. Pull the **controller handle** to lower the platform.
9. Move the **controller handle** to the neutral central position to stop. Release the **function-enable** switch.

⚠ WARNING

If the tilt alarm makes a sound, and the platform does not rise or does not fully rise:

1. **Fully lower the platform immediately.**
2. **Make sure the MEWP is on a firm, level surface.**

If you do not obey, there is a risk of death or serious injury.

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >


6.7-1 Deploy the maintenance support

1. Remove all personnel and material from the platform.

⚠ WARNING

Look for overhead obstructions or other possible hazards around the MEWP when you raise the platform. Do not lower the platform unless the area below is clear of personnel and obstructions. If you do not obey, there is a risk of death or serious injury.

2. Raise the platform until there is adequate clearance to deploy the **maintenance support** ❶.
3. Deploy the **maintenance support**.
4. Lower the platform until the **maintenance support** touches the cross members with labels, and the platform stops.
5. Turn the **main power disconnect** switch to the off position.

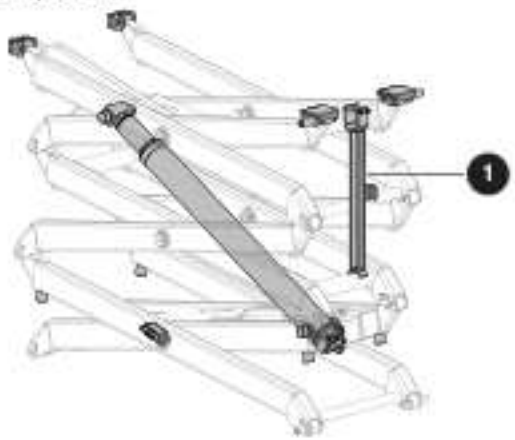



6.7-2 Store the maintenance support

1. Turn the **main power disconnect** switch to the on position.

⚠ WARNING

Look for overhead obstructions or other possible hazards around the MEWP when you raise the platform. Do not lower the platform unless the area below is clear of personnel and obstructions. If you do not obey, there is a risk of death or serious injury.

2. Raise the platform until there is adequate clearance to retract the **maintenance support** ❶.
3. Retract the **maintenance support** into the storage bracket.
4. Fully lower the platform.



MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >

7.5 Maximum platform capacities

Model	Wind rating	Total platform capacity		Extension platform capacity		Manual side force	Tilt cutout setting (side-to-side x front-to-back)
SJ3215 E	0 m/s (0 mph)	272 kg (600 lb)	2 persons	113 kg (250 lb)	1 person	400 N (90 lbf)	1.5° × 3.5°
	12.5 m/s (28 mph)		1 person			200 N (45 lbf)	
SJ3219 E	0 m/s (0 mph)	227 kg (500 lb)	2 Persons	113 kg (250 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	
SJ3220 E	0 m/s (0 mph)	408 kg (900 lb)	2 Persons	136 kg (300 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	
SJ3226 E*	0 m/s (0 mph)	227 kg (500 lb)	2 Persons	113 kg (250 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	
SJ3232 E*	0 m/s (0 mph)	249 kg (550 lb)	2 Persons	110 kg (250 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	
SJ4726 E	0 m/s (0 mph)	454 kg (1000 lb)	3 Persons	136 kg (300 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	
SJ4732 E	0 m/s (0 mph)	318 kg (700 lb)	2 Persons	113 kg (250 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	
SJ4740 E*	0 m/s (0 mph)	350 kg (770 lb)	3 Persons	120 kg (265 lb)	1 Person	400 N (90 lbf)	
	12.5 m/s (28 mph)		1 Person			200 N (45 lbf)	

2223AD_ANSI

* **Note:** *For SJ3226 E, SJ3232 E and SJ4740 E, maximum capacities with a wind speed of 12.5m/s are only available if equipped with dual height option.*

NOTE

Occupants and materials are not to exceed the rated load. Refer to the capacity label at the entrance of the platform and the front kick plate for more information and models equipped with options.

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >



DO NOT drive elevated near depressions or holes of any type, loading docks, debris, drop-offs or surfaces that may affect the stability of the MEWP.

IF OPERATION IN AREAS WITH HOLES OR DROP-OFFS IS ABSOLUTELY NECESSARY, elevated driving is not allowed. Position the MEWP horizontally only with the platform fully lowered. After you make sure that all four wheels have contact with a firm, level surface, you can raise the platform. After elevation, the drive function must not be activated.

DO NOT ascend or descend grades greater than the maximum inclines listed in *Section 7.3*. Ascending or descending slopes must only be done when fully lowered.



DO NOT operate a MEWP that has ladders, scaffolding, or other devices on it to increase the platform size or work height.



DO NOT exceed the maximum side force shown on the capacity label when the platform is elevated. Refer to *Section 7.5*.



DO NOT use the MEWP as a crane.



DO NOT sit, stand, or climb on the guardrails.



DO NOT climb on the scissor arm assembly.









DO NOT collide with or crush the MEWP against any obstructions, personnel, or other possible hazards when elevating, lowering, or driving. Keep all body parts inside the platform when elevating or driving. Be aware of blind spots when operating the MEWP.




DO NOT elevate the platform when the MEWP is on a truck, forklift, or other device or vehicle.



DO NOT use the MEWP when the wheels or tires are damaged. Make sure the wheel nuts and cotter pins are in place. Refer to *Section 4.2-5*.

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >

Section 8 – Labels

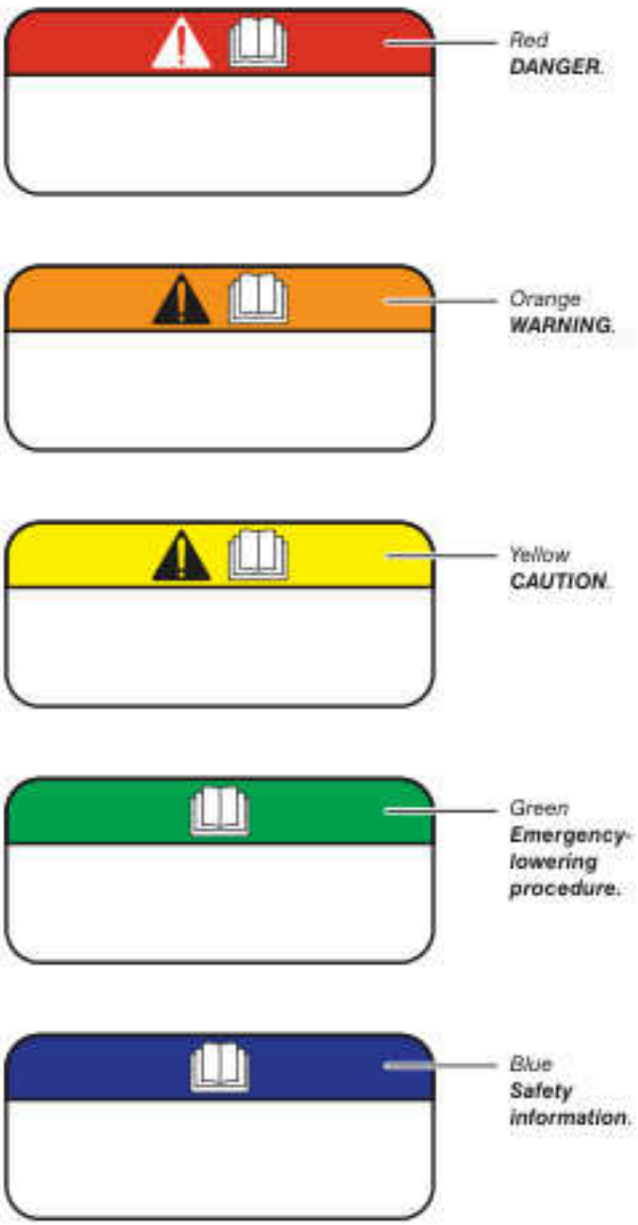

MidWestTech | Skyjack SJ3215 E, SJ3219 E, SJ3220 E, SJ3226 E, SJ3232 E, SJ4726 E, S... Order the manual at mid-west-tech.com >