Genie Industries


Technical Publications

Genie®

A TEREX COMPANY

Genie® S-60

Service Manual

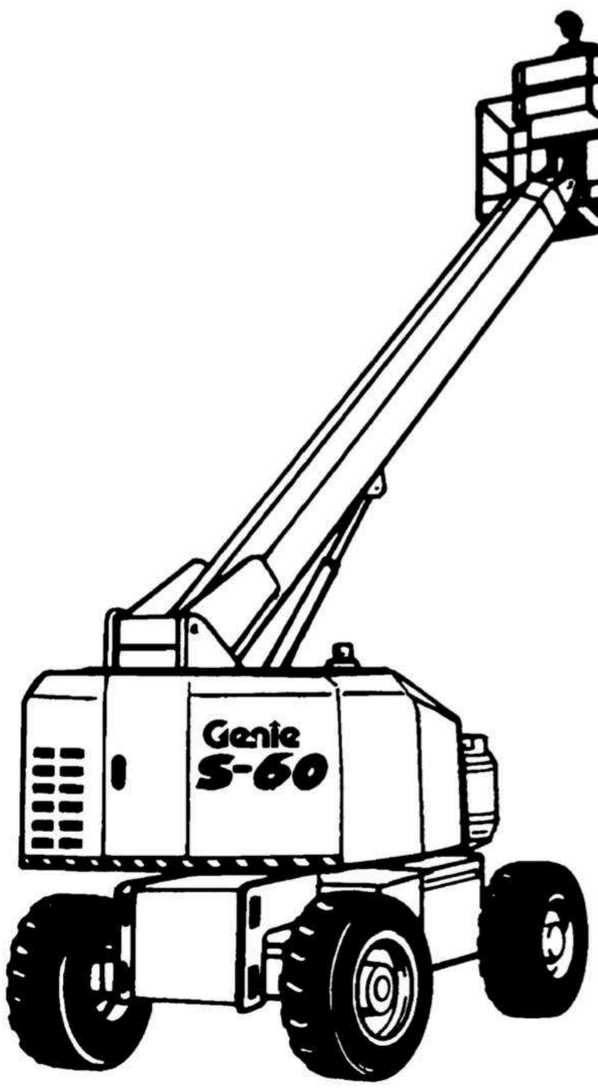

First Edition
Part No. 29751

MidWestTech | Terex Genie S-60 Telescopic Boom Lift Service Manual | Publication 29751

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 2
Hydraulic Specifications ..... 2 - 2
Bolt Torque Specifications ..... 2 - 4
Ford Engine LSG-423 Specifications ..... 2 - 5
Deutz Engine F4L 1011 Specifications ..... 2 - 7

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 3
Table C ..... 3 - 4
Table D ..... 3 - 5
Maintenance Inspection Report ..... 3 - 7

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Operator's and Safety Manuals ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 2
A-4 Check the Engine Oil Level ..... 4 - 3
A-5 Check the Engine Coolant Level - Gasoline/LPG Models ..... 4 - 3
A-6 Check for Fuel Leaks ..... 4 - 3
A-7 Check the Hydraulic Oil Level ..... 4 - 4
A-8 Check for Hydraulic Leaks ..... 4 - 4
A-9 Check the Tire Pressure ..... 4 - 5

MidWestTech | Terex Genie S-60 Telescopic Boom Lift Service Manual | Publication 29751 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures,** continued

A-10 Test the Platform and Ground Controls ..... 4 - 5
A-11 Test the Auxiliary Power Operation ..... 4 - 5
A-12 Test the Tilt Sensor ..... 4 - 6
A-13 Test the Limit Switches ..... 4 - 7
A-14 Check the Air Filter Condition Indicator - Deutz Diesel Models ..... 4 - 10
A-15 Replace the Engine Oil and Filter - Gasoline/LPG Models ..... 4 - 10
A-16 Replace the Engine Air Filter ..... 4 - 12
B-1 Check the Engine Belt(s) ..... 4 - 13
B-2 Check the Radiator - Gasoline/LPG Models ..... 4 - 13
B-3 Check the Oil Cooler and Cooling Fins - Deutz Diesel Models ..... 4 - 13
B-4 Check the Exhaust System ..... 4 - 14
B-5 Check the Batteries ..... 4 - 15
B-6 Check the Hydraulic Tank Filter Condition Indicators ..... 4 - 16
B-7 Inspect the Electrical Wiring ..... 4 - 16
B-8 Inspect the Tires and Wheels ..... 4 - 17
B-9 Confirm the Proper Brake Configuration ..... 4 - 17
B-10 Check the Oil Level in the Torque Hubs ..... 4 - 18
B-11 Check and Adjust the Engine Idle Mixture - Gasoline/LPG Models ..... 4 - 18
B-12 Check and Adjust the Engine RPM ..... 4 - 19
B-13 Test the Key Switch ..... 4 - 20
B-14 Test the Emergency Stop Buttons ..... 4 - 21
B-15 Test the Ground Control Override ..... 4 - 21
B-16 Test the Oscillate Lock-out ..... 4 - 22
B-17 Test the Platform Self-leveling ..... 4 - 22
B-18 Test the Service Horn ..... 4 - 22
B-19 Test the Foot Switch ..... 4 - 23
B-20 Test the Engine Speed Select ..... 4 - 23
B-21 Test the Fuel Select Operation - Gasoline/LPG Models ..... 4 - 24


MidWestTech | Terex Genie S-60 Telescopic Boom Lift Service Manual | Publication 29751 Order the manual at mid-west-tech.com >

Section Four **Scheduled Maintenance Procedures,** continued

B-22 Test the Drive Enable System ..... 4 - 25
B-23 Test the Drive Brakes ..... 4 - 26
B-24 Test the Drive Speed - Stowed Position ..... 4 - 26
B-25 Test the Alarm Package ..... 4 - 27
B-26 Inspect the Extend and Retract Cables ..... 4 - 27
B-27 Replace the Engine Oil and Filter - Deutz Diesel Models ..... 4 - 28
C-1 Check the Boom Wear Pads ..... 4 - 30
C-2 Check the Turntable Rotation Bearing Bolts ..... 4 - 31
C-3 Check the Free-wheel Configuration ..... 4 - 32
C-4 Grease the Turntable Rotation Bearing and Rotate Gear ..... 4 - 33
C-5 Replace the Torque Hub Oil ..... 4 - 34
C-6 Replace the Hydraulic Tank Filters ..... 4 - 35
C-7 Replace the Drive Loop Hydraulic Filter ..... 4 - 35
C-8 Replace the Diesel Fuel Filter - Deutz Diesel Models ..... 4 - 36
C-9 Replace the Gasoline Fuel Filter - Gasoline/LPG Models ..... 4 - 37
C-10 Replace the PCV Valve - Gasoline/LPG Models ..... 4 - 37
C-11 Clean or Replace the Distributor Cap and Rotor - Gasoline/LPG Models ..... 4 - 38
C-12 Replace the Spark Plugs - Gasoline/LPG Models ..... 4 - 39
C-13 Check and Adjust the Air/LPG Mixture - Gasoline/LPG Models ..... 4 - 39
C-14 Check and Adjust the Ignition Timing - Gasoline/LPG Models ..... 4 - 40
C-15 Check the Engine Valve Clearances - Deutz Diesel Models ..... 4 - 40
D-1 Change the Hydraulic Oil ..... 4 - 41
D-2 Change or Recondition the Engine Coolant - Gasoline/LPG Models ..... 4 - 42
D-3 Change the Fuel Lines ..... 4 - 43
D-4 Check Engine Valve Clearance - Gasoline/LPG Models ..... 4 - 44
D-5 Check Engine Cylinder Compression - Gasoline/LPG Models ..... 4 - 44
D-6 Clean the PCV Hoses and Fittings - Gasoline/LPG Models ..... 4 - 45
D-7 Check the Engine Injection Pumps and Injectors - Deutz Diesel Models ..... 4 - 46
D-8 Check the Toothed Belt - Deutz Diesel Models ..... 4 - 46
D-9 Replace the Timing Belt - Gasoline/LPG Models ..... 4 - 46

MidWestTech | Terex Genie S-60 Telescopic Boom Lift Service Manual | Publication 29751 Order the manual at mid-west-tech.com >

Electrical Schematic - Diesel Models

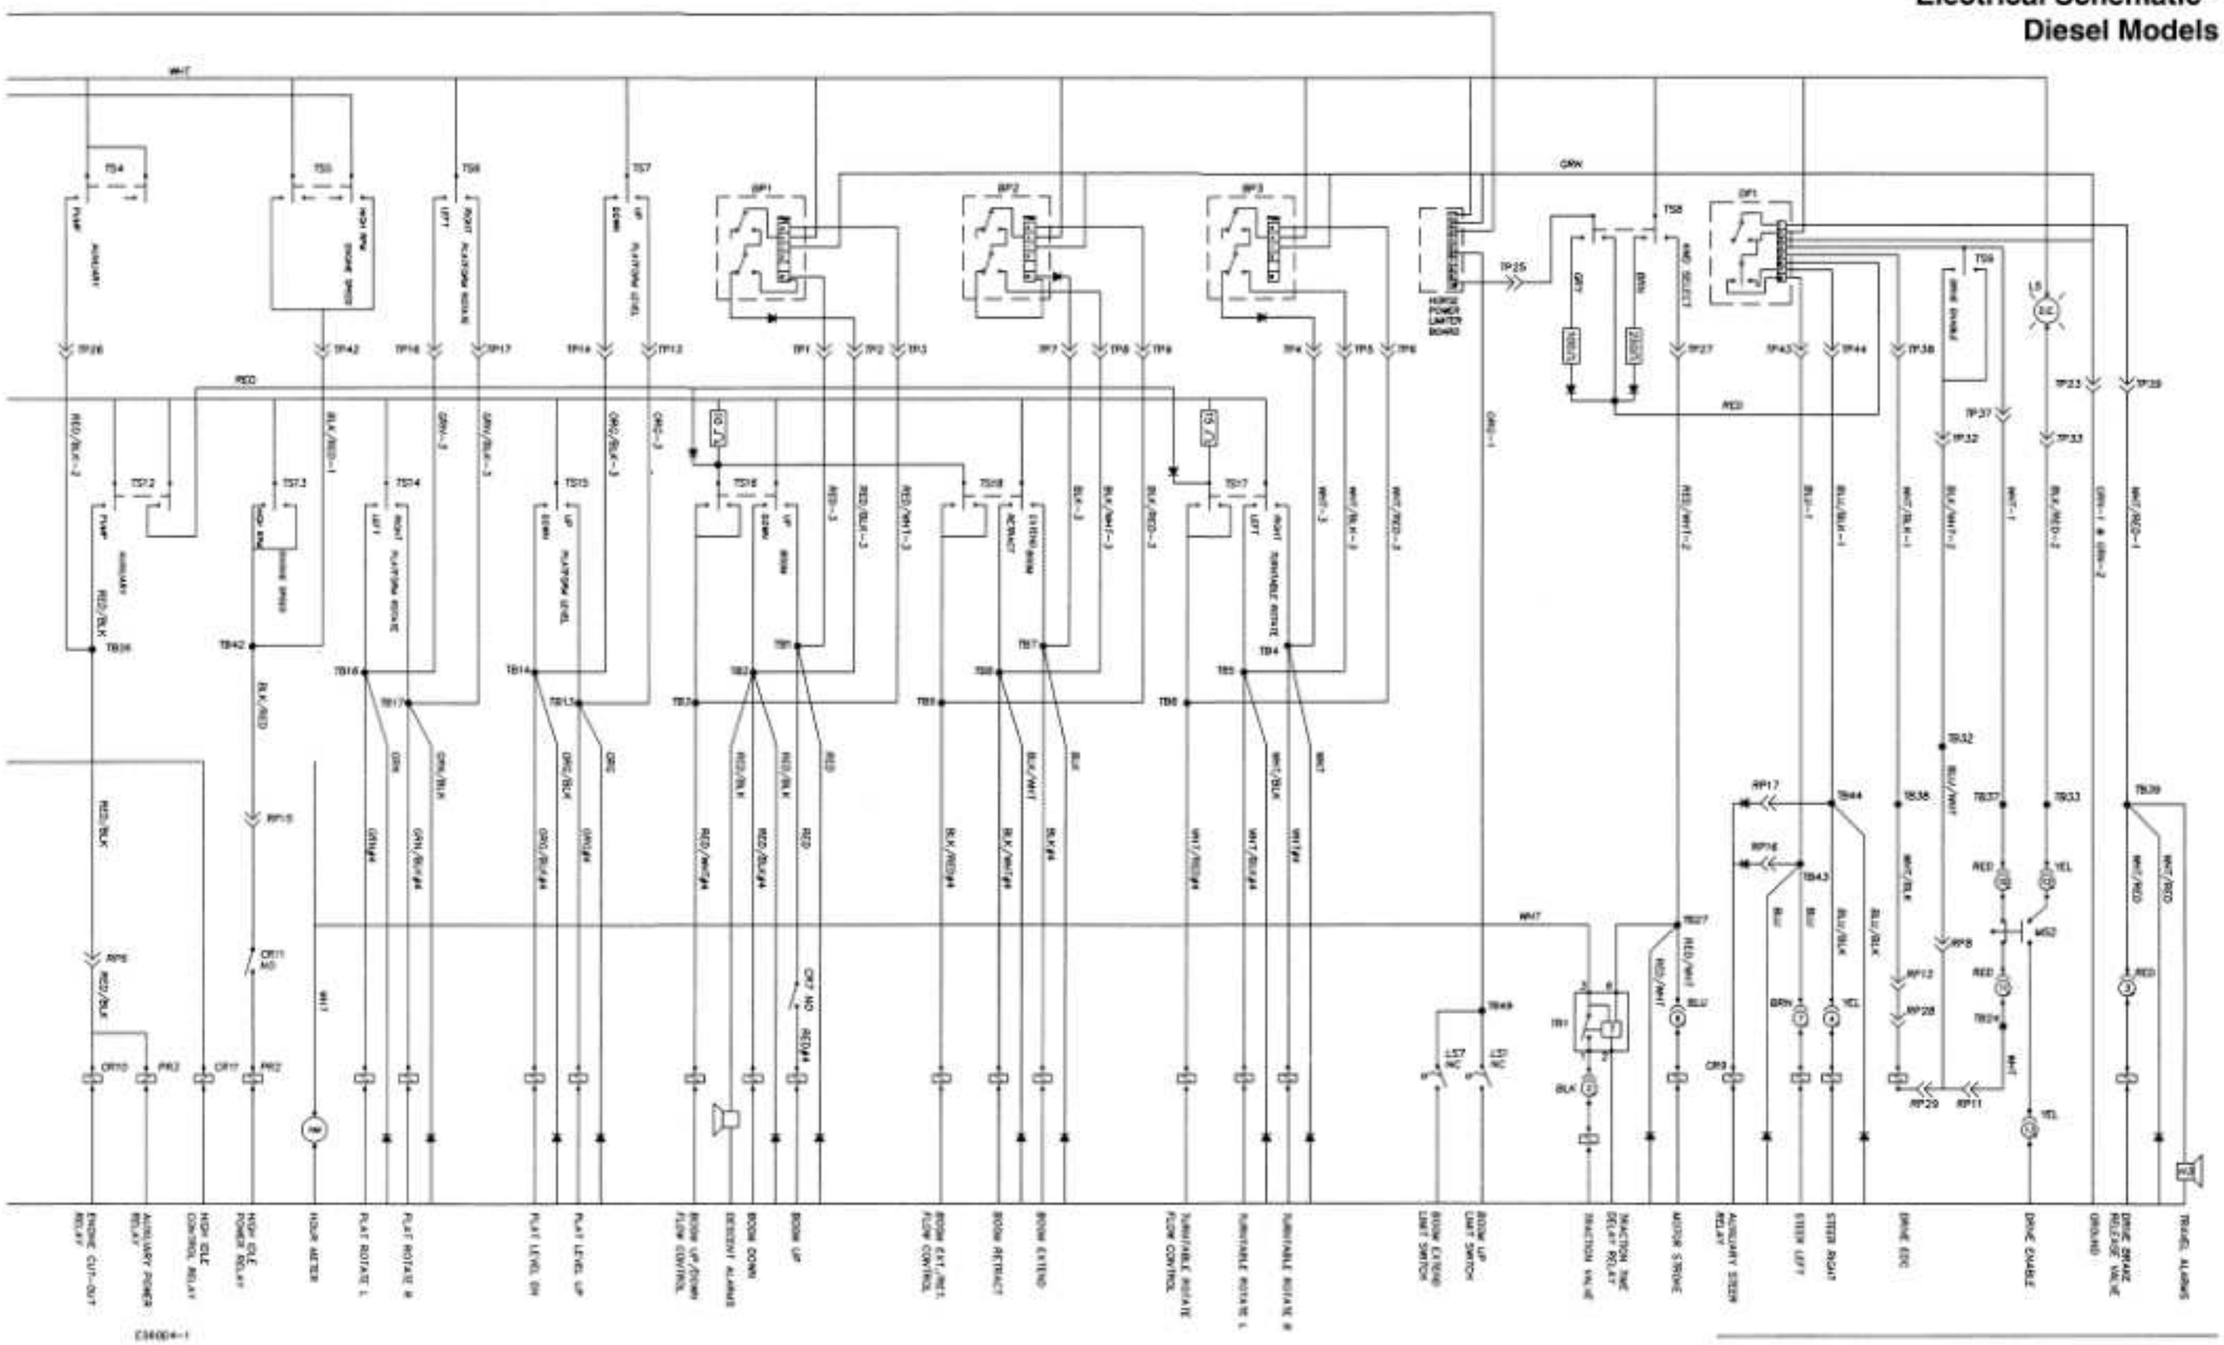

MidWestTech | Terex Genie S-60 Telescopic Boom Lift Service Manual | Publication 29751 Order the manual at mid-west-tech.com >