Genie Industries

Technical Publications


Genie®

A TEREX COMPANY

Genie® Z-60/34

Service Manual

(before serial number 1090)

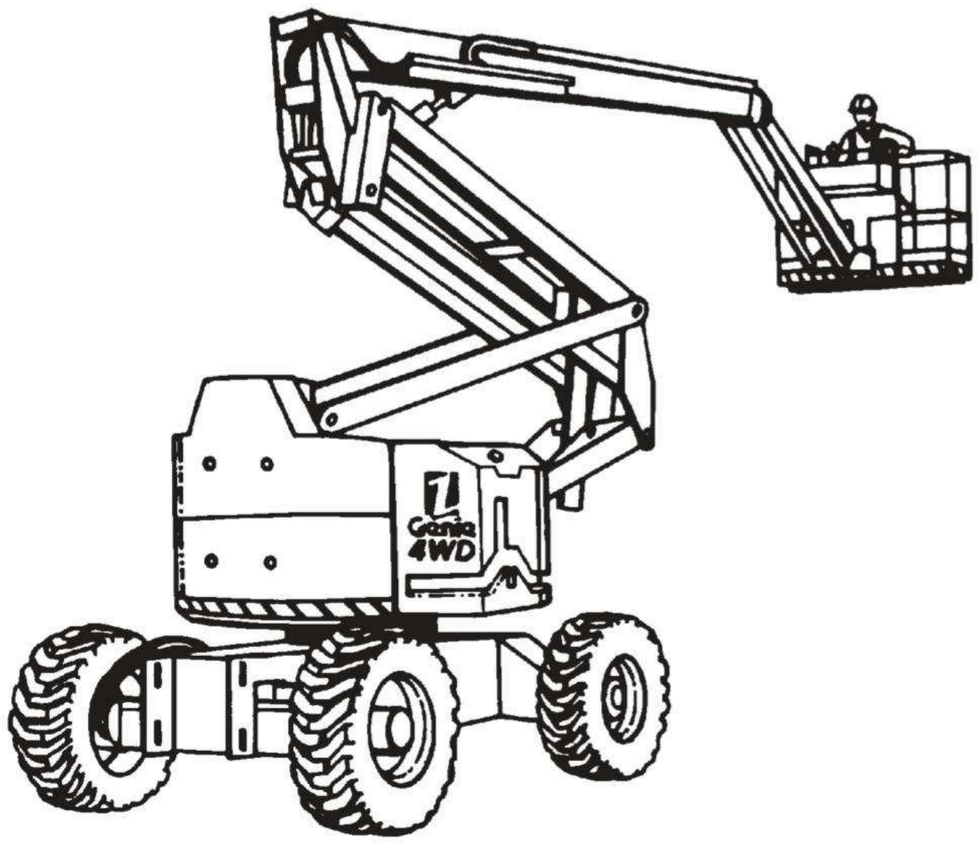

First Edition (Rev A1)
Part No. 30105
May 2007

MidWestTech | Terex Genie Z-60/34 Articulated Boom Lift Service Manual | Publication 30105

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 2
Hydraulic Specifications ..... 2 - 3
Bolt Torque Specifications ..... 2 - 4
Ford Engine LSG-423 Specifications ..... 2 - 5
Deutz Engine F4L 1011 Specifications ..... 2 - 7

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 3
Table C ..... 3 - 5
Table D ..... 3 - 6
Maintenance Inspection Report ..... 3 - 7

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Operator's and Safety Manuals ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 2
A-4 Check the Engine Oil Level ..... 4 - 3
A-5 Check the Engine Coolant Level - Gasoline/LPG Models ..... 4 - 3
A-6 Check for Fuel Leaks ..... 4 - 3
A-7 Check the Hydraulic Oil Level ..... 4 - 4
A-8 Check for Hydraulic Leaks ..... 4 - 4
A-9 Check the Tire Pressure ..... 4 - 5

MidWestTech | Terex Genie Z-60/34 Articulated Boom Lift Service Manual | Publication 301... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures,** continued

B-22 Test the Drive Enable System ..... 4 - 24
B-23 Test the Drive Brakes ..... 4 - 25
B-24 Test the Drive Speed - Stowed Position ..... 4 - 25
B-25 Test the Alarm Package - Optional Equipment ..... 4 - 26
B-26 Perform Hydraulic Oil Analysis ..... 4 - 26
B-27 Replace the Engine Oil and Filter - Deutz Diesel Models ..... 4 - 26
C-1 Check the Primary Boom Wear Pads ..... 4 - 28
C-2 Check the Turntable Rotation Bearing Bolts ..... 4 - 28
C-3 Check the Free-wheel Configuration ..... 4 - 29
C-4 Grease the Turntable Rotation Bearing and Rotate Gear ..... 4 - 30
C-5 Replace the Torque Hub Oil ..... 4 - 30
C-6 Replace the Hydraulic Tank Filter ..... 4 - 32
C-7 Replace the Drive Loop Hydraulic Filter ..... 4 - 32
C-8 Replace the Diesel Fuel Filter - Deutz Diesel Models ..... 4 - 33
C-9 Replace the Gasoline Fuel Filter - Gasoline/LPG Models ..... 4 - 33
C-10 Replace the PCV Valve - Gasoline/LPG Models ..... 4 - 35
C-11 Clean or Replace the Distributor Cap and Rotor - Gasoline/LPG Models ..... 4 - 35
C-12 Replace the Spark Plugs - Gasoline/LPG Models ..... 4 - 36
C-13 Check and Adjust the Air/LPG Mixture - Gasoline/LPG Models ..... 4 - 37
C-14 Check and Adjust the Ignition Timing - Gasoline/LPG Models ..... 4 - 38
C-15 Check the Engine Valve Clearances - Deutz Diesel Models ..... 4 - 38
D-1 Test or Replace the Hydraulic Oil ..... 4 - 39
D-2 Change or Recondition the Engine Coolant - Gasoline/LPG Models ..... 4 - 40
D-3 Change the Fuel Lines ..... 4 - 42
D-4 Check the Engine Valve Clearance - Gasoline/LPG Models ..... 4 - 43
D-5 Check the Engine Cylinder Compression - Gasoline/LPG Models ..... 4 - 43
D-6 Clean the PCV Hoses and Fittings - Gasoline/LPG Models ..... 4 - 44
D-7 Check the Engine Injection Pumps and Injectors - Deutz Diesel Models ..... 4 - 45
D-8 Check the Toothed Belt - Deutz Diesel Models ..... 4 - 45
D-9 Replace the Timing Belt - Gasoline/LPG Models ..... 4 - 45

MidWestTech | Terex Genie Z-60/34 Articulated Boom Lift Service Manual | Publication 301... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Five **Troubleshooting Flow Charts**

Introduction ..... 5 - 1

1 Engine Will Not Crank Over ..... 5 - 3

2 Engine Cranks Over But Will Not Start - Gasoline/LPG Models ..... 5 - 5

3 Engine Cranks Over But Will Not Start - Deutz Diesel Models ..... 5 - 10

4 Engine Will Not Start On LPG, But Will Start On Gasoline - Gasoline/LPG Models ..... 5 - 12

5 Engine Will Not Start On Gasoline, But Will Start On LPG - Gasoline/LPG Models ..... 5 - 13

6 Engine High Idle Inoperative - Gasoline/LPG Models ..... 5 - 14

7 Engine Low Idle Inoperative - Gasoline/LPG Models ..... 5 - 16

8 Engine High Idle Inoperative - Deutz Diesel Models ..... 5 - 17

9 Engine Low Idle Inoperative - Deutz Diesel Models ..... 5 - 18

10 All Functions Inoperative, Engine Starts and Runs ..... 5 - 19

11 All Lift and Steer Functions Inoperative, Drive Functions Operational ..... 5 - 20

12 Ground Controls Inoperative, Platform Controls Operate Normally ..... 5 - 21

13 Platform Controls Inoperative, Ground Controls Operate Normally ..... 5 - 22

14 Primary Boom Up Function Inoperative ..... 5 - 23

15 Primary Boom Down Function Inoperative ..... 5 - 25

16 Secondary Boom Up Function Inoperative ..... 5 - 27

17 Secondary Boom Down Function Inoperative ..... 5 - 29

18 Boom Extend Function Inoperative ..... 5 - 31

19 Boom Retract Function Inoperative ..... 5 - 33

20 Turntable Rotate Function Inoperative ..... 5 - 34

21 Turntable Rotate Left Function Inoperative ..... 5 - 36

22 Turntable Rotate Right Function Inoperative ..... 5 - 37


23 All Platform Leveling Functions Inoperative ..... 5 - 38

24 Platform Level Up Function Inoperative ..... 5 - 39

25 Platform Level Down Function Inoperative ..... 5 - 41

MidWestTech | Terex Genie Z-60/34 Articulated Boom Lift Service Manual | Publication 301... Order the manual at mid-west-tech.com >

Electrical Schematic - Deutz Diesel Models

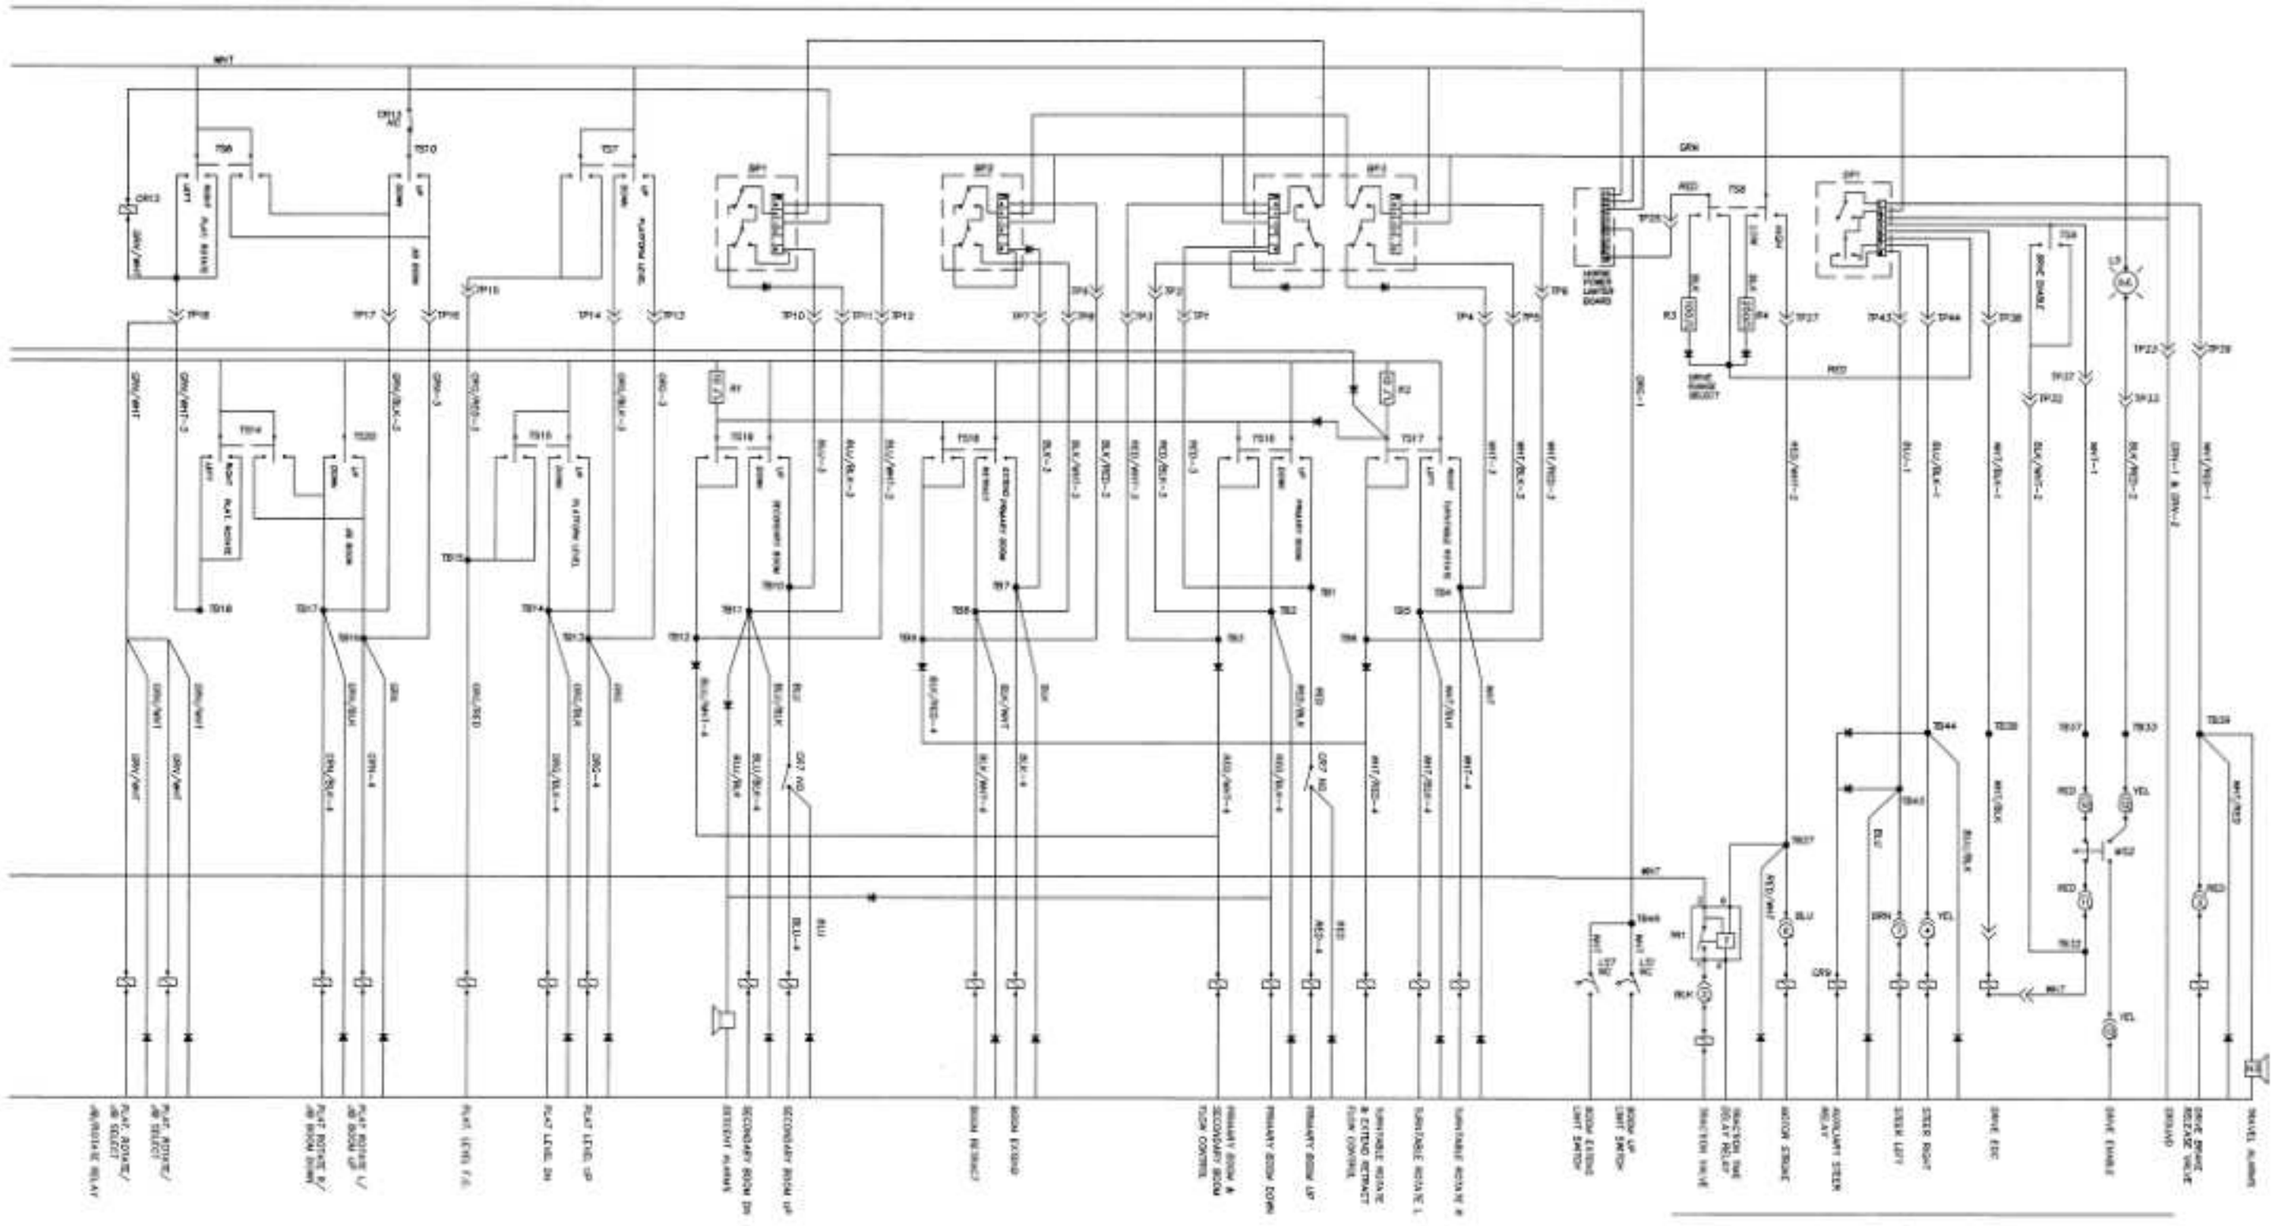

MidWestTech | Terex Genie Z-60/34 Articulated Boom Lift Service Manual | Publication 30105 Order the manual at mid-west-tech.com >