
Service Manual

Models
534D-9,
534D-10
& 544D

534D-9 & 534D-10
S/N 0160000447 & After
544D
S/N 0160000192 & After

31200170

Revised
November 6, 2008

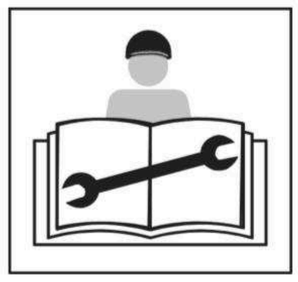

ISO9001 REGISTERED COMPANY
UKAS QUALITY MANAGEMENT 015

An Oshkosh Corporation Company

Order the manual at mid-west-tech.com >

SECTION CONTENTS

Section	Subject	Page
Section 1		
Safety Practices		**1.1**
1.1	Introduction	1.2
1.2	Disclaimer	1.2
1.3	Operator & Safety Manual	1.2
1.4	Do Not Operate Tags	1.2
1.5	Safety Information	1.3
1.6	Safety Instructions	1.3
1.7	Safety Decals	1.4
Section 2		
General Information and Specifications		**2.1**
2.1	Replacement Parts and Warranty Information	2.2
2.2	Torque Charts	2.3
2.3	Specifications	2.6
2.4	Fluid and Lubricant Capacities	2.9
2.5	Service and Maintenance Schedules	2.10
2.6	Lubrication Schedules	2.12
Section 3		
Boom		**3.1**
3.1	Boom System Component Terminology 534D-9, 534D-10	3.3
3.2	Boom System - Three Section	3.4
3.3	Boom Maintenance - Three Section (Complete Removal)	3.4
3.4	Boom Maintenance - Three Section (Individual Section Removal)	3.9
3.5	Boom Cables - Three Section	3.12
3.6	Auxiliary Electric Cable - Three Section	3.17
3.7	Extend/Retract Cylinder Removal and Installation - Three Section	3.18
3.8	Boom System Component Terminology 544D	3.20
3.9	Boom System - Four Section	3.21
3.10	Boom Maintenance - Four Section (Complete Removal)	3.21
3.11	Boom Maintenance - Four Section (Individual Section Removal)	3.28
3.12	Boom Extend and Retract Chains - Four Section	3.32
3.13	Boom Section Separation Adjustment - Four Section	3.38
3.14	Hydraulic Sub-Assembly Removal/Installation - Four Section	3.38
3.15	Boom Wear Pads	3.41
3.16	Quick Switch Assembly	3.42
3.17	Forks	3.43
3.18	Troubleshooting	3.44
Section 4		
Cab and Covers		**4.1**
4.1	Operator's Cab and Covers Component Terminology	4.2
4.2	Operator's Cab	4.3
4.3	Cab Components	4.3
4.4	Cab Removal	4.8
4.5	Cab Installation	4.9

MidWestTech | Gradall 534D-9, 534D-10, 544D Telehandler Service Manual | Publication 3... Order the manual at mid-west-tech.com >

Section	Subject	Page
Section 5		
Axles, Wheels and Tires		**5.1**
5.1	Axles, Wheel and Tire Component Terminology	5.2
5.2	General Information	5.3
5.3	Axle Assemblies	5.3
5.4	Rear Drive Hubs	5.9
5.5	Rear Steer Axle	5.10
5.6	Wheels and Tires	5.11
5.7	Brakes	5.13
5.8	Towing a Disabled Machine	5.13
Section 6		
Hydrostatic Drive Pump		**6.1**
6.1	Drive Pump Assembly Component Terminology	6.2
6.2	Drive Pump Description	6.3
6.3	Drive Pump Serial Number	6.3
6.4	Drive Pump Specifications	6.3
6.5	Drive Pump Replacement	6.3
6.6	Hydrostatic Drive Performance Checks	6.5
Section 7		
Engine		**7.1**
7.1	Introduction: John Deere 4045TF275 & 4045HF275	7.2
7.2	Engine Serial Number	7.4
7.3	Specifications and Maintenance Information	7.4
7.4	Introduction: Cummins QSB4.5	7.5
7.5	Engine Serial Number	7.7
7.6	Specifications and Maintenance Information	7.7
7.7	Cooling System	7.7
7.8	Electrical System	7.9
7.9	Fuel System	7.9
7.10	Exhaust System	7.11
7.11	Air Cleaner Assembly	7.11
7.12	Engine Replacement	7.12
7.13	Engine Drive Plate/Coupling	7.14
7.14	Engine Troubleshooting	7.15
Section 8		
Hydraulic System		**8.1**
8.1	Hydraulic Component Terminology	8.2
8.2	Safety Information	8.3
8.3	Hydraulic Pressure Diagnosis	8.4
8.4	Hydraulic Circuits	8.6
8.5	Hydraulic Reservoir	8.12
8.6	Engine Implement Pump	8.13
8.7	Drive Motors	8.14
8.8	Control Valves	8.16
8.9	Hydraulic Cylinders	8.21
Section 9		
Electrical System		**9.1**
9.1	Electrical Component Terminology	9.2
9.2	Specifications	9.3

MidWestTech | Gradall 534D-9, 534D-10, 544D Telehandler Service Manual | Publication 3... Order the manual at mid-west-tech.com >

Section	Subject	Page
9.3	Service Warnings	9.3
9.4	Fuses and Relays	9.3
9.5	Electrical System Schematics	9.4
9.6	Engine Start Circuit	9.9
9.7	Charging Circuit	9.10
9.8	Windshield Wiper Motor (If Equipped)	9.11
9.9	Cab Heater and Fan (If Equipped)	9.12
9.10	Solenoids, Sensors and Senders	9.12
9.11	Gauges	9.15
9.12	Dash Switches	9.15
9.13	Transmission Lever	9.17
9.14	Traction Lock Pedal	9.17
9.15	Troubleshooting - Cummins	9.18

MidWestTech | Gradall 534D-9, 534D-10, 544D Telehandler Service Manual | Publication 3... Order the manual at mid-west-tech.com >



2.4 FLUID AND LUBRICANT CAPACITIES

Engine Crankcase Oil	
Capacity w/Filter Change (John Deere)	15.5 quarts (14,6 liters)
Capacity w/Filter Change (Cummins)	11 quarts (10,4 liters)
Filter Capacity	1 quart (0,9 liters)
Oil Type	15W-40 CD
Fuel Tank	
Capacity	40 gallons (151,4 liters)
Type of Fuel	Low Sulfur Diesel #2
Cooling System	
System Capacity (John Deere)	24.8 quarts (23,5 liters)
System Capacity (Cummins)	22 quarts (20,8 liters)
Type of Fluid	50/50 ethylene glycol & water
Front Axle	
Differential Housing Capacity	19.6 quarts (18,5 liters)
Type of Fluid	Mobilfluid 424® Tractor Hydraulic Fluid (ISO 46)
Rear Drive Hubs	
Wheel End Capacity	1.5 quart (1,4 liters)
Type of Fluid	Mobilfluid 424® Tractor Hydraulic Fluid (ISO 46)
Hydraulic System	
System Capacity - 534D-9, 534D-10	47 gallons (178 liters)
System Capacity - 544D	50 gallons (189 liters)
Reservoir Capacity	30 gallons (113,5 liters)
Type of Fluid	Mobilfluid 424® Tractor Hydraulic Fluid (ISO 46)

MidWestTech | Gradall 534D-9, 534D-10, 544D Telehandler Service Manual | Publication 3... Order the manual at mid-west-tech.com >

7.14 ENGINE TROUBLESHOOTING


Trouble	Possible Causes (see key, below)
Low Cranking Power	1, 2, 3, 4
Will Not Start	5, 6, 7, 8, 9, 10, 12, 13, 14, 15, 16, 17, 18, 19, 20, 22, 31, 32, 33
Difficult Starting	5, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 18, 19, 20, 21, 22, 24, 29, 31, 32, 33, 61, 63
Lack of Power	8, 9, 10, 11, 12, 13, 14, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 31, 32, 33, 61, 63
Misfiring	8, 9, 10, 12, 13, 14, 16, 18, 19, 20, 25, 26, 28, 29, 30, 32
Excessive Fuel Consumption	11, 13, 14, 16, 18, 19, 20, 22, 23, 24, 25, 27, 28, 29, 31, 32, 33, 63
Black Exhaust	11, 13, 14, 16, 18, 19, 20, 22, 24, 25, 27, 28, 29, 31, 32, 33, 61, 63
Blue/White Exhaust	4, 16, 18, 19, 20, 25, 27, 31, 33, 34, 35, 45, 56, 62
Low Oil Pressure	4, 36, 37, 38, 39, 40, 42, 43, 44, 58
Knocking	9, 14, 16, 18, 19, 22, 26, 28, 29, 31, 33, 35, 36, 45, 46, 59
Erratic Running	7, 8, 9, 10, 11, 12, 13, 14, 16, 20, 21, 23, 26, 28, 29, 30, 33, 35, 45, 59
Vibration	13, 14, 20, 23, 25, 26, 29, 30, 33, 45, 47, 48, 49
High Oil Pressure	4, 38, 41
Overheating	11, 13, 14, 16, 18, 19, 24, 25, 45, 50, 51, 52, 53, 54, 57
Excessive Crankcase Pressure	25, 31, 33, 34, 45, 55, 60
Poor Compression	11, 19, 25, 28, 29, 31, 32, 33, 34, 46, 59
Starts and Stops	10, 11, 12

Key to Possible Causes

1. Battery charge low
2. Bad electrical connection
3. Faulty starter motor
4. Incorrect grade of lubricating oil
5. Low cranking speed
6. Fuel tank empty
7. Faulty stop control operation
8. Fuel inlet restricted
9. Faulty fuel lift pump
10. Clogged fuel filter
11. Restricted air cleaner
12. Air in fuel system
13. Faulty fuel injection pump
14. Faulty fuel injectors or incorrect type
15. Incorrect use of cold start equipment
16. Faulty cold start equipment
17. Broken fuel injection pump drive
18. Incorrect fuel pump timing
19. Incorrect valve timing
20. Poor compression
21. Blocked fuel tank vent
22. Incorrect grade of fuel
23. Sticking throttle or restricted movement
24. Exhaust pipe restriction
25. Leaking cylinder head gasket
26. Overheating
27. Cold running
28. Incorrect tappet adjustment
29. Sticking valves
30. Incorrect high pressure pipes
31. Worn cylinder bores
32. Pitted valves and seats
33. Broken, worn or sticking piston ring(s)
34. Worn valve stems and guides
35. Restricted air cleaner
36. Worn or damaged bearings
37. Insufficient oil in sump
38. Inaccurate gauge
39. Oil pump worn
40. Pressure relief valve sticking open
41. Pressure relief valve sticking closed
42. Broken relief valve spring
43. Faulty suction pipe
44. Restricted oil filter
45. Piston seizure/pick up
46. Incorrect piston height
47. Damaged fan
48. Faulty engine mounting
49. Incorrectly aligned flywheel housing or incorrectly aligned flywheel
50. Faulty thermostat
51. Restriction in water jacket
52. Loose fan belt
53. Restricted radiator
54. Faulty water pump
55. Restricted breather pipe
56. Damaged valve stem oil deflectors (if fitted)
57. Coolant level too low
58. Blocked sump strainer
59. Broken valve spring
60. Exhauster or vacuum pipe leak
61. Turbo impeller damaged or dirty
62. Turbo lubricating oil seal leak
63. Induction system leaks

MidWestTech | Gradall 534D-9, 534D-10, 544D Telehandler Service Manual | Publication 3... Order the manual at mid-west-tech.com >

8.4.4 Hydraulic Schematic-544D

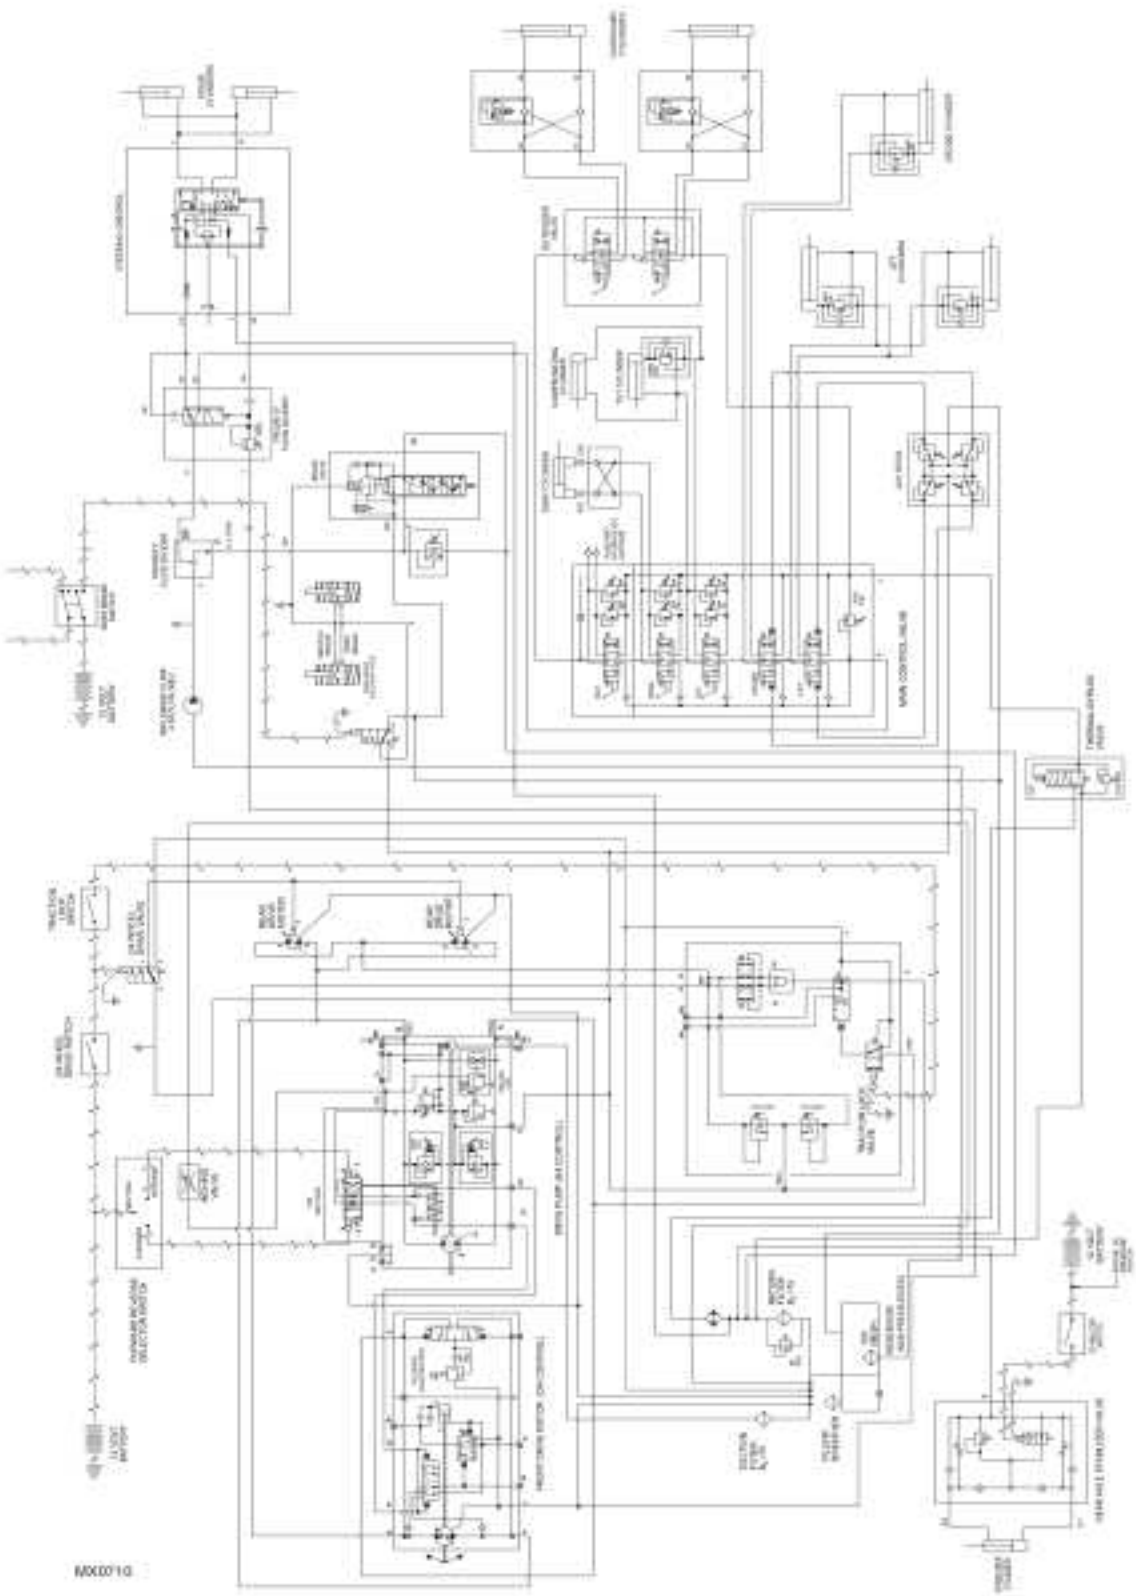

MidWestTech | Gradall 534D-9, 534D-10, 544D Telehandler Service Manual | Publication 3... Order the manual at mid-west-tech.com >