An Oshkosh Corporation Company

Service and Maintenance Manual

Model

520AJ

PVC 2001

31215025


April 08, 2020 - Rev B

ANSI

CE

AS/NZS

MOL70

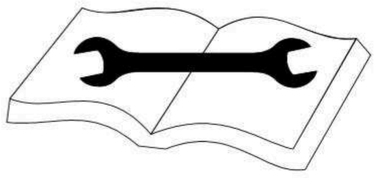

MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025

Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 1 - SPECIFICATIONS		
1.1	Operating Specifications	1-1
1.2	Dimensional Data	1-1
1.3	Capacities	1-1
1.4	Tires	1-1
1.5	Engine Data	1-1
1.6	Hydraulic Oil	1-3
1.7	Maintenance and Lubrication	1-5
1.8	ThreadLocking Compound	1-9
1.9	Torque Charts	1-10
	SAE Fastener Torque Chart	1-10
	SAE Fastener Torque Chart (Continued)	1-11
	SAE Fastener Torque Chart (Continued)	1-12
	SAE Fastener Torque Chart (Continued)	1-13
	SAE Fastener Torque Chart (Continued)	1-14
	SAE Fastener Torque Chart (Continued)	1-15
	Metric Fastener Torque Chart	1-16
	Metric Fastener Torque Chart (Continued)	1-17
	Metric Fastener Torque Chart (Continued)	1-18
	Metric Fastener Torque Chart (Continued)	1-19
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventive Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-3
	Pressure-Fit Parts	2-3
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-3
	Battery	2-3
	Lubrication and Servicing	2-3
2.3	Lubrication and Information	2-4
	Hydraulic System	2-4
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4

MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
2.4	Cylinder Drift	2-5
	Theory	2-5
	Cylinder Leakage Test	2-5
	Cylinder Thermal Drift	2-5
2.5	Pins and Composite Bearing Repair Guidelines	2-6
2.6	Welding on JLG Equipment	2-6
	Do the Following When Welding on JLG Equipment	2-6
	Do Not Do The Following When Welding On JLG Equipment	2-6
SECTION 3 - CHASSIS & TURNTABLE		
3.1	Tires and Wheels	3-1
	Tire Damage	3-1
	Wheel and Tire Replacement	3-1
	Wheel Installation	3-1
3.2	Oscillating Axle System	3-2
3.3	Lockout Cylinder Bleeding	3-2
3.4	Oscillating Axle Lockout Test	3-2
3.5	Cold Start System (Diesel)	3-3
3.6	Drive Orientation System	3-3
3.7	Chassis Tilt Indicator System	3-3
3.8	Drive System	3-4
3.9	Wheel Drive Assembly	3-8
	Removal	3-8
	Installation	3-8
3.10	Torque Hub	3-9
	Roll and Leak Testing	3-9
	Tightening and Torquing Bolts	3-9
	Main Disassembly for "B" Drives	3-10
	Hub-Spindle Disassembly	3-10
	Cover Disassembly	3-17
	Carrier Disassembly	3-17
	Assemble Carrier	3-17
	Cover Sub-Assembly	3-19
	Hub-Spindle Sub-Assembly	3-20
	Main Assembly	3-22
	Tool List	3-27
3.11	Re-Align Torque Hub Input Coupling	3-28
	Equipment Required	3-28
	Procedure	3-28
3.12	Drive Motor	3-28
	Description	3-28
	Shaft Seal Replacement	3-29
	Loop Flushing Valve	3-29
	Troubleshooting	3-30
	Disassembly	3-31
	Inspection	3-35
	Assembly	3-37
	Initial Start-Up Procedures	3-41
3.13	Drive Brake	3-42
	Disassembly	3-42
	Inspection	3-42
	Assembly	3-42

MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
3.14	Swing Bearing	3-44
	Description	3-44
	Removal	3-44
	Disassembly	3-46
	Assembly	3-48
	Installation	3-50
	Turntable Bearing Mounting Bolt Checks	3-51
	Check Frame To Bearing Bolts	3-51
	Check Turntable To Bearing Bolts	3-51
	Wear Tolerance	3-51
3.15	Swing Motor	3-55
	Removal	3-57
	Preparation Before Disassembly	3-59
	Disassembly and Inspection	3-59
	Assembly	3-66
	One Piece Stator Assembly	3-72
	Two Piece Stator Assembly	3-73
	Final Checks	3-73
	Installation	3-73
3.16	Generator	3-74
	Every 250 hours	3-74
	Every 500 hours	3-74
	Overload Protection	3-74
	Brushes and Slip Rings	3-75
	Troubleshooting	3-77
	Generator Disassembly and Assembly	3-78
	Lead Connection List for Generator	3-86
	Generator Pulley	3-87
	Removal	3-87
	Installation	3-87
	Removal	3-88
	Installation	3-88
	Removal	3-89
	Installation	3-89
	Removal	3-90
	Installation	3-90
3.17	Deutz Engine D2011L03	3-91
	Checking Oil Level	3-94
	Changing Engine Oil	3-94
	Changing Oil Filter	3-95
	Deutz EMR 2	3-96
3.18	Deutz Engine D2.9L4 (STAGE V)	3-108
	General Maintenance	3-110
	Check Oil Level	3-110
	Replacing Engine Oil	3-110
	Replacing the Oil Filter	3-110
	Replacing the Fuel Filters	3-111
	Deutz EMR5	3-112
3.19	HRC Engine Emission Characteristics	3-139
	Terminology for Removing Soot	3-139
3.20	Diesel Particulate Filter (If Equipped)	3-140
	Standstill Cleaning	3-141
	Maintenance Standstill Cleaning Initiation Methods	3-142
	Canceling Maintenance Standstill	3-142
	Unsuccessful Cleaning Event	3-142
	DPF Filter Replacement due to Ash Load	3-142
	Ash Load	3-145

MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

Table 3-9. Swing Motor Troubleshooting

Trouble	Cause	Remedy
Oil Leakage	1. Hose fittings loose, worn or damaged.	Check & replace damaged fittings or "O" Rings. Torque to manufacturers specifications.
	2. Oil sealrings (4) deteriorated by excess heat.	Replace oil seal rings by disassembling unit.
	3. Special bolt (1, 1A, 1B or 1C) loose or its sealing area deteriorated by corrosion.	(a) Loosen then tighten single bolt to torque specification. (b) Replace bolt.
	4. Internal shaft seal (16) worn or damaged.	Replace seal. Disassembly of motor unit necessary.
	5. Worn coupling shaft (12) and internal seal (16).	Replace coupling shaft and seal by disassembling unit.
Significant loss of speed under load	1. Lack of sufficient oil supply	(a) Check for faulty relief valve and adjust or replace as required. (b) Check for and repair worn pump. (c) Check for and use correct oil for temperature of operation.
	2. High internal motor leakage	Replace worn rotor set by disassembling unit.
	3. Severely worn or damaged internal splines.	Replace rotor set, drive link and coupling shaft by disassembling unit.
	4. Excessive heat.	Locate excessive heat source (usually a restriction) in the system and correct the condition.
Low mechanical efficiency or undue high pressure required to operate unit	1. Line blockage	Locate blockage source and repair or replace.
	2. Internal interference	Disassemble unit, identify and remedy cause and repair, replacing parts as necessary.
	3. Lack of pumping pressure	Check for and repair worn pump.
	4. Excessive binding or loading in system external to motor unit.	Locate source and eliminate cause.

MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

12. Use the analyzer keys to select N for no or Y for yes. Press ENTER (ENTER). The control system will default to an estimate of unrestricted capacity, which can be adjusted if necessary. Refer to Table 6-6, SkyGlazier Capacity Reductions and Table 6-7, Pipe Rack Capacity Reductions.

The screen will read:




Table 6-6. SkyGlazier Capacity Reductions

Capacity	PLATFORM OVRLD	PLATFORM OVRLD RESTRICT
500 lb (227 kg)	400 lb (181 kg)	n/a
550 lb (250 kg)	400 lb (181 kg)	n/a
600 lb (272 kg)	400 lb (181 kg)	n/a
750 lb (340 kg)	n/a	590 lb (268 kg)
1000 lb (454 kg)	n/a	750 lb (340 kg)
Note: If both SkyGlazier and Pipe Racks are configured, capacity will be the lower of the two values.		


Table 6-7. Pipe Rack Capacity Reductions

Capacity	PLATFORM OVRLD	PLATFORM OVRLD RESTRICT
500 lb (227 kg)	400 lb (181 kg)	n/a
550 lb (250 kg)	450 lb (204 kg)	n/a
600 lb (272 kg)	500 lb (227 kg)	n/a
750 lb (340 kg)	n/a	650 lb (295 kg)
1000 lb (454 kg)	n/a	900 lb (408 kg)
Note: If both SkyGlazier and Pipe Racks are configured, capacity will be the lower of the two values.		

13. Press ENTER (ENTER). The following screen will be displayed for restricted capacity, which can be adjusted if necessary. Refer to Table 6-6, SkyGlazier Capacity Reductions and Table 6-7, Pipe Rack Capacity Reductions.

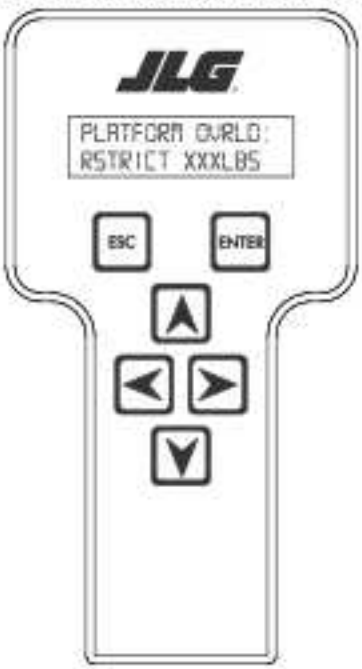

MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

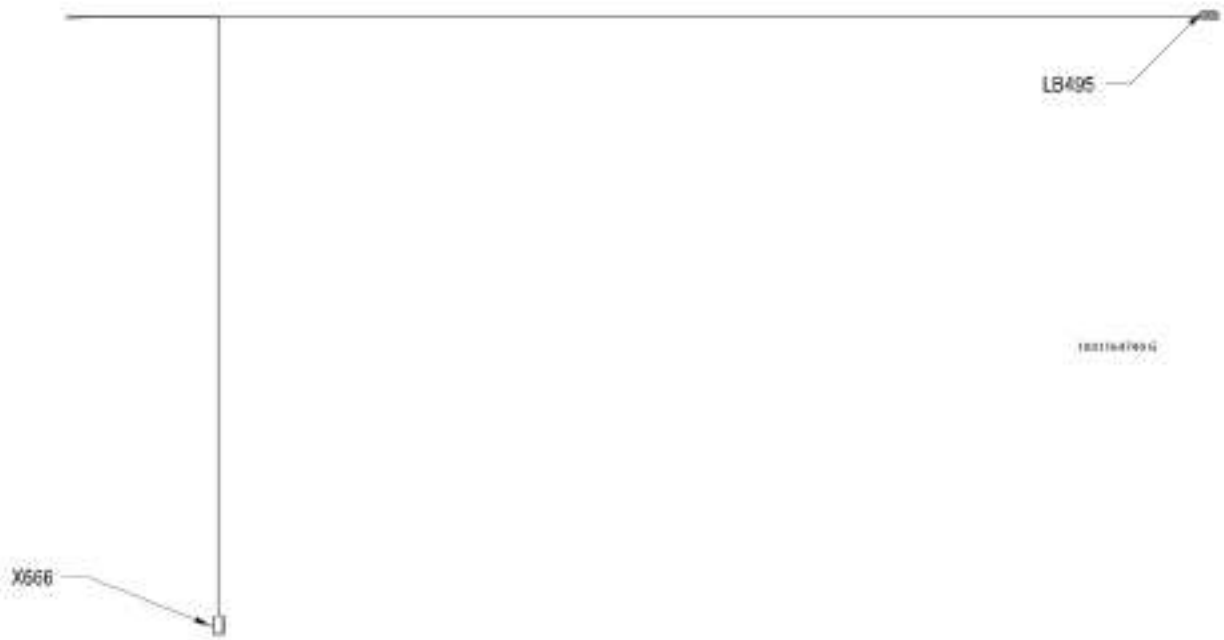

LB495					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
1	BLK	000-60-11 GND	16 AWG	GXL	S672 (1)
2	WHT	6-11 12V+	16 AWG	GXL	S671 (1)


X666					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
1					
2	BLK	000-60-12 GND	16 AWG	GXL	S672 (2)
3	WHT	6-13 12V+	16 AWG	GXL	S671 (2)
4					

Figure 7-83. Chassis Head and Tail Lights Harness - Sheet 4 of 5


MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

4. Pull moving end over track so new connection is positioned in curve of powertrack. Round half-shears will rotate into cut-outs.



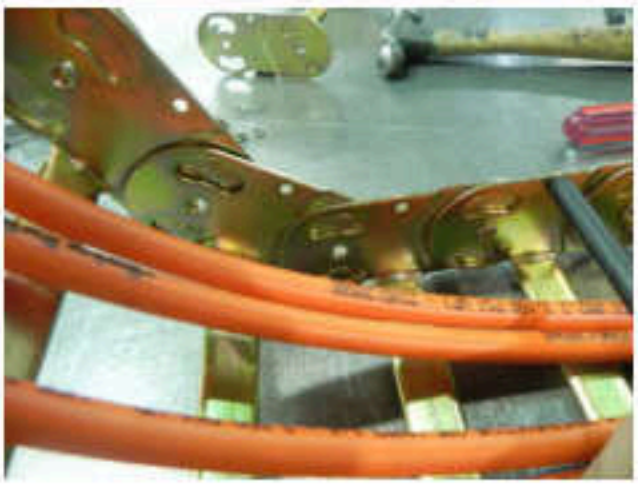

5. Parts shown below connect new link to powertrack.

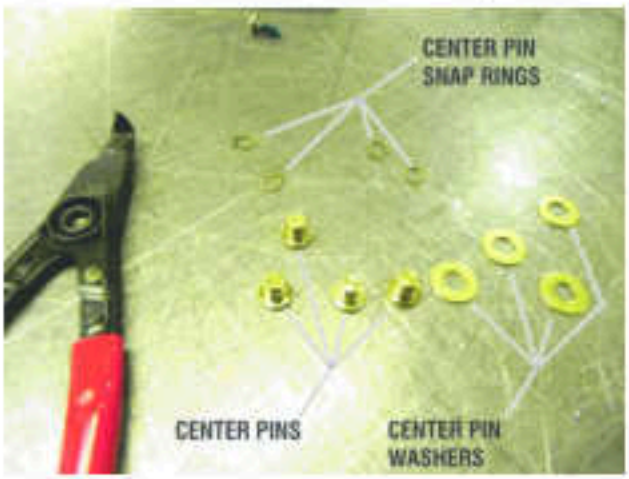

6. Push pin through center hole then slide washer on pin.





7. Install snap ring in groove on pin. Repeat pin installation steps for all center holes with rivets removed.



MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >

SECTION 5. BASIC HYDRAULICS INFORMATION & SCHEMATICS

5.1 LUBRICATING O-RINGS IN THE HYDRAULIC SYSTEM


When assembling connectors in the hydraulic that use o-ring fittings, it is necessary to lubricate all fittings with hydraulic oil prior to assembly. To lubricate the fittings, use one of the following procedures.

NOTE: *All O-ring fittings must be pre-lubricated with hydraulic oil prior to assembly.*

Cup and Brush

The following is needed to correctly oil the o-ring in this manner:

- A small container for hydraulic oil
- Small paint brush

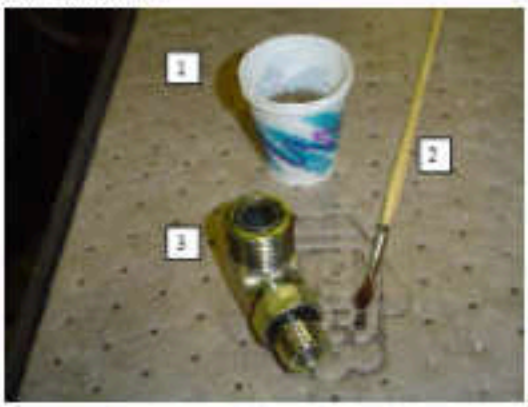

1. Hold the fitting in one hand while using the brush with the other hand to dip into the container. Remove excess hydraulic oil from the brush so an even film of oil is applied on the o-ring.



2. Holding the fitting over the hydraulic oil container, brush an even film of oil around the entire o-ring in the fitting, making sure the entire o-ring is completely saturated.



3. Turn the o-ring on the other side of the fitting and repeat the previous step, ensuring the entire o-ring is coated with hydraulic oil.



MidWestTech | JLG 520AJ Boom Lift Service Manual | Publication 31215025 Order the manual at mid-west-tech.com >