An Oshkosh Corporation Company

Service and Maintenance Manual

Model
800S
860SJ

PVC 2001

31215049

January 15, 2020 - Rev A

ANSI

CE

AS/NZS

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049

Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 1 - SPECIFICATIONS		
1.1	Operating Specifications	1-1
	Machine Specifications	1-1
1.2	Specifications and Performance Data	1-1
1.3	Capacities	1-1
1.4	Component Data	1-2
	Engine Data	1-2
	Battery	1-2
1.5	Tires	1-3
1.6	Torque Requirements	1-3
1.7	Lubrication	1-3
	Hydraulic Oil	1-3
1.8	Pressure Settings	1-5
1.9	Major Component Weights	1-5
1.10	Operator Maintenance	1-7
1.11	Serial Number Location	1-12
1.12	ThreadLocking Compound	1-13
1.13	Torque Charts	1-14
	SAE Fastener Torque Chart	1-14
	Metric Fastener Torque Chart	1-20
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventive Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-3
	Pressure-Fit Parts	2-3
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-4
	Battery	2-4
	Lubrication and Servicing	2-4
2.3	Lubrication and Information	2-4
	Hydraulic System	2-4
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
2.4	Cylinder Drift Test	2-5
	Theory	2-5
	Cylinder Leakage Test	2-5
	Cylinder Thermal Drift	2-5
2.5	Pins and Composite Bearing Repair Guidelines	2-6
2.6	Welding on JLG Equipment	2-6
	Do the Following When Welding on JLG Equipment	2-6
	Do NOT Do the Following When Welding on JLG Equipment	2-6
SECTION 3 - CHASSIS & TURNTABLE		
3.1	Tires & Wheels	3-1
	Tire Damage	3-1
	Tire Replacement	3-1
	Wheel Replacement	3-1
	Wheel Installation	3-1
3.2	Lockout Cylinder Bleeding	3-2
3.3	Oscillating Axle Lockout Test	3-8
3.4	Free Wheeling Option	3-8
	To Disengage Drive Motors and Brakes (Free Wheel) for Emergency Towing	3-8
	To Engage Drive Motors and Brakes (Normal Operation)	3-8
3.5	Wheel Drive Assembly (2WD)	3-9
	Removal	3-9
	Installation	3-9
3.6	Wheel Drive Assembly (4WD)	3-11
	Removal	3-11
	Installation	3-11
3.7	Drive Hub	3-13
	Roll and Leak Test	3-13
	Disassembly	3-14
	Assembly	3-23
3.8	Drive Brake	3-28
	Disassembly	3-28
	Inspection	3-28
	Assembly	3-28
3.9	Drive Motor	3-30
	Description	3-30
	Shaft Seal Replacement	3-30
	Loop Flushing Valve	3-31
	Troubleshooting	3-32
	Disassembly	3-33
	Inspection	3-37
	Assembly	3-39
	Initial Start-up Procedures	3-44
3.10	Chassis Tilt Indicator System	3-45
3.11	Transport Position Sensing System	3-45
	Beyond Transport - Drive Speed Cutback System	3-45
	Drive/Steer – Boom Function Interlock System	3-45
3.12	Drive Orientation System	3-45
3.13	Oscillating Axle System	3-46
3.14	Drive System	3-46

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
3.15	Swing Drive	3-47
	Roll, Leak And Brake Testing	3-47
	Tightening and Torquing Bolts	3-48
	Motor Control Valve Disassembly	3-49
	Motor and Brake Disassembly	3-50
	Main Drive Disassembly	3-51
	Hub-Shaft Disassembly	3-52
	Carrier Disassembly	3-53
	Hub-Shaft Assembly	3-54
	Carrier Assembly	3-54
	Main Drive Assembly	3-55
	Motor and Brake Assembly	3-56
	Motor Control Valve Assembly	3-56
3.16	Swing Motor	3-63
	Disassembly and inspection	3-63
	Assembly	3-70
	One Piece Stator Construction	3-78
3.17	Procedure For Setting Swing Gear Backlash	3-79
3.18	Swing Bearing	3-82
	Turntable Bearing Mounting Bolt Condition Check	3-82
	Wear Tolerance	3-85
	Swing Bearing Removal	3-85
	Swing Bearing Torque Values	3-88
3.19	Rotary Coupling	3-89
3.20	Generator	3-94
	Maintenance Schedule	3-94
	Overload Protection	3-94
	Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings	3-94
	Troubleshooting	3-96
	Generator Disassembly and Assembly	3-97
	Lead Connection List for Generator	3-104
3.21	Ford Engine	3-105
3.22	Deutz Engine	3-116
3.23	Deutz TD 2.9 L4 China III Engine	3-125
	Check Oil Level	3-131
	Change Engine Oil	3-131
	Change Oil Filter	3-132
	Change Fuel Filters	3-132
	Replacing the Fuel Pre-Filter	3-133
	Water in Fuel Sensing System (Optional)	3-134
	Draining Water	3-134
	Auxiliary Fuel Filter	3-134
3.24	Deutz D2011LO40 Tier 4I Engine	3-136
	Checking Oil Level	3-144
	Changing Engine Oil	3-144
	Changing Oil Filter	3-145
	Replace Fuel Filter	3-145
	Clean Fuel Strainer	3-146
	Spark Arrester Cleaning Instructions	3-146
	Glow Plugs	3-146
3.25	Deutz EMR 2	3-147
3.26	Ford 2.5L Engine Fuel System Repair	3-206
	Propane Fuel Filter Replacement	3-206
	Propane Fuel System Pressure Relief	3-206
	Propane Fuel System Leak Test	3-206
3.27	Counterweight	3-207

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >

1.8 PRESSURE SETTINGS

Telescope Out	2500 psi (172 Bar)
Swing, Left & Right	1700 psi (117 Bar)
Steer	2500 psi (172 Bar)
Platform Level Up	2600 psi (179 Bar)
Platform Level Down	1800 psi (124 Bar)
Jib, Up & Down	1700 psi (117 Bar)

1.9 MAJOR COMPONENT WEIGHTS

Component	Pounds	Kilograms
Turntable (bare)	3700	1678
Counterweight (800S)	7000	3175
Counterweight (860SJ)	8750	3969
Upright	1050	476
Tower	685	311
Fly Boom (SJ)	472	214
Fly Boom (S)	490	222
Mid Boom (SJ)	750	340
Mid Boom (S)	740	336
Base Boom (SJ)	1400	635
Base Boom (S)	1410	640
Boom Assembly	3337	1514
Telescope Cylinder (800S)	590	268
Telescope Cylinder (860SJ)	579	263
Slave Cylinder	73	33
Torque Hub (2WD)	218	99
Tire & Wheel (FF)	544	247

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >

10. Carefully remove the telescope cylinder and sheave assembly. Place telescope cylinder on a suitable trestle.
    a. Remove hardware from the wear pads; remove wear pads from cylinder.
    b. Remove hardware from the wire rope guard; remove guard from cylinder.
    c. Remove hardware from the sheave pin; remove pin and sheave from cylinder.

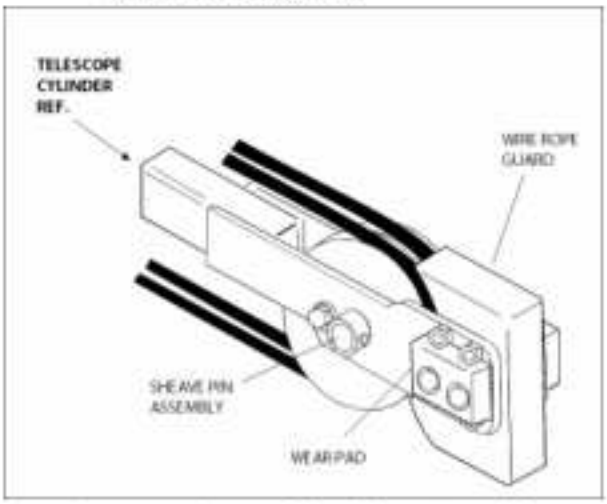


Figure 4-9. Disassembly of Sheave Assembly

9. Remove hardware which secures the wear pads to the front of base boom section; remove wear pads from the top, sides and bottom of the base boom section.
10. Using an overhead crane or suitable lifting device, remove mid and fly boom sections from base section. Note: When removing mid and fly boom sections from base boom section, retract wire rope must be dragged along with boom sections.
11. Remove hardware which secures the wear pads to the rear end of mid boom section; remove the wear pads from the top, sides and bottom of the mid boom section.
12. Remove hardware which secures the sheave guards and sheave assemblies to mid boom section, remove sheave assemblies from mid boom section.
13. Remove hardware which secures the wear pads to the front of mid boom section; remove wear pads from the top, sides and bottom of the mid boom section.
14. Using an overhead crane or suitable lifting device, remove fly boom section from mid section. Note: When removing fly boom section from mid boom section, retract wire rope must be dragged along with fly boom section.
15. Remove hardware which secures the wear pads to the rear end of fly boom section; remove wear pads from the top, sides and bottom of the fly boom section.
16. When removing wire rope from fly boom section, push the cable into fly boom. Route wire rope back through holes in the side of the fly boom section.

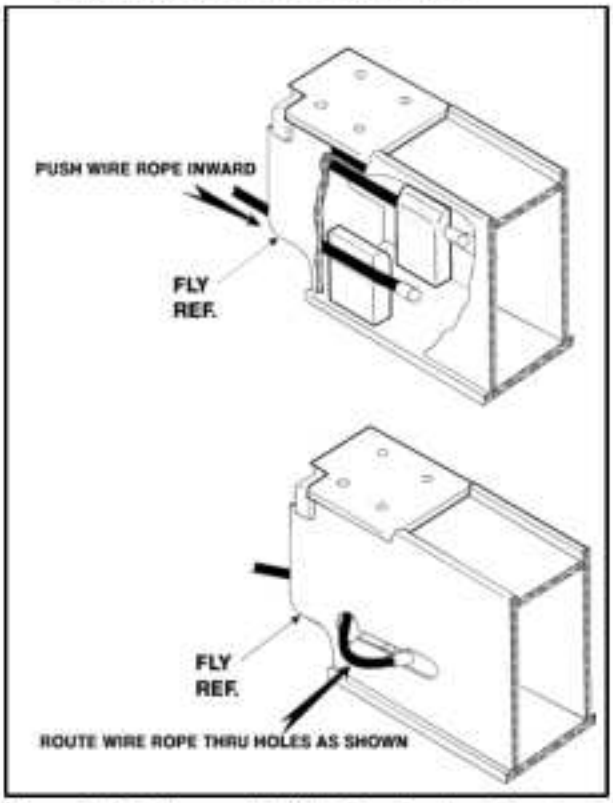


Figure 4-10. Disassembly Wire Rope Routing Procedure

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >


Table 6-9. Diagnostic Trouble Code Chart (DTC)

DTC	Flash Code	Fault Message	Check
6657	66	CANBUS FAILURE - TEMPERATURE SENSOR	The UGM shall set Low Temperature Cutout state = Faulty If the Machine is in Platform Mode and if the Boom is Above Elevation, The UGM shall suspend motion; The UGM shall limit the machine to Creep speed after controls initialized If the Machine is in Platform Mode and if the Boom is not Above Elevation.
671	67	ACCESSORY FAULT	
680	68	<<< TELEMATICS >>>	
681	68	REMOTE CONTRACT MANAGEMENT OVERRIDE - ALL FUNCTIONS IN CREEP	
810	81	<<< TILT SENSOR >>>	
813	81	CHASSIS TILT SENSOR NOT CALIBRATED	
815	81	CHASSIS TILT SENSOR DISAGREEMENT	
816	81	UMS SENSOR NOT CALIBRATED	
817	81	UMS SENSOR FAULT	
820	82	<<< PLATFORM LOAD SENSE >>>	
825	82	LSS HAS NOT BEEN CALIBRATED	UGM to set Platform Load State = Overloaded
826	82	RUNNING AT CREEP - PLATFORM OVERLOADED	
827	82	DRIVE & BOOM PREVENTED - PLATFORM OVERLOADED	
828	82	LIFT UP & TELE OUT PREVENTED - PLATFORM OVERLOADED	
8639	86	FRONT LEFT STEER VALVE - OPEN CIRCUIT	Check Harness for damage.
8640	86	FRONT LEFT STEER VALVE - SHORT TO BATTERY	Check Harness for damage.
8641	86	FRONT LEFT STEER VALVE - SHORT TO GROUND	Check Harness for damage.
8642	86	FRONT RIGHT STEER VALVE - OPEN CIRCUIT	Check Harness for damage.
8643	86	FRONT RIGHT STEER VALVE - SHORT TO BATTERY	Check Harness for damage.
8644	86	FRONT RIGHT STEER VALVE - SHORT TO GROUND	Check Harness for damage.
8645	86	REAR LEFT STEER VALVE - OPEN CIRCUIT	Check Harness for damage.
8646	86	REAR LEFT STEER VALVE - SHORT TO BATTERY	Check Harness for damage.
8647	86	REAR LEFT STEER VALVE - SHORT TO GROUND	Check Harness for damage.
8648	86	REAR RIGHT STEER VALVE - OPEN CIRCUIT	Check Harness for damage.
8649	86	REAR RIGHT STEER VALVE - SHORT TO BATTERY	Check Harness for damage.
8650	86	REAR RIGHT STEER VALVE - SHORT TO GROUND	Check Harness for damage.

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >

5. Slide the poly roller off of the round bar.



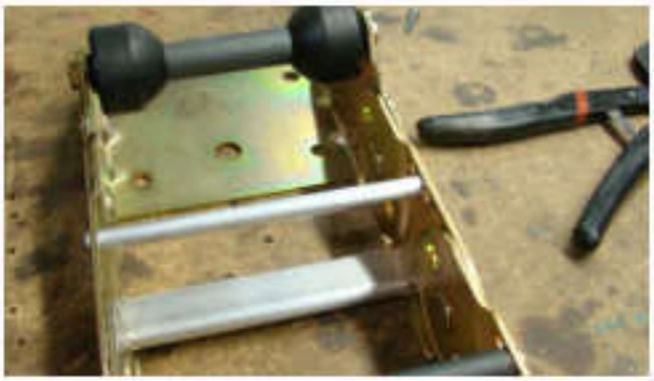


6. Hold the round bar to remove the other screw.



7. Slide the flat bar out.



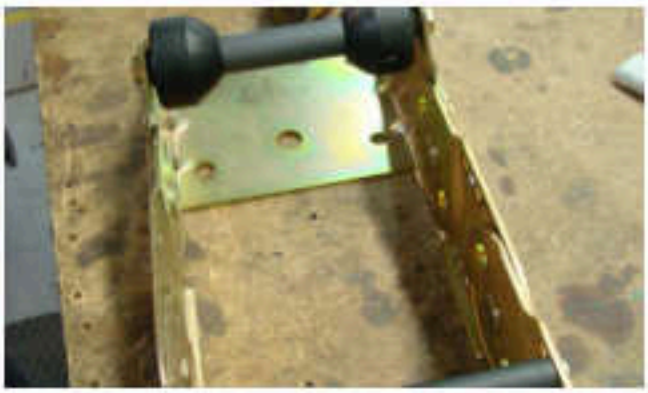

8. Remove the snap ring from one side of the bracket.




9. Remove the snap ring from the other side of the bracket.



MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >

Table 5-10. Bulkhead Fittings (BH) - INCH

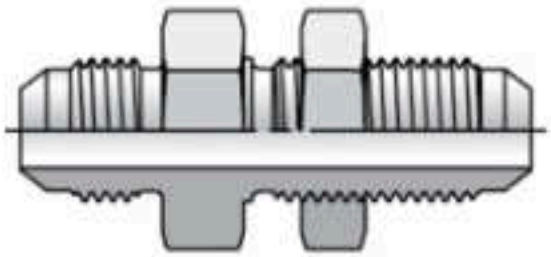

TYPE/FITTING IDENTIFICATION				FASTENING JAM NUT for Bulkhead Connectors					
MATERIAL	TYPE	Dash Size	Thread Size	Torque					
				[Ft-Lb]			[N-m]		
			(UNF)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS	O-RING FACE SEAL (ORFS) BULKHEAD FITTING	4	9/16-18	15	16	17	20	22	23
		6	11/16-16	25	27	28	34	37	38
		8	13/16-16	55	58	61	75	79	83
		10	1-14	85	90	94	115	122	127
		12	13/16-12	135	142	149	183	193	202
		14	15/16-12	170	179	187	230	243	254
		16	17/16-12	200	210	220	271	285	298
		20	1 11/16-12	245	258	270	332	350	366
		24	2-12	270	284	297	366	385	403
	TYPE	Dash Size	Thread Size	Torque					
				[Ft-Lb]			[N-m]		
			(UNF)	Min	Nom	Max	Min	Nom	Max
	37° FLARE (JIC) BULKHEAD FITTING	3	3/8-24	8	9	9	11	12	12
		4	7/16-20	13	14	14	18	19	19
		5	1/2-20	20	21	22	27	28	30
		6	9/16-18	25	27	28	34	37	38
		8	3/4-16	50	53	55	68	72	75
		10	7/8-14	85	90	94	115	122	127
		12	1 1/16-12	135	142	149	183	193	202
		14	1 3/16-12	170	179	187	230	243	254
		16	1 5/16-12	200	210	220	271	285	298
		20	1 5/8-12	245	258	270	332	350	366
		24	1 7/8-12	270	284	297	366	385	403
		32	2 1/2-12	310	326	341	420	442	462

MidWestTech | JLG 800S, 860SJ Boom Lift Service Manual | Publication 31215049 Order the manual at mid-west-tech.com >