An Oshkosh Corporation Company

Service and Maintenance Manual

Model

10MSP

PVC 2002

31215822

February 17, 2020 - Rev B

ANSI

CE

AS/NZS

An Oshkosh Corporation Company

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822

Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 1 - MACHINE SPECIFICATIONS		
1.1	Operating Specifications	1-1
1.2	Electrical Specifications	1-2
1.3	Performance Data	1-2
	Platform Data	1-2
1.4	Serial Number Plate Locations	1-2
1.5	Torque Requirements	1-2
1.6	Cylinder Specifications	1-2
1.7	Lubrication	1-3
	Hydraulic Oil (HO)	1-3
	Lubrication Specifications	1-4
1.8	Thread Locking Compound	1-5
1.9	Torque Charts	1-6
	SAE Fastener Torque Chart	1-6
	Metric Fastener Torque Chart	1-12
SECTION 2 - GENERAL SERVICE INFORMATION		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventative Maintenance	2-1
2.2	Preventive Maintenance and Inspection Schedule	2-2
2.3	Servicing and Maintenance Guidelines	2-5
	General	2-5
	Safety and Workmanship	2-5
	Cleanliness	2-5
	Components Removal and Installation	2-5
	Component Disassembly and Reassembly	2-5
	Pressure-Fit Parts	2-5
	Bearings	2-5
	Gaskets	2-6
	Bolt Usage and Torque Application	2-6
	Hydraulic Lines and Electrical Wiring	2-6
	Hydraulic System	2-6
	Lubrication and Servicing	2-6
	Batteries	2-6
	Mast Chain Inspection Procedure	2-6
2.4	Lubrication Information	2-8
	Hydraulic System	2-8
	Hydraulic Oil	2-8
	Changing Hydraulic Oil	2-8
	Lubrication Specifications	2-8

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.

SECTION 3 - BASE COMPONENTS


3.1 Base Assembly Components 3-1
3.2 Base Frame Covers 3-2
Hood (Carry Deck) 3-2
Hood (Carry Deck) Frame 3-2
Drive Motor Cover 3-3
Rear Bumper Cover 3-3
3.3 Drive And Caster Wheels 3-4
Tire Wear and Damage 3-4
Tire Replacement 3-4
Wheel Replacement 3-4
Wheel Installation 3-4
(Front) Caster Wheel Installation 3-5
3.4 Drive/Elevation Cut-Out Switch Installation 3-5
3.5 Wheel Drive Assembly Servicing 3-6
Roll and Leak Testing 3-6
Oil Type and Capacity 3-6
Drive Motor Brush Wear - Warning Indication 3-7
Wheel Drive Assembly Removal 3-7
Wheel Drive Main Components Disassembly 3-9
Replacing Drive Motor Brushes 3-10
Torque Hub Main Disassembly 3-11
Input Carrier Disassembly 3-12
Hub Disassembly 3-13
Spindle Disassembly 3-14
Spindle Sub-Assembly 3-15
Hub Sub-Assembly 3-16
Input Carrier Sub-Assembly 3-17
Main Torque Hub Sub-Assembly 3-18
Motor, Brake, and Torque Hub Assembly 3-19
3.6 Pump Motor Assembly 3-20
General 3-20
Hydraulic Pressure Settings and Adjustment 3-20
Hydraulic Pressure Gauge Connection 3-21
After Filter Pressure Check 3-21
Pump Motor Assembly Removal 3-22
Pump Motor Assembly Installation 3-22
Motor/Brush Cover Removal 3-23
Brush Carrier Assembly Removal 3-24
Brush Assembly Removal 3-24
Tank Removal 3-24
Filter Screen Removal 3-25
Pump Removal 3-25
Pressure Adjust Valve Removal 3-25
Pressure Check Valve Removal 3-25
3.7 Batteries and Battery Charger 3-26
Battery Condition Testing 3-26
Battery Replacement 3-26
Battery Installation 3-27
Battery Installation (4-6V) 3-27
Battery Charge LED Indicator on Platform Control Console 3-28
Battery Low Voltage Warning Indicators 3-28
Battery Charging Status Indicators 3-29
Battery Charger Maintenance 3-29
Battery Charger Check/Change Charging Algorithm 3-30
Battery Charger Removal/Installation 3-30

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION 4 - CONTROL COMPONENTS		
4.1	Control Components OVERVIEW	4-1
4.2	Control Components Installation	4-2
	Ground Control Module	4-2
	Traction Control Module Installation	4-3
	Platform Control Console Installation	4-3
	Platform Junction Box Installation	4-4
	Junction Box to Ground Control Harness Installation	4-4
	Platform Interlock Switch Circuit	4-5
	Component Electrical Connections	4-6
4.3	Ground Control Module	4-7
	Cover Removal/Installation	4-8
	Power Selector/Emergency Stop Switch Installation	4-9
4.4	Ground Control Module Programming	4-10
	General	4-10
	Programming Levels	4-10
	Activating Programming Mode	4-10
	Entering Password	4-10
	Programming Mode Selection	4-11
	Selecting Programmable Item to Adjust	4-11
	Adjusting Programmable Setting	4-11
	Service Programming Mode - Level 2	4-12
	Operator Programming Mode - Level 3	4-12
4.5	Platform Control Console	4-15
	General	4-15
	Display/Controller Module Electrical Connections	4-16
	Mounting Bracket	4-16
	Rear Cover	4-16
	Display/Controller Module	4-17
	Horn Button Switch	4-17
	Key Switch	4-17
	E-Stop/ShutDown Switch	4-18
	Joystick Assembly	4-18
4.6	Object Detection System (If Equipped)	4-19
	Removal	4-19
	Installation	4-19
SECTION 5 - MAST COMPONENTS		
5.1	Mast Components Overview	5-1
5.2	Mast Cover	5-2
5.3	Platform Assembly	5-2
5.4	7 Foot Height Limit Switch (If Equipped)	5-3
5.5	Manual Material Tray	5-3
5.6	Power Tray Disassembly	5-4
	Covers and Tray Removal	5-4
	Electrical and Hydraulic Components Removal	5-6
	Pulley System Disassembly	5-7
	Power Tray Lift Cylinder	5-9
5.7	Power Tray Installation	5-10
	Pulley System Assembly	5-10
	Electrical and Hydraulic Components Installation	5-12
	Covers and Tray Installation	5-13
5.8	Hydraulic Line Disconnect Tool	5-13
	In-Line Style Fittings	5-14
	Angled-Style Fittings	5-15
5.9	Mast Removal	5-16
	Mast Installation	5-16

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

SECTION 1. MACHINE SPECIFICATIONS

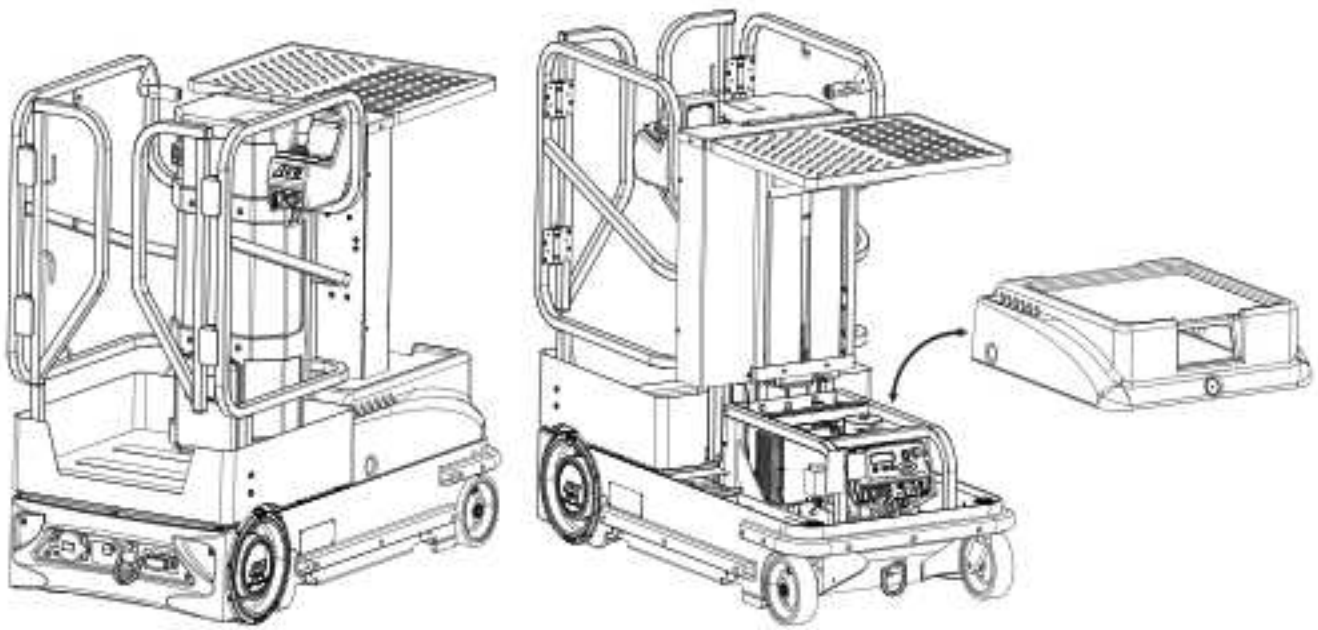

1.1 OPERATING SPECIFICATIONS

SPECIFICATIONS	10MSP
Gross Machine Weight: (Platform Empty)	1260 lb (572 kg)
Machine Height: (Platform Stowed)	57.4 in. (1.45 m)
Maximum Tire Load: (Per Wheel)	710 lb (322 kg)
Machine Ground Clearance:	1.875 in. (47.6 mm)
Machine Turning Radius: (Circle)	65 in. (165 cm)
Tilt Indicator Setting:	1.5°
Maximum Travel Grade (Gradeability): (Platform STOWED ONLY)	15% (8.5°)
Maximum Travel Grade (Side Slope): (Platform STOWED ONLY)	5°
Machine Base-Overall: (Width x Length)	29.5 in. x 60 in. (75 cm x 152 cm)
***Maximum Drive Speeds:** (Operator Variable)	5 mph (8 kph/h)
Maximum Operating Wind Speed:	
(For indoor use only) ANSI/CSA:	0 mph (0 m/s)
(For indoor use only) CE/AUS:	0 mph (0 m/s)

Maximum Horizontal Manual Side Force: (Platform fully extended with Maximum load)	
ANSI/CSA:	200 N (45 lbs)
CE/AUS/IPN:	200 N (45 lbs)
Maximum Hydraulic System Pressure: (Recommended initial setting)	1800 PSI (124 Bars)
Hydraulic System Capacity:	5 qts U.S. (4.7 L)
Hydraulic Reservoir Capacity:	1 gal (3.78 L)
Machine Component Weight:	
Platform Weight:	75 lb (34 kg)
Battery: (per battery):	6V - 64 lb (29 kg)
Front Hood:	12 lb (5.4 kg)

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

SECTION 6. Troubleshooting

6.1 GENERAL

This section contains troubleshooting information to be used for locating and correcting most operating problems. If a problem should develop which is not presented in this section or which is not corrected by listed corrective actions, technically qualified guidance should be obtained before proceeding with any maintenance.

NOTICE

IT IS GOOD PRACTICE TO AVOID PRESSURE-WASHING ELECTRICAL/ELECTRONIC COMPONENTS. IN THE EVENT PRESSURE-WASHING THE MACHINE IS NEEDED, ENSURE THE MACHINE IS SHUT DOWN BEFORE PRESSURE-WASHING. SHOULD PRESSURE WASHING BE UTILIZED TO WASH AREAS CONTAINING ELECTRICAL/ELECTRONIC COMPONENTS, JLG INDUSTRIES, INC. RECOMMENDS A MAXIMUM PRESSURE OF 750 PSI (52 BAR) AT A MINIMUM DISTANCE OF 12 INCHES (30.5 CM) AWAY FROM THESE COMPONENTS. IF ELECTRICAL/ELECTRONIC COMPONENTS ARE SPRAYED, SPRAYING MUST NOT BE DIRECT AND BE FOR BRIEF TIME PERIODS TO AVOID HEAVY SATURATION.

6.2 TROUBLESHOOTING INFORMATION

Troubleshooting procedures applicable to this machine are listed and defined starting with Section 6.8 in this section of the manual.

Each malfunction within an individual group or system is followed by a listing of probable causes which will enable determination of the applicable remedial action. The probable causes and the remedial action should, where possible, be checked in the order listed in the troubleshooting tables.

It should be noted that there is no substitute for a thorough knowledge of the equipment and related systems.

It should be recognized that the majority of the problems arising in the machine will be centered in the hydraulic and electrical systems. For this reason, every effort has been made to ensure that all likely problems in these areas are given the fullest possible treatment. In the remaining machine groups, only those problems which are symptomatic of greater problems which have more than one probable cause and remedy are included. This means that problems for which the probable cause and remedy may be immediately obvious are not listed in this section.

The first rule for troubleshooting any circuit that is hydraulically operated and electrically controlled is to determine if the circuit is lacking hydraulic oil and electrical control power. This can be ascertained by overriding the bypass valve (mechanically or electrically) so that oil is available to the function valve, then overriding the function valve mechanically. If the function performs satisfactorily, the problem exists with the control circuit.

6.3 HYDRAULIC CIRCUIT CHECKS

The first reference for improper function of a hydraulic system, where the cause is not immediately apparent, should be the Hydraulic Diagram Circuit. The best place to begin the problem analysis is at the power source (pump). Once it is determined that the pump is serviceable, then a systematic check of the circuit components, would follow.

NOTE: *For aid in troubleshooting hydraulic circuits, refer to Figure 6-13.*

6.4 ELECTRICAL CIRCUIT CHECKS

General

The drive system on the machines requires a microprocessor controlled electrical circuit to operate smoothly and accurately. All platform control console functions are relayed to various machine components (i.e. platform up/down, drive functions, etc.) through the Ground Control Module microprocessor box (mounted under the front hood). The Ground Control Module is pre-programmed with factory pre-set personality settings for each machine function.

To help diagnose any problems with components plugged into the Ground Control Module, the module is designed with an internal fault code and text messaging system displayed on an LCD screen at the module. The platform control console also will display LED Flash Codes using the Battery Charge/LED strip on the console. When operating normally the LED panel on the platform control console indicates the battery voltage status using ten LEDs (red/yellow/green). If a malfunction to the machine's electrical components occurs, the platform console LED's will flash a number of LEDs to help indicate the problem to the Operator in the platform. The Fault Codes and LED Flash Codes are outlined in the following sub-sections of this chapter.

NOTE: *For aid in troubleshooting electrical problem, refer to the appropriate electrical schematic at the end of this section.*

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

Code 19 - Alarm - Disconnected

Check for These Obvious Conditions First:

- Damaged wiring in the alarm wiring harness or a damaged alarm.
- Activate a function to check if alarm beeps.

Table 6-21. Code 19 - Alarm - Disconnected

STEP	ACTION	SPEC	YES	NO
1.	Check voltage at the P1 connector on the Ground Control Module between pin-13 and pin-6. Is reading within specification?	2 - 4V DC	Replace Ground Control Module	Go to Step 2
2.	Remove the wire terminals at the alarm, check continuity of each of the wires from pins 13 and 6 on the P1 connector to the alarm end.	—	Replace the Alarm	Repair or Replace Wiring

Code 20 - Beacon - Short Circuit

Check for These Obvious Conditions First:

- Damaged wiring in the beacon wiring harness or a damaged beacon unit.

Table 6-22. Code 20 - Beacon - Short Circuit

STEP	ACTION	SPEC	YES	NO
1.	At the Ground Control Module, P1 connector, check the voltage across pins-12 and 5 to the beacon. Is reading within specification?	0 - 2V DC	Go to Step 2	Replace Ground Control Module
2.	Remove the wire terminals at the beacon, check continuity of each of the wires from pins 12 and 5 on the P1 connector to the beacon end.	—	Replace the Beacon	Repair or Replace Wiring

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

SAE Fastener Torque Chart (Continued)

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)										
SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS*										
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263) K=0.20		Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.18		Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15	
		In	Sq In	LB	IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]
4	40	0.1120	0.00604							
	48	0.1120	0.00661							
6	32	0.1380	0.00909							
	40	0.1380	0.01015							
8	32	0.1640	0.01400							
	36	0.1640	0.01474	1320	43	5				
10	24	0.1900	0.01750	1580	60	7				
	32	0.1900	0.02000	1800	68	8				
1/4	20	0.2500	0.0318	2860	143	16	129	15		
	28	0.2500	0.0364	3280	164	19	148	17		
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]
5/16	18	0.3125	0.0524	4720	25	35	20	25	20	25
	24	0.3125	0.0580	5220	25	35	25	35	20	25
3/8	16	0.3750	0.0775	7000	45	60	40	55	35	50
	24	0.3750	0.0878	7900	50	70	45	60	35	50
7/16	14	0.4375	0.1063	9550	70	95	65	90	50	70
	20	0.4375	0.1187	10700	80	110	70	95	60	80
1/2	13	0.5000	0.1419	12750	105	145	95	130	80	110
	20	0.5000	0.1599	14400	120	165	110	150	90	120
9/16	12	0.5625	0.1820	16400	155	210	140	190	115	155
	18	0.5625	0.2030	18250	170	230	155	210	130	175
5/8	11	0.6250	0.2260	20350	210	285	190	260	160	220
	18	0.6250	0.2560	23000	240	325	215	290	180	245
3/4	10	0.7500	0.3340	30100	375	510	340	460	280	380
	16	0.7500	0.3730	33600	420	570	380	515	315	430
7/8	9	0.8750	0.4620	41600	605	825	545	740	455	620
	14	0.8750	0.5090	45800	670	910	600	815	500	680
1	8	1.0000	0.6060	51500	860	1170	770	1045	645	875
	12	1.0000	0.6630	59700	995	1355	895	1215	745	1015
1 1/8	7	1.1250	0.7630	68700	1290	1755	1160	1580	965	1310
	12	1.1250	0.8560	77000	1445	1965	1300	1770	1085	1475
1 1/4	7	1.2500	0.9690	87200	1815	2470	1635	2225	1365	1855
	12	1.2500	1.0730	96600	2015	2740	1810	2460	1510	2055
1 3/8	6	1.3750	1.1550	104000	2385	3245	2145	2915	1785	2430
	12	1.3750	1.3150	118100	2705	3680	2435	3310	2030	2760
1 1/2	6	1.5000	1.4050	126500	3165	4305	2845	3870	2370	3225
	12	1.5000	1.5800	142200	3555	4835	3200	4350	2665	3625

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS 500005 9K

2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%

3. * ASSEMBLY USES HARDENED WASHER

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >

Metric Fastener Torque Chart (Continued)

Values for Magni Coated Fasteners (Ref 4150701)*						
CLASS 10.9 METRIC (HEX HEAD) BOLTS CLASS 10 METRIC NUTS, CLASS 12.9 SOCKET HEAD CAPSCREWS M6 AND ABOVE*						
Size	Pitch	Tensile Stress Area	Clamp Load See Note 4	Torque (Dry or Loctite® 263™) K=0.17	Torque (Lube or Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.18	Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15
		Sq mm	KN	[N.m]	[N.m]	[N.m]
3	0.5	5.03	3.13			
3.5	0.6	6.78	4.22			
4	0.7	8.78	5.47			
5	0.8	14.20	8.85			
6	1	20.10	12.5	13	12	11
7	1	28.90	18.0	21	20	19
8	1.25	36.60	22.8	31	29	27
10	1.5	58.00	36.1	61	58	55
12	1.75	84.30	52.5	105	100	95
14	2	115	71.6	170	160	150
16	2	157	97.8	265	250	235
18	2.5	192	119.5	365	345	325
20	2.5	245	152.5	520	490	460
22	2.5	303	189.0	705	665	625
24	3	353	222.0	905	850	800
27	3	459	286.0	1315	1235	1160
30	3.5	561	349.5	1780	1680	1575
33	3.5	694	432.5	2425	2285	2140
36	4	817	509.0	3115	2930	2750
42	4.5	1120	698.0	4985	4690	4395

NOTES:

1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS

5000059K

2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER
4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

MidWestTech | JLG 10MSP Vertical Mast Service Manual | Publication 31215822 Order the manual at mid-west-tech.com >