An Oshkosh Corporation Company

Service and Maintenance Manual

Model
600SC
660SJC

S/N *0300174703*
to Present


P/N - 3121607

November 8, 2016

ANSI

CE

AS/NZS

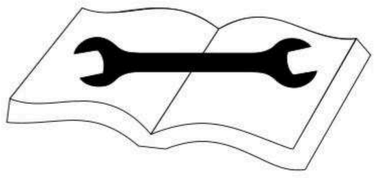

Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION H - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 1 - SPECIFICATIONS		
1.1	Operating Specifications	1-1
1.2	Dimensional Data	1-1
1.3	Capacities	1-1
1.4	Engine Data	1-1
1.5	Function Speeds	1-2
	Machine Orientation When Doing Speed Tests	1-2
	Test Notes	1-2
1.6	Torque Requirements	1-2
1.7	Hydraulic Oil	1-3
1.8	Major Component Weights	1-4
1.9	Operator Maintenance	1-5
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventive Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-3
	Pressure-Fit Parts	2-3
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-3
	Battery	2-3
	Lubrication and Servicing	2-3
2.3	Lubrication and Information	2-4
	Hydraulic System	2-4
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4
2.4	Cylinder Drift Test	2-4
	Platform Drift	2-4
	Cylinder Drift	2-4
2.5	Pins and Composite Bearing Repair Guidelines	2-5
2.6	Welding on JLG Equipment	2-5
	Do the Following When Welding on JLG Equipment:	2-5
	Do NOT Do the Following When Welding on JLG Equipment:	2-5

MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >

SECTION NO. **TITLE** **PAGE NO.**

SECTION 3 - CHASSIS & TURNTABLE

3.1 Chassis Components and Servicing 3-1
Service Notes 3-2
Track and Chain 3-4
Replace Track 3-5
Track tensioning 3-6
Rubber Track Pad Installation 3-6
Rollers 3-9
Idler Roller Assembly 3-10
3.2 Drive Motor 3-13
Disassembly 3-16
Assembly 3-18
Install Motor Assembly 3-19
Rotary Coupling 3-20
3.3 Swing Drive 3-24
Gear Backlash 3-26
Swing Drive Lubrication 3-26
Motor Control Valve Disassembly 3-26
Motor and Brake Disassembly 3-27
Main Disassembly 3-28
Hub-Shaft Disassembly 3-28
Carrier Disassembly 3-29
Hub-Shaft Subassembly 3-30
Carrier Subassembly 3-31
Main Assembly 3-32
Motor and Brake Assembly 3-33
Motor Control Valve Assembly 3-33
3.4 Swing Bearing 3-34
Turntable Bearing Mounting Bolt Condition Check 3-34
Wear Tolerance 3-34
Swing Bearing Replacement 3-36
Swing Bearing Torque Values 3-37
See Figure 3-34. Swing Bearing Torque Sequence 3-37
3.5 Generator 3-38
Every 250 hours 3-38
Every 500 hours 3-38
Overload Protection 3-39
Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings 3-39
3.6 Deutz D2.9 L4 Engine 3-41
Check Oil Level 3-43
Change Engine Oil 3-43
Change Oil Filter 3-44
Change Fuel Filters 3-44
3.7 Deutz D2011 Engine 3-45
Checking Oil Level 3-49
Changing Engine Oil 3-49
Changing Oil Filter 3-50
Replace Fuel Filter 3-50
Clean Fuel Strainer 3-51
3.8 Spark Arrester Cleaning Instructions 3-51
3.9 Glow Plugs 3-51
3.10 Deutz EMR 2 3-52
3.11 Bio Fuel in Deutz Engines 3-64
General 3-64
Bio Fuel 3-64
Biological Contamination In Fuels 3-65

MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION 4 - BOOM & PLATFORM		
4.1	Boom Systems	4-1
	Removal	4-1
4.2	Wear Pads	4-2
4.3	Boom Disassembly/Assembly & Cable Replacement	4-3
	Boom Section Disassembly	4-3
4.4	Wire Rope	4-4
	Inspection	4-4
	Three Month Inspection	4-4
	12 Year or 7000 Hour Replacement	4-4
	Additional Replacement Criteria	4-4
4.5	Wire Rope Tensioning Adjustment	4-5
	Wire Rope Tensioning Procedure	4-5
	Inspection	4-9
	Assembly	4-10
	Installation	4-13
4.6	Articulating Jib Boom	4-14
	Removal	4-14
	Disassembly	4-14
	Inspection	4-14
	Assembly	4-15
4.7	Limit Switches and Cam Valve Adjustment	4-15
4.8	Boom Cleanliness Guidelines	4-15
4.9	Rotary Actuator	4-18
	Theory of Operation	4-18
	Required Tools	4-18
	Disassembly	4-21
	Inspection	4-25
	Assembly	4-26
	Installing Counterbalance Valve	4-30
	Testing Actuator	4-31
	Testing Actuator for Internal LeakS	4-31
	Installation and Bleeding	4-31
	Troubleshooting	4-32
4.10	Foot Switch Adjustment	4-33
4.11	Platform	4-33
	Platform Support Torque Settings	4-33
	Replace Platform Sections	4-33
4.12	Powertrack Maintenance	4-34
	Remove Link	4-34
	Install New Link	4-37
	Replace Fixed End Brackets	4-40
	Replace Moving End Brackets	4-41
SECTION 5 - HYDRAULICS		
5.1	O-Ring Lubrication	5-1
	Cup and Brush	5-1
	Dip	5-2
	Spray	5-2
	Brush-On	5-2
5.2	Cylinders - Theory of Operation	5-3
	Systems With Double Acting Cylinders	5-3
	Systems With Holding Valves	5-3
5.3	Cylinder Checking Procedure	5-3
	Cylinders Without Counterbalance Valves - Master Cylinder and Steer Cylinder	5-3
	Cylinders With Single Counterbalance Valve	5-4
	Cylinders With Dual Counterbalance Valves	5-4

MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >

1.7 HYDRAULIC OIL

Table 1-6. Hydraulic Oil

Hydraulic System Operating Temperature Range	S.A.E. Viscosity Grade
+0° to + 180° F (-18° to +83° C)	10W
+0° to + 210° F (-18° to +99° C)	10W-20, 10W30
+50° to + 210° F (+10° to +99° C	20W-20

NOTE: *Hydraulic oils require anti-wear qualities at least API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service.*

NOTE: *Aside from JLG recommendations, it is not advisable to mix oils of different brands or types. They may not contain required additives or be of comparable viscosities. If hydraulic oil other than Mobil 424 is desired, contact JLG Industries for proper recommendations.*

Table 1-7. Mobilfluid 424

SAE Grade	10W30
Gravity, API	29.0
Density, Lb/Gal. 60°F	7.35
Pour Point, Max	-46°F (-43°C)
Flash Point, Min.	442°F (228°C)
Viscosity	
Brookfield, cP at -18°C	2700
at 40° C	55 cSt
at 100° C	9.3 cSt
Viscosity Index	152

Table 1-8. Mobil DTE 13M

ISO Viscosity Grade	#32
Specific Gravity	0.877
Pour Point, Max	-40°F (-40°C)
Flash Point, Min.	330°F (166°C)
Viscosity	
at 40° C	33cSt
at 100° C	6.6 cSt
at 100° F	169 SUS
at 210° F	48 SUS
cp at -20° F	6,200
Viscosity Index	140

Table 1-9. UCon Hydrolube HP-5046

Type	Synthetic Biodegradable
Specific Gravity	1.082
Pour Point, Max	-58°F (-50°C)
pH	9.1
Viscosity	
at 0° C (32° F)	340 cSt (1600SUS)
at 40° C (104° F)	46 cSt (215SUS)
at 65° C (150° F)	22 cSt (106SUS)
Viscosity Index	170

MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >

Biological Contamination In Fuels

SYMPTOMS

The following symptoms may indicate a fuel tank is contaminated by micro-organisms:

- Internal tank corrosion,
- Filter blockage and associated loss of power due to gel-like deposits on the fuel filter (especially after long standstills)

CAUSE

Micro-organisms (bacteria, yeasts, funguses) can form bio-sludge under unfavorable conditions (favoured particularly by heat and water).

Penetration by water is usually caused by condensation of water in the air. Water does not dissolve in fuel so penetrating water collects at bottom of the tank. Bacteria and funguses grow in the watery phase, at phase boundary to the fuel phase, from which they draw their nutrition. There is an increased risk especially with bio-diesel (FAME).

PREVENTIVE MEASURES

- Keep storage tank clean. Perform regular cleaning of the tank by specialist companies
- Installation of fuel pre-filters with water traps, especially in countries with frequently fluctuating fuel qualities and high percentage of water.

If the fuel system and storage tank have already been attacked by micro-organisms. Biocide must be dosed according to the manufacturer's specifications.

- Avoid direct exposure of the storage tank to sunlight
- Use smaller storage tanks with corresponding low dwell times of the stored fuel

FUEL ADDITIVES

The use of fuel additives is not permitted. The flow improvers mentioned above are an exception. Use of unsuitable additives will result in loss of warranty.

MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >


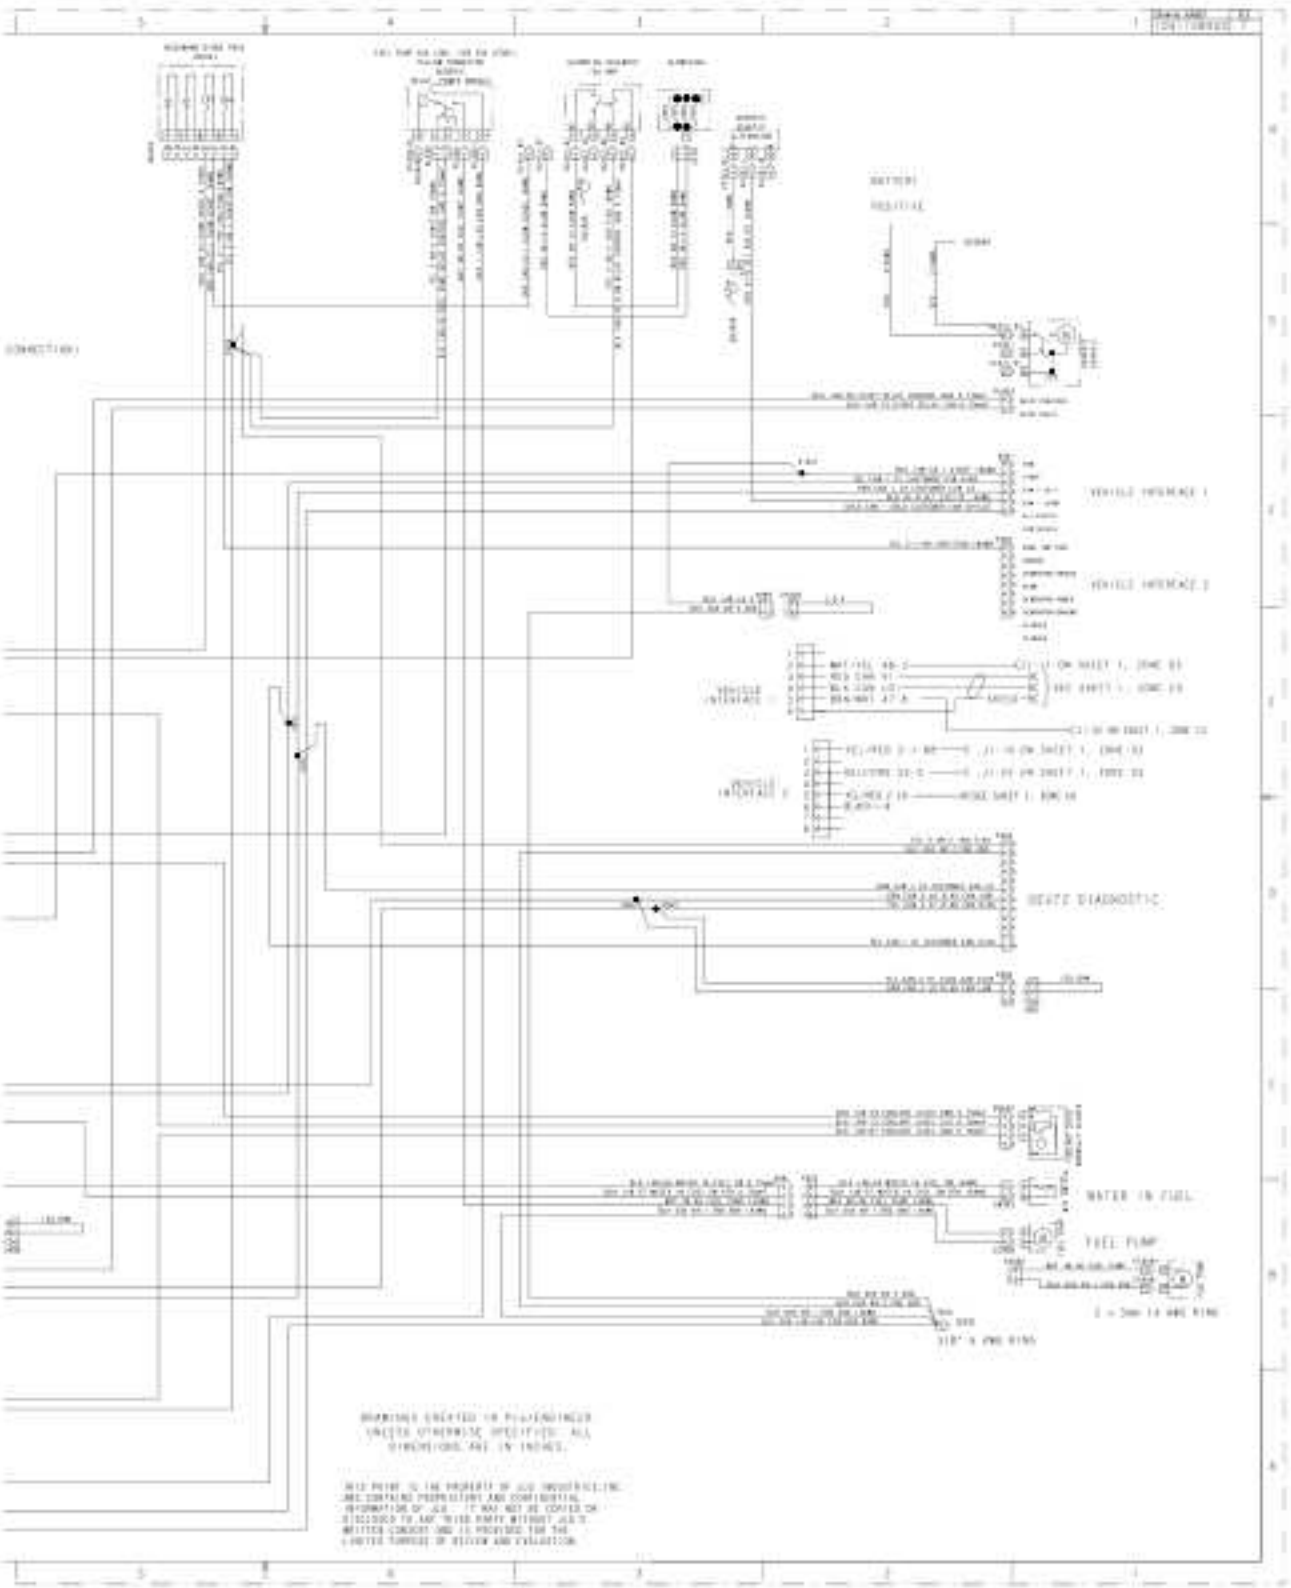


Figure 7-33. Deutz Engine Harness Electrical Schematic 2 of 2


MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >

4. Pull moving end over track so new connection is positioned in curve of powertrack. Round half-shears will rotate into cut-outs.



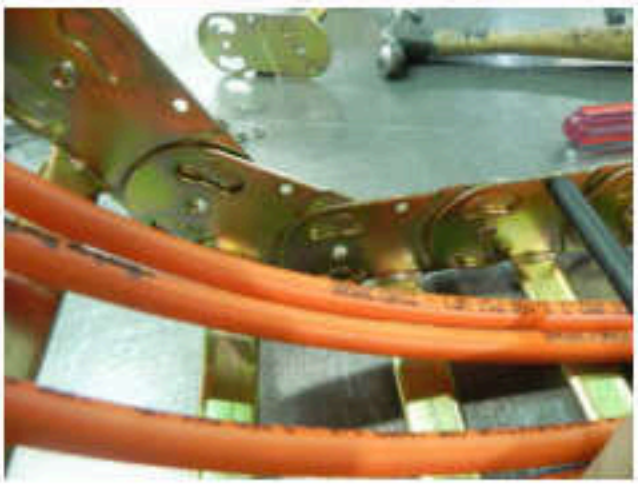

5. Parts shown below connect new link to powertrack.

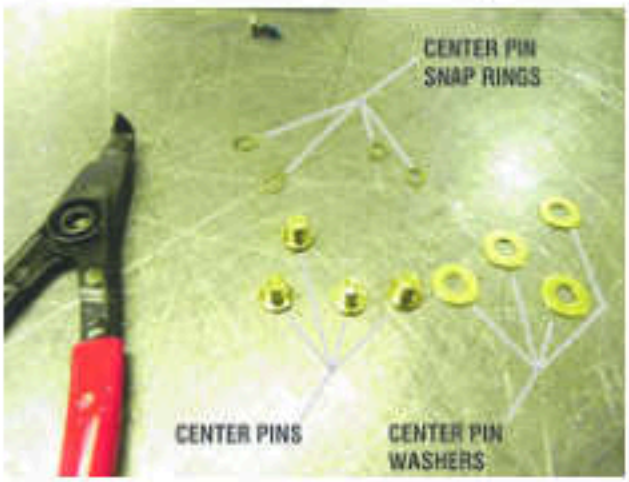

6. Push pin through center hole. Slide washer on pin.





7. Install snap ring in groove on pin. Repeat pin installation steps for all center holes with rivets removed.



MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >

AMP Mate-N-Lok

Follow manufacturer installation instructions.

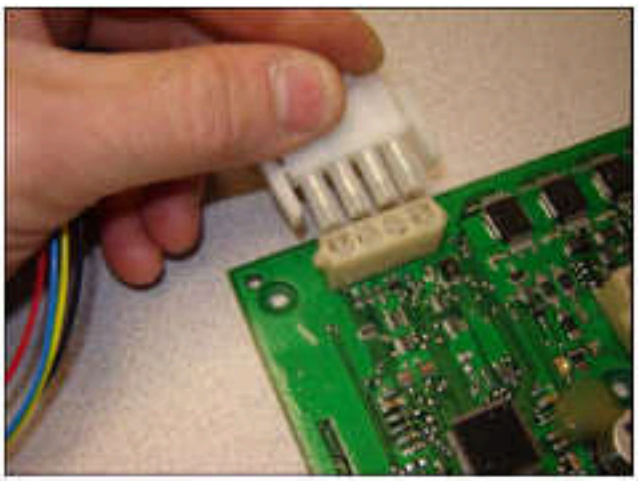


Figure 7-9. AMP Mate-N-Lok Connector

DIN Connectors

This connector is typically used on hydraulic valves. Follow manufacturer installation instructions.



Figure 7-10. DIN Connector

Exclusions

Some connectors do not require or may be permanently damaged by application of dielectric grease. Dielectric grease may not be required in properly sealed enclosures.

NOTICE

DO NOT USE DIELECTRIC GREASE ON BRAD HARRISON/PHOENIX CONTACT M12 OR AMP JUNIOR TIMER CONNECTORS. LOW-FORCE CONTACTS CANNOT DISPLACE DIELECTRIC GREASE AND CREATE ELECTRICAL CONTACT.

BRAD HARRISON/PHOENIX CONTACT M12

This connector uses gold contact material to resist corrosion and an O-ring seal for moisture integrity. Low-force contacts cannot displace dielectric grease to achieve electrical contact. Once contaminated, replacement of female contacts is required. The JLG Load Sensing System and 1250AJP Rotary Angle Sensors are examples of components with the M12 connector system.



Figure 7-11. Brad Harrison/Phoenix Connectors

AMP JUNIOR TIMER

This type of connector uses back-seals to keep out moisture. Low-force contacts cannot displace dielectric grease and create electrical contact. Use solvents (i.e. contact cleaner or mineral spirits) to remove dielectric grease. The Deutz EMR2 engine control module uses this connector.



Figure 7-12. AMP Junior Timer

MidWestTech | JLG 600SC, 660SJC Boom Lift Service Manual | Publication 3121607 Order the manual at mid-west-tech.com >