An Oshkosh Corporation Company

Service and Maintenance Manual

Model

1500AJP

PVC 2007


31217412

July 02, 2020 - Rev A

ANSI

CE

AS/NZS

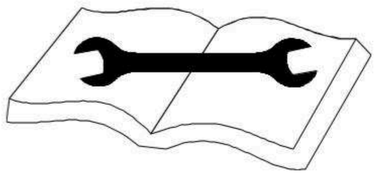

Order the manual at mid-west-tech.com >

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 2 - SPECIFICATIONS		
2.1	Operating Specifications	1-1
	Machine Specifications	1-1
2.2	Dimensional Data	1-1
	Machine Dimensional Data	1-1
2.3	Capacities	1-1
2.4	Tires	1-2
2.5	Engine Data	1-2
2.6	Major Component Weights	1-2
2.7	Hydraulic Oil	1-2
2.8	Maintenance and Lubrication	1-5
2.9	ThreadLocking Compound	1-10
2.10	Torque Charts	1-11
	SAE Fastener Torque Chart	1-11
	Metric Fastener Torque Chart	1-17
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventive Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-3
	Pressure-Fit Parts	2-3
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-4
	Battery	2-4
	Lubrication and Servicing	2-4
2.3	Lubrication and Information	2-4
	Hydraulic System	2-4
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4
2.4	Cylinder Drift	2-5
	Theory	2-5
	Cylinder Leakage Test	2-5
	Cylinder Thermal Drift	2-5
2.5	Pins and Composite Bearing Repair Guidelines	2-6
2.6	Welding on JLG Equipment	2-6
	Do the Following When Welding on JLG Equipment	2-6
	Do NOT Do the Following When Welding on JLG Equipment	2-6

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >

SECTION NO. **TITLE** **PAGE NO.**

SECTION 3 - CHASSIS & TURNTABLE


3.1 Tires and Wheels 3-1
Tire Damage 3-1
Wheel Replacement 3-1
Tire Replacement 3-1
Wheel Installation 3-1
3.2 Axle Extension System 3-2
3.3 Drive Orientation System 3-2
3.4 Steering Control System 3-3
3.5 Drive/Steering Speed Control 3-4
3.6 Drive/Steer - Boom Function Interlock System (CE Only) 3-4
3.7 Traction Control System 3-4
3.8 Chassis Tilt Indicator System 3-8
Tilt Sensor Settings 3-8
3.9 Auxiliary Power System 3-8
When Commanding Tower Boom 3-8
When Commanding Main Boom 3-8
Envelope Control System Operation 3-8
3.10 Swing Speed Proportioning 3-8
3.11 Drive Hub 3-16
3.12 Disassembly 3-17
Assembly 3-20
3.13 Free Wheeling Option 3-24
Disengage Drive Motors & Brakes for Towing, etc. (Free Wheel) 3-24
Engage Drive Motors & Brakes (Normal Operation) 3-24
3.14 Gear Hub Oil Service 3-24
Check Oil Level 3-24
Change Gear Hub Oil 3-24
3.15 Drive Motor 3-26
Description 3-26
Shaft Seal Replacement 3-26
Loop Flushing Valve 3-27
Troubleshooting 3-28
Initial Start-up 3-29
3.16 Swing Drive Hub 3-42
Removal 3-42
Assembly/Disassembly 3-42
Installation 3-42
3.17 Swing Drive 3-43
3.18 Swing Brake 3-46
3.19 Setting Swing Gear Backlash 3-47
Turntable Bearing Mounting Bolt Condition Check 3-48
3.20 Swing Bearing Wear Tolerance 3-49
3.21 Generator 3-55
Description 3-55
Generator Output 3-55
Generator Rating 3-56
Safety Precautions 3-56
Preparation and Inspection 3-56
Operation 3-56
Service and Maintenance 3-56
Maintenance Schedule 3-56
Overload Protection 3-57
Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings 3-58
Troubleshooting 3-59
Generator Disassembly and Assembly 3-60
Lead Connection List for Generator 3-68

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >


SECTION NO.	TITLE	PAGE NO.
3.22	Fuel level Cutout System	3-69
3.23	Water in Fuel Sensing System (Optional)	3-69
3.24	Deutz Turbocharger Operation	3-69
	Operating Practices	3-69
3.25	Diesel Exhaust Fluid (DEF) Tank	3-83
	Cleaning and Flushing the Tank	3-83
3.26	Generator Pulley	3-88
	Removal	3-88
	Installation	3-88
3.27	Deutz Engine with Diesel Exhaust Fluid (DEF)	3-89
	Engine Oil	3-89
	Diesel Fuel	3-89
3.28	Selective Catalytic Reduction (SCR) - Machines Using Diesel Exhaust Fluid (DEF)	3-90
	Standstill Cleaning	3-90
	Maintenance Standstill Cleaning Initiation Methods	3-91
	Cancelling Maintenance Standstill	3-91
	Unsuccessful Cleaning Event	3-91
3.29	Engine Fault Codes	3-93
SECTION 4 - BOOM & PLATFORM		
4.1	Boom Systems	4-1
	Wire Rope Service Indicator	4-1
	Platform Control Enable System	4-1
	Platform Load Sensing System	4-1
	Jib Lift End Of Stroke Dampening	4-1
	Transport Position Sensing System	4-1
	Beyond Transport - Drive Speed Cutback System	4-2
	Jib Stow System	4-2
	Envelope Control System	4-2
	Tower Path Control System	4-3
	Automatic Main Boom Control System	4-3
	Main Boom Controlled Arc System	4-3
	Controlled Boom Angle System	4-4
	Main Boom Control Select	4-4
	Slow Down System	4-4
	Dual Capacity System	4-5
4.2	Platform	4-11
	Platform Valve Removal	4-11
	Platform Valve Installation	4-11
	Support Removal	4-12
	Support Installation	4-13
4.3	Rotator	4-15
	Removal	4-15
	Installation	4-15
4.4	Boom Maintenance	4-16
	Tower and Main Boom Removal	4-16
	Main Boom Disassembly	4-36
	Main Boom Assembly	4-38
	Tower Boom and Main Boom Installation	4-44
4.5	Lift Cylinder	4-51
	Removal	4-51
4.6	Break-In Lubrication	4-53
	Main Boom	4-53
	Tower Boom	4-53
4.7	Boom Cleanliness Guidelines	4-53
4.8	Shimming Procedure for the Main Boom	4-54

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >


9. Install Spring (35) and Coupling (34).

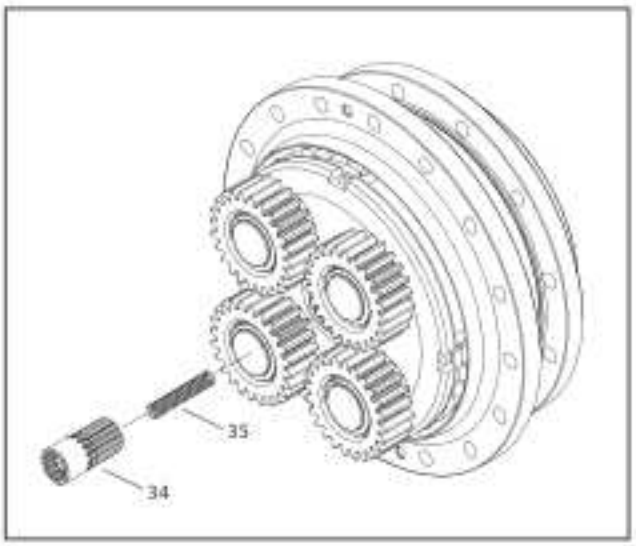


10. Install O-Ring (26). Install Planetary Ring (18) with two Screws (19). Torque Screws to 36.8 ft-lb (50 Nm).

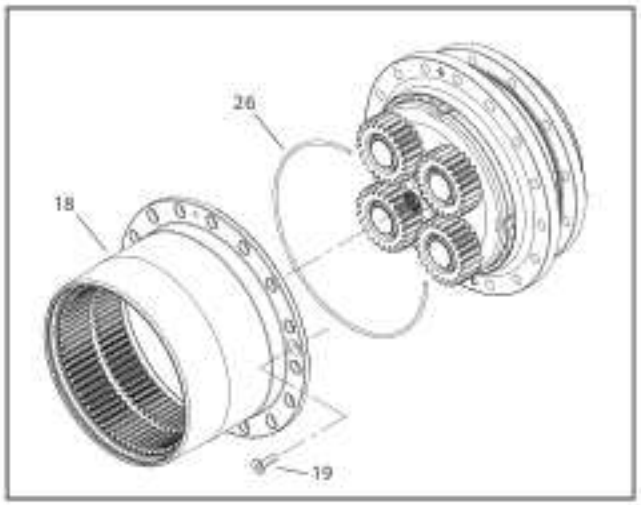

11. Install Gear Reduction Assembly (16), Gear Reduction Assembly (13), and Pinion (11) in Planetary Housing. Lubricate all bearings.

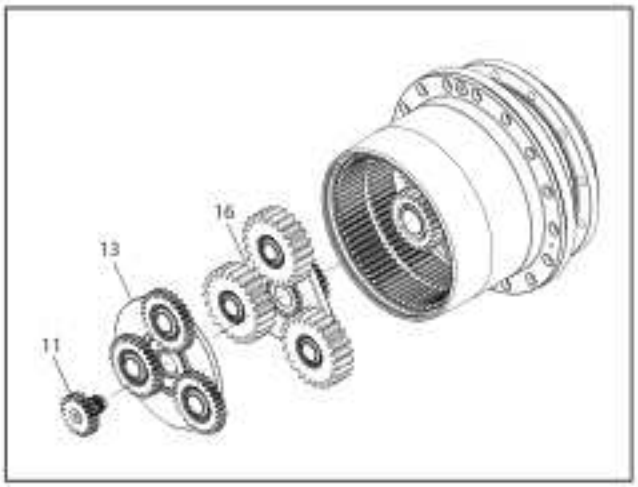

12. Install O-Ring (7) and O-Ring (10) in Cover (6). Liberally coat Spacer (8) with grease and center on hole at center of Cover. Install Cover on Planetary Ring Assembly (18) and secure with Ring (1). Replace Gasket (4) as needed.

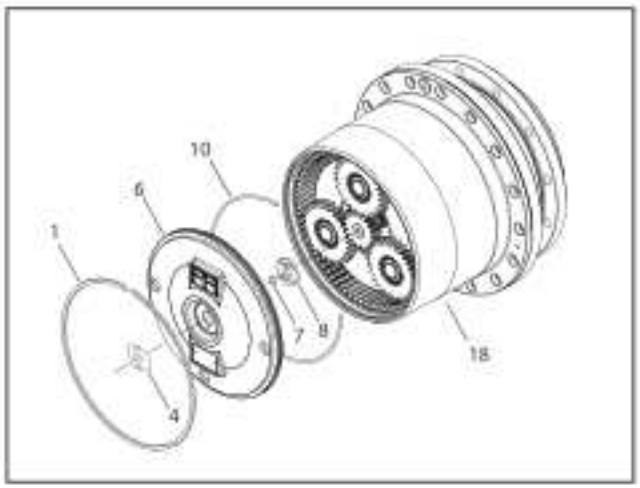

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >

Specifications

Table 4-3. Specifications with SkyGlazier™ Installed

Total Platform Capacity* - 272kg/600lbs capacity zone w/tray installed (ANSI Specs) - 270kg/600lbs capacity zone w/tray installed (CE Spec)	181kg/ 400 lb
Total Platform Capacity* - 454kg/ 1000 lbs capacity zone w/tray installed (ANSI Spec) - 450kg/ 1000 lbs capacity zone w/tray installed (CE Spec)	340kg/ 750 lb
Platform Size	0.914m x 2.43m/ 36in. x 96in.
Required Platform Type	Side Entry
Max. Tray Capacity in 270 kg / 600lbs capacity zone (ANSI Spec) - 230kg / 500lbs capacity zone (CE Spec)	68kg/ 150 lb
Max. Tray Capacity in 454kg / 1000 lbs capacity zone (ANSI Spec) - 450kg / 1000 lbs capacity zone (CE Spec)	113kg/ 250 lb
Max. Dimensions of panel	3 m^2 / 32 sq ft

* Total Platform Capacity is defined as platform capacity + tray capacity.

⚠ WARNING

****INSTALLING OR REMOVING APPROVED ACCESSORIES OR CHANGING PLATFORM SIZE REQUIRES RECALIBRATION OF THE BOOM CONTROL SYSTEM.**

Safety Precautions

GENERAL

NOTE: *Read and understand the Operation Manual. Ensure load is secured with load strap.*

⚠ WARNING

DO NOT OVERLOAD TRAY OR PLATFORM. TOTAL MACHINE CAPACITY IS REDUCED WHEN TRAY IS INSTALLED.

⚠ WARNING

WITH THE SKYGLAZIER INSTALLED, THE ORIGINAL PLATFORM CAPACITY RATINGS ARE REDUCED AS SPECIFIED IN TABLE 4-3, SPECIFICATIONS WITH SKYGLAZIER™ INSTALLED. DO NOT EXCEED THE NEW PLATFORM CAPACITY RATING. REFER TO CAPACITY DECAL LOCATED ON TRAY.

⚠ DANGER

AN INCREASE OF THE AREA EXPOSED TO THE WIND WILL DECREASE STABILITY. LIMIT PANEL AREA TO 32 SQ.FT. (3 SQ.M)

1. Make sure no personnel are beneath platform.
2. Do not exit platform over rails or stand on rails.
3. Only use this option as specified.
4. Remove tray when not in use.

Preparation and Inspection

1. Check for cracked welds and damage to tray. Make sure tray is properly secured to platform.
2. Check to ensure strap is not torn or frayed.

Operation

Load SkyGlazier™ with panel and secure with strap. Position panel to its desired location.

Service and Maintenance

Replace torn or frayed straps, bent or crushed tray, missing or illegible decals.

Check for loose nuts and bolts and Torque loose nuts and bolts to JLG Torque Chart specifications.

NOTE: *The machine must be recalibrated. Refer to Section 6 for calibration procedure.*

1. Install platform support onto rotator.
2. Insert the bolts with Medium strength Threadlocking Compound and torque to 50-55 lbs-ft.
3. Insert the bolt through the center and torque nut to 480 lbs-ft.
4. Install Glazier base (left & right) and platform onto the platform support.
5. Align base hole pattern with the hole pattern in the platform support.
6. Place platform onto the base and align similarly.
7. Secure with bolts, washers, and nuts with Medium strength Threadlocking Compound. Torque to 85 lbs-ft.
8. Install the control box and foot switch with existing hardware.
9. Mount Glazier tray onto Glazier base.
10. Secure tray with bolts, nuts, and washers. Torque to 260 lbs-ft.
11. Install bumper and strap kit as shown in Figure 4-37., SkyGlazier™.
12. To remove reverse instructions.

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >

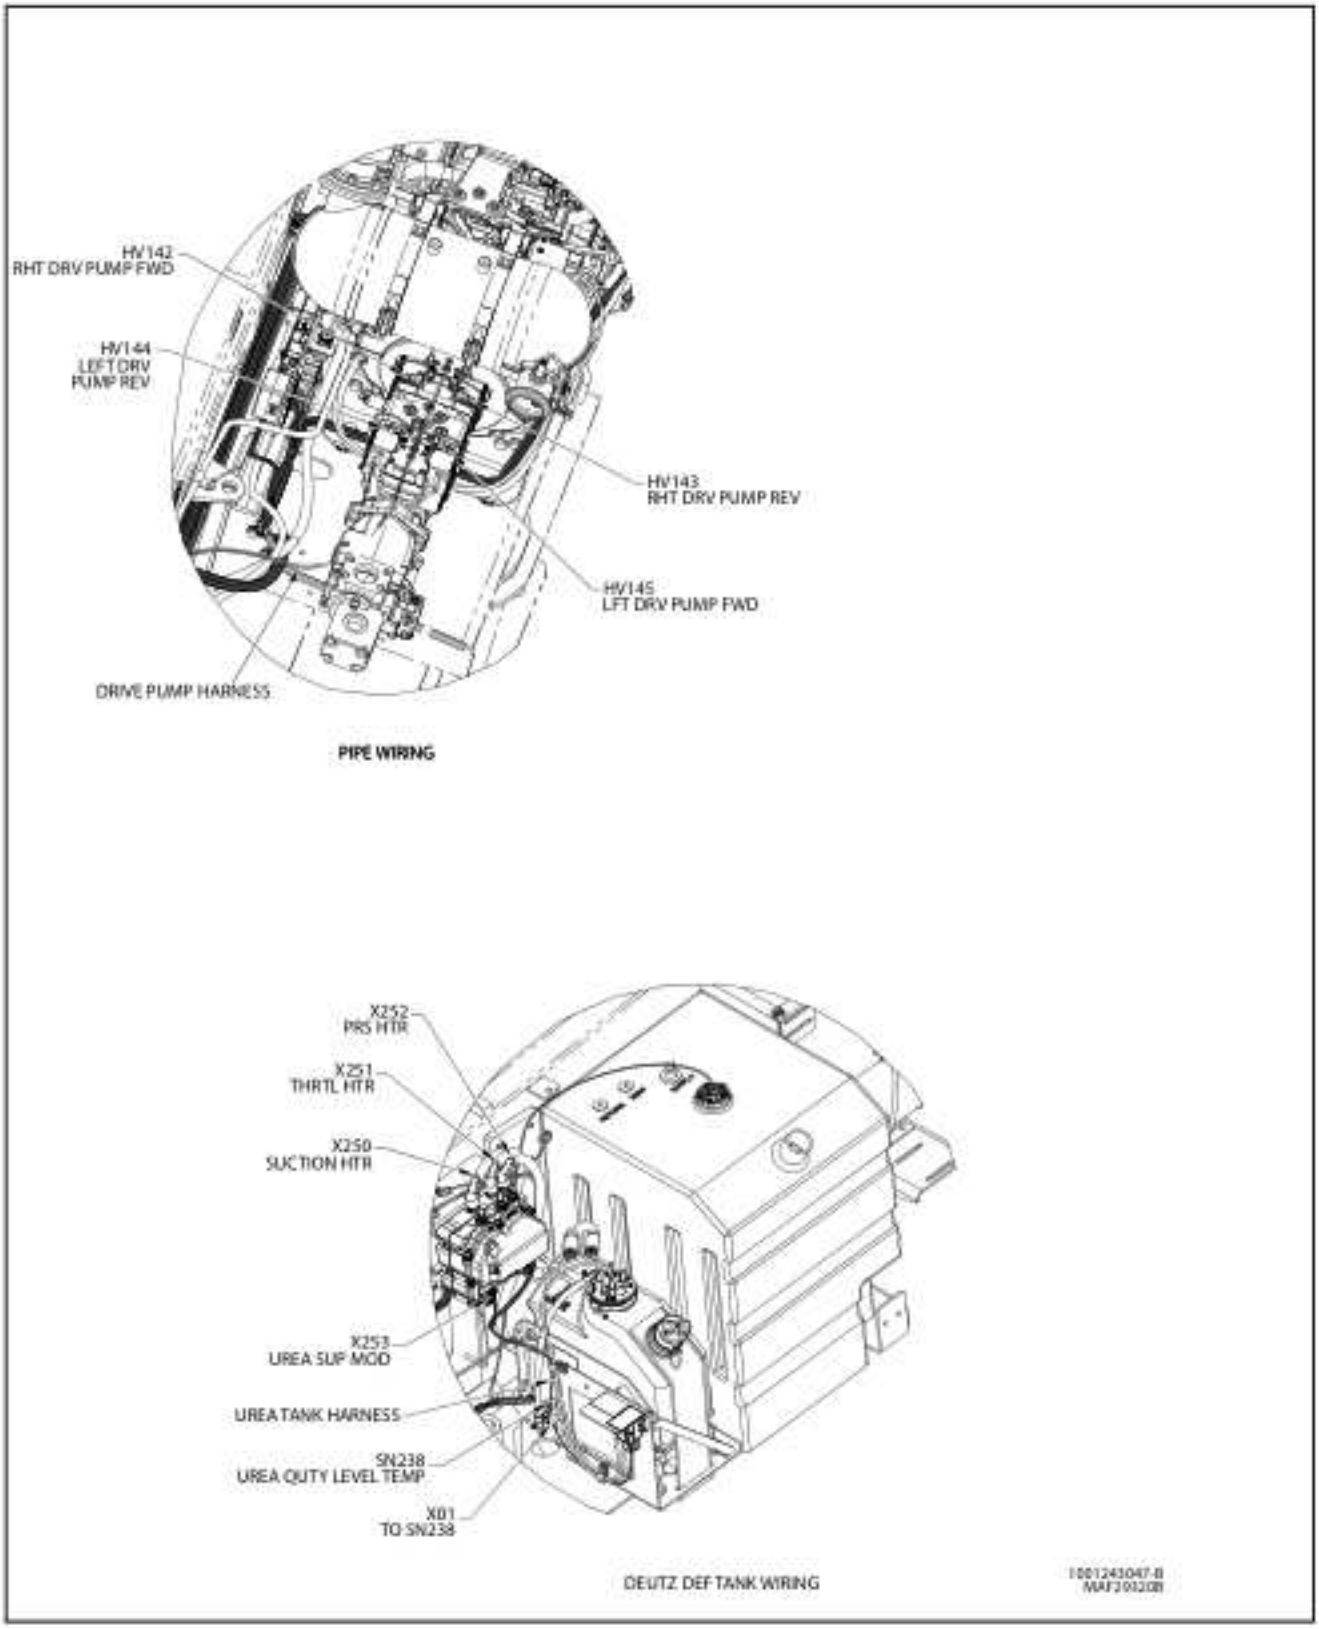


Figure 7-50. Chassis & Turntable Electrical Installation (HRC) - Sheet 9 of 11

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >

4. Remove the wear pads from the front of the mid boom section.





5. Pull the fly section from the mid section. Ensure the cables do not get tangled in the mid section as the fly section is being removed.




6. Remove the wire ropes from the boom fly section.





7. Support the weight of the boom base section.

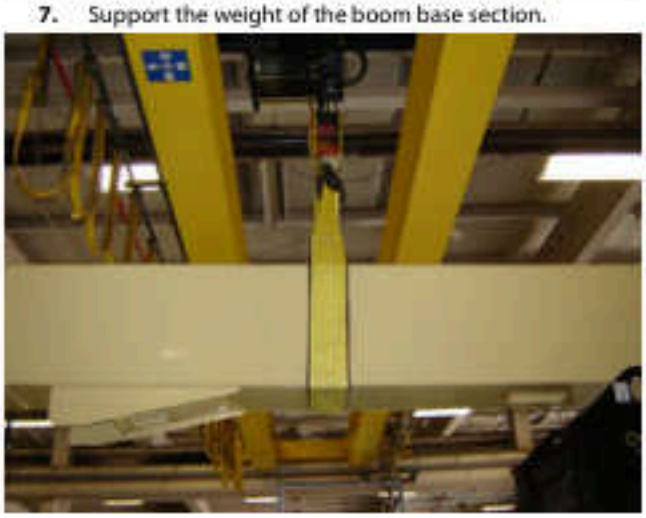

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >


3.19 SETTING SWING GEAR BACKLASH

Set backlash 0.10 to 0.15 in. (0.254 to 0.381 mm) using the following procedure.

1. Place machine on firm, level ground.
2. Place shim between pinion and bearing on bearing high spot.




3. Apply High Strength Threadlocking Compound to bolt. Torque pivot spacer screw to 340 ft-lb (461 Nm).

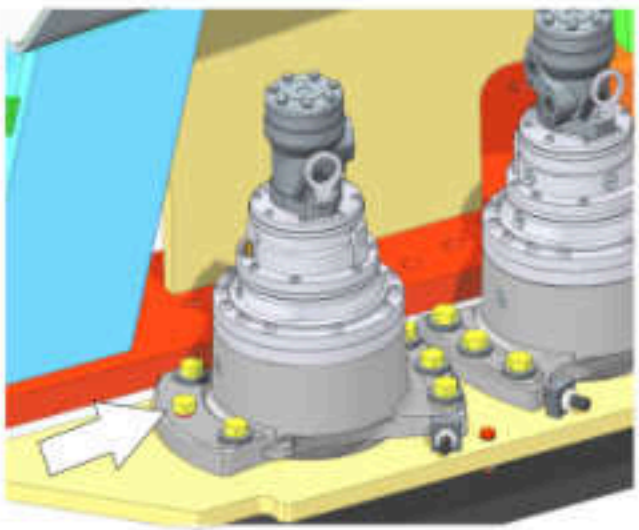


NOTE: *Make sure turntable is properly supported during the following step. The turntable can swing a few degrees when turntable lock is removed if turntable is not balanced.*


4. Remove turntable lock pin.
5. Apply High Strength Threadlocking Compound to the bolts. Pre-torque the five bolts to 45 ft-lb (58.83 Nm).

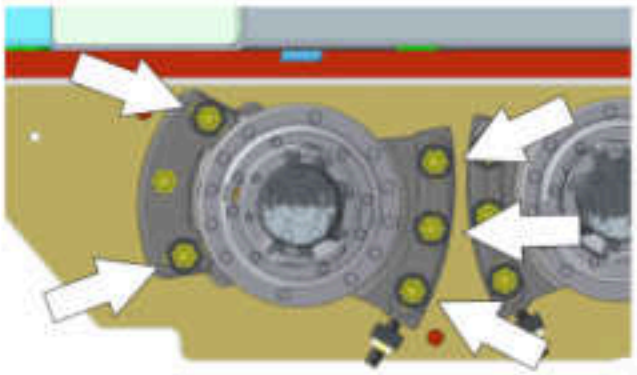

6. Tighten setscrew until pinion is completely snug against shim and bearing. Back off setscrew.

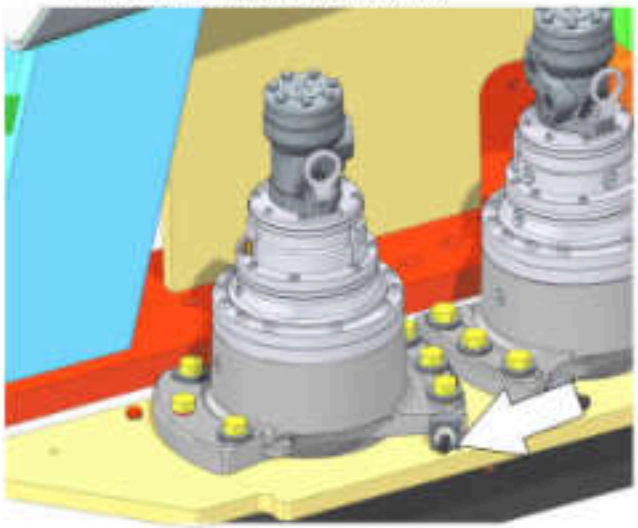

7. Torque setscrew to 50 ft-lb (68 Nm).
8. Apply High Strength Threadlocking Compound. Tighten jam nut.
9. Torque bolts to 340 ft-lb (461 Nm).

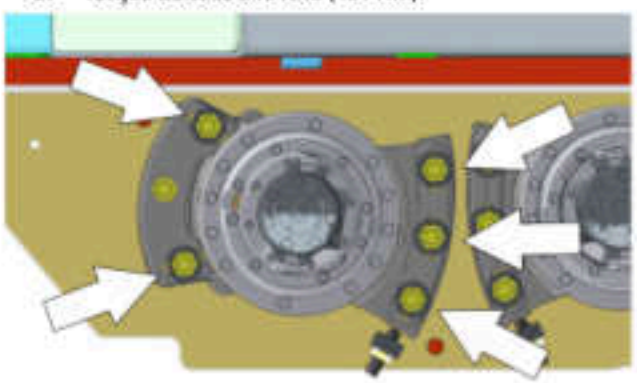

MidWestTech | JLG 1500AJP Boom Lift Service Manual | Publication 31217412 Order the manual at mid-west-tech.com >