An Oshkosh Corporation Company

Service & Maintenance Manual

Model

4045R

3121761

August 23, 2019 - Rev F

ANSI CE AS/NZS GB

An Oshkosh Corporation Company

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT - SECTION, PARAGRAPH **PAGE NO.**

SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS

General A-1
Hydraulic System Safety A-1
Maintenance A-1

SECTION 1 - SPECIFICATIONS

1.1 Specification 1-1
Platform Capacities 1-2
Machine Dimensional Data 1-2
Tires 1-2
Batteries 1-3
Motors 1-3
Electrical System 1-4
1.2 Limit Switch Activation 1-5
Tilt Alarm 1-5
High Drive Speed Cutout 1-5
1.3 Lubrication 1-5
Lubrication Capacities 1-5
Hydraulic Oil 1-5
Lubrication Specifications 1-6
1.4 Hydraulic Pressure Settings 1-8
1.5 Hydraulic Cylinder Specifications 1-8
1.6 Serial Number Location 1-8
1.7 Critical Stability Weights 1-9
1.8 Major Component Weights 1-9
1.9 Torque Requirements 1-9
Torque Charts 1-10

SECTION 2 - GENERAL

2.1 Machine Preparation, Inspection, and Maintenance 2-1
General 2-1
Preparation, Inspection, and Maintenance 2-1
Pre-Start Inspection 2-1
Pre-Delivery Inspection and Frequent Inspection 2-1
Annual Machine Inspection 2-1
Preventative Maintenance 2-1
2.2 Preventive Maintenance and Inspection Schedule 2-3
Maintenance and Inspection Schedule Codes 2-3
2.3 Service Maintenance Components 2-6
Scissor Arm - Safety Prop 2-6
Hydraulic Oil Check Procedure 2-7
2.4 Service and Guidelines 2-8
General 2-8
Safety and Workmanship 2-8
Cleanliness 2-8
Components Removal and Installation 2-8
Component Disassembly and Reassembly 2-8
Pressure-Fit Parts 2-8
Bearings 2-8
Gaskets 2-8
Bolt Usage and Torque Application 2-8

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

Hydraulic Lines and Electrical Wiring 2-9
Hydraulic System 2-9
Lubrication 2-9
Battery 2-9
2.5 Lubrication and Information 2-9
Hydraulic System 2-9
Hydraulic Oil 2-9
Changing Hydraulic Oil 2-9
2.6 Cylinder Drift Test 2-10
Platform Drift 2-10
Cylinder Drift 2-10
2.7 Pins and Composite Bearing Repair Guidelines 2-10

SECTION 3 - CHASSIS & SCISSOR ARMS

3.1 Left and Right Side component compartments 3-1
3.2 Battery Removal/Maintenance 3-2
Battery Quick-Disconnect (If Equipped) 3-2
Battery Maintenance and Safety Practices 3-3
3.3 Battery Charging 3-3
Delta-Q - Battery Charger 3-4
Green Power - Battery Charger (China (GB) Only) 3-4
Eagle Performance - Battery Charger 3-4
Battery Charger Maintenance 3-5
3.4 DC/AC Power Inverter Installation - Option 3-9
3.5 Logic Control Module Installation 3-10
3.6 Main Power Contactor Relay and Pump Control Module 3-11
3.7 Pump Control Module 3-12
Removal 3-12
Installation 3-12
3.8 Ground Control Station - Folding Cover 3-14
Components Location 3-14
Removal 3-14
Installation 3-14
3.9 Ground Control Station - Fixed Cover 3-16
Components Location 3-16
Removal 3-16
Installation 3-16
3.10 Platform Control Station 3-18
Installation/Removal 3-19
Control Station Disassembly 3-19
Joystick Controller 3-21
3.11 Tilt Sensor Installation 3-22
Tilt Sensor Removal 3-22
Tilt Sensor Installation 3-22
3.12 Elevation Sensor 3-23
Elevation Sensor Installation 3-24
3.13 Pot-Hole Protection System Components 3-25
3.14 Steer and Spindle Assembly Components 3-26
Drive Motor Covers Installation - Option 3-27
Tire Wear and Damage 3-28
Wheel and Tire Replacement 3-28
Wheel Installation 3-28
3.15 Arms and Platform Positioning and Support 3-29
3.16 Platform Removal 3-29
3.17 Scissor Arms Removal 3-29
Removing Scissor Arm Assembly as a Complete Unit 3-29
Removing/Installing Scissor Arms Individually 3-29

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

SECTION 4 - HYDRAULICS

4.1 Cylinders - Theory of Operation 4-1
4.2 Valves - Theory of Operation 4-1
Solenoid Control Valves (Bang-Bang) 4-1
Relief Valves 4-1
Crossover Relief Valves 4-1
Proportional Valve 4-1
Manual Descent Valve 4-1
4.3 Pump/Motor 4-2
Pump Motor Electrical Evaluation 4-2
4.4 Hydraulic Tank Installation 4-4
Hydraulic Oil Check Procedure 4-5
4.5 Hydraulic Pump and Electric Motor Assembly 4-6
Pump/Motor Removal 4-6
Pump/Motor Disassembly 4-7
Pump/Motor Assembly 4-7
Pump/Motor Installation 4-7
4.6 Hydraulic Manifold Valve Installation 4-8
4.7 Drive Motor Installation 4-12
4.8 Hydraulic Brake Installation 4-13
Hydraulic Brake Release 4-13
4.9 Pressure Setting Procedure 4-14
Main Relief 4-14
Lift Up Relief 4-14
Steer Relief 4-14
4.10 Cylinder Checking Procedure 4-15
4.11 Lift Cylinder Removal/Installation 4-15
4.12 Lower Lift Cylinder 4-16
Disassembly 4-16
Assembly 4-16
4.13 Upper Lift Cylinder 4-16
Disassembly 4-16
Assembly 4-16
4.14 Cylinder Repair 4-20
Disassembly 4-20
Cleaning and Inspection 4-21
Assembly 4-21

SECTION 5 - JLG CONTROL SYSTEM

5.1 Hand Held Analyzer 5-1
Diagnostic Port 5-1
To Connect the Hand Held Analyzer 5-1
Using the Analyzer 5-3
Changing the Access Level of the Hand Held Analyzer 5-4
Adjusting Parameters Using the Hand Held Analyzer 5-5
Machine Setup 5-5
5.2 Joystick Calibration 5-6
5.3 Tilt Sensor Calibration 5-6
Tilt Sensor Failure Troubleshooting 5-6
5.4 Elevation Sensor Calibration 5-7
5.5 Updating Software 5-7
5.6 Machine ConfiguRation Programming Information 5-12
5.7 Machine Model Adjustment (Personality Settings) 5-13

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

Platform Capacities

Table 1-2. Platform Capacities

SPECIFICATION	MAXIMUM OPERATING HEIGHT	MAXIMUM PLATFORM CAPACITY (1)	MAXIMUM CAPACITY ALLOWED ON PLATFORM EXTENSION	MAXIMUM PERSONS ALLOWED IN PLATFORM	MAX. SIDE FORCE (Platform Fully Extended @ Max. Capacity)	MAXIMUM OPERATING WIND SPEED	ENVIRONMENT (2)
ANSI/CSA/CE/AUS/GB	FULL	770 lb (350 Kg)	250 lb. (113 Kg)	3 Persons + 242 lb (110 Kg)	90 lb (400 N)	0 mph (0 m/s)	INDOOR
ANSI/CSA/CE/AUS/GB	29 ft. (8.8 m)	550 lb (249 Kg)		1 Person + 371 lb (169 Kg)	45 lb (200 N)	28 mph (12.5 m/s)	OUTDOOR
AUS	FULL	300 lb (136 Kg)		1 Person + 124 lb (56 Kg)			

NOTE: (1) Maximum Platform Capacity includes platform and platform extension.
(2) INDOOR USE is use of a MEWP in areas shielded from wind so that there is no wind. OUTDOOR USE is use of a MEWP in an environment that can be exposed to wind.

Machine Dimensional Data

Table 1-3. Dimensions

DESCRIPTION	4045R
Platform Height - Elevated (Ground to Platform Floor)	39 ft. 3 in. (12 m)
Platform Height - Stowed (Ground to Platform Floor)	55 in. (140 cm)
Rail Height (Platform Floor to Top of Rail)	44 in. (111.76 cm)- Folding Rail
Overall Height (Ground to Top Rail): (Rails Folded Down):	100 in. (254 cm) 76.8 in. (192.4 cm)
Overall Machine Width	45 in. (114.3 cm)
Overall Machine Length (w/ladder)	106 in. (269.24 cm)
Platform Size - Length (Inside)	96 in. (243.84 cm)
Platform Size - Width (Inside)	41 in. (104.14 cm)
Wheelbase	80 in. (203.2 cm)

Tires

Table 1-4. Tire Specifications

DESCRIPTION	4045R
Size	16 in. x 5 in. (40.6 cm x 12.7 cm)
Wheel Nut Torque (1-1/8 inch - Slotted Nut with Cotter Pin)	150 ft. lbs. (203 Nm)

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

Table 7-1. Diagnostic Trouble Codes (DTC)

DTC	Help Message	Alarm	Flash Code	Action	Trigger
9952	POWER MODULE FAILURE – INTERNAL ERROR	None	9_9	• Drive State = PREVENTED • Lift Up State = PREVENTED	**Curtis Code 43: Pump Throttle Wiper High** **Set:** Pot2 wiper voltage is lower than the high fault threshold (can be changed with the VCL funciton Setup_Pot_Faults()) **Effect:** Shutdown Pump (if Lift_Switch_Only_Enable = Off), Shutdown PD (If Lower_Switch_Only_Enable = Off) **Possible Cause:** • See Monitor Menu>> Inputs: Pot2 Raw • Pot2 wiper voltage too high
9953	POWER MODULE FAILURE – INTERNAL ERROR	None	9_9	• Drive State = PREVENTED • Lift Up State = PREVENTED	**Curtis Code 97: Pump Hardware Fault** **Set:** Controller hardware indicated inappropriate voltage at pump motor M- connection, or internal supply voltage problem. **Effect:** Shutdown Motor, Shutdown Main Contactor, Shutdown EM Brake, Shutdown Throttle, Full Brake, Shutdown Pump **Possible Cause:** • External short of the pump motor • Controller defective
9954	POWER MODULE FAILURE – INTERNAL ERROR	None	9_9	• Drive State = PREVENTED • Lift Up State = PREVENTED	**Curtis Code 47: Pump HPD Fault** **Set:** Incorrect sequence of KSI and lift, lower, or hydraulic throttle inputs according to Hyd_Inhibit_Type parameter. **Effect:** Shutdown Pump **Possible Cause:** • KSI and Hydraulic throttle input applied in incorrect sequence; hydraulic throttle input was active when KSI was turned on. • Fault wiring, crimps, or switches at KSI, lift, lower, or hydraulic throttle inputs. • See Monitor menu >> Inputs
9955	POWER MODULE FAILURE – INTERNAL ERROR	None	9_9	• Drive State = PREVENTED • Lift Up State = PREVENTED	**Curtis Code 52: Pump Not Responding** **Set:** Pump current is equal to 0, when it is being commanded to percentage larger than 0% **Effect:** Shutdown Pump **Possible Cause:** • Load is disconnected
9956	POWER MODULE FAILURE – INTERNAL ERROR	None	9_9	• Drive State = PREVENTED • Lift Up State = PREVENTED	**Curtis Code 49: Parameter Change Fault** **Set:** Adjustment of a parameter setting that requires cycling of KSI. **Effect:** Shutdown Motor, Shutdown Main Contactor, Shutdown EM Brake, Shutdown Throttle, Full Brake, Shutdown Pump **Possible Cause:** • This is a safety fault caused by a change in certain parameter setting so that the vehicle will not operate until KSI is cycled. For example, if a user changes the Throttle Type this fault will appear and require cycling of KSI before vehicle can operate.

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

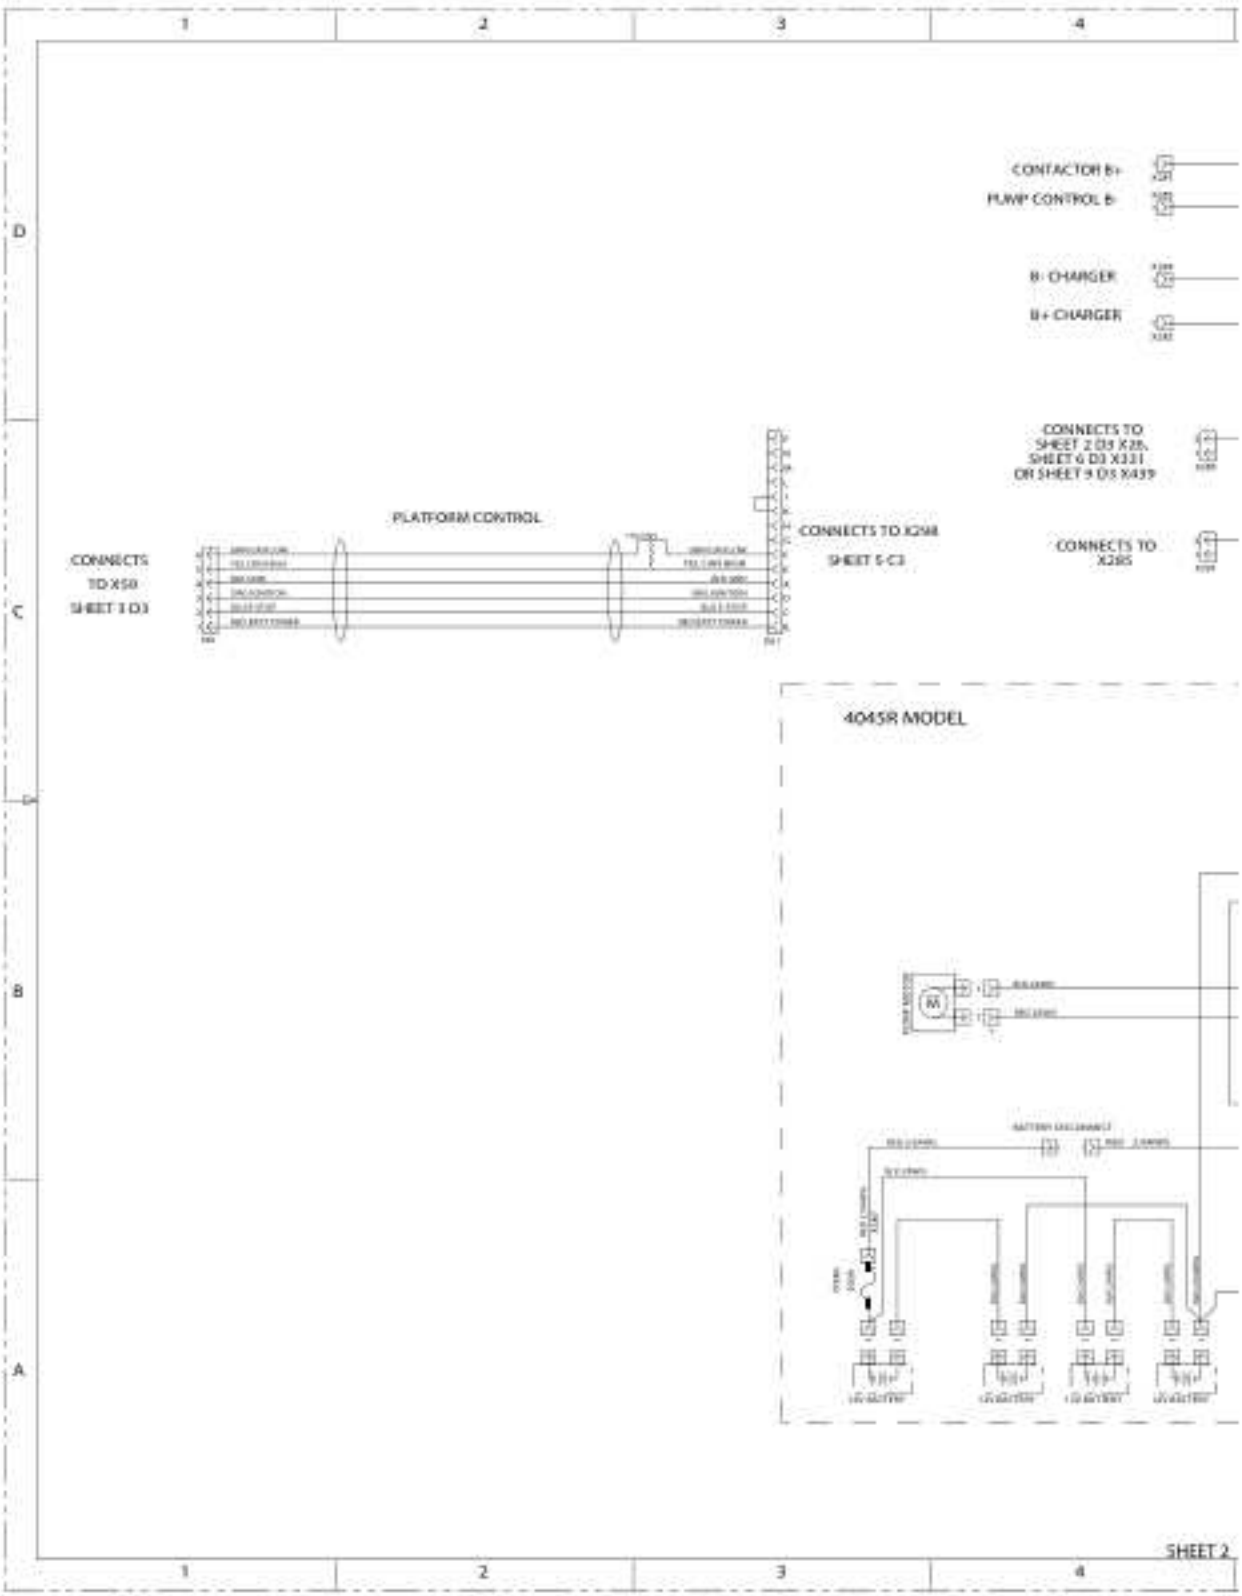


Figure 8-19. Electrical Schematic - Sheet 2 of 13

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

Table 2-2. Preventive Maintenance & Inspection Schedule

AREA ON MACHINE	INSPECTIONS	
	PRE-DELIVERY [1] OR FREQUENT [2] INSPECTION	ANNUAL [3] (YEARLY) INSPECTION
Scissor Arms		
Scissor Arms	1, 2	1, 2
Safety Prop	1, 2	1, 2
Nuts, Bolts, Shafts, Shields, Bearings and Locking Devices	1, 2	1, 2
Cylinder/Pivot Pins and Attaching Hardware	1, 2	1, 2
Arm Pads and Sliding Block	1, 2	1, 2
Platform Assembly		
Platform	1	1
Platform Gate Assembly	1, 3	1, 3
Extension Deck and Locks	1, 3	1, 3
Guard Rails and Floor	1, 2	1, 2
Platform Roll Pins and Fold Down Rails	1, 2	1, 2
Lanyard Anchorage Points	1, 2, 6	1, 2, 6
Chassis Assembly		
Wheel Rim Nuts	1[50]	1[50]
Tires	1	1, 2
Oscillating Axle and Lock Nut	3	3
Steer, Drive, and Axle Components	1	1, 2, 5
Hydraulic and Battery Compartments	1, 3	1, 3
Side-Compartment Door Installation	1, 3, 5	1, 3, 5
Drive Motor	1	1, 4, 5
Platform Ladder	1, 5	1, 5
Drive Brakes	1	1, 5
Drive Hubs	1	1, 4, 5
Sliding Wear Pads**	1, 2, 5, 7	1, 2, 5, 7
Front Wheel Spindle Nuts/Bolts	1[50]	1[50]
Functions/Controls		
Control Levers, Switches, Gauges, and Instruments	1, 3	1, 3
Detents, Control Enclosure, and Protective Boots/Guards	1, 3	1, 3
Emergency Stop Switches at Ground and Platform	1, 3	1, 3
Lift, Drive and Speed Cutouts	3	3
Auxiliary Power System	3	3
Function Enable System	3	3
Brakes	3	3, 5

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >

AMP Faston


This connector system is typically used on operator switches at JLG. Follow the general guidance for installation.



Improper Proper

AMP Micro-Fit

This connector system is typically used on control modules at JLG. Follow the general guidance for installation.

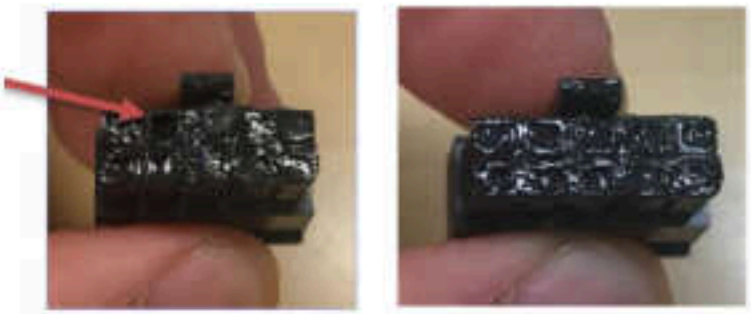

Improper Proper

AMP Mini Fit Jr

This connector system is typically used on control modules at JLG. Follow the general guidance for installation.



Improper Proper

MidWestTech | JLG 4045R Boom Lift Service Manual | Publication 3121761 Order the manual at mid-west-tech.com >