An Oshkosh Corporation Company

Service & Maintenance Manual

Models

3369LE
4069LE
M3369
M4069

3121824

July 23, 2012

CE

An Oshkosh Corporation Company

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

SUBJECT - SECTION, PARAGRAPH — PAGE NO.

SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS

A General 1-a
B Hydraulic System Safety 1-a
C Maintenance 1-a

SECTION 1 - SPECIFICATIONS

1.1 Specifications 1-1
1.2 Capacities 1-2
1.3 Pressure Settings 1-2
1.4 Component Data 1-2
1.5 Torque Specifications 1-2
1.6 Lubrication 1-3
1.7 Cylinder Specifications 1-3
1.8 Major Component Weights 1-3
1.9 Critical Stability Weights 1-3
1.10 Lubrication 1-4
1.11 Serial Number Locations 1-5
1.12 Torque Charts 1-6

SECTION 2 - GENERAL

2.1 Machine Preparation, Inspection, and Maintenance 2-1
2.2 Service and Guidelines 2-2
2.3 Lubrication and Information 2-4
2.4 Cylinder Drift Test 2-5
2.5 Pins and Composite Bearing Repair Guidelines 2-5
2.6 Preventive Maintenance and Inspection Schedule 2-6

SECTION 3 - CHASSIS & SCISSOR ARMS

3.1 Calibrations 3-1
3.2 Tilt Sensor 3-4
3.3 Battery Maintenance and Charging 3-6
3.4 Generator 3-13
3.5 Supplementary Fuse For APU 3-19
3.6 Joystick Controller 3-21
3.7 Torque Hub 3-24
3.8 Drive Hub 3-27
3.9 Drive Brake - MICO 3-29
3.10 Torque Hub 3-30

SECTION 4 - HYDRAULICS

4.1 Servicing and Maintenance Guidelines 4-1
4.2 Lubrication Information 4-2
4.3 Cylinders - Theory of Operation 4-3
4.4 Valves - Theory of Operation 4-3
4.5 Component Functional Description 4-3
4.6 Wear Pads 4-3
4.7 Motor Controller - Modes of Operation 4-3
4.8 Features 4-4
4.9 Cylinder Checking Procedures 4-4
4.10 Cylinder Removal and Installation 4-5
4.11 Cylinder Repair 4-6
4.12 Steer Cylinder Removal 4-10
4.13 Oscillation Cylinder Bleeding 4-10

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

4.14 Cylinder Assemblies 4-12
4.15 Pressure Setting Procedures 4-20
4.16 Drive Torque Hub 4-21
4.17 Drive Assist Valve 4-23

SECTION 5 - JLG CONTROL SYSTEM

5.1 Hand Held Analyzer 5-1
5.2 PC Boards 5-5
5.3 Flash Codes/DTC's and Descriptions 5-6
5.4 Ground Control Circuit Board 5-19

SECTION 6 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

6.1 General 6-1
6.2 Multimeter Basics 6-1
6.3 Applying Silicone Dielectric Compound To Amp Connectors 6-5
6.4 Working With Deutsch Connectors 6-10

LIST OF FIGURES

FIGURE NO.	TITLE	PAGE NO.
1-1.	Lubrication Chart	1-4
1-2.	Serial Number Location	1-5
1-3.	Torque Chart (SAE Fasteners - Sheet 1 of 7)	1-6
1-4.	Torque Chart (SAE Fasteners - Sheet 2 of 7))	1-7
1-5.	Torque Chart (SAE Fasteners - Sheet 3 of 7)	1-8
1-6.	Torque Chart (SAE Fasteners - Sheet 4 of 7)	1-9
1-7.	Torque Chart (METRIC Fasteners - Sheet 5 of 7))	1-10
1-8.	Torque Chart (METRIC Fasteners - Sheet 6 of 7)	1-11
1-9.	Torque Chart (METRIC Fasteners - Sheet 7 of 7)	1-12
3-1.	Tilt Sensor Location	3-4
3-2.	Tilt Sensor Removal	3-4
3-3.	Tilt Sensor Location	3-5
3-4.	Tilt Sensor Removal	3-5
3-5.	Remote LED Card	3-7
3-6.	Battery Charger Location (M model shown)	3-7
3-7.	Battery Charger	3-7
3-8.	Batteries and Battery Charger	3-12
3-9.	Generator Components	3-14
3-10.	Generator System Analyzer Flow Chart	3-16
3-11.	Joystick Controller - (JLG P/N 1600308)	3-21
3-12.	Joystick Controller - (JLG P/N 1600403)	3-22
3-13.	Drive Components	3-23
3-14.	Power Controller	3-24
3-15.	Torque Hub	3-26
3-16.	Brake Assembly	3-28
3-17.	Torque Hub Assembly	3-30
3-18.	Bolt Torquing Sequence	3-31
3-19.	Hub Main Disassembly	3-32
3-20.	Output Carrier Disassembly	3-34
3-21.	Input Carrier Disassembly	3-35
3-22.	Hub-Spindle Disassembly	3-36
3-23.	Cover Disassembly	3-37
3-24.	Input Carrier Sub-Assembly	3-38
3-23.	Output Carrier Sub-Assembly	3-39
3-24.	Hub-Spindle Sub-Assembly	3-40
3-25.	Cover Sub-Assembly	3-41

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

3-26. Hub Main Assembly 3-42
4-1. Barrel Support 4-6
4-2. Cap Screw Removal 4-6
4-3. Rod Support 4-6
4-4. Oil-lite Bearing Installation 4-7
4-5. Rod Seal Installation 4-7
4-6. Wiper Seal Installation 4-8
4-7. Installation of Head Seal Kit 4-8
4-8. Piston Seal Kit Installation 4-8
4-9. Poly-Pak Piston Seal Installation 4-9
4-10. Rod Assembly Installation 4-9
4-11. Lift Cylinder - 3369LE & M3369 4-12
4-12. Lift Cylinder - 4069LE & M4069 4-13
4-11. Leveling Jack Cylinder (1001140600) 4-14
4-13. Leveling Jack Cylinder - USA Built Machines S/N 0200112735 to Present) 4-15
4-14. Leveling Jack Cylinder - USA Built Machines S/N 0200104829 to S/N 0200112735 & All Belgium Built Machines) 4-16
4-15. Leveling Jack Cylinder - USA Built Machines Prior to S/N 0200104829 4-17
4-16. Steer Cylinder 4-18
4-17. Axle Lockout Cylinder 4-19
4-18. Control Valve 4-21
4-19. Drive Assist Valve 4-23
5-1. Hand Held Analyzer 5-1
5-2. PC Boards 5-5
5-2. Analyzer Flow Chart - SW V13.X - Sheet 1 of 3 5-11
5-3. Analyzer Flow Chart - SW V13.X - Sheet 2 of 3 5-12
5-4. Analyzer Flow Chart - SW V13.X - Sheet 3 of 3 5-13
5-5. Analyzer Flow Chart - Software P1.X - Sheet 1 of 3 5-14
5-6. Analyzer Flow Chart - Software P1.X - Sheet 2 of 3 5-15
5-7. Analyzer Flow Chart - Software P1.X - Sheet 3 of 3 5-16
6-1. Voltage Measurement (DC) 6-2
6-2. Resistance Measurement 6-2
6-3. Continuity Measurement 6-3
6-4. Current Measurement (DC) 6-3
6-5. AMP Connector 6-5
6-6. Connector Assembly (1 of 4) 6-6
6-7. Connector Assembly (2 of 4) 6-6
6-8. Connector Assembly (3 of 4) 6-7
6-9. Connector Assembly (4 of 4) 6-7
6-10. Connector Disassembly 6-8
6-11. Connector Installation 6-9
6-12. DT/DTP Contact Installation 6-10
6-13. DT/DTP Contact Removal 6-10
6-14. HD/HDP Contact Installation 6-10
6-15. HD/HDP Locking Contacts Into Position 6-11
6-16. HD/HDP Contact Removal 6-11
6-17. HD/HDP Unlocking Contacts 6-11
6-18. Electrical Components Installation - (Sheet 1 of 4) 6-12
6-19. Electrical Components Installation - (Sheet 2 of 4) 6-13
6-20. Electrical Components Installation - (Sheet 3 of 4) 6-14
6-21. Electrical Components Installation - (Sheet 4 of 4) 6-15
6-22. Electrical Schematic - Sheet 1 of 2 6-16
6-23. Electrical Schematic - Sheet 1 of 2 6-17
6-24. Electrical Schematic - Kubota Generaltor - Sheet 2 of 2 6-18
6-25. Electrical Schematic - Kubota Generator - Sheet 2 of 2 6-19
6-26. Electrical Schematic - (Sheet 1 of 2) (4069LE AUS Full Drive Height Only) 6-20
6-27. Electrical Schematic - (Sheet 2 of 2) (4069LE AUS Full Drive Height Only) 6-21
6-28. Electrical Schematic - Yanmar Engine (M3369 & 3369LE only) 6-22

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

SECTION 1. SPECIFICATIONS

1.1 SPECIFICATIONS

Table 1-1. Operating Specifications

Description	3369LE/M3369	4069LE/M4069
Maximum Platform Height	10.1 m (33 ft)	12.2 m (40 ft)
Maximum Occupants	2	
Gross Machine Weight (minimum)	4427 kg (9760 lbs)	4790 kg (10,560 lbs)
Travel Speed: High Drive Fwd/Rev (sec/50 ft) Elevated Drive Fwd/Rev (sec/50 ft)	 10.6 - 12 sec 40 - 44 sec	
Lifting Speed: No Load Rated Load	 36 - 40 sec 38 - 44 sec	 52 - 60 sec 54 - 62 sec
Lowering Speed (no load)	43 - 48 sec	49 - 51 sec
Gradeability (platform stowed)	35%	
Maximum Operating Windspeed	12.5 m/sec (28 mph)	
Turning Radius: Inside Outside	 2.3 m (7.5 ft) 4.9 m (16 ft)	
Maximum Platform Capacity -Platform -Platform Extension	 **ANSI/CSA/Brazil:** 1000 lbs (454kg) **CE/AUS:** 1000 lbs (450kg) **ANSI/CSA/Brazil:** 250 lbs (113kg) **CE/AUS:** 250 lbs (120kg)	 **ANSI/CSA/Brazil:** 800 lbs (363kg) **CE/AUS:** 800 lbs (360kg) **ANSI/CSA/Brazil:** 250 lbs (113kg) **CE/AUS:** 250 lbs (120kg)
Maximum Ground Bearing Pressure	4 bar (57 psi)	4.3 bar (61 psi)
Maximum Tire Load	1452 kg (3200 lbs)	1680 kg (3700 lbs)
Maximum Hydraulic System Pressure	207 bar (3000 psi)	
Electrical System Voltage	48Vdc	
Maximum Horizontal Manual Side Force	667 N (150 lb force)	534 N (120 lb force)
Tilt Sensor Setting: Side to Side Fore and Aft	 3° 5°	
Ground Clearance	20 cm (8 in)	
Wheelbase	2.3 m (91.5 in)	
Machine Height (w/ rails folded)	1.9 m (76.5 in)	2.01 m (79 in)
Machine Length (stowed)	3.1 m (121 in)	
Machine Width	1.75 m (69 in)	

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

Service - Voltage Reading

⚠ CAUTION

DO NOT PIERCE WIRE INSULATION TO TAKE VOLTAGE READINGS.

It has been common practice in electrical troubleshooting to probe wires by piercing the insulation with a sharp point. This practice should be discouraged when dealing with the AMPSEAL plug assembly, or any other sealed connector system. The resulting pinholes in the insulation will allow moisture to invade the system by traveling along the wire strands. This nullifies the effectiveness of the connector seals and could result in system failure.

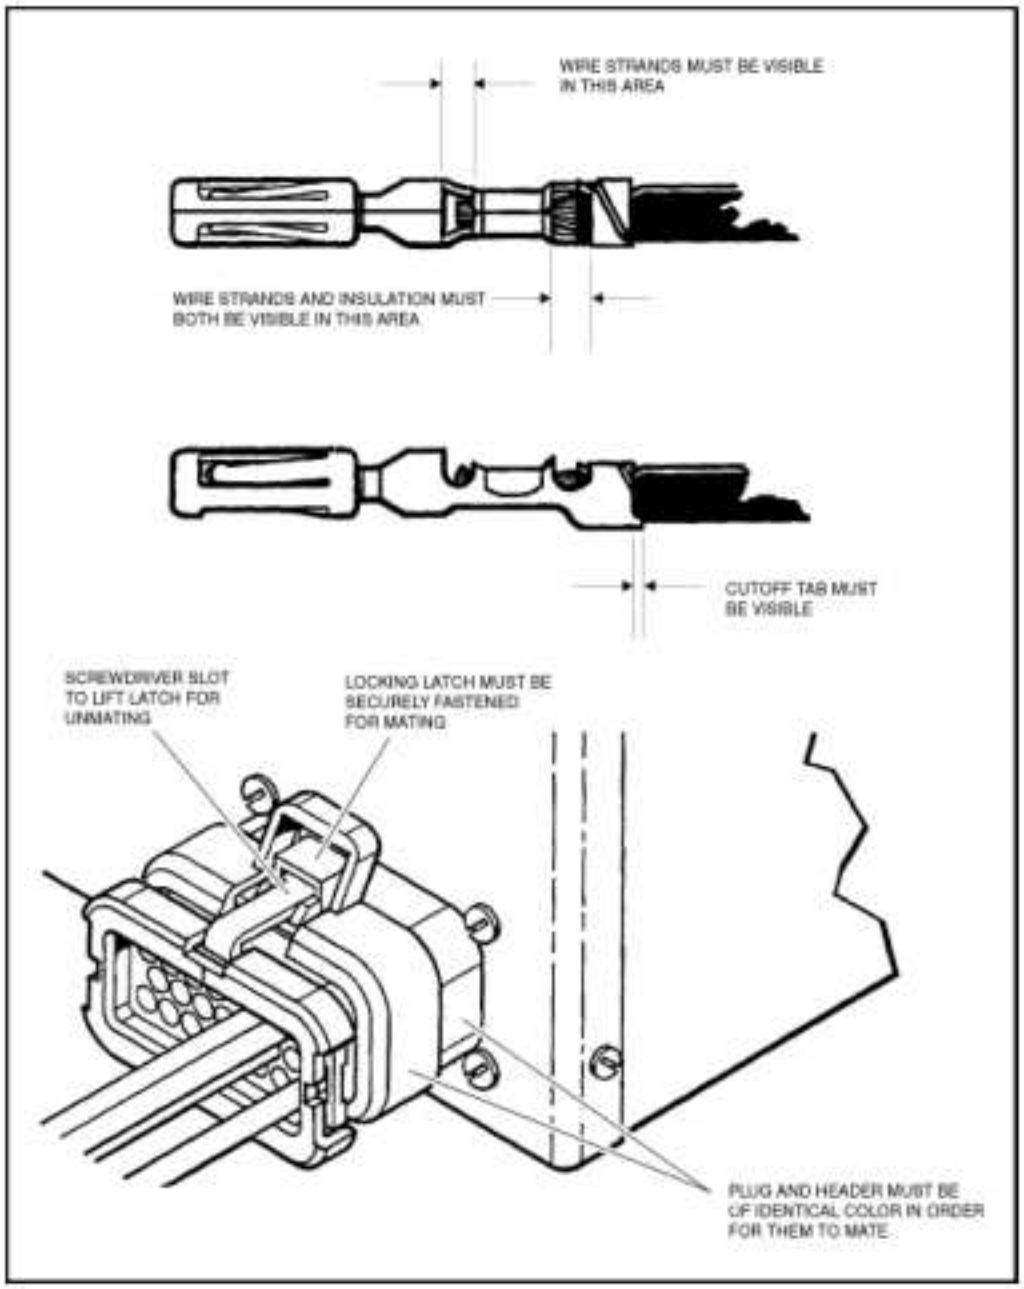


Figure 6-11. Connector Installation

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

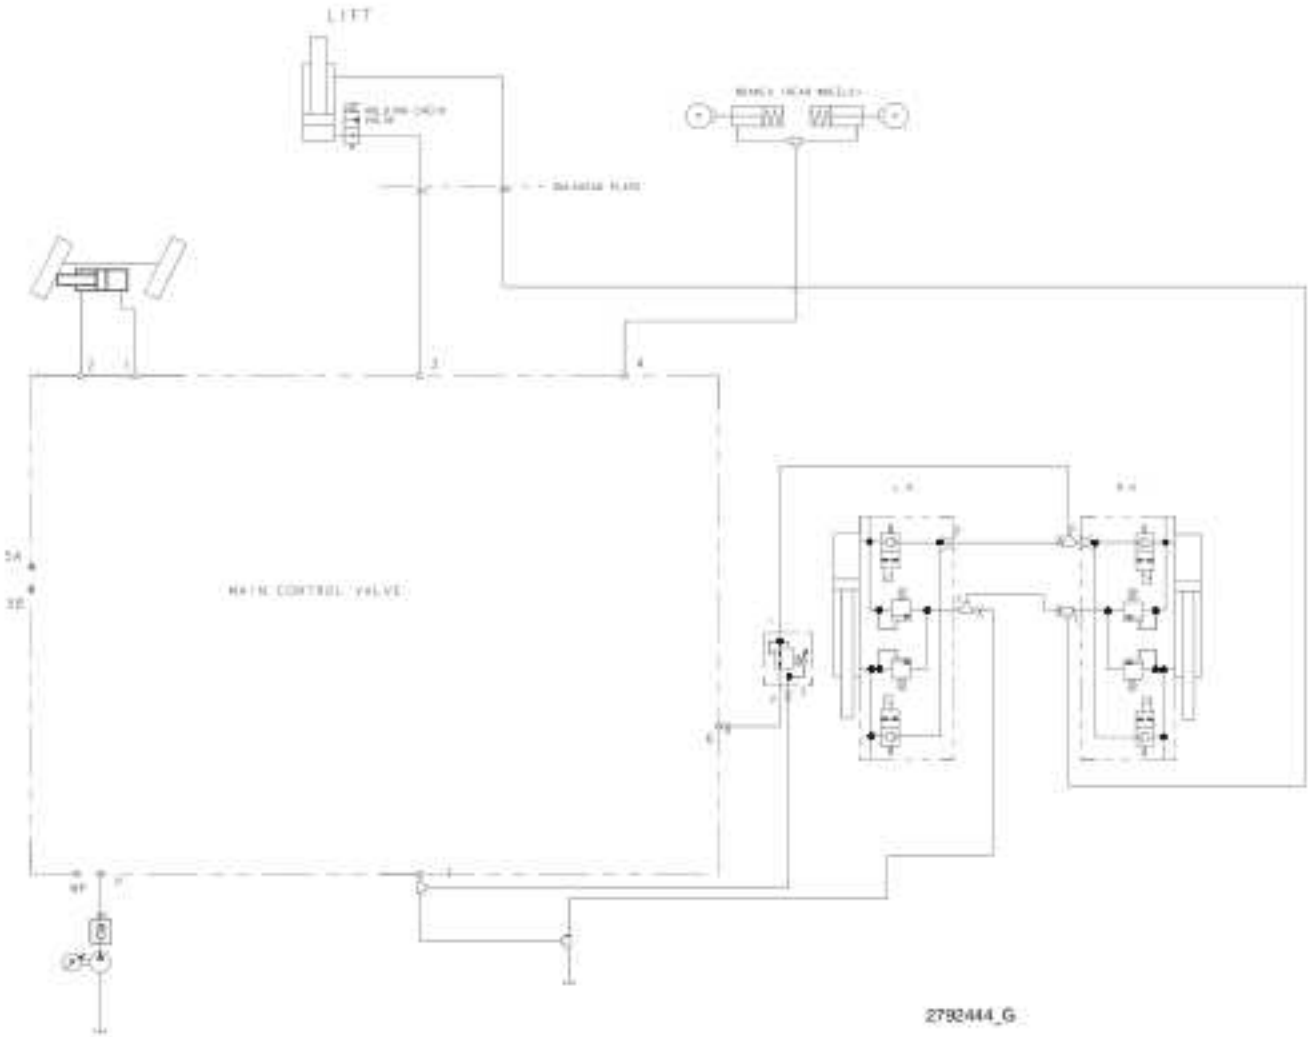


Figure 6-30. Hydraulic Diagram - 3369LE and M3369 (Oscillating Axle)

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >

3. Remove the socket head drive screw with a 5/32" Allen key. Next remove the cable clamp from the harness.



4. Cut and remove the Wire Ties holding the Harness label to the harness. Next, remove the Wire Ties so that the cable sleeve can be moved, exposing the conductors of the harness.



5. Cut wire 106 going to the Engine/Generator Controller after the existing connection point and install the conductors that lead to the new inline fuse holder. Use insulated butt splice connectors for these conductors.





6. Re-install the harness with the new fuse in place.



7. Reconnect the lift and APU start battery. The APU is now ready for use.

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >


NOTE: *Refer to the appropriate Machine Personality Settings Table, and the Machine Setup Table in the JLG Service Manual for the default settings.*

Password 33271 will give you access to level 1, which will permit you to change all machine personality and/or machine setup settings.

⚠ WARNING

CHANGING THESE SETTINGS MAY ADVERSELY AFFECT THE PERFORMANCE OF YOUR MACHINE.

The flash code is indicated on the face of the platform control box as shown:

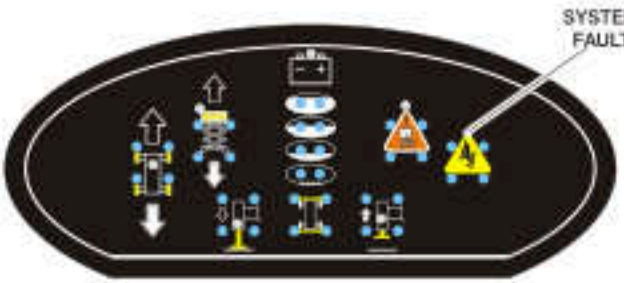

NOTE: *For machines with software prior to P1.0, flash codes are also displayed on the handheld analyzer. For descriptions see,Table 5-1, Flash Codes/DTC's.*

NOTICE

IT IS A GOOD PRACTICE TO AVOID PRESSURE-WASHING ELECTRICAL/ELECTRONIC COMPONENTS. SHOULD PRESSURE-WASHING BE UTILIZED TO WASH AREAS CONTAINING ELECTRICAL/ELECTRONIC COMPONENTS, JLG INDUSTRIES, INC. RECOMMENDS A MAXIMUM PRESSURE OF 750 PSI (52 BAR) AT A MINIMUM DISTANCE OF 12 INCHES (30.5 CM) AWAY FROM THESE COMPONENTS. IF ELECTRICAL/ELECTRONIC COMPONENTS ARE SPRAYED, SPRAYING MUST NOT BE DIRECT AND BE FOR BRIEF TIME PERIODS TO AVOID HEAVY SATURATION.

5.2 PC BOARDS

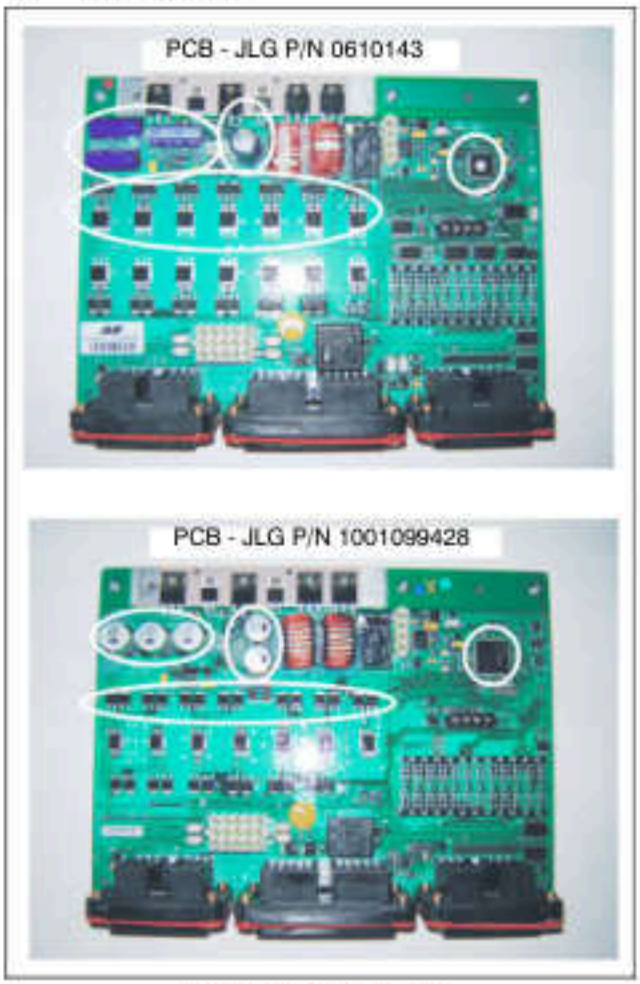


Figure 5-2. PC Boards

NOTE: *Figure 5-2., PC Boards, is shown for part distinguishing purposes. PC Board (p/n 1001099428) is used on machines with Software P1.0 and higher. PC Board (p/n 0610143) is used on machines prior to Software P1.0. Visually reference the circuits and chips circled in Figure 5-2. to determine which PC Board is in the machine.*

MidWestTech | JLG 3369LE, 4069LE, M3369, M4069 Scissor Lift Service Manual | Publicat... Order the manual at mid-west-tech.com >