
Genie®

Service Manual

First Edition
First Printing
Part No. 31497

Z™-45/22

DC Power
Bi-fuel
Tri-fuel
Diesel
Gasoline/LPG

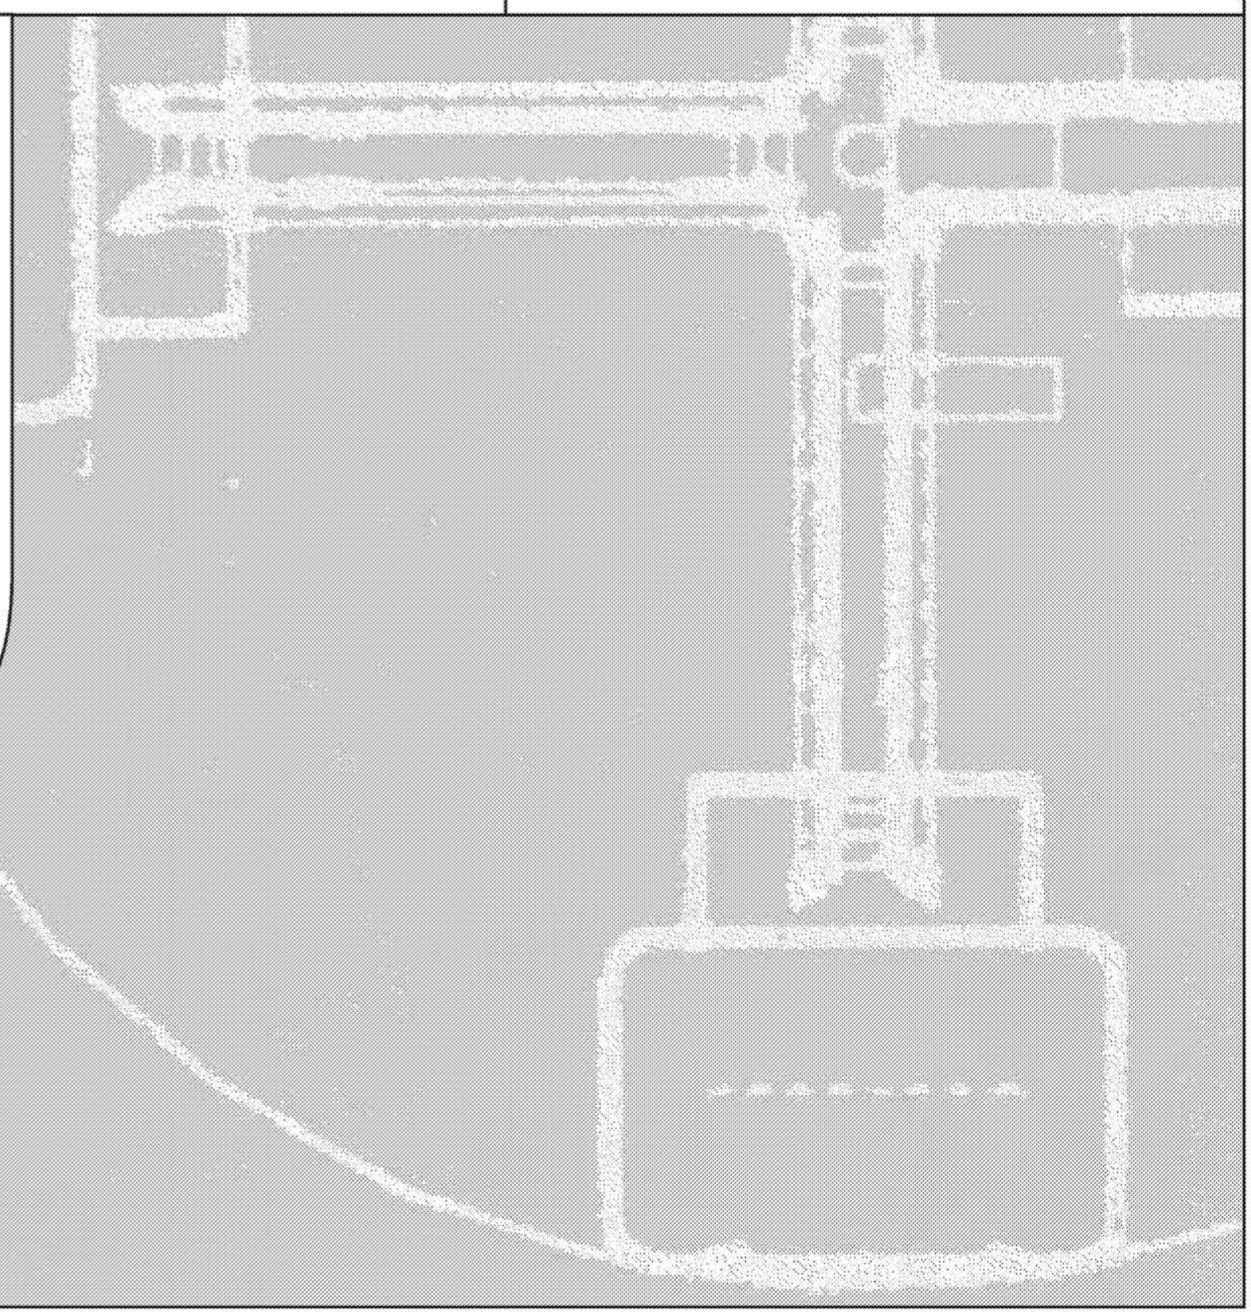

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 31497

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 3
Hydraulic Specifications ..... 2 - 4
Bolt Torque Specifications ..... 2 - 5
Kubota WG-750 Engine Specifications ..... 2 - 6
Kubota D-905 Engine Specifications ..... 2 - 8

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 3
Table C ..... 3 - 4
Table D ..... 3 - 5
Maintenance Inspection Report - DC Models ..... 3 - 6
Maintenance Inspection Report - Engine Models ..... 3 - 7

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Operator's and Safety Manuals ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 2
A-4 Check the Engine Oil Level - Engine Models ..... 4 - 3
A-5 Check the Engine Coolant Level - Engine Models ..... 4 - 3
A-6 Check for Fuel Leaks - Engine Models ..... 4 - 3
A-7 Check the Hydraulic Oil Level ..... 4 - 4
A-8 Check for Hydraulic Leaks ..... 4 - 4

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 314... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures,** continued

A-9 Check the Tire Pressure ..... 4 - 5
A-10 Test the Platform and Ground Controls ..... 4 - 5
A-11 Test the Tilt Sensor ..... 4 - 6
A-12 Test the Limit Switches ..... 4 - 6
A-13 Replace the Engine Oil and Filter - Engine Models ..... 4 - 8
A-14 Replace the Engine Air Filter - Engine Models ..... 4 - 9
A-15 Drain the Fuel Filter/Water Separator - Kubota Diesel Models ..... 4 - 10
B-1 Check the Engine Belt - Engine Models ..... 4 - 11
B-2 Check the Radiator - Engine Models ..... 4 - 11
B-3 Check the Engine Choke - Kubota Gas Models ..... 4 - 12
B-4 Check the Exhaust System - Engine Models ..... 4 - 12
B-5 Check the Battery(s) ..... 4 - 13
B-6 Check the Hydraulic Tank Filter Condition Indicator ..... 4 - 13
B-7 Inspect the Electrical Wiring ..... 4 - 14
B-8 Inspect the Tires and Wheels (including lug nut torque) ..... 4 - 14
B-9 Confirm the Proper Brake Configuration ..... 4 - 15
B-10 Check the Oil Level in the Torque Hubs ..... 4 - 15
B-11 Check the Glow Plugs - Kubota Diesel Models ..... 4 - 16
B-12 Check and Adjust the Engine RPM - Engine Models ..... 4 - 16
B-13 Test the Key Switch ..... 4 - 18
B-14 Test the Emergency Stop Buttons ..... 4 - 18
B-15 Test the Ground Control Override ..... 4 - 19
B-16 Test the Manual Controls ..... 4 - 19
B-17 Test the Platform Self-leveling ..... 4 - 20
B-18 Test the Service Horn ..... 4 - 20
B-19 Test the Foot Switch ..... 4 - 21
B-20 Test the Engine Idle Select - Engine Models ..... 4 - 21
B-21 Test the Fuel Select Operation - Kubota Gas Models ..... 4 - 22
B-22 Test the Drive Enable System ..... 4 - 22
B-23 Test the Drive Brakes ..... 4 - 23
B-24 Test the Drive Speed - Stowed Position ..... 4 - 24

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 314... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures,** continued


B-25 Test the Alarm Package - Optional Equipment ..... 4 - 25
B-26 Perform Hydraulic Oil Analysis ..... 4 - 25
B-27 Test the Turntable Rotation Stop ..... 4 - 26
B-28 Check the Electrical Contactors ..... 4 - 26
C-1 Check the Primary Boom Wear Pads ..... 4 - 27
C-2 Check the Turntable Rotation Bearing Bolts ..... 4 - 27
C-3 Check the Free-wheel Configuration ..... 4 - 28
C-4 Grease the Turntable Rotation Bearing and Worm Drive Gear ..... 4 - 29
C-5 Replace the Torque Hub Oil ..... 4 - 30
C-6 Replace the Hydraulic Tank Filter ..... 4 - 30
C-7 Replace the Diesel Fuel Filter - Kubota Diesel Models ..... 4 - 31
C-8 Replace the Gasoline Fuel Filter - Kubota Gas Models ..... 4 - 32
C-9 Clean or Replace the Distributor Cap and Rotor - Kubota Gas Models ..... 4 - 33
C-10 Replace the Spark Plugs - Kubota Gas Models ..... 4 - 34
C-11 Check and Adjust the Air/LPG Mixture - Kubota Gas Models ..... 4 - 34
C-12 Check and Adjust the Ignition Timing - Kubota Gas Models ..... 4 - 35
C-13 Check Engine Valve Clearance - Kubota Gas Models ..... 4 - 35
C-14 Check the Electric Motor Brushes ..... 4 - 35
C-15 Bleed the Platform Rotator ..... 4 - 36
D-1 Test or Replace the Hydraulic Oil ..... 4 - 37
D-2 Change or Recondition the Engine Coolant - Engine Models ..... 4 - 38
D-3 Change the Fuel Lines - Engine Models ..... 4 - 39

Section Five **Troubleshooting Flow Charts**

Introduction ..... 5 - 1
1 All Functions Will Not Operate - DC Models ..... 5 - 3
2 Lift Pump Motor Will Not Operate - DC Models ..... 5 - 5
3 Drive Pump Motor Will Not Operate - DC Models ..... 5 - 7
4 Engine Choke Inoperative - Kubota Gasoline/LPG Models ..... 5 - 9
5 Glow Plugs Inoperative - Kubota Diesel Models ..... 5 - 12
6 Engine Will Not Crank Over - Engine Models ..... 5 - 14

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 314... Order the manual at mid-west-tech.com >

Electrical Schematic - Tri-fuel Models

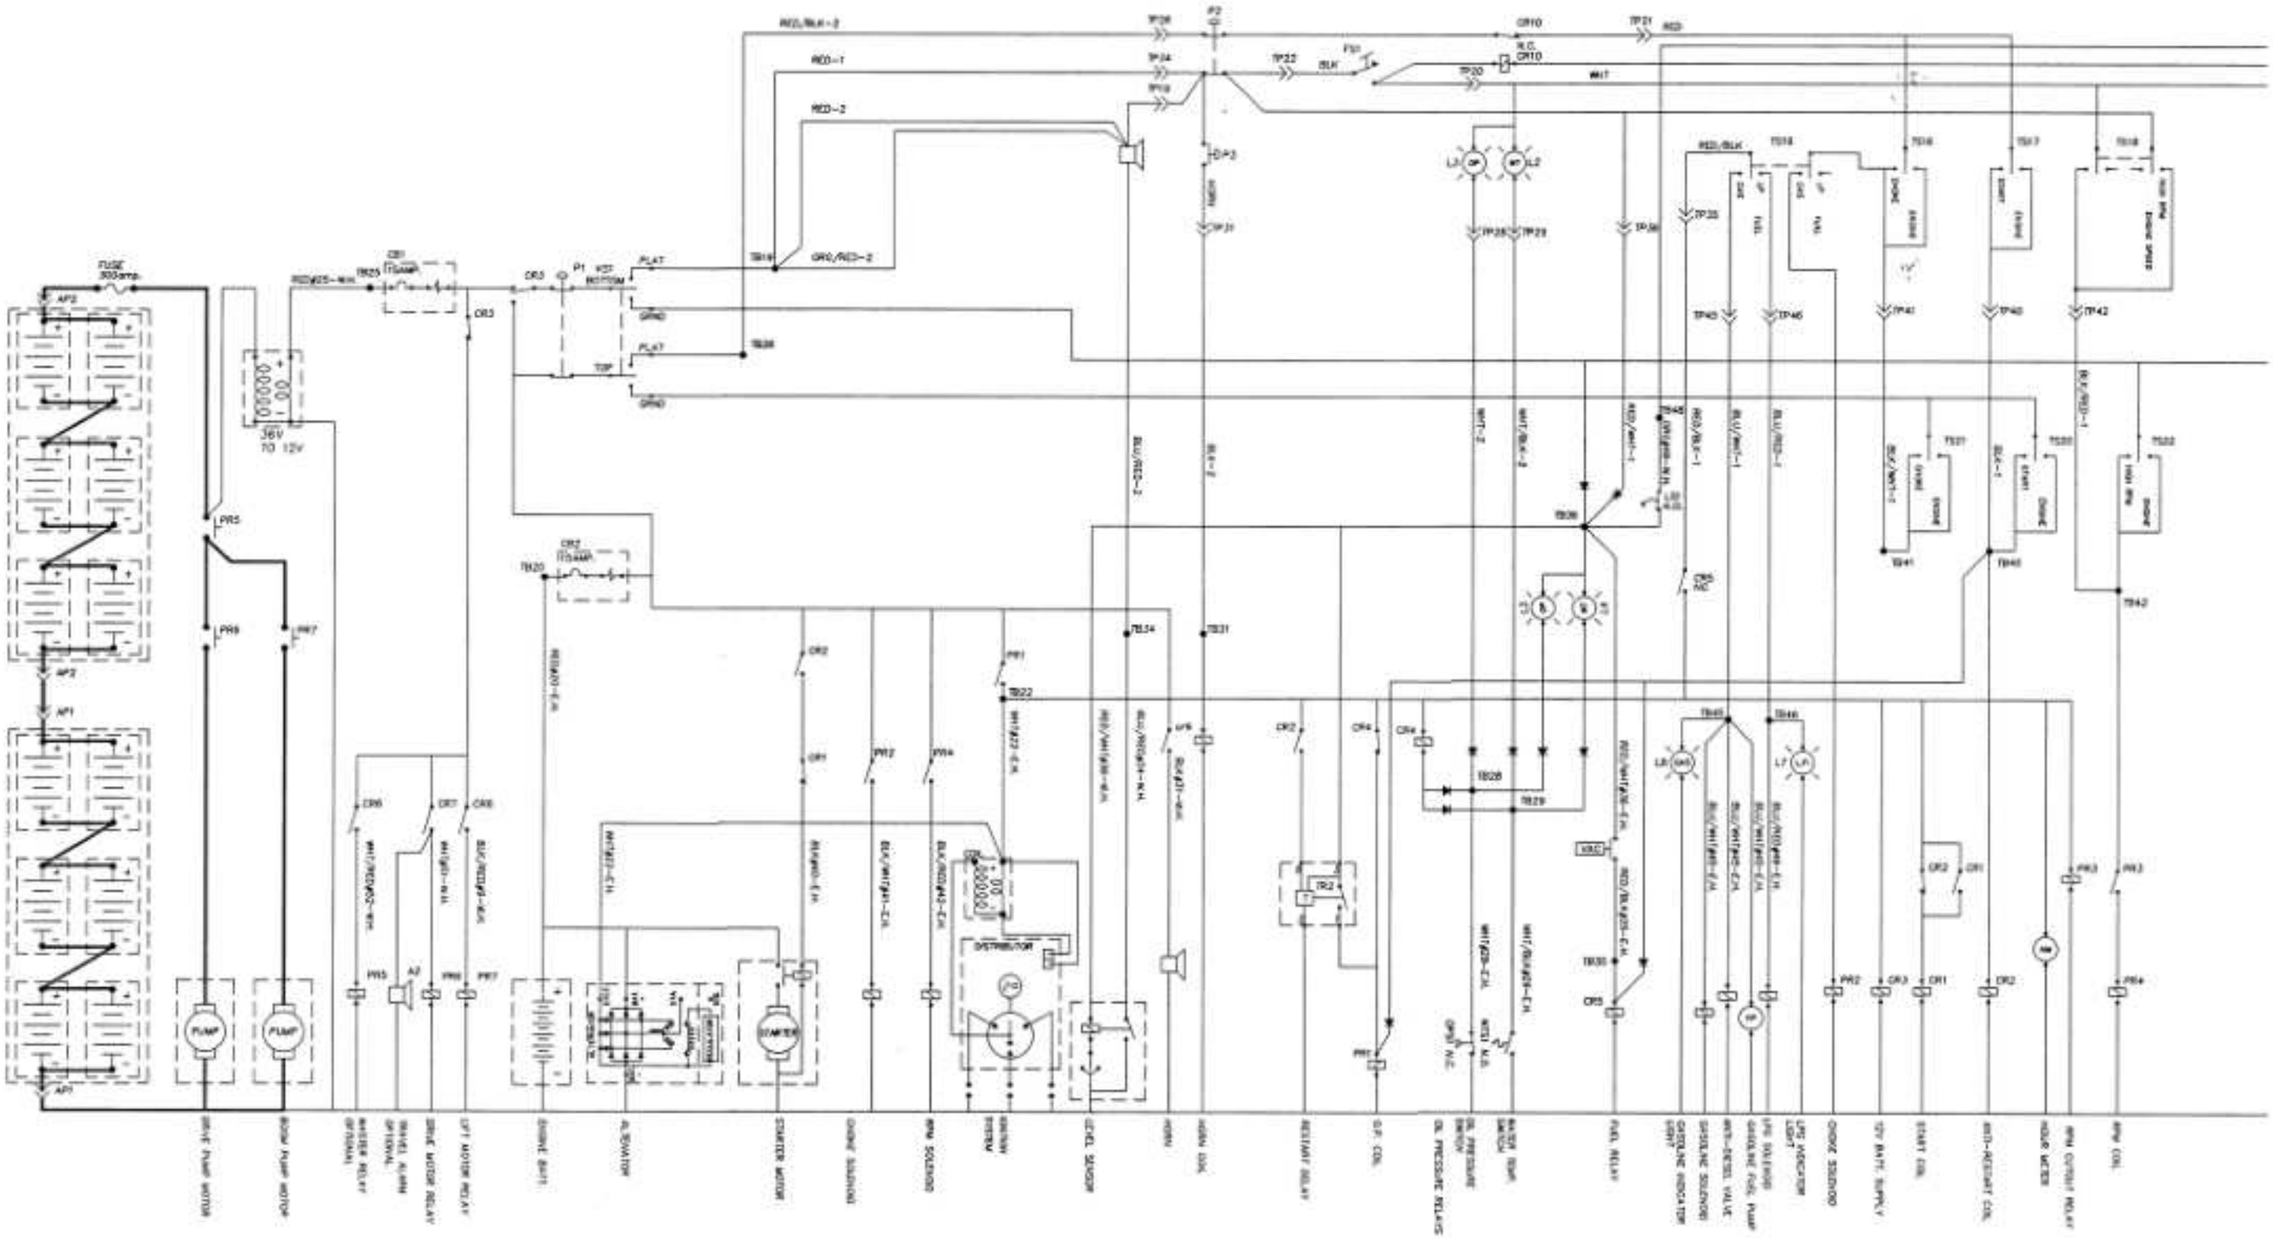

MidWestTech | Terex Genie Z-45/22 Articulated Boom Lift Service Manual | Publication 31497

Order the manual at mid-west-tech.com >