Genie Industries

Technical Publications


Genie®


A TEREX COMPANY

Genie® AWP™

Genie® IWP™

Service Manual

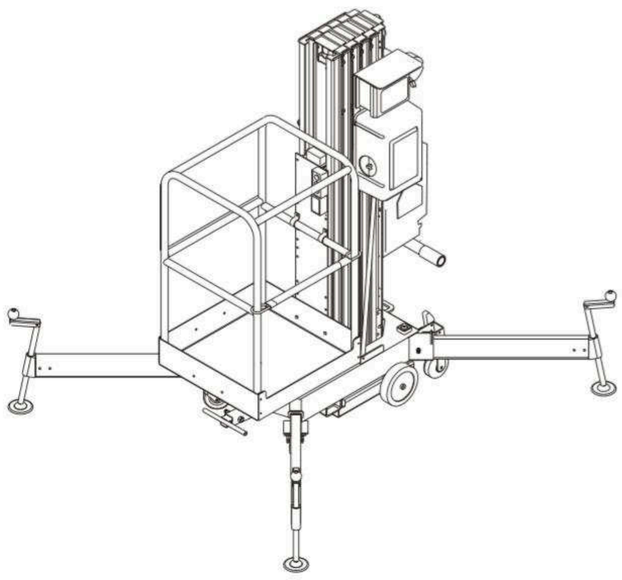

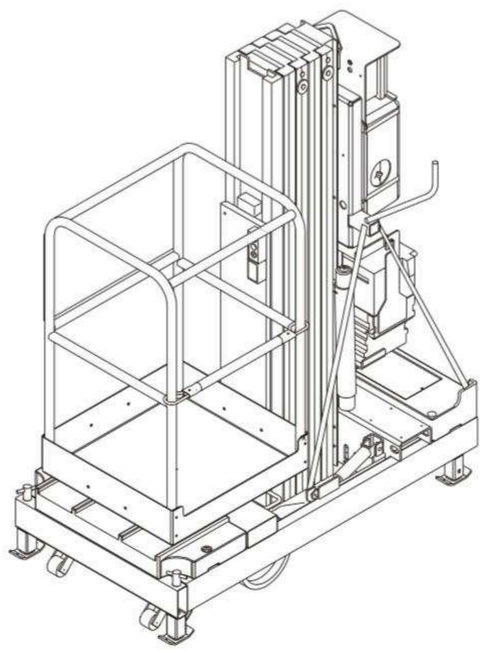

First Edition, Second Printing
Part No. 31758

MidWestTech | Terex Genie AWP, IWP Aerial Work Platform Service Manual | Publication 31758

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

IWP-19 ..... 2 - 1
IWP-24 ..... 2 - 1
AWP-19 ..... 2 - 2
AWP-24 ..... 2 - 2
AWP-30 ..... 2 - 3
AWP-36 ..... 2 - 3
Bolt Torque Specification ..... 2 - 4

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 2
Table C ..... 3 - 3
Maintenance Inspection Report ..... 3 - 4

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Operators and Responsibility Manuals - including storage container ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 3
A-4 Check for Hydraulic Leaks ..... 4 - 3
A-5 Check the Manual Lowering Operation ..... 4 - 4
A-6 Inspect the Battery and Battery Charger - DC Models ..... 4 - 4
A-7 Inspect the Columns for Damage ..... 4 - 4
A-8 Check the Sequencing Cables ..... 4 - 5

MidWestTech | Terex Genie AWP, IWP Aerial Work Platform Service Manual | Publication... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four **Scheduled Maintenance Procedures,** continued

A-9 Check the Interlock System for Proper Operation ..... 4 - 5
A-10 Test the Power and Function Controls ..... 4 - 6
A-11 Inspect the Lifting Chains and Idler Wheels ..... 4 - 7
A-12 Inspect the Breather Cap(s) ..... 4 - 8
A-13 Test the Base Operation - IWP Models ..... 4 - 8
B-1 Inspect the Electrical Wiring ..... 4 - 9
B-2 Inspect All Welds ..... 4 - 9
B-3 Test the Tilt-back Operation - AWP 30 and 36 Models ..... 4 - 10
B-4 Check the Lifting Chain Adjustments ..... 4 - 11
B-5 Check the Battery ..... 4 - 12
B-6 Clean and Lubricate the Columns ..... 4 - 12
B-7 Test the Lifting Capacity ..... 4 - 13
B-8 Test the Power-To-Platform Operation ..... 4 - 13
B-9 Adjust the Sequencing Cables ..... 4 - 14
B-10 Inspect for Proper Outrigger Length - AWP Models ..... 4 - 14
B-11 Test the Level Sensing Operation - IWP Models ..... 4 - 15
C-1 Inspect and Lubricate the Casters and Wheels ..... 4 - 16
C-2 Inspect the Mast Assembly for Wear ..... 4 - 16
C-3 Lubricate the Lifting Chains ..... 4 - 18
C-4 Replace the Hydraulic Oil ..... 4 - 18

Section Five **Troubleshooting Flow Charts**

Introduction 5-1
1 Power Light Will Not Turn On - AC Models 5-3
2 Power Light Will Not Turn On - DC Models 5-4
3 Interlock Lights Will Not Turn On - AWP AC Models 5-6
4 Interlock Lights Will Not Turn On - AWP DC Models 5-8
5 Interlock Lights Will Not Turn On - IWP Models 5-9
6 Machine Will Not Lift - AC Models 5-10
7 Machine Will Not Lift, But Power Unit Will Operate - AC Models 5-11
8 Machine Will Not Lift - DC Models 5-12

MidWestTech | Terex Genie AWP, IWP Aerial Work Platform Service Manual | Publication... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Five **Troubleshooting Flow Charts,** continued

9 Machine Will Not Lift, But Power Unit Will Operate - DC Models 5-13
10 Machine Will Not Lower - Up Function Operates 5-14
11 Base Will Not Raise With Foot Pump - IWP Models 5-15
12 Base Will Raise, But Will Not Hold In Up Position - IWP Models 5-16
13 Base Will Not Lower - IWP Models 5-17
14 Platform Will Not Hold In Up Position 5-18
15 Power Unit Will Not Lift Rated Load 5-19

Section Six **Schematics**

Introduction ..... 6 - 1
Symbols Legend ..... 6 - 2
Electrical Schematic - AWP AC Models ..... 6 - 3
Electrical Wiring Diagram - AWP AC Models ..... 6 - 4
Electrical Schematic - AWP DC Models ..... 6 - 6
Electrical Wiring Diagram - AWP DC Models ..... 6 - 8
Electrical Schematic - IWP AC Models ..... 6 - 10
Electrical Wiring Diagram - IWP AC Models ..... 6 - 12
Electrical Schematic - IWP DC Models ..... 6 - 14
Electrical Wiring Diagram - IWP DC Models ..... 6 - 16
Hydraulic Schematic - AWP Models ..... 6 - 18
Hydraulic Schematic - IWP Models ..... 6 - 19

Section Seven **Repair Procedures**

Introduction 7-1

Base Assembly

1-1 Proximity Switches 7-2
1-2 Inner Base Frame - IWP Models 7-4
1-3 Hydraulic Manifold Components - IWP Models 7-5

MidWestTech | Terex Genie AWP, IWP Aerial Work Platform Service Manual | Publication... Order the manual at mid-west-tech.com >