Genie Industries


Technical Publications

Genie®

A TEREX COMPANY

Genie SUPERLIFT Contractor

Parts & Service Manual

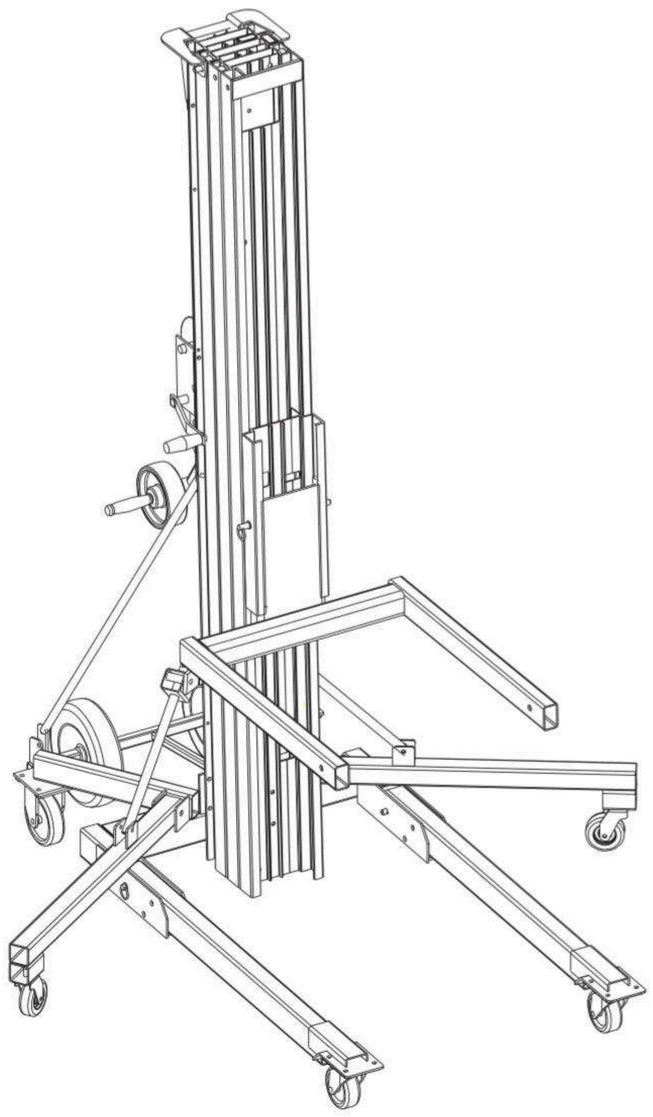

First Edition, First Printing
Part No. 33953

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii

Section One **Safety Rules**

General Safety Rules iii

Section Two **Specifications**

SLC-6 ..... 2 - 1
SLC-12 ..... 2 - 1
SLC-18 ..... 2 - 1
SLC-24 ..... 2 - 1
Bolt Torque Specification ..... 2 - 2

Section Three **Scheduled Maintenance Inspections**

Introduction ..... 3 - 1
Table A ..... 3 - 2
Table B ..... 3 - 2
Table C ..... 3 - 3
Maintenance Inspection Report ..... 3 - 4

Section Four **Scheduled Maintenance Procedures**

Introduction ..... 4 - 1
A-1 Inspect the Operator's Manual ..... 4 - 2
A-2 Inspect the Decals and Placards ..... 4 - 2
A-3 Inspect for Damage, Loose or Missing Parts ..... 4 - 2
A-4 Check the Winch Operation ..... 4 - 3
A-5 Inspect the Columns for Damage ..... 4 - 3
A-6 Inspect the Cable and Cable Pulleys ..... 4 - 3
A-7 Check the Mast for Proper Sequencing ..... 4 - 4
A-8 Inspect the Casters and Wheels ..... 4 - 4

MidWestTech | Terex Genie Superlift Contractor Material Lift Service Manual | Publication 3... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section Four	**Scheduled Maintenance Procedures,** cont.	
B-1	Inspect All Welds	4 - 5
B-2	Clean the Columns	4 - 5
B-3	Inspect and Lubricate the Winch	4 - 5
C-1	Lubricate the Casters and Wheels	4 - 6
C-2	Inspect the Mast Assembly for Wear	4 - 6
C-3	Replace the Winch Friction Disks	4 - 7
C-4	Inspect the Safety Brake System - If Equipped	4 - 7
C-5	Inspect the Painted Surfaces	4 - 8
Section Five	**Troubleshooting Flow Charts**	
	Introduction	5 - 1
1	Mast Will Not Sequence Properly	5 - 2
2	Carriage Will Not Raise, But Winch Will Operate	5 - 3
3	Winch Will Not Operate	5 - 4
Section Six	**Repair Procedures**	
	Introduction	6 - 1
	Base Assembly	
1-1	How To Remove the Base	6 - 2
	Mast Assembly	
2-1	How to Disassemble the Mast Assembly	6 - 3
2-2	How to Replace the Lifting Cable	6 - 4
2-3	How to Replace a Lifting Pulley - Mast Installed	6 - 5
	Winches	
3-1	How To Disassemble the Winch	6 - 6

MidWestTech | Terex Genie Superlift Contractor Material Lift Service Manual | Publication 3... Order the manual at mid-west-tech.com >

Table of Contents

This manual is updated frequently. If you have a printed manual, you can keep it up to date by downloading new figures from the Genie website at www.genielift.com. For the most up-to-date parts information, visit the Parts Lookup System on the Genie website at www.genielift.com.

How to Read Your Serial Number....3
Parts Stocking List....7
How to Order Parts....8
Service Parts Fax Order Form....9

Electronic Version

Click on any page number to view the figure.

100 Decals
101.1 Decals with Words (to SLC04-28240)....10
103.1 Decals with symbols....12

200 Base Components
201.1 Base Components, View 1....14
202.1 Base Components, View 2....16

300 Mast and Winch Components
301.1 Mast Components, View 1....18
302.1 Mast Components, View 2....20
303.1 Mast Components, View 3....22
304.1 Columns, Pulleys and Cables....26
305.1 Winch Components - Single Speed....28

400 Accessories
401.1 Forks....30
402.1 Pipe Cradle, Load Platform and Boom Arm....32
403.1 Rear Wheels....34

Indices
Part Number Index....36
Part Description Index....37

Cross References

MidWestTech | Terex Genie Superlift Contractor Material Lift Service Manual | Publication 3... Order the manual at mid-west-tech.com >